




# ConnectorRelay

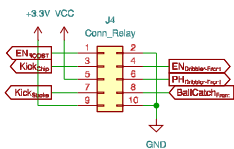


# BOOST

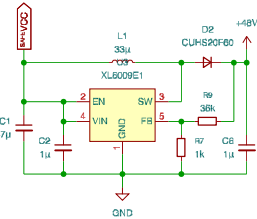


# ProtectionKick

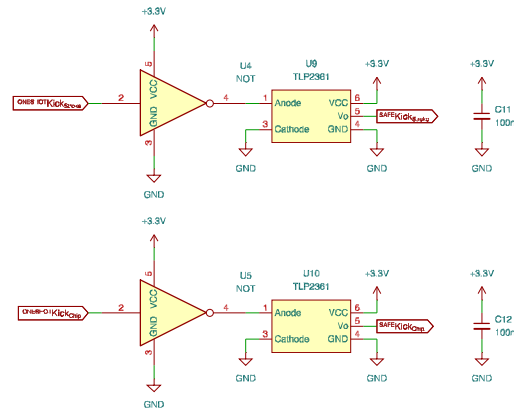


# ConnectorVollmeter




# LED




# ConnectorSolenoid

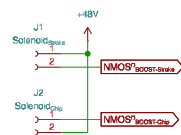


# NMOS

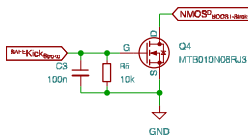


# ConnectorDribbler-Front

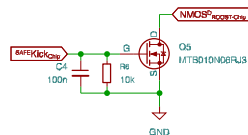


# EN\_BOOST

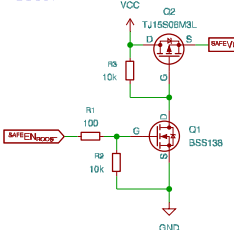


# BallCatch\_Front

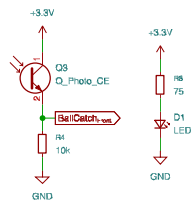


# MD\_Dribbler-Front

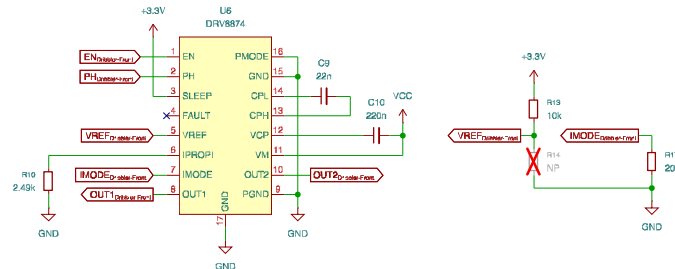

# Oneshot Circuit

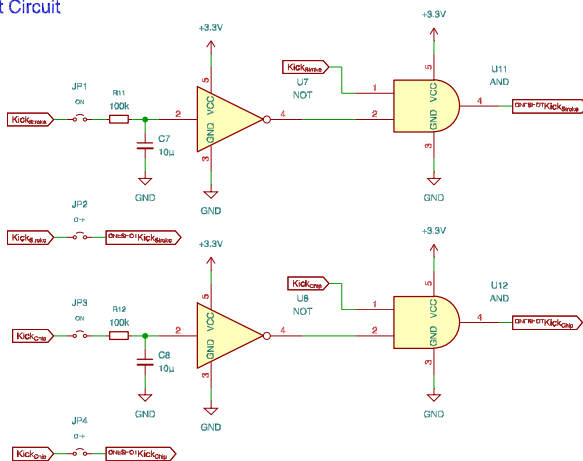

# ProtectionEN\_BOOST

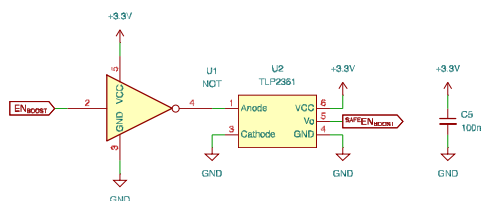

MOSFET  
DS  
Mechanical  
PinAssign  
Symbol  
PinAssign

$$t_s = -R_n C_F \times \ln(1 - (V_{TH}/V_H))$$

$$t_s = -100 \times 10^3 \times 10^{-6} \times \ln(1 - (2.1/3.3)) \approx 1.011 \text{ ms}$$