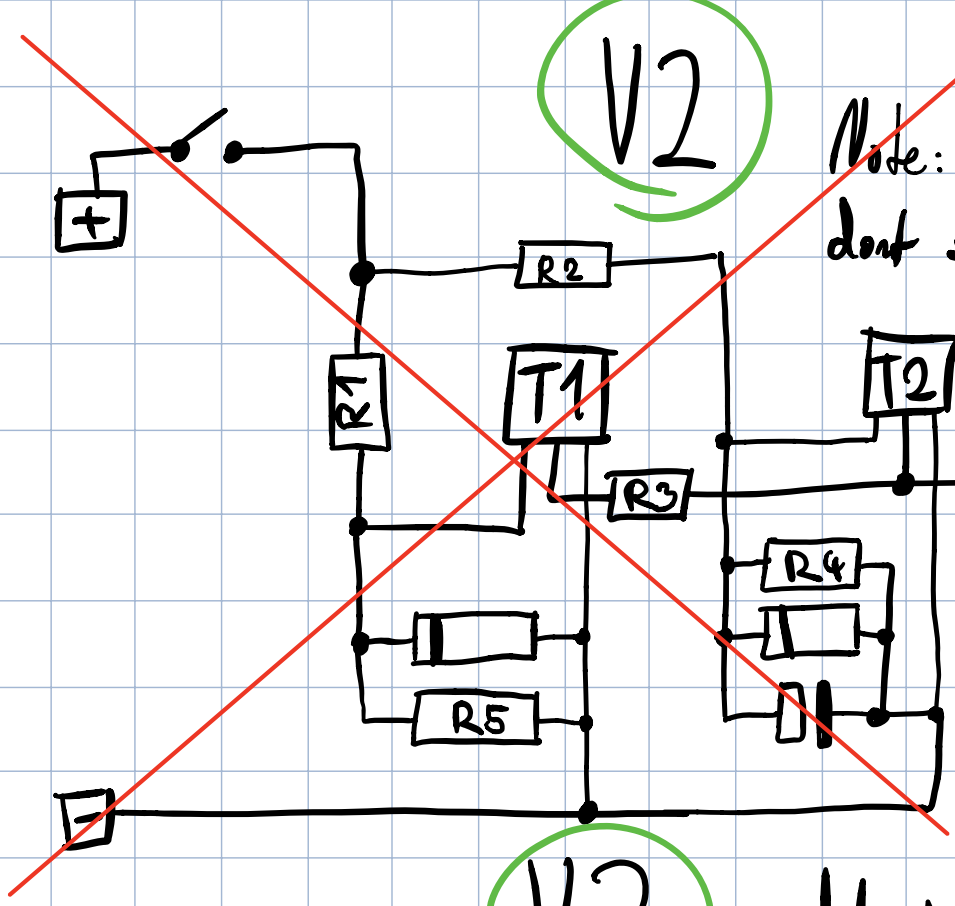

obsolete

Note: Works as long as you dont switch it fast off and on!

Don't built V2! just here as reference

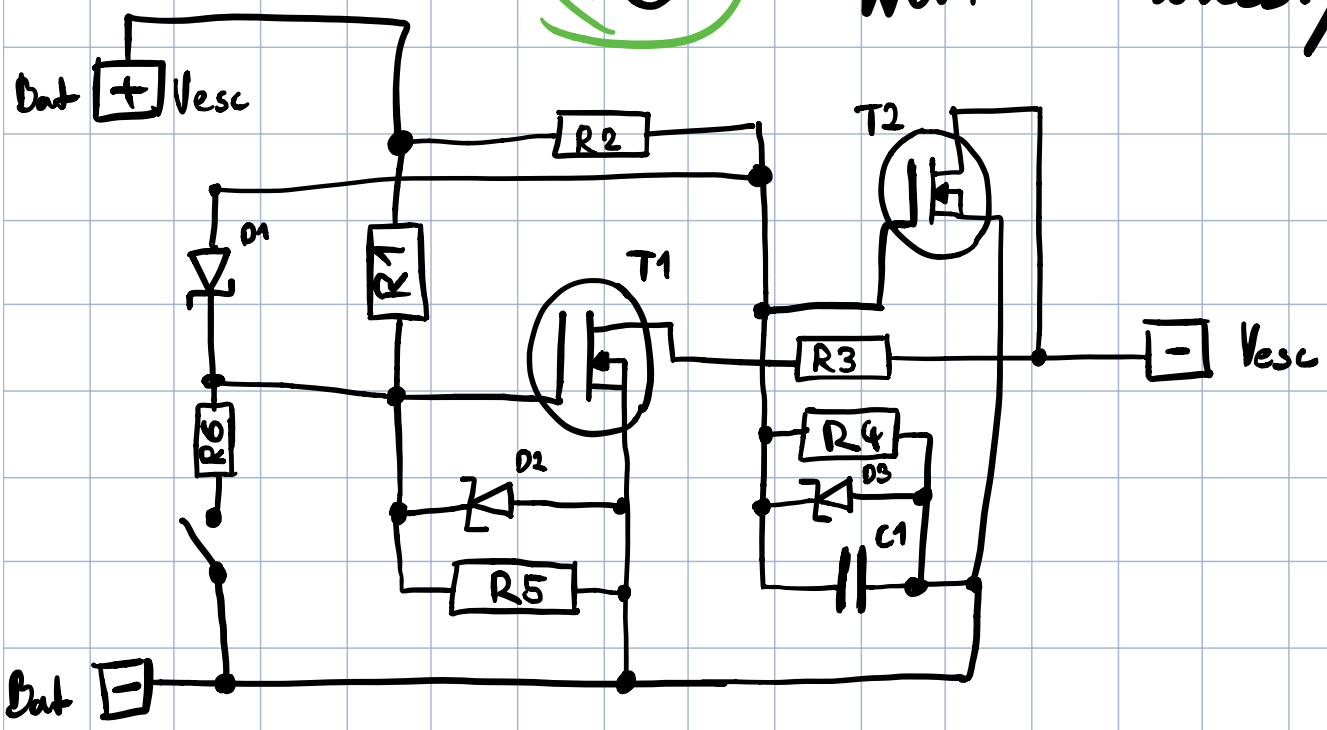

Works flawlessly!

R1, R2, R4, R5 = 1MΩ

R6 = 15Ω

R3 = 1Ω

D1, D2, D3 = 12V Zener

C1 = 16V 4.7uF

T1 = n-Channel 60V 100A

T2 = n-Channel 60V 200A

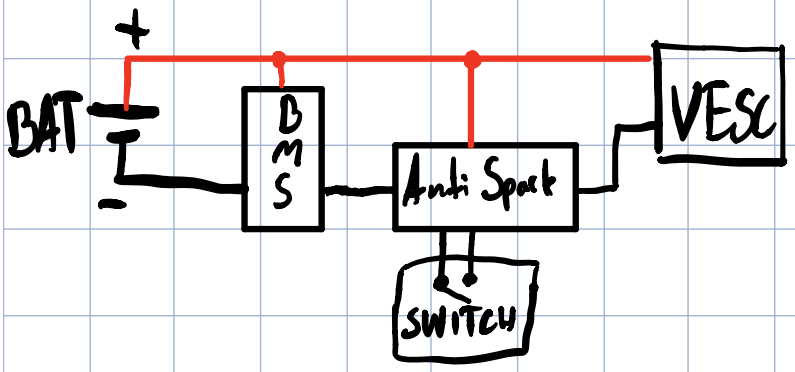

Note: T1 in parallel for higher current rating

V3 Perfboard Design

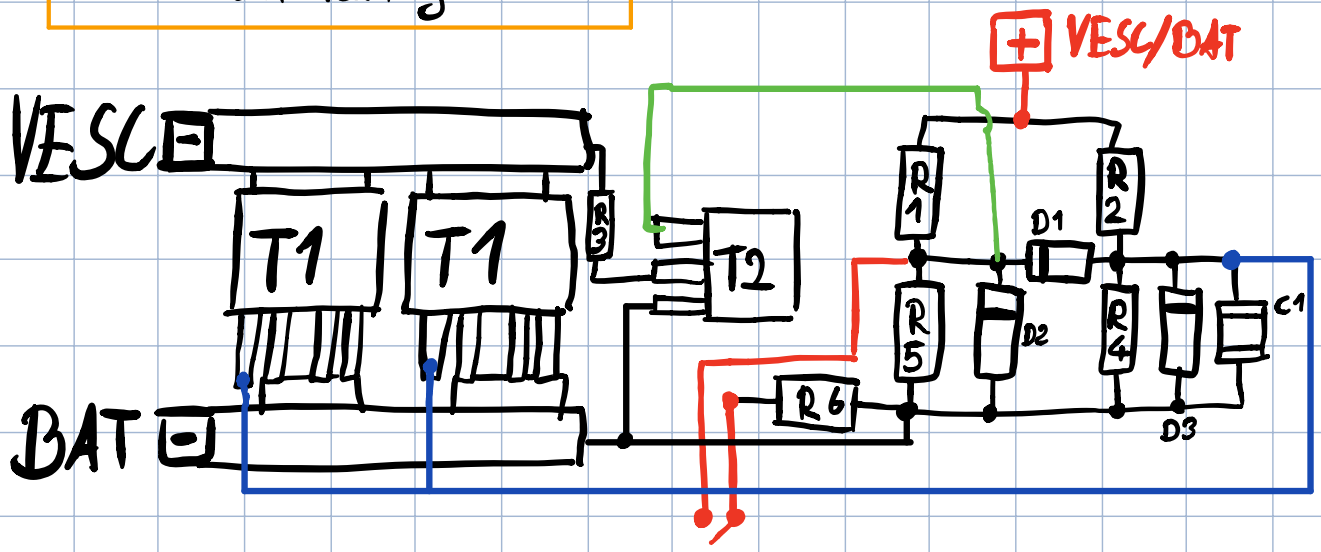

Switch function: closed = off open = on
(basically reversed!)

T1 can be IRFS7530 warning, these are very ESD sensitive
alternative → IRFB3006
T2 I used IRFB3006

Important use a wire resistor for R3 otherwise the whole thing will destroy itself.

D1 can also be a normal Diode, but since you are already buying Zener diodes