E-234-009 NOTE 13

BUTANE REGENERATION AIR COOLER

DUTY	: 17.9	MMBTU/hr (NOTE 11)
SURFACE AREA	: 50851	ft2
DESIGN CONDITION	: 570/FV	psig / 610/27.1 °F
INSULATION SPEC.	: Is	
TRIM CLASS	: F3D	

E-234-010A/B

BUTANE REGENERATION WATER COOLER

DUTY	: 12.46	MMBTU/hr (NOTE 11)
SURFACE AREA	: 2 X 3335	ft2
DESIGN COND. (SHELL SIDE)	: 570/FV	psig / 560/27.1°F
DESIGN COND. (TUBE SIDE)	: 440/FV	psig / 180 °F
INSULATION SPEC.	: N	
TRIM CLASS (SHELL/TUBE)	: CD3D/315201	

NOTES

1. FOR GENERAL NOTES AND SYMBOLS SEE DWG. NO'S 090768.231-3.00-003~006-A-B.
2. ALL MANUAL VENTS, INSTRUMENTATION VENTS AND DEPRESSURISING LINES IN HYDROCARBON SERVICE TO BE HARD PIPED TO FLARE. ALL MANUAL DRAINS AND INSTRUMENTATION DRAINS IN HYDROCARBON SERVICE TO BE HARD PIPED TO CLOSED DRAIN HEADER. SEE DETAIL DWG. ON 090768.231-3.00-009-A-B.
3. ACCESSIBLE FROM GROUND.
4. HS (HAND SWITCH) NUMBERS TO BE USED OF RELATED EQUIPMENT NUMBER. STOP PUSH BUTTON SHALL BE PAD LOCKABLE, MUSHROOM SWITCH AND STAY PUT TYPE. FOR STARTING THE MOTOR, THE STOP BUTTON SHALL BE RELEASED.
5. TG TO BE READABLE FROM SEA WATER RETURN BLOCK VALVE.
6. ALL INSTRUMENT NUMBERS ON THIS DRAWING ARE PREFIXED WITH UNIT NUMBER.
7. HC DETECTOR TO BE PROVIDED AROUND E-234-009.
8. SEE SEQUENCE VALVE DETAIL.

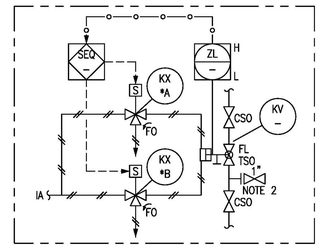

9. VIBRATION RESET SWITCH TO BE LOCATED AT GRADE.
10. START/STOP SWITCH TO BE LOCATED AT GRADE AND SAFETY SWITCH TO BE LOCATED NEAR MOTOR.
11. GOVERNING CASE DUTY FOR SURFACE AREA.
12. SEAL LOOP FOR SUB-COOLING.
13. VENT, DRAIN VALVES OF AIR COOLER ARE OUT OF VENDOR SCOPE.

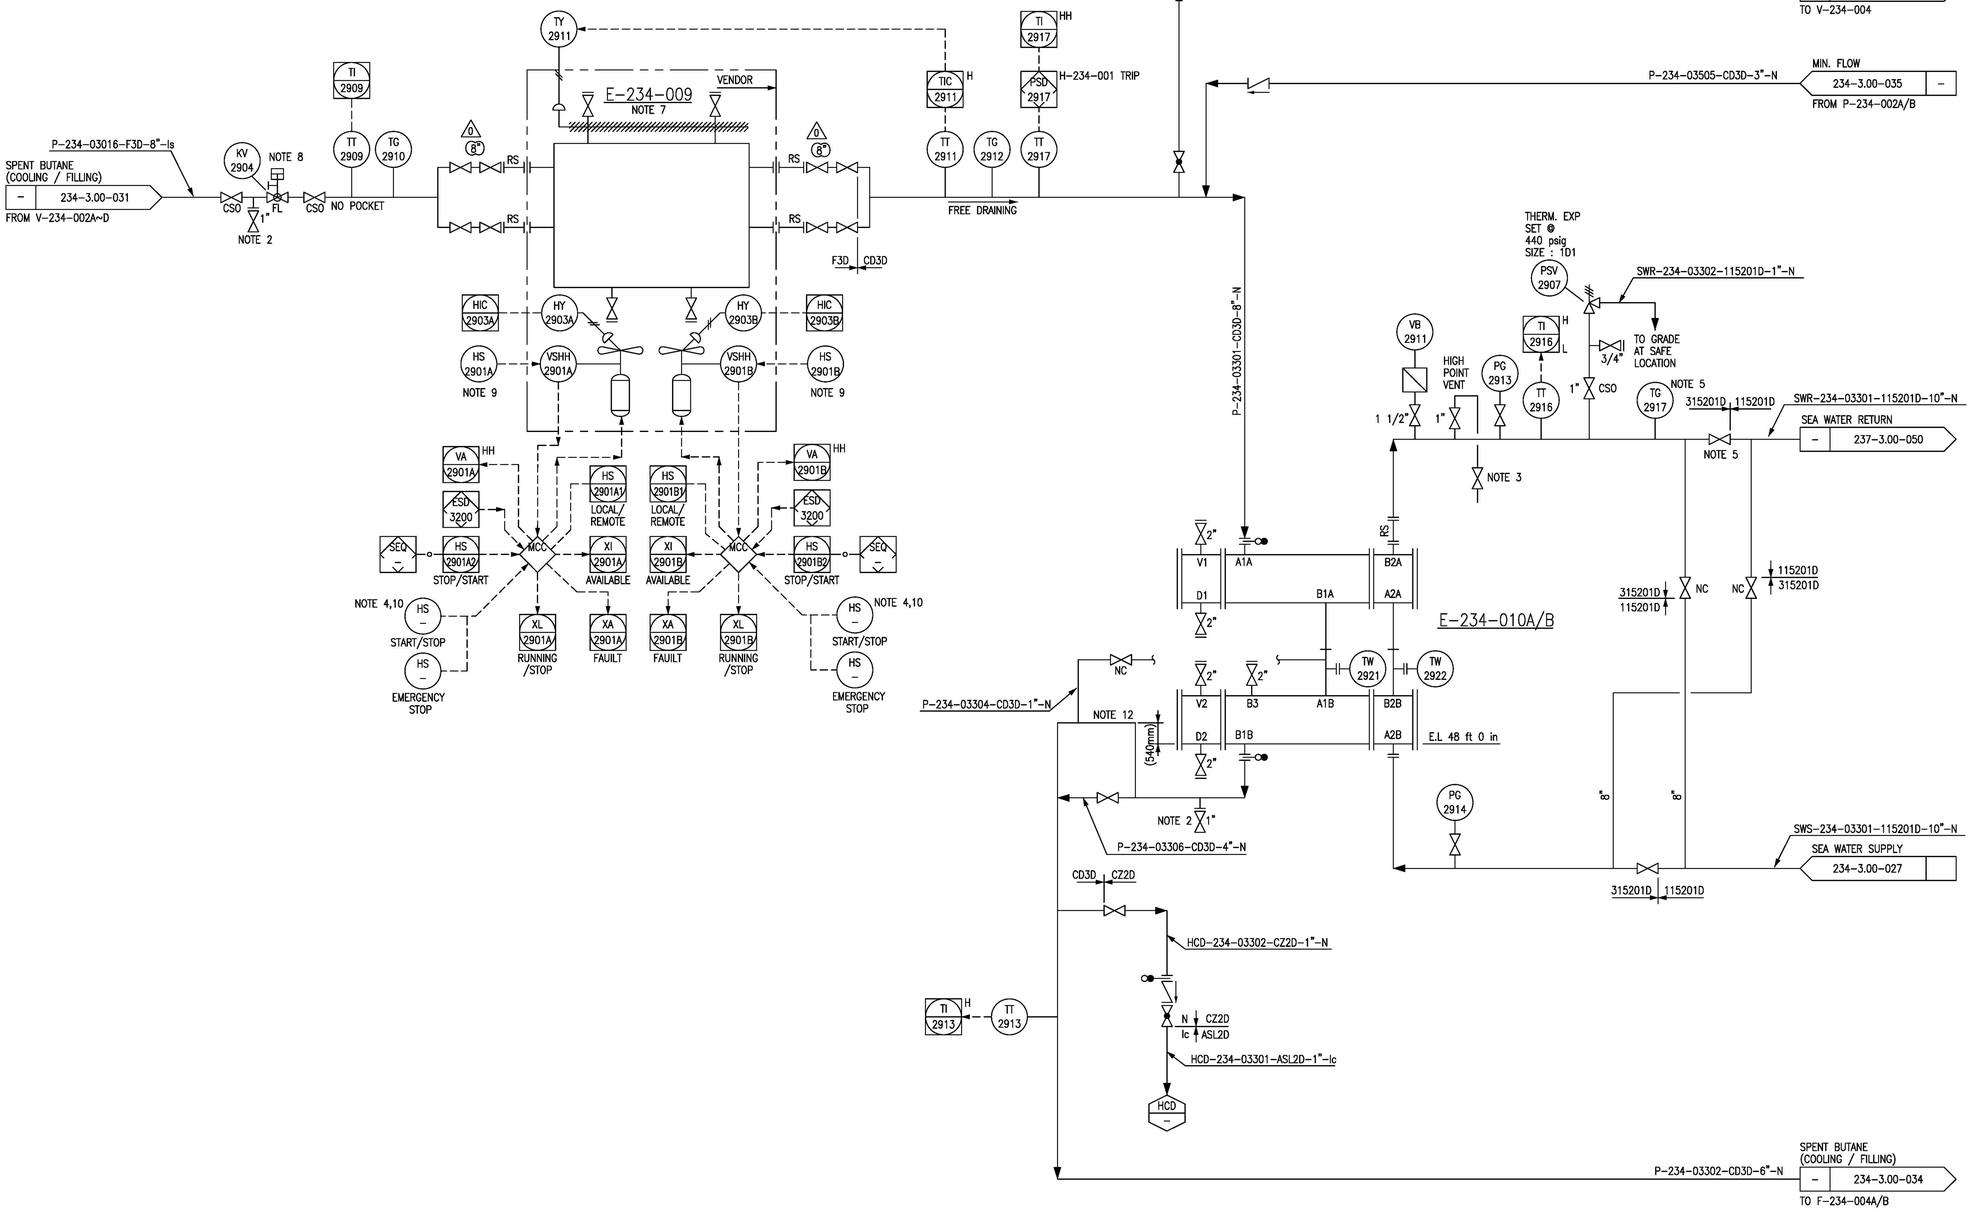

SPADEPLN FILE NAME : :
DATE (CUR / OLD) : :