



5M 全景攝影機		
型號	ACTi E96	
圖示		
對應平面圖上編號	5~11(7台)	






	B511A	E96
· 功能		
最高解析度	12百萬畫素	5百萬畫素
應用環境	室內	室內
傳感器尺寸	1/1.7 "	1/3.2 "
有效像素	4072(水平) X 3046(垂直) (12.4 百萬畫素)	2592(水平) X 1944(垂直) (5.04 百萬畫素)
日夜模式	有	否
低照度感測	優越級	標準
最低照度	彩色: 0.003 lux at F2.8; 黑/白: 0 Lux (IR LED開啟)	彩色: 0.1 Lux 在 F2.0 (30 IRE, 2400 °K)
電子快門	1/5-1/16000 秒 (手動模式); 1/5-1/16000 秒 (自動模式)	
類型	全景攝影機	迷你魚眼半球型
• 鏡頭		
焦距	定焦, f1.65毫米	定焦, f1.19毫米
光圈	F2.8	F2.0
光圈	固定光圈	固定光圈
焦點	定焦	定焦
鏡頭卡口	板載	板載
水平可視角度	198.5° (總覽區域) 121.1° (高細節的區域)	189.7° (總覽區域) 115.7° (高細節的區域)
垂直視角	198.5° (魚眼觀看模式)	189.67°
視角調整		旋轉: ±90°

	B511A	E96	
- 界面			
音源介面	1/1, 3.5 毫米耳機插口,		
數位輸入/輸出	1/1 (端子台)		
Operating Button	復位按鈕	復位按鈕	
- 一般			
電力來源	PoE 等級 3 (符合 IEEE802.3af), 直流電(DC) 12V	PoE 等級 2 (符合 IEEE802.3af)	
電源消耗	7.17 W (PoE)	6 W (PoE)	
重量	446公克 (0.983磅)	221公克 (0.49磅)	
尺寸	(Ø x H): 149.10毫米 x 43.00 毫米 (5.9" x 1.7")	(Ø x H): 110毫米 x 58毫米 (4.3" x 2.3")	
防護罩等級	否	防暴 (IK08)	
安裝方式	Surface, Gang Box, Flush, Pendant, Converter for NPT Standard Mounts, Tilted Mount, Wall Mount, Pole Mount, Corner Mount	Surface, Gang Box, Pendant, Converter for NPT Standard Mounts, Wall Mount, Pole Mount	
操作溫度	-10溫度(攝氏) ~ 50溫度(攝 氏) (14溫度(華氏) ~ 122溫 度(華氏))	-10溫度(攝氏)~50溫度(攝 氏)(14溫度(華氏)~122溫 度(華氏))	
操作濕度	10% - 85% 相關濕度	10% - 85% 相關濕度	
認證	CE, FCC, EAC, UL (for optional PoE injector and power adapter)	CE, FCC, IK08, UL (for optional PoE injector)	


ACTi B511A



Photo Indication





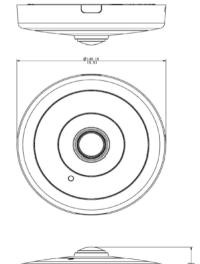



- Memory Card Slot
- Reset Button
- Oigital Input/Output
- Audio Output
- 6 Audio Input
- 6 DC 12V Power Input
- Power LED
- 8 Ethernet Port
- Built-in Microphone



ACTi E96 (1/2)



1. Loosen the three (3) screws to remove the dome cover.



2. Based on the live view from the camera, adjust the viewing angle with pan and tilt direction (for Mini Dome models only).





©2022 AUO Corporation Proprietary and Confidential

ACTi E96 (2/2)



©2022 AUO Corporation Proprietary and Confidential

3. Adjust the focus.

NOTE: Not applicable for E93 / E97 model because the camera is already pre-focused.

Attach the focus tuner (included in the camera package) on the lens and adjust the focus
of the lens.





- b. Remove the lens focus tuner.
- 4. Attach the dome cover to the camera and tighten the three (3) screws.





Tap Into The Possibilities

