

Technical Support

Re: Installation of #1025 Header Filler on Accent and Euro Collections Shower Doors.

Ref. Num: 6191 - #1025 Header Filler Accent / Euro Collections


Rev. Date: 9-20-05

Here is the step-by-step guide how to install the "Optional" #1025 Header Filler for the Accent and Euro Collection shower doors. Installing the #1025 Header should be the very last procedure on the installation.

Step 1 - Measuring:

Measure the dimension between the Hinge Jamb and the Latch Jamb at the Header as shown in fig.#1. Cut the Header Filler to this measurement.

Figure #1 - Measuring Dimensions

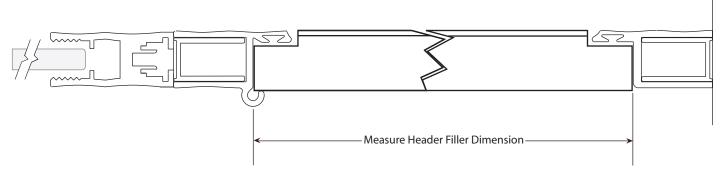


Step 2 - Notching Headed Filler:

Both ends of the Header Filler must be notched as shown in Fig.#2, to clear the Hinge Jamb and Latch Jamb. Mark off each notch and cut out with a hacksaw. Clean up each notch with a file.

Step 3 - Notching Vinyl Seals:

The vinyl seals at the top of the Hinge Jamb and Latch Jamb may have to be cut away if it interferes with filler snapping properly into place. The filler does not need to be sealed to function. Refer to fig.#2.

Figure #2 - Notching Header And Vinyl Seals

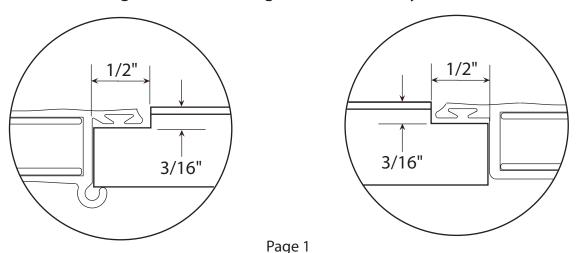

Technical Support Hotline: (WA)1-800-237-8802 or (CO)1-800-269-8342



Technical Support


Re: Installation of #1025 Header Filler on Accent and Euro Collections Shower Doors.


6191 - #1025 Header Filler Accent / Euro Collections Cont.

Step 4 - Vertical Leg Orientation:

Please note: The vertical leg of the filler should be oriented to the inside of the shower as shown in fig.#3.

Figure #3 - Vertical Leg Orientation

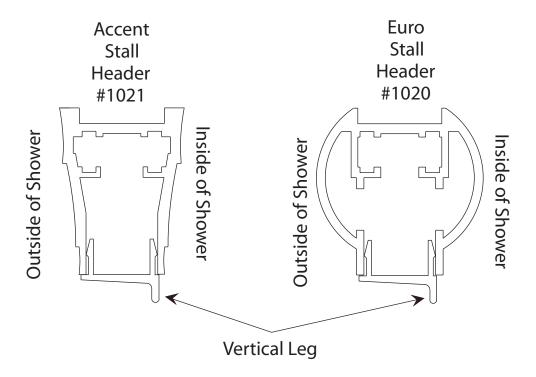

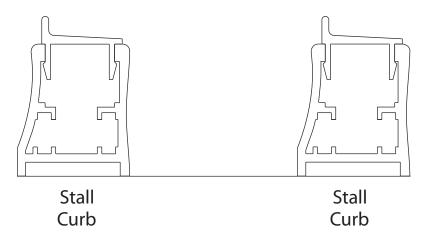

Page 2

Technical Support Hotline: (WA)1-800-237-8802 or (CO)1-800-269-8342