## **Technical Support Bulletin**



**RE:** #1009 Drip Deflector Replacement (Temporary Design Modification Due To Inventory Shortage.)

**Effects:** All Accent Collection Doors

Effective Date: 12-15-08

# IMPORTANT! READ THIS DOCUMENT FIRST! A Temporary Design Modification Due To Inventory Shortage.

A new Drip Deflector is included in this product. It replaces the #1009 Drip Deflector. The new part numbers are #1169 (Bottom Rail) and #1097 (Drip Deflector). Please follow these very important instructions to properly install the new parts.

#### **Step 3 Amendments:**


In Step 3 of the installation instructions, you will tap the new Bottom rail all the way on. Make sure the Bottom Rail does not protrude past the glass edges (Fig 1). It does not matter if the "Fat Leg" of the Bottom Rail is installed to the inside or the outside. Proceed with next Step.


• To determine the length to cut the Bottom Rail, measure the glass width and subtract 1/16".

#### **Step 7 Amendments:**

The adjustment of the Drip Deflector is discussed in Step number 7 of the main installation instructions. Please disregard those instructions and use the following instructions:

- To determine the length to cut the Drip Deflector, measure the glass width and subtract 15/16". Radius the sharp corner with a file, (fig. 2), to match the factory rounded corner. When both pieces are cut, the Drip Deflector should be 7/8" shorter than the Bottom Rail.
- Insert the Bottom Sweep into the slot on the bottom of the Drip Deflector. Trim both ends about 1"long. From the inside of the shower, with the door in the closed position, dry set the deflector with the Bottom Sweep and adjust it so the clearance below the sweep is 1/16" to 1/8" off the Dam Strip, threshold, or Curb Filler and 7/16" in from the latch side of the Bottom Rail. Mark the Drip Deflector for both vertical and horizontal. See (fig. 1) for orientation. Peel the backing off the adhesive tape and apply the deflector to the Bottom Rail, lining it up

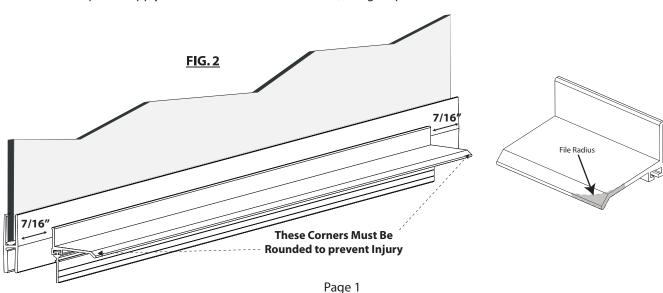

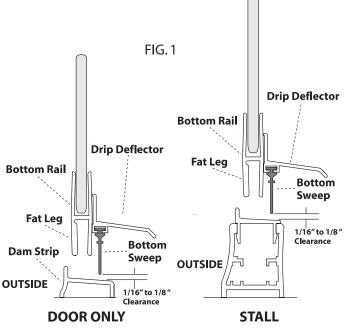

## **Technical Support Bulletin**



RE: #1009 Drip Deflector Replacement (Temporary Design Modification Due To Inventory Shortage.)

**Effects:** All Accent Collection Doors

Effective Date: 12-15-08

### **Drip Deflector Benefits:**

- 1. Separate, adjustable drip deflector
- 2. Bottom rail always goes on tight, and is not part of the adjustment process.
- 3. #1097 drip deflector can be sealed with silicone.
- 4. No special notching required for #1097 drip deflector.
- 5. Drip deflector profile is easier to cut to length.
- 6. #1097 Drip Deflector is reduced in width compared to the #1009 drip deflector.