

## **ASDJ** Steam Seal (Door Only)



1033

1001


## **FABRICATION:**


- 1) 1- 1001, 1- 1002 = glass ht. + 2".
- 2) 2- 1003 w/1019 = OAH 5/8" (no/1019 = OAH 1/4").
- 3) 1- 1033 header = net opening + 2"
- 4) 1- 1001 top seal = net opening + 2" (notch one end per detail).


GLASS HT: w/1019 = OAH - 2 5/8" (no/1019 = OAH - 2 1/4") GLASS WIDTH: net opening - 2 3/8".

## INSTALLATION:

- Install (1019) dam strip. (optional)
  Install one (1003) jamb filler.
- 3) Install (1033) header.
- 4) Install second (1003) jamb filler.
- 5) Install, adjust and secure door and latch jamb.
- 6) Measure between the flats of the hinge and latch jambs and cut the short (1001) latch jamb to length. Replicate the factory notch at opposite end as shown in detail.

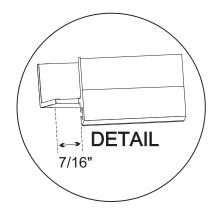

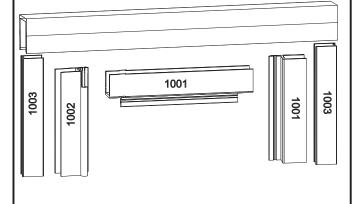

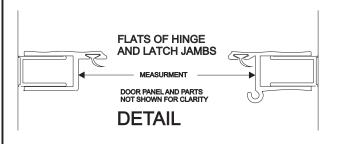

Overall Unit Height (OAH) **GLASS DOOR PANEL** 1009 VW-2 1019-**OUTSIDE INSIDE** 

All other deductions and parts for the ASDJ are the same as for a standard.