



Splicing Kit

contents Rubber Cord consisting of the following sizes Ø (2 mts, of each)

1.78 mm, 2 mm, 2.4 mm, 2.62 mm, 3 mm, 3.53 mm, 4 mm, 4.5 mm, 5 mm, 5.33 mm, 5.7 mm, 6 mm, 7 mm, 8 mm,


1 Tape Measure
1 Cutting Block (For Butt or Scarf Joints)
1 Cutting Knife
1 Tube of Glue

Attention: The Glue is very strong and effective; avoid contact with skin, eyes, etc. at all times. When using the Glue always ensure you pick the opening with the enclosed pin before each use. This will enable you to spread the Glue more evenly.

Making an O-ring

Once you have obtained the required length of the Cord, use the Knife and Cutting Block to cut the Cord. Ensure the cut is smooth and clean of Oil, Grease and Dust. Spread a thin Layer of Glue on one of the ends, and using the ridge of the cutting Block, unite the two ends. Holding the ends in the ridge, press firmly together for 20-30 seconds. Then leave to dry for about 2-3 minutes.

The O-Ring should now be ready for use.

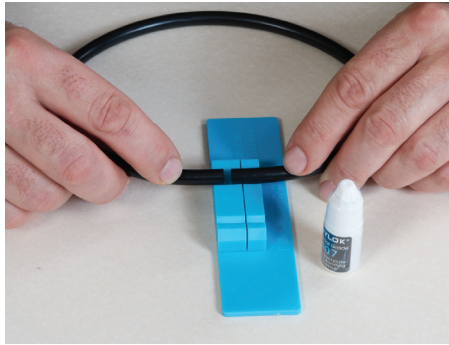

Reparatur-Set

Inhalt: Rundschnur mit folgenden Querschnitten Ø (je 2 m)

1,78 mm, 2 mm, 2,4 mm, 2,62 mm, 3 mm, 3,53 mm, 4 mm, 4,5 mm, 5 mm, 5,33 mm, 5,7 mm, 6 mm, 7 mm, 8 mm

1 Maßband
1 Schneideblock (mit Führungsrohr u. -nut)
1 Messer
1 Tube Kleber

Achtung: Der beigefügte Klebstoff ist sehr stark und wirksam. Vermeiden Sie unbedingt den Kontakt mit Haut, Augen usw. Vor jedem Gebrauch durchstechen Sie mit der beiliegenden Nadel die Öffnung der Tube. Dies ermöglicht den Kleber gleichmäßiger zu verteilen.

Herstellung eines O-Rings

Schneiden Sie die Rundschnur mit dem Messer durch den Schlitz im Schneideblock auf die erforderliche Länge. Die Schnittfläche muss glatt und frei von Öl, Fett und Staub sein. Tragen Sie den Kleber auf eine Schnittfläche dünn auf und verbinden Sie beide Enden mit Hilfe der Führungsnut auf dem Schneideblock. Halten Sie die Enden in der Nut und drücken Sie sie 20-30 Sekunden fest zusammen; danach etwa 2-3 Minuten ruhen lassen.

Der O-Ring ist jetzt einsatzbereit.