


Lesson 4 Integrate Action Groups

1. Project Outcome


Integrate the provided basic actions to become a new action group.

2. Have a Try


Step 1: Connect remote control system and open ArmPi FPV PC software.

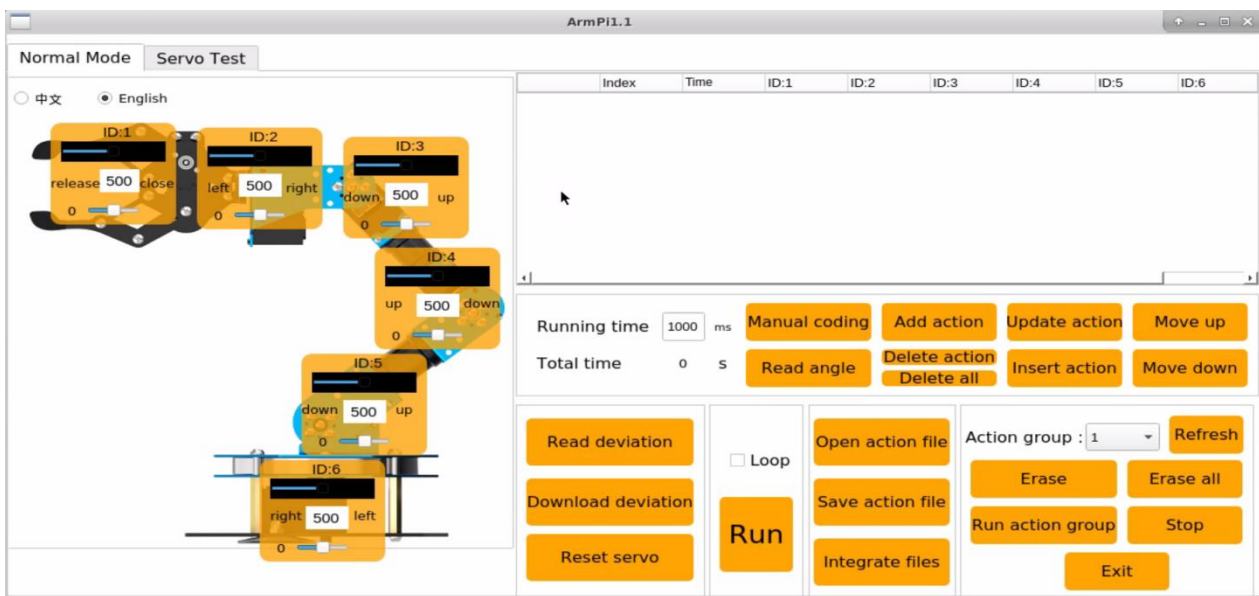

Step 2: Click “Integrate file”, choose and double click “grab-forward” to open.

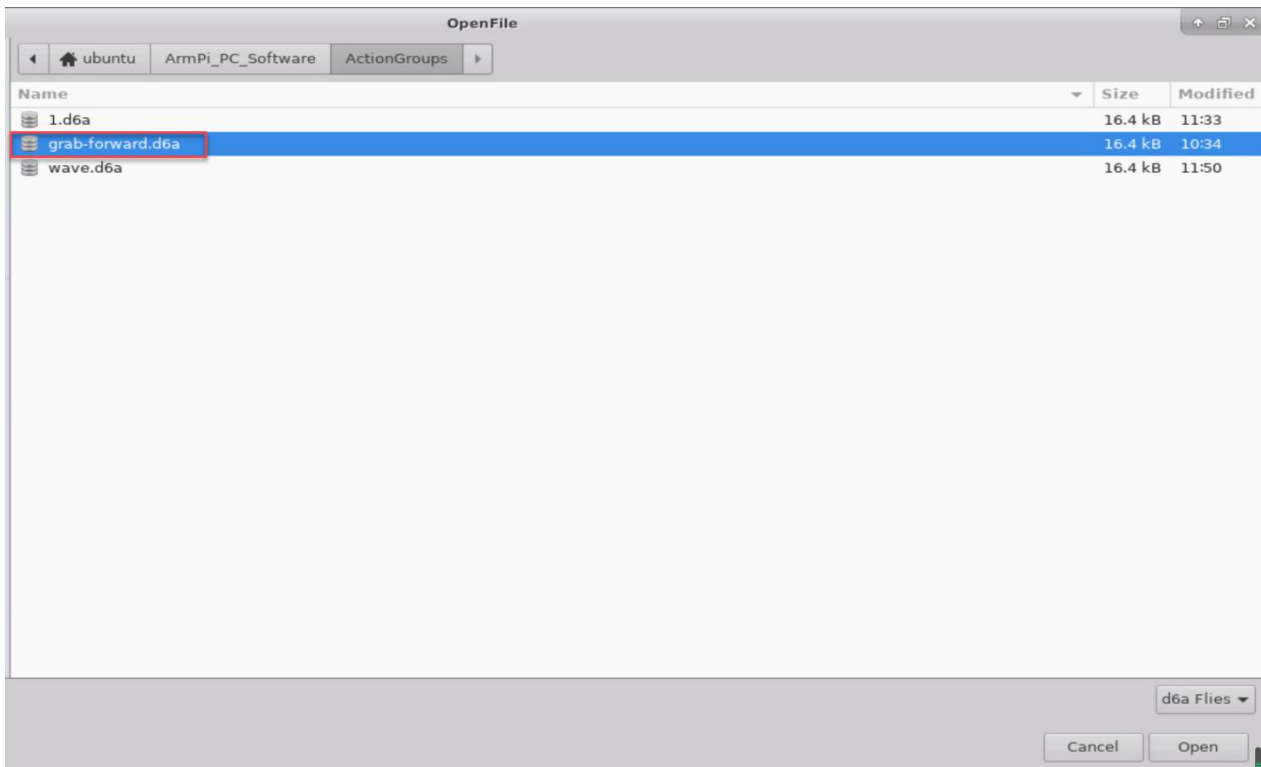

Step 3: Then the action list displays the data of No.1 action group.

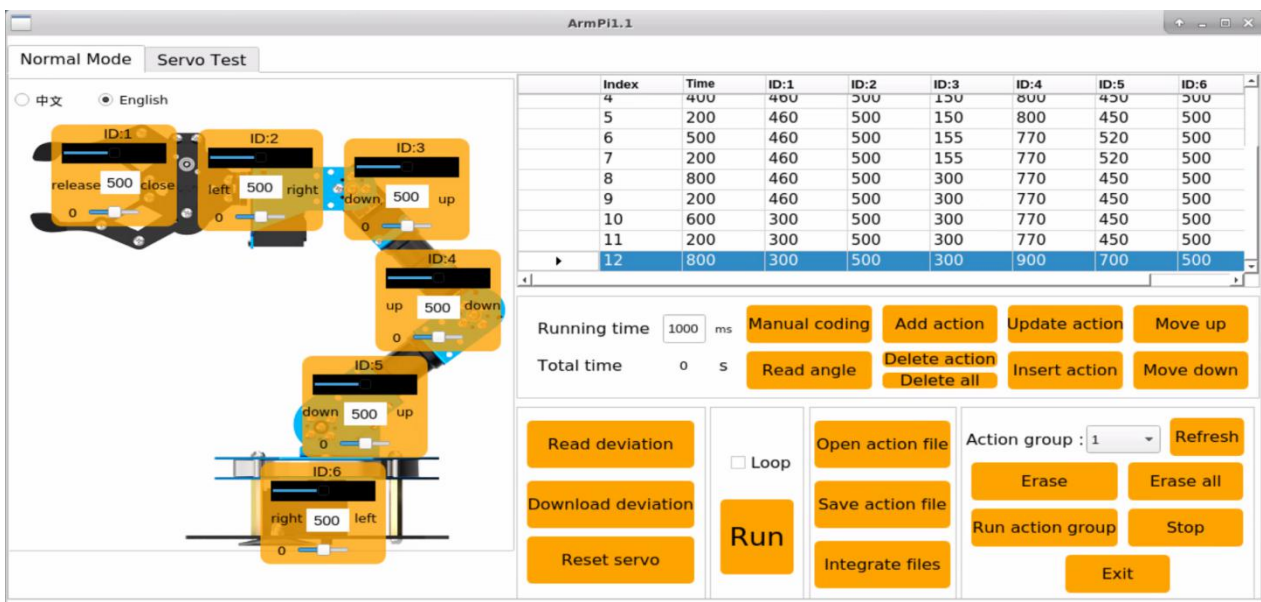

Step 4: Click "Integrate file" again, choose "**wave.d6a**" and double click to select it.

	Index	Time	ID:1	ID:2	ID:3	ID:4	ID:5	ID:6
	16	200	300	500	300	900	700	400
	17	200	300	500	300	900	700	400
	18	200	300	800	300	900	700	400
	19	200	300	500	300	900	700	400
	20	200	300	200	300	900	700	400
	21	200	300	500	300	900	700	400
	22	200	300	800	300	900	700	400
	23	200	300	500	300	900	700	400
▶	24	500	300	500	300	900	700	500

Step 5: Click “Run” to execute the new integrated actions online.

	Index	Time	ID:1	ID:2	ID:3	ID:4	ID:5	ID:6
	1	800	300	500	300	900	700	500
	2	800	300	500	150	800	450	500
▶	3	200	300	500	150	800	450	500
	4	400	460	500	150	800	450	500
	5	200	460	500	150	800	450	500
	6	500	460	500	155	770	520	500
	7	200	460	500	155	770	520	500
	8	800	460	500	300	770	450	500
	9	200	460	500	300	770	450	500

Running time ms
Manual coding
Add action
Update action
Move up

Total time s
Read angle
Delete action
Delete all
Insert action
Move down

Read deviation
Download deviation
Reset servo

☐ Loop

Run

Open action file
Save action file
Integrate files

Action group : Refresh

Erase
Erase all
Run action group
Stop
Exit

Step 6: Click “Save action file” to save the new integrated action group for the future debugging.

