

Settings and help.

Open Settings

Hold **BOOT** for Settings. Hold volume for **Sound**: Speech/Interface. **Agent** → **Voice**: OpenClaw modes/models. Set Hermes models in Hermes. **Guide** replays the tour. Short BOOT goes back.

Add a Wi-Fi network

Open **Settings** → **Wi-Fi**, then scan both codes again. Known networks are remembered.

Setup page will not open

Stay on KUBIK-XXXX and open <http://192.168.4.1/> in your browser.

No pairing code or reply


Keep the agent computer and Kubik service running. **Settings** → **Status** shows IP, MAC and server address. See the GitHub setup guide.

<https://OWNER.github.io/kubik/>
Temporary address · Help and updates

Quick start · Tess

KUBIK

Set up your agent.
Connect. Start talking.

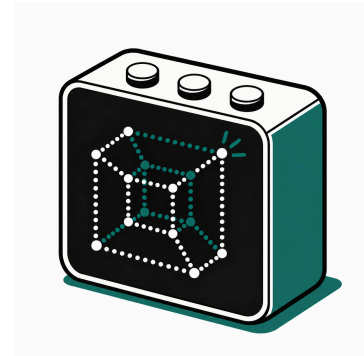


Have USB-C power, a phone and your **2.4 GHz Wi-Fi** password ready. Choose your agent on page 3.

Open the setup guide on GitHub

<https://OWNER.github.io/kubik/>
Temporary address — replace before release.

Know the buttons.

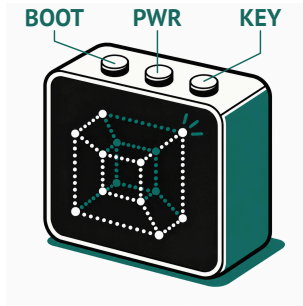

BOOT

Left

Press: go back one screen.

Hold: open or close Settings.

PWR

Middle

Press: screen off or on.

Hold ~2 s: power off or on.

KEY

Right


Start voice input.

Ways to speak and send: page 7.

The on-screen Guide points to these buttons.

4 · On Kubik

Talk to Tessa.

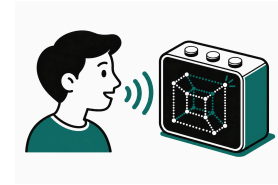

Say “**Hi Tessa**”, then your question.

STT / Classic

Hold **KEY**, speak, release. Or press once to start, again to send.

Realtime

Press **KEY**, speak, then pause to send.

GPT Live

Start with KEY or “Hi Tessa”. Speak at **Listening**, even during replies. KEY ends it; pauses do not.

Voice output + volume **20+**: spoken replies.
Otherwise: text.

3 · Confirm the connection

Approve your Kubik.

Muse app: Settings / Devices / Developer mode / Add device. Choose Kubik's MuseGadget; press **KEY** when asked, then choose Wi-Fi. Bluetooth turns off afterward.

OpenClaw / Hermes: use the code displayed on your Kubik. For OpenClaw, first match it to the pairing list.

OpenClaw

```
openclaw pairing list kubik
```

```
openclaw pairing approve kubik CODE
```

Hermes

```
python ~/.hermes/plugins/kubik/pair.py CODE
```

Connected: follow Guide; BOOT returns home.

No match? Check the GitHub setup guide.

06

1 · Choose your agent

Prepare your agent.



1. **Muse:** sign in on your phone. Create a personal SDK key using the GitHub guide.
2. **OpenClaw / Hermes:** install the agent and Kubik integration. Check a text reply. Keep it running.
3. Configure speech for OpenClaw/Hermes. Muse voice notes return text.

At home, use the same trusted network. For a remote server, prepare the connection using the GitHub guide first.


Ready: Muse key or agent service running.

Downloads and detailed commands are on GitHub.

03

Scan both QR codes.

Connect USB-C power. Press **PWR** to wake the screen; if powered off, hold it for about two seconds.

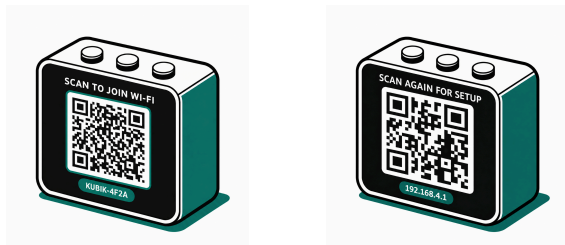

First: join Kubik's Wi-Fi

Scan **Scan to join Wi-Fi** and join **KUBIK-XXXX**. Stay connected if your phone says “no internet”.

Then: open setup

Wait for the gold title **Scan again for setup**. Scan the **new QR** to open the setup page.

Next: “Let’s connect Kubik” opens on your phone.

Connect to your agent.

1. Select your **2.4 GHz Wi-Fi**, enter its password and tap **Continue to agent**.
2. Choose your agent. **Muse:** enter its SDK key; no server address is needed.
3. **OpenClaw:** at home, leave **Server address** blank. Remote OpenClaw: enter **kubik://PUBLIC-IP:18790**. Hermes: enter **kubik://HOST:18793**; no home relay.
4. Tap **Connect Kubik**.

Kubik saves the settings and restarts. Your phone may disconnect from KUBIK-XXXX. Watch Kubik now.

The address belongs to the Kubik integration, not your agent’s dashboard or speech provider. The online guide shows where to find it.

Next: Muse pairs on your phone; OpenClaw/Hermes show a pairing code.