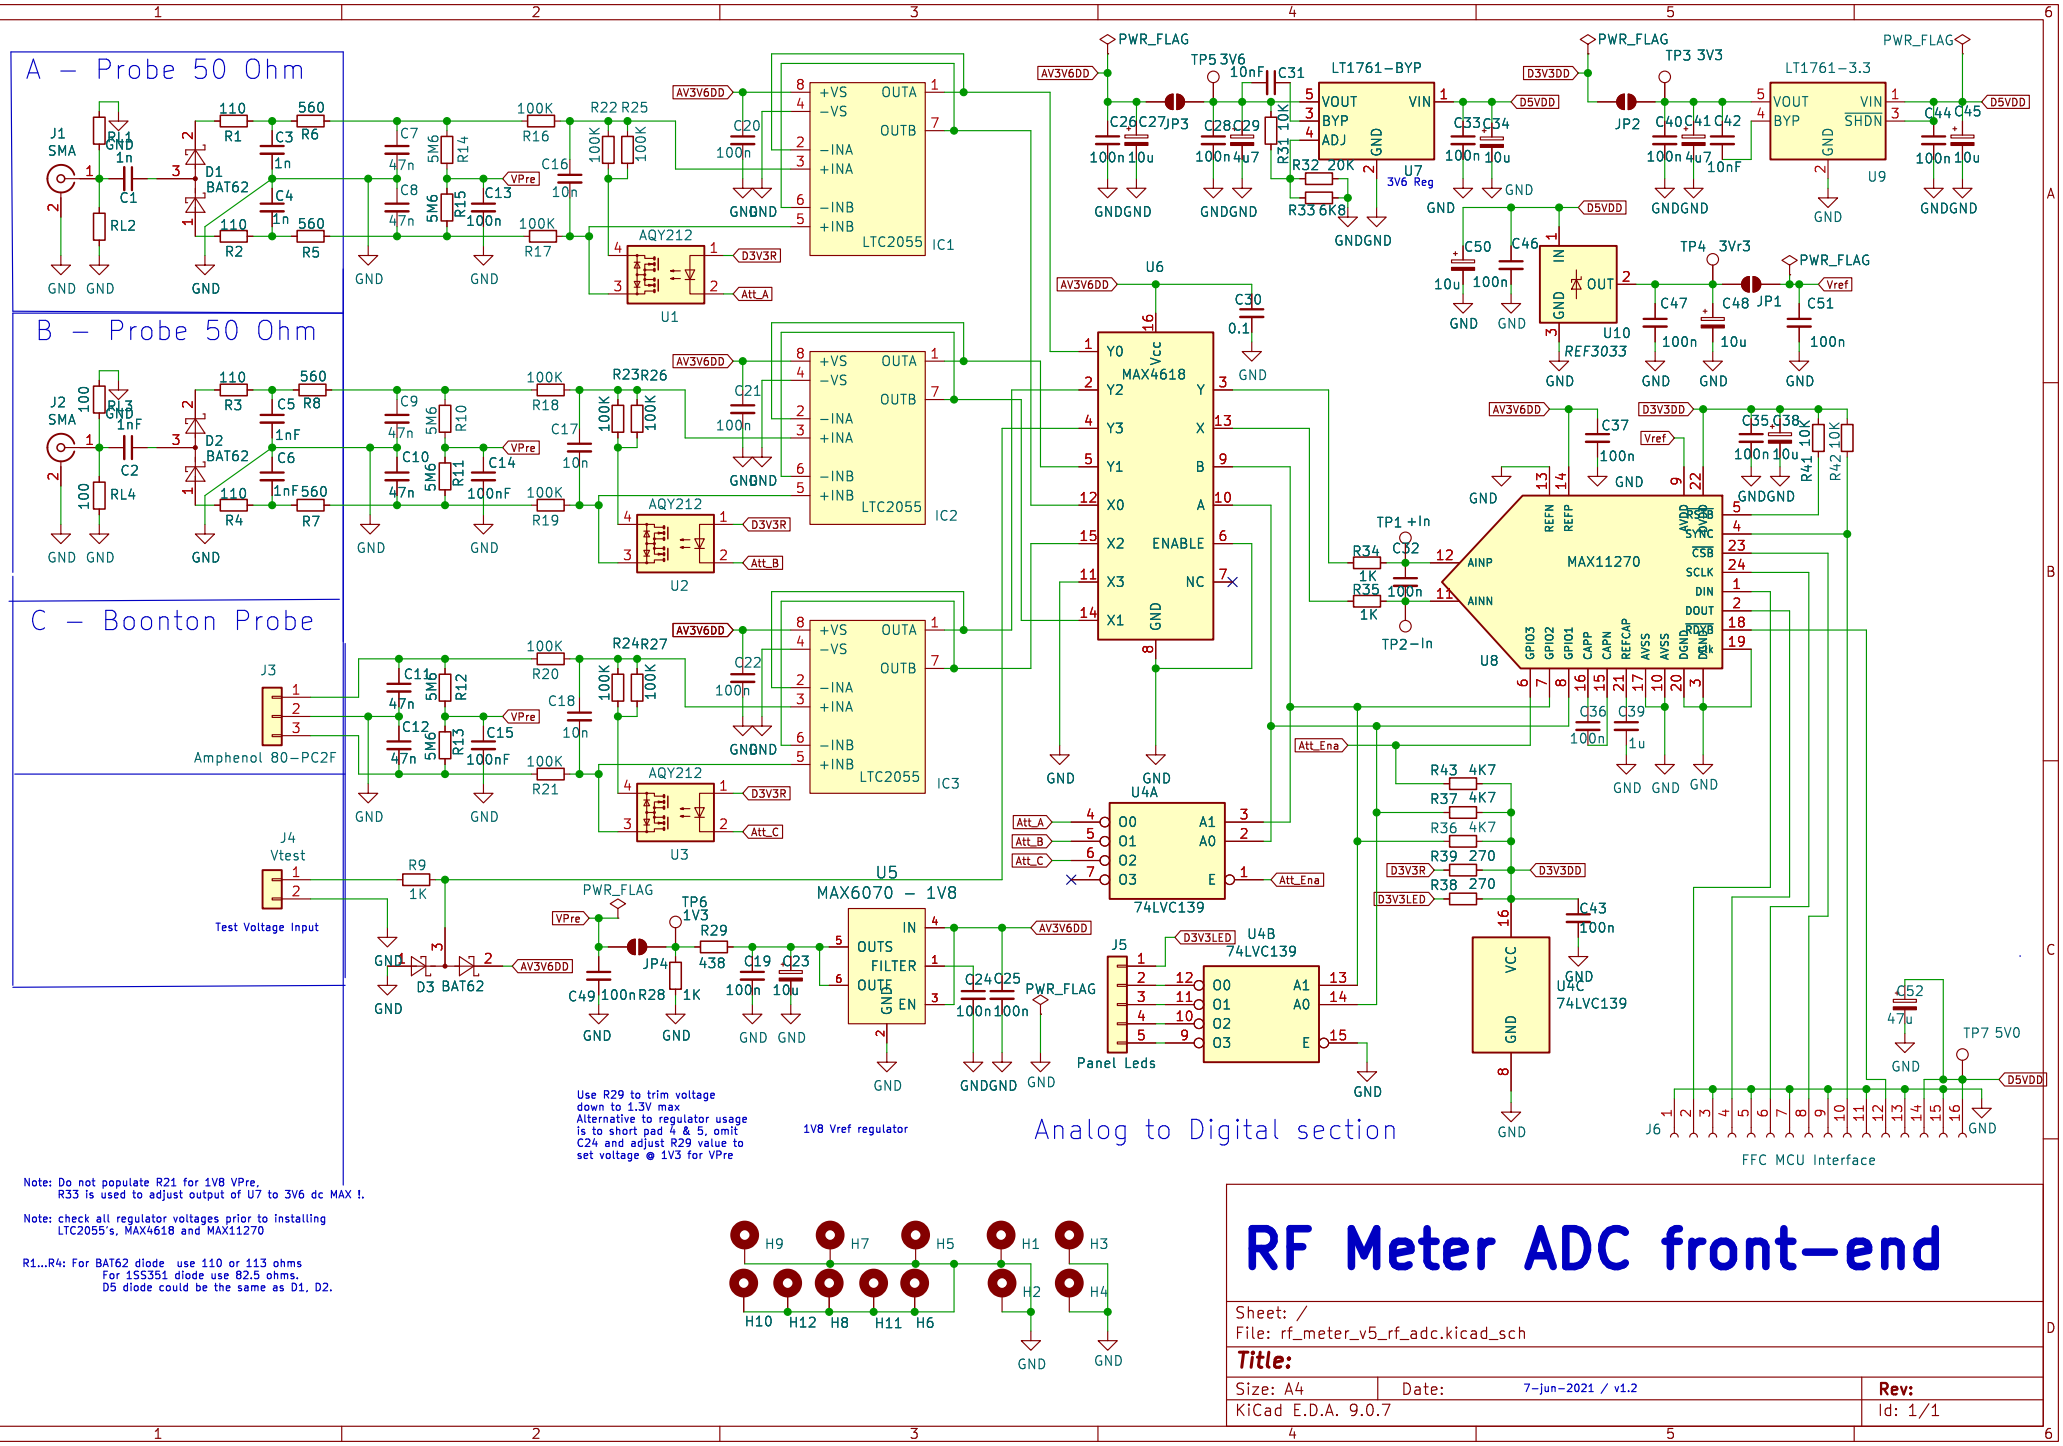

A – Probe 50 Ohm
B – Probe 50 Ohm
C – Boonton Probe
Amphenol 80-PC2F
Test Voltage Input
MAX4618
MAX11270
MAX6070 – 1V8
74LVC139
LT1761-BYP
LT1761-3.3
REF3033
LTC2055
AQY212
Panel Leds
FFC MCU Interface
Analog to Digital section
1V8 Vref regulator
Use R29 to trim voltage down to 1.3V max
Alternative to regulator usage is to short pad 4 & 5, omit C24 and adjust R29 value to set voltage @ 1V3 for VPre
Note: Do not populate R21 for 1V8 VPre.
R33 is used to adjust output of U7 to 3V6 dc MAX !.
Note: check all regulator voltages prior to installing LTC2055's, MAX4618 and MAX11270
R1...R4: For BAT62 diode use 110 or 113 ohms
For 1SS351 diode use 82.5 ohms.
D5 diode could be the same as D1, D2.
RF Meter ADC front-end
Sheet: /
File: rf_meter_v5_rf_adc.kicad_sch
Title:
Size: A4
Date: 7-jun-2021 / v1.2
Rev:
KiCad E.D.A. 9.0.7
Id: 1/1