




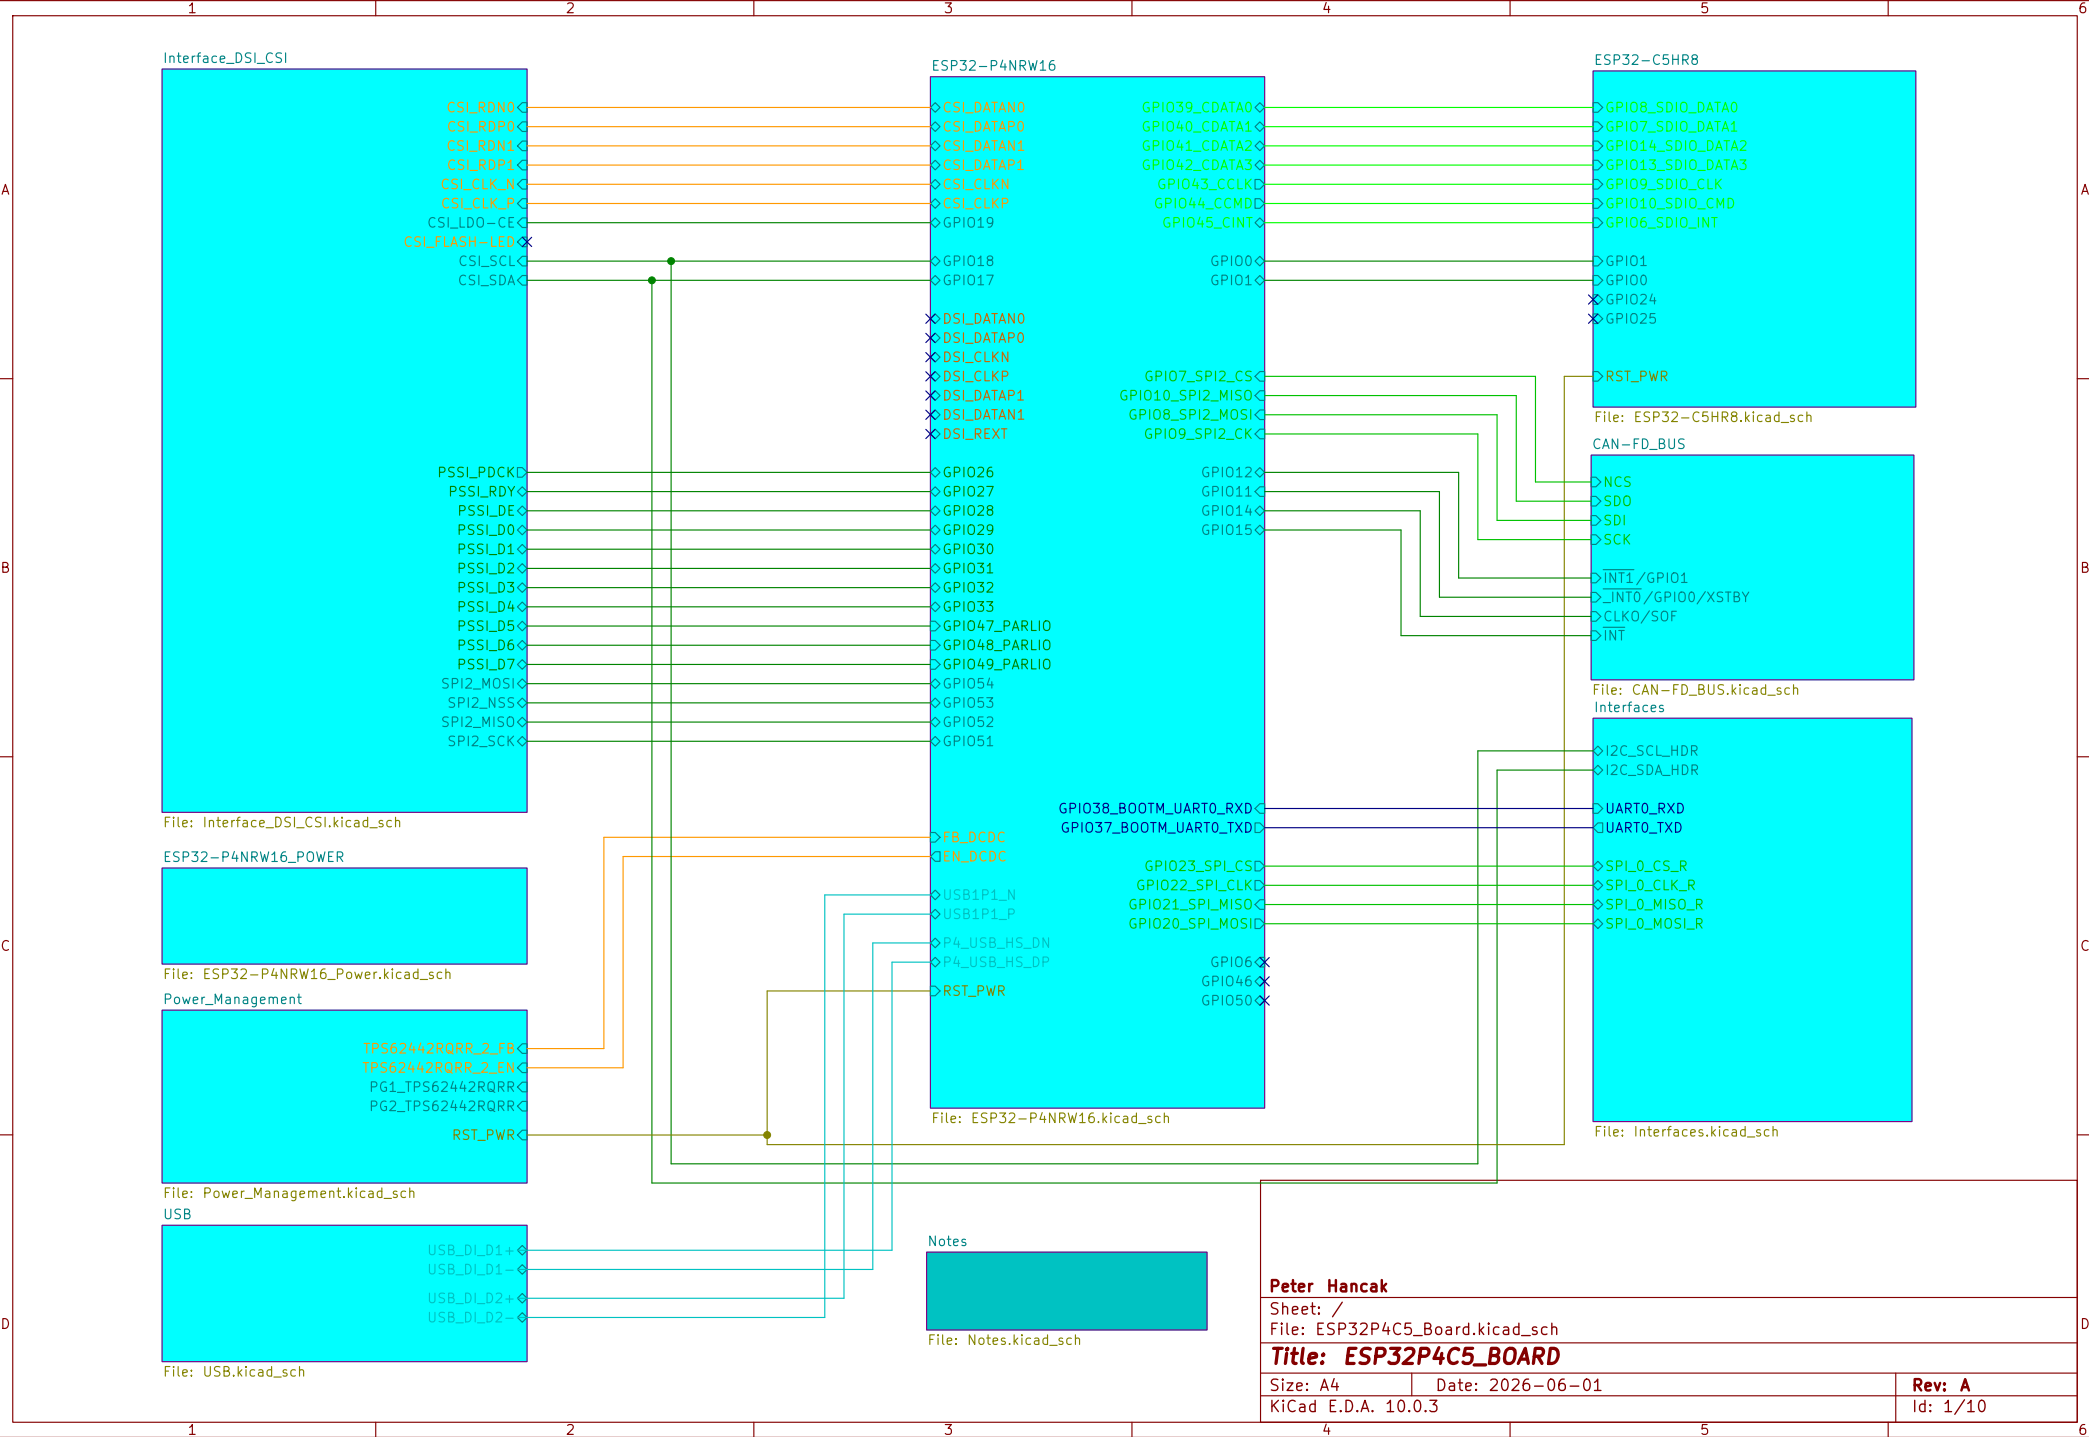

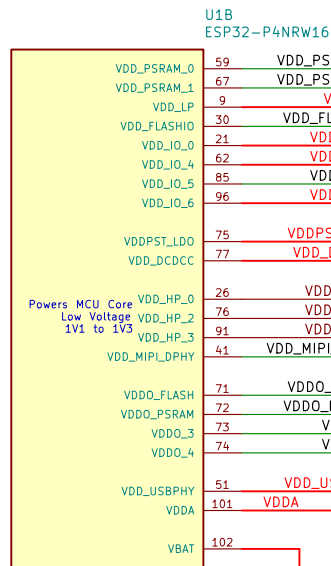

ESP_3V3 is from 5V LDO or SMPS

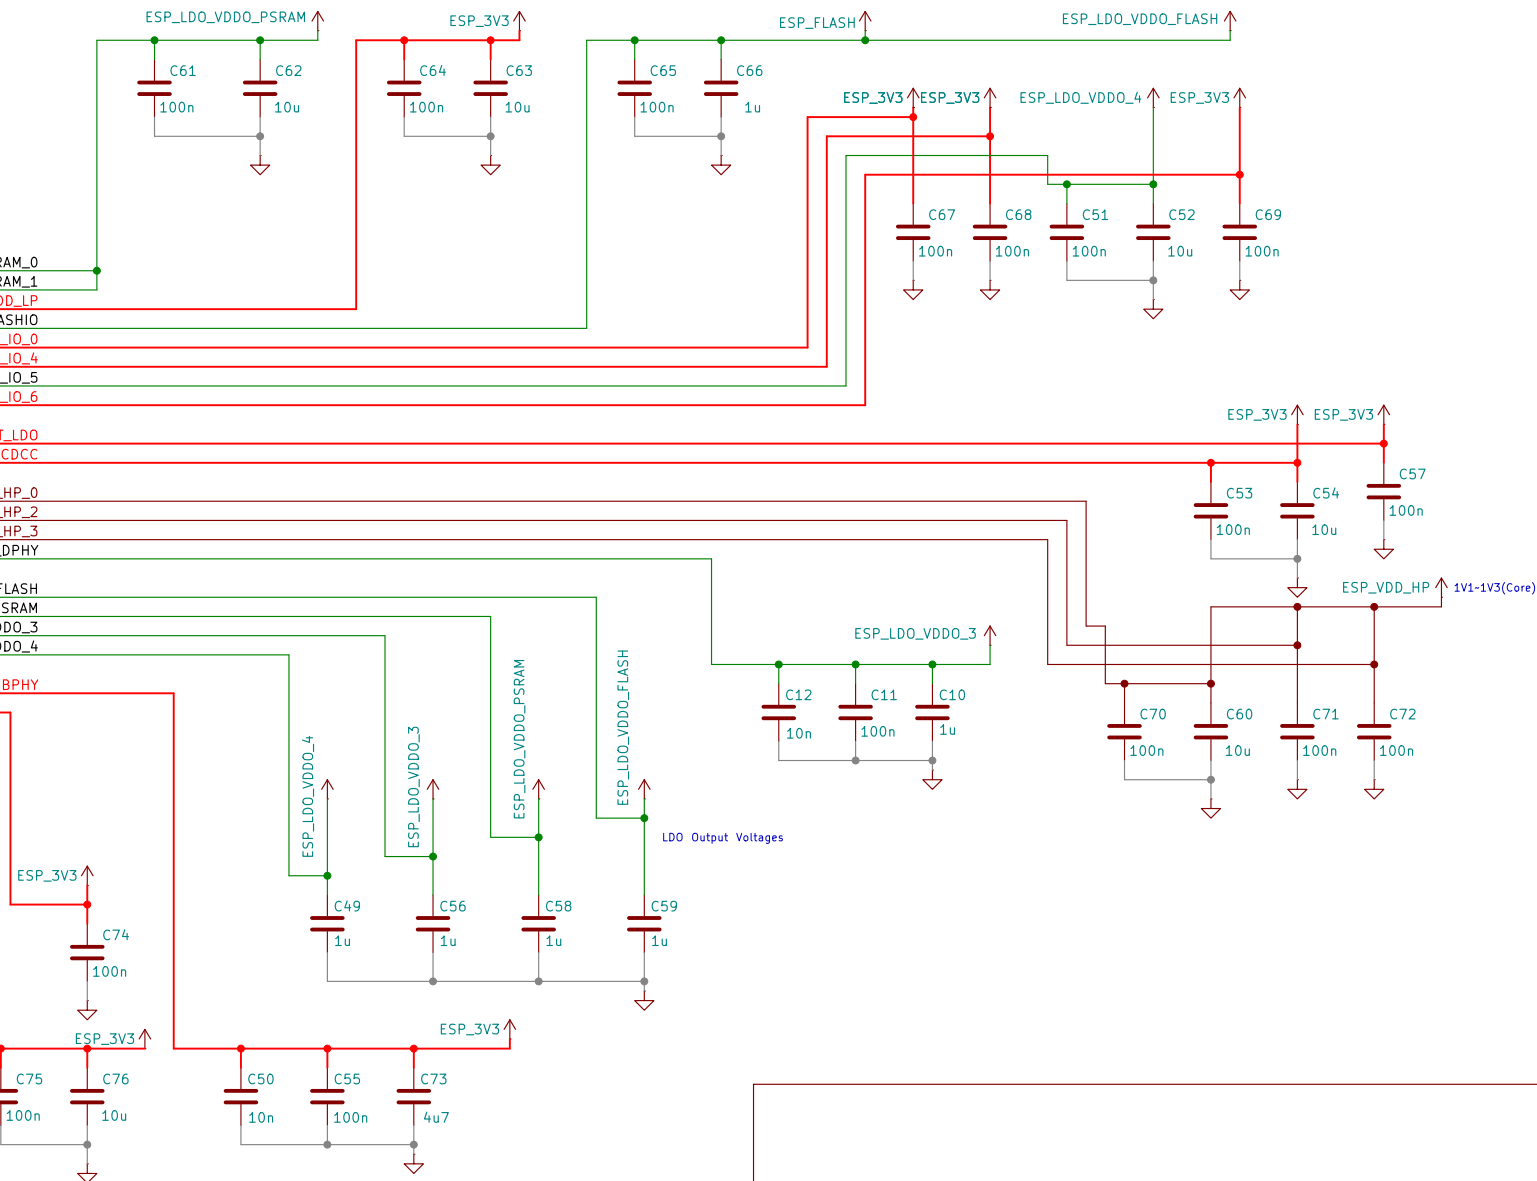



Peter Hancak

Sheet: /ESP32-P4NRW16_POWER/
File: ESP32-P4NRW16_Power.kicad_sch


Title: **ESP32P4C5_BOARD**

Size: A4 Date: 2026-06-01
KiCad E.D.A. 10.0.3

Rev: A
Id: 3/10

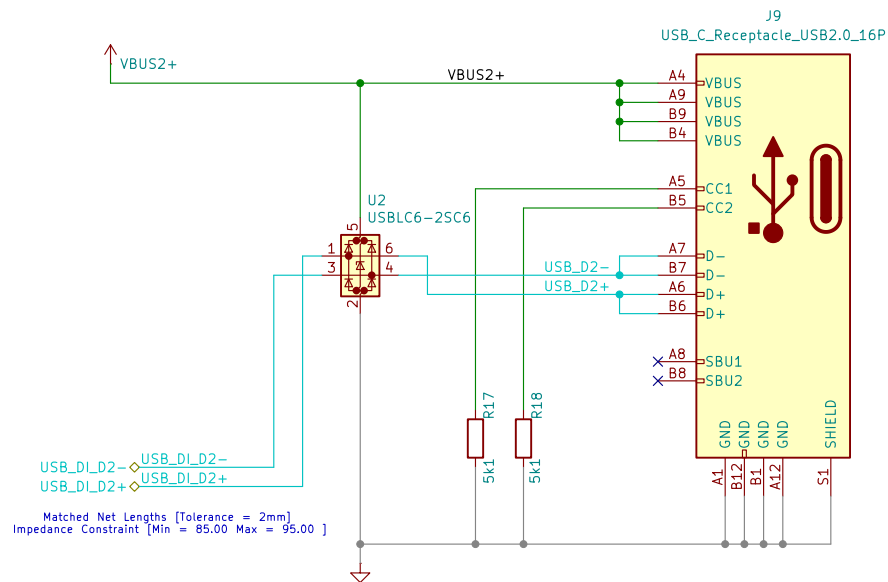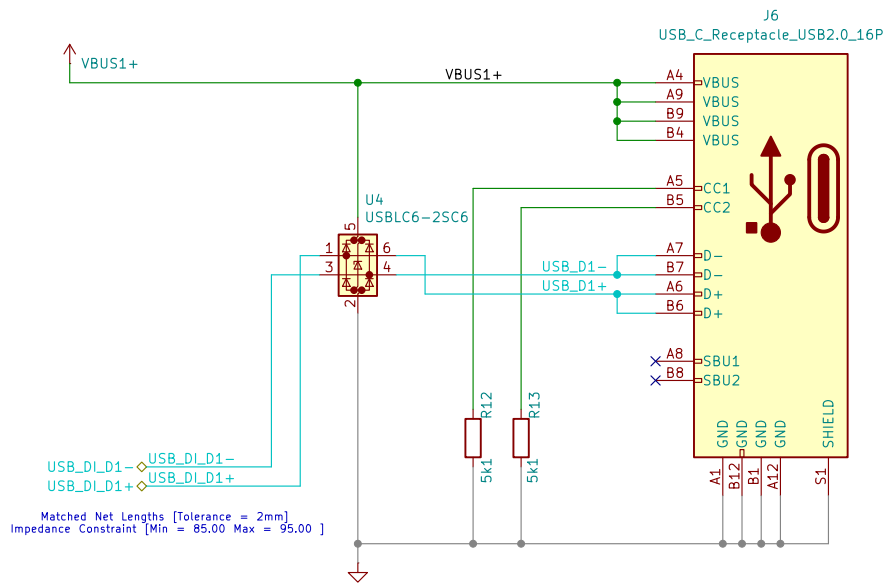

Mounting Holes



Peter Hancak

Sheet: /USB/

File: USB.kicad_sch

Title: ESP32P4C5_BOARD


Size: A4


Date: 2026-06-01



Rev: A

KiCad E.D.A. 10.0.3

Id: 4/10

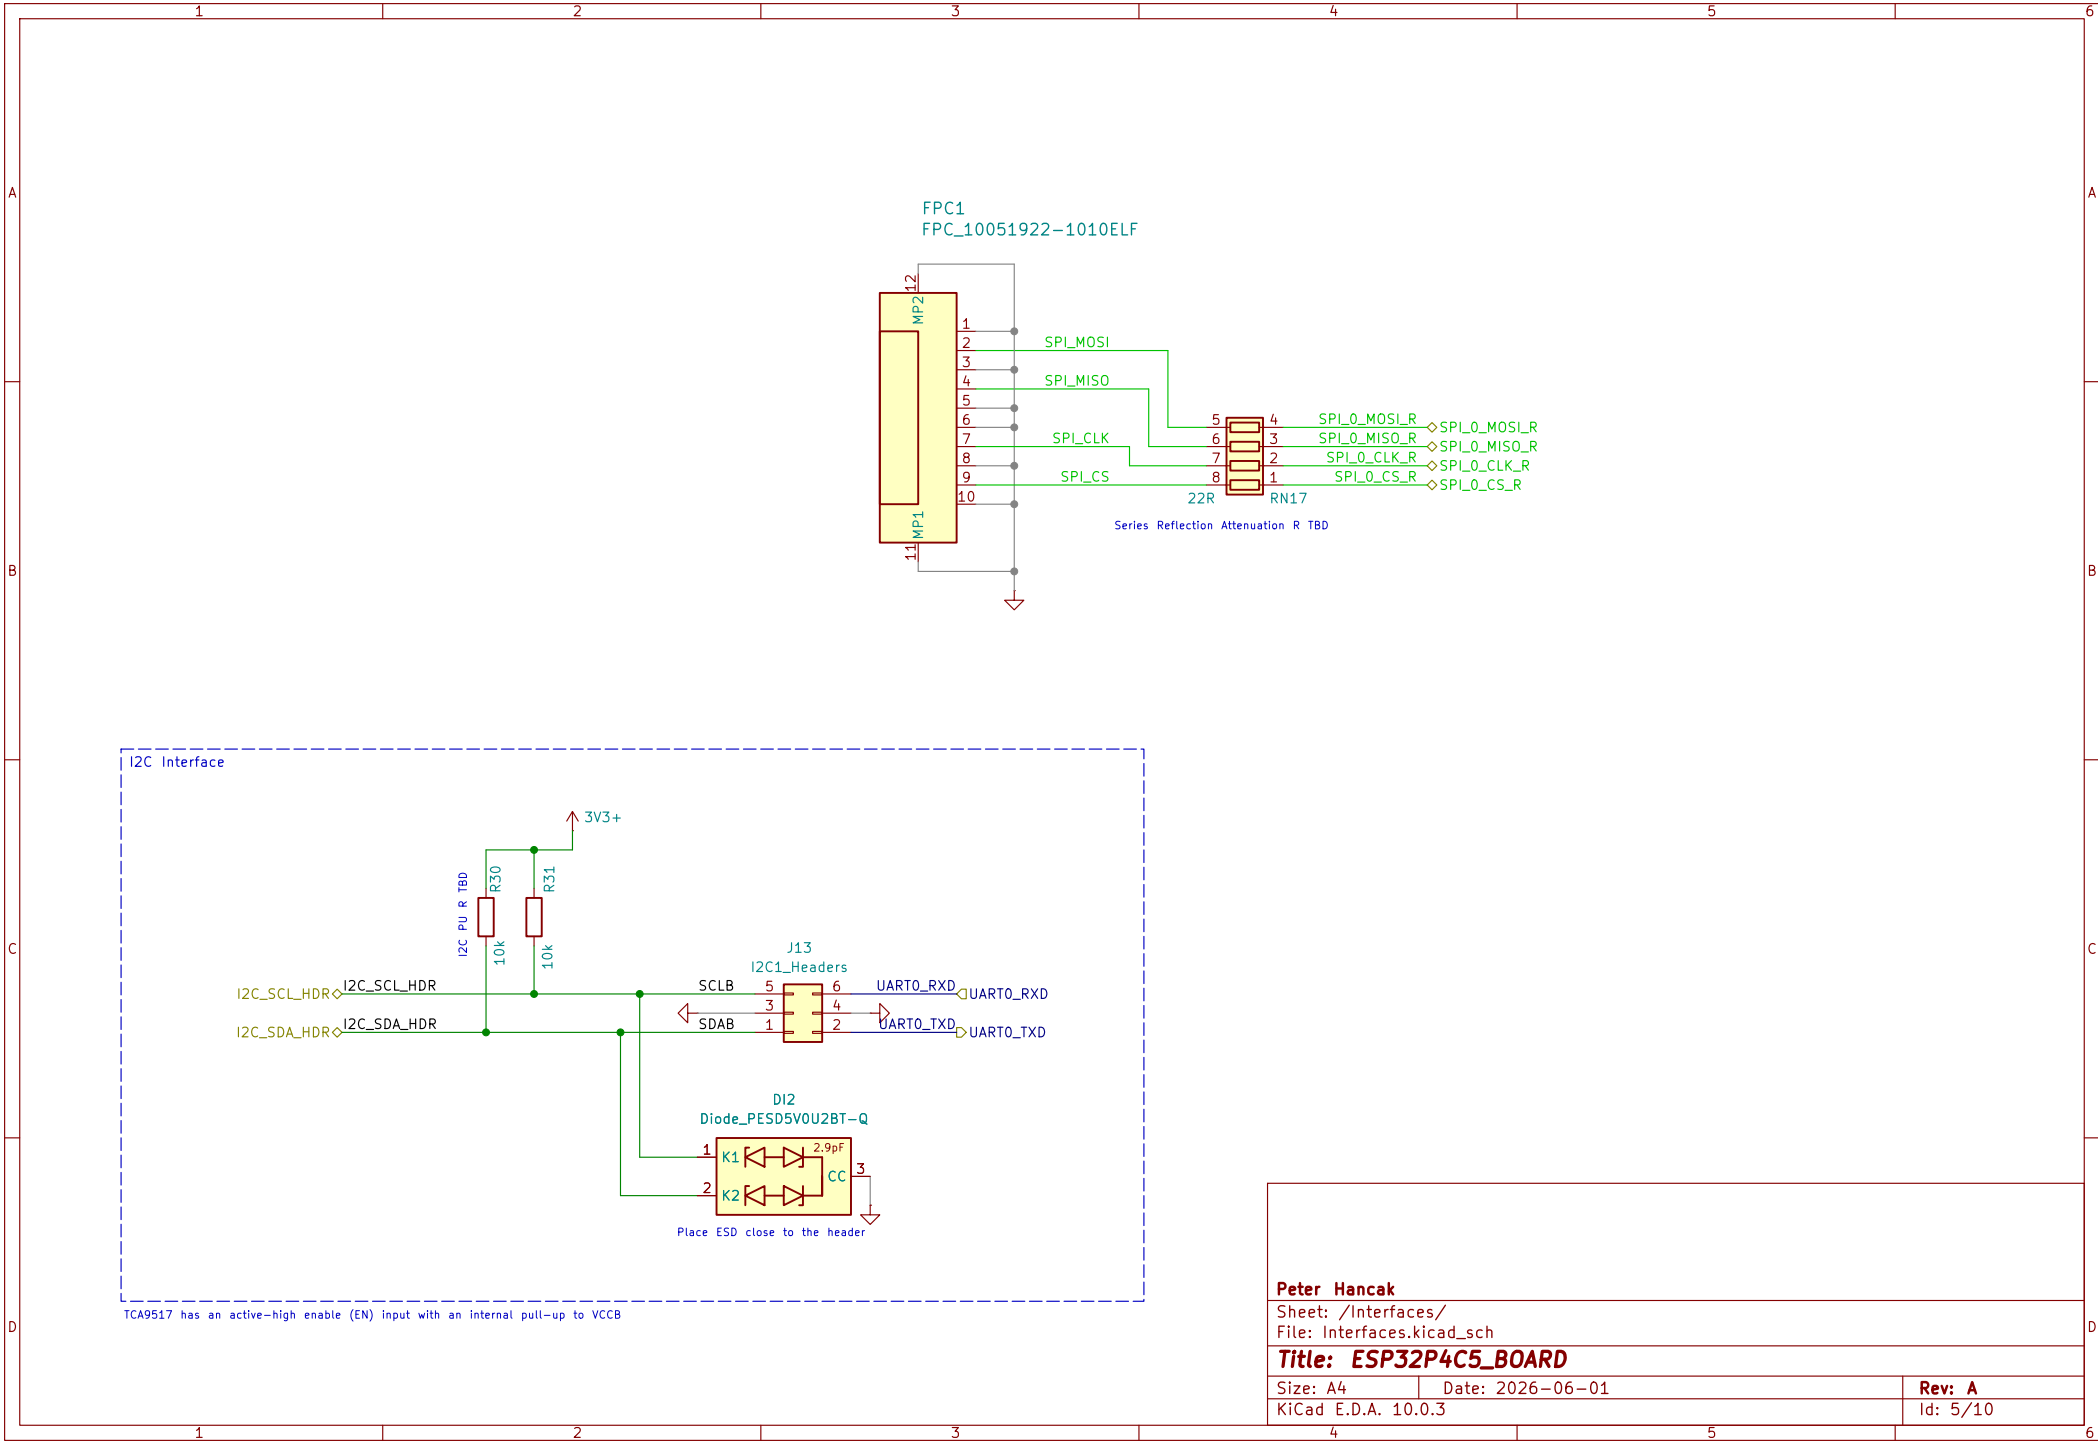

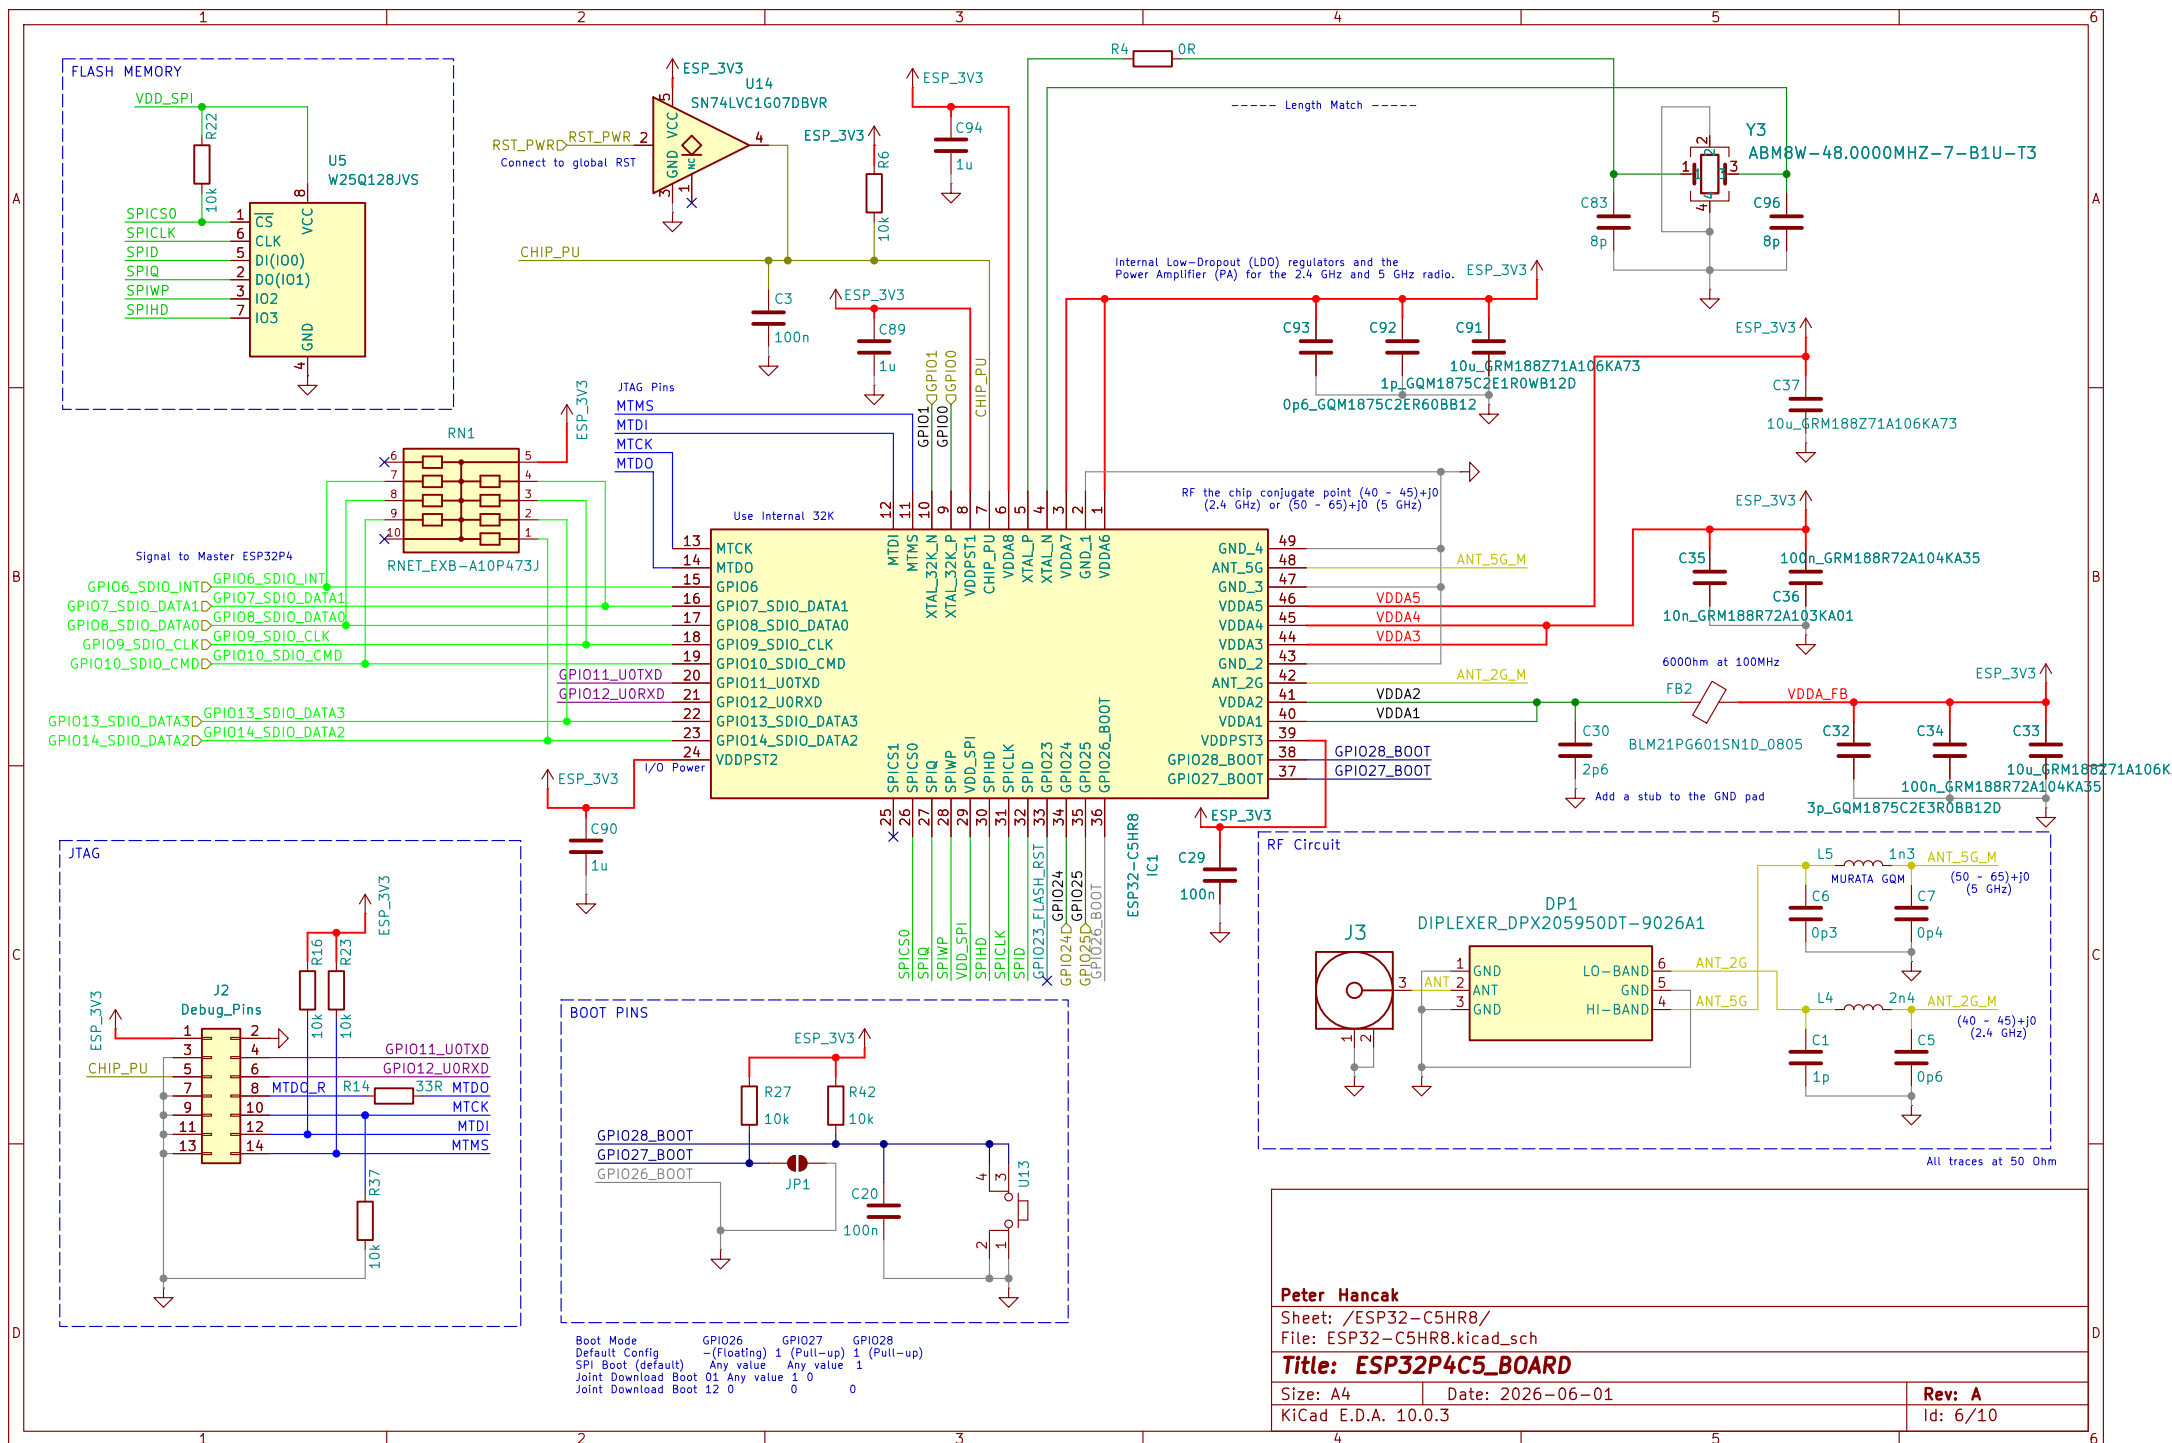

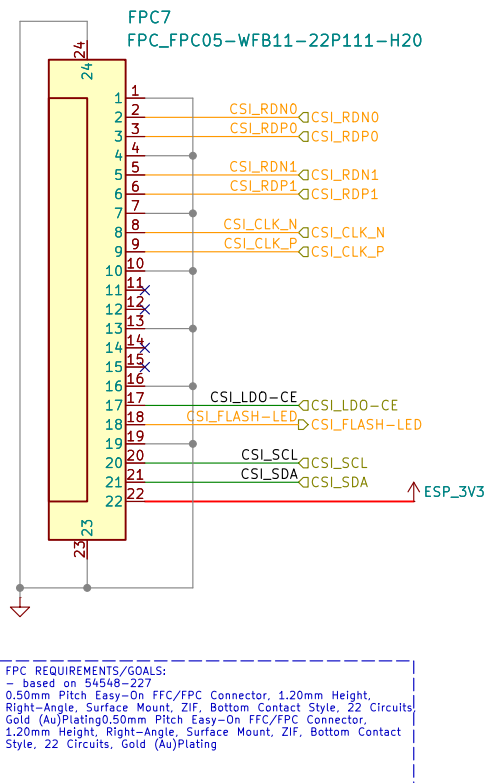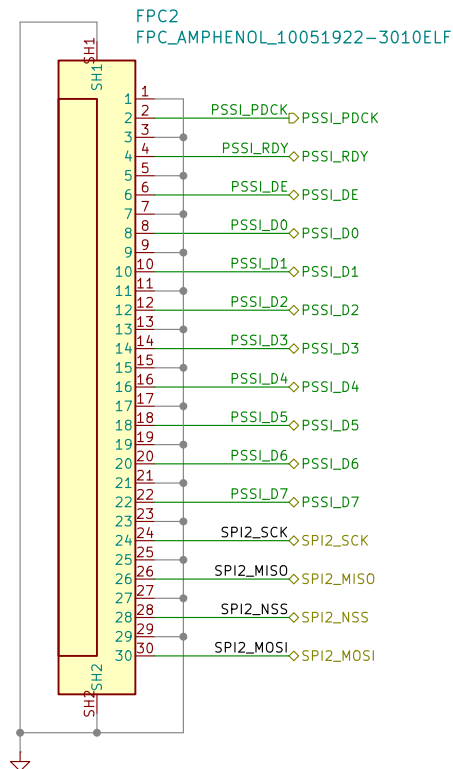

MIPI 2 LANE 40PIN 0.5P REFERENCE
https://www.alibaba.com/product-detail/3-5-Inch-LCD-480-800_1601636999524.html?spm=a2700.prosearch.normal_offer.d_image.311067af89LjnB&priceId=2b7e3e7b4ca24f6aad4eb9f0880c6bb

Peter Hancak

Sheet: /Interface_DSL_CSI/
File: Interface_DSL_CSI.kicad_sch


Title: **ESP32P4C5_BOARD**

Size: A4 Date: 2026-06-01

KiCad E.D.A. 10.0.3

Rev: A

Id: 8/10

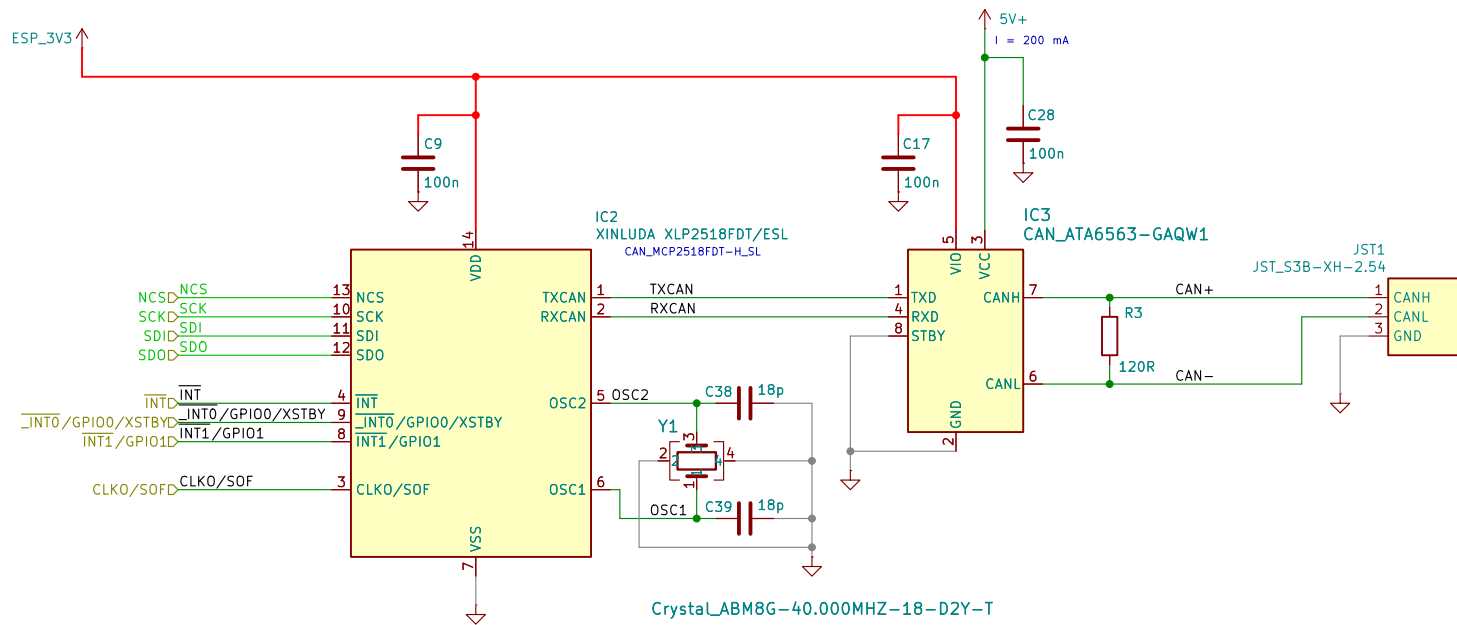

Use INT0 when your software needs to know: "Is there data for me to read and process?"
 Use SOF when your software needs to know: "Exactly what microsecond did this network event happen in physical reality?"

Peter Hancak

Sheet: /CAN-FD_BUS/

File: CAN-FD_BUS.kicad_sch

Title: ESP32P4C5_BOARD

Size: A4

Date: 2026-06-01

Rev: A

KiCad E.D.A. 10.0.3

Id: 9/10

