iQ-FoV Box Set-Up



1. Wheeled table Installation

Attach Alu-bars to each other using hammer-nuts and wrench 13. All Alu-bars are marked with tape and numbers in pairs. Connect them according to the numbers. See example below.



2. iQ-FoV Box housing installation

The assembled housing



To assemble the housing you need an assistance of one person. Start with two walls marked "Right side" and "Bottom". Place them like on the picture, put the heads of the torx-screws into grooves and tighten them with the torx-key. Always look for the labeled letter-pairs.





Attach the other walls marked "Top" and "Left Side" to the assembly and fasten them together like described above.

3. Final Assembly


Set the housing atop the wheeled table looking for the proper number- and letter-pairs.




To fasten the housing to the table use four screws.




There are four fixing angle brackets which are already mounted on the wheeled table. Put the screws into angle brackets and tighten them to the housing.

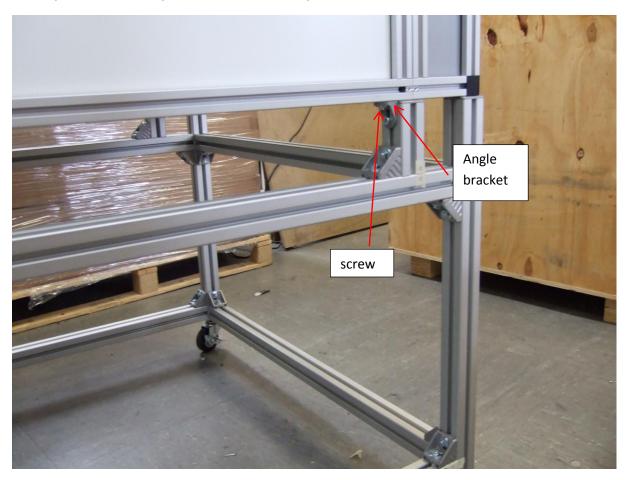


Put the light head on the wheeled table and fix it to the housing by means of slotted two-screw nut

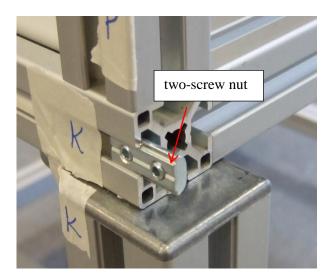

Put the camera extension arm through the front opening of the light head and lean it on the supporting angle brackets.

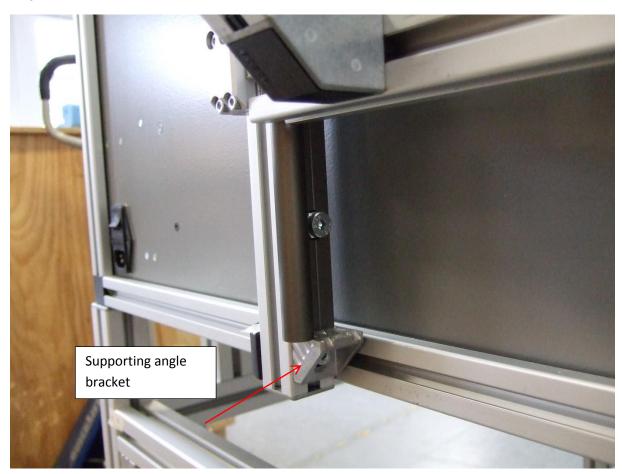

With four screws fix it to the light head.

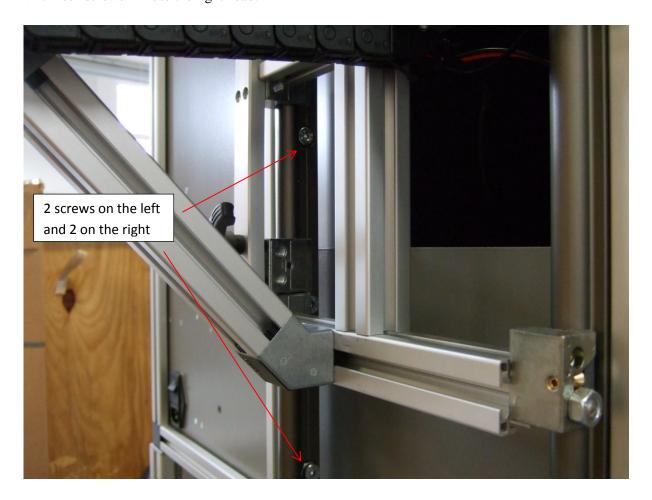

And the last: fix the door to the hinges on the back of the housing with four screws.