

POWER-UP:

ON/OFF

until the 4 leds turn on. If there is an error message that reappears on subsequent power-ups, the terminal is faulty. If the terminal does not start, replace the batteries or connect an external power source, if this does not help, the terminal must be serviced.

POWER-DOWN:


ON/OFF

STARTING A NEW OPERATION:


The terminal is ready for a new operation, when it displays the prompt **FUNCTION?** This state will be reached by completing the current operation or by pressing the **SHORT TERM** -key once or twice.

SHORT
TERM

ENTERING A NEW FREE FORMAT MESSAGE:

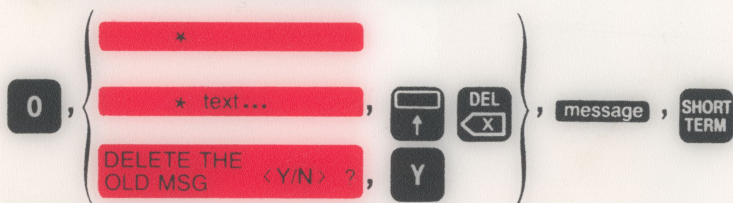

EDITING A FREE FORMAT MESSAGE:

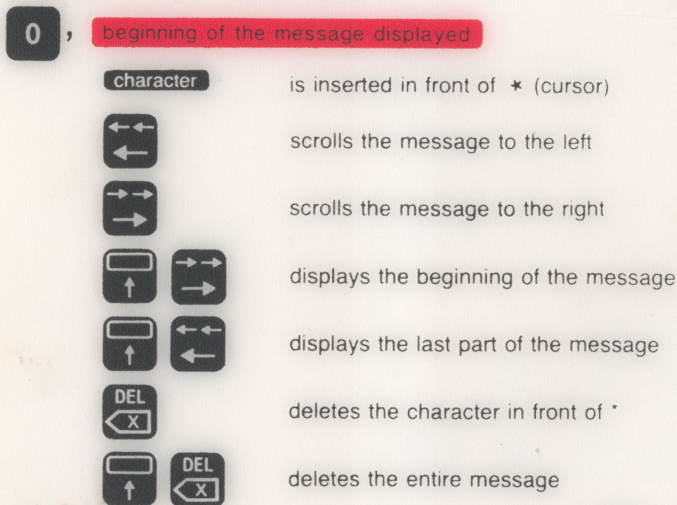

When editing is done, press

SHORT
TERM

ENTERING A FIXED FORMAT MESSAGE:



TRANSMITTING

SHORT TERM , **SEND** , **RECEIVER: XX** , { **a new receiver** } , **XX correct** , **≡**

While the terminal transmits, the TRANSMIT-led is on.

READING THE RECEIVED MESSAGES:

The reception of a message turns on the MESSAGE-led, it will be turned off after the messages have been read.

DISPL , { **NO MESSAGES** } , The receiving memory is empty
MESSAGE 1...N? **nr** **MSG nr SENDER, TIME: SA 12:34**

←← , **←** , **the start of the message displayed** ,

←← , **→→** , **↑** , **→→** , **↑** , **←←** move the message on the display

≡ or **←←** are used to read a fixed format message

↑ **DEL** **X** deletes the message and displays the next one

DISPL displays the next message

SHORT TERM terminates the reading of the messages.

If the header contains **DE** the message contains uncorrectable transmission errors. **CE** announces that the time of transmission and reception differ by more than 5 minutes. This could be caused by an opponent playing back a recorded message.

CHARGING OF THE BATTERIES:

If the BATTERY LOW -led is on, the power supply of the terminal is too low and the batteries must be replaced or charged. Before charging connect an external power supply of 10...30 volts.

↑ **C** , **Y** starts continuous charging with 400 mA

↑ **C** , **N** , **Y** starts charging for 4.5 h with 1,2 A

↑ **C** , **N** , **N** , **Y** starts charging for 20 min with 3 A

The CHARGE-led is on during charging
To terminate charging enter:

↑ **C** , **SHORT TERM**

CONNECTING THE TERMINAL TO A COMMUNICATIONS EQUIPMENT:

Connect a cable between the terminal's "RADIO"-connector and the communications equipment. Turn on both devices.