

1

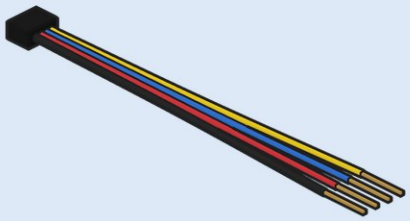


1x
sensor cable

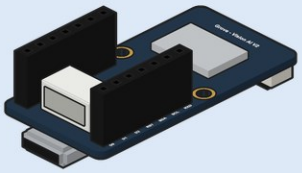


1x
brain



1x
heart sensor

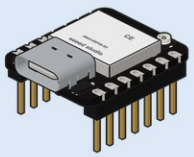

1x
radio




1x
Kapton



2


Switch OFF first

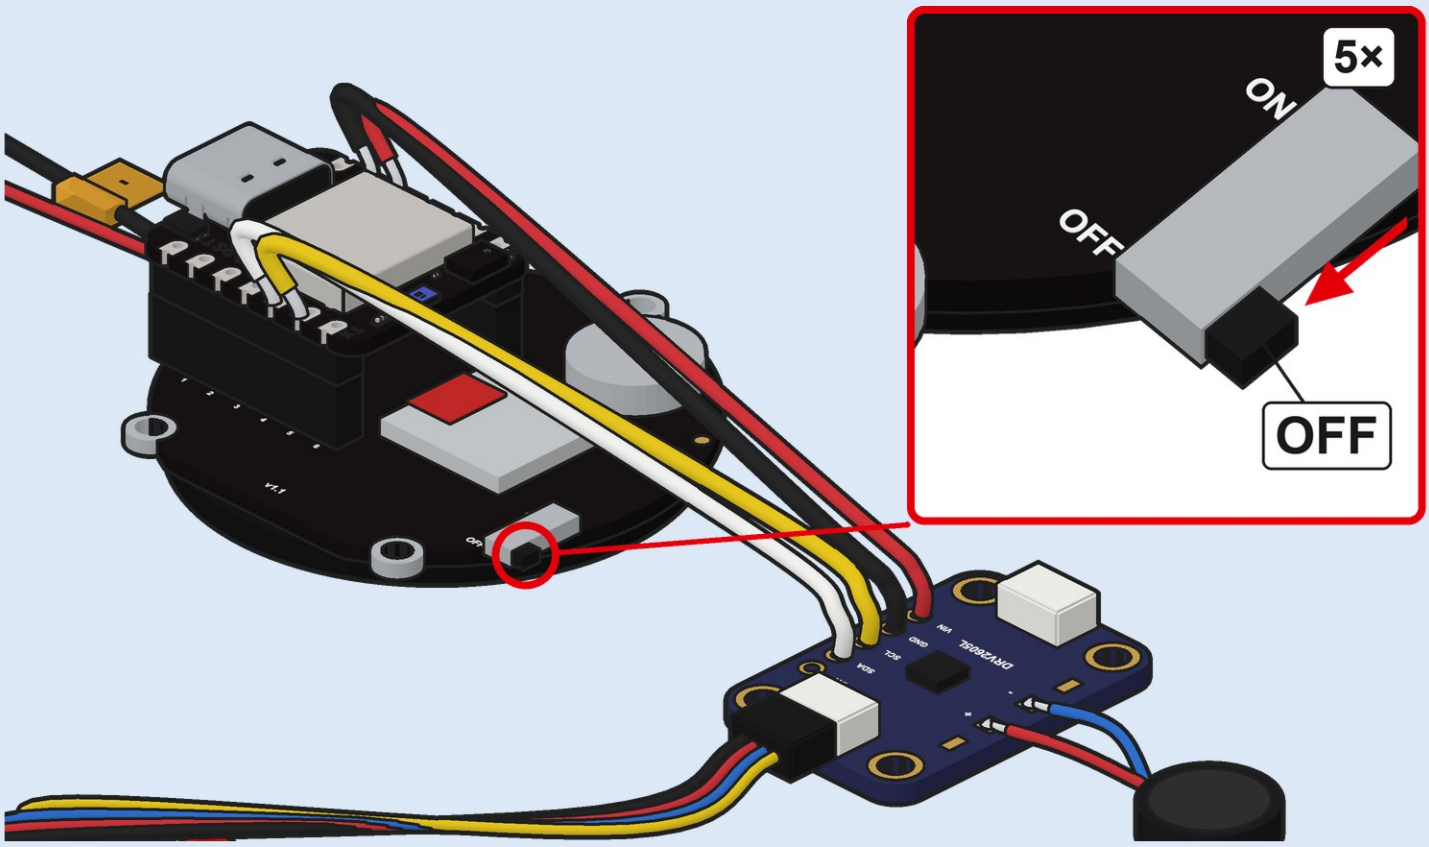

Display switch OFF


3

Pull the plug, not wires

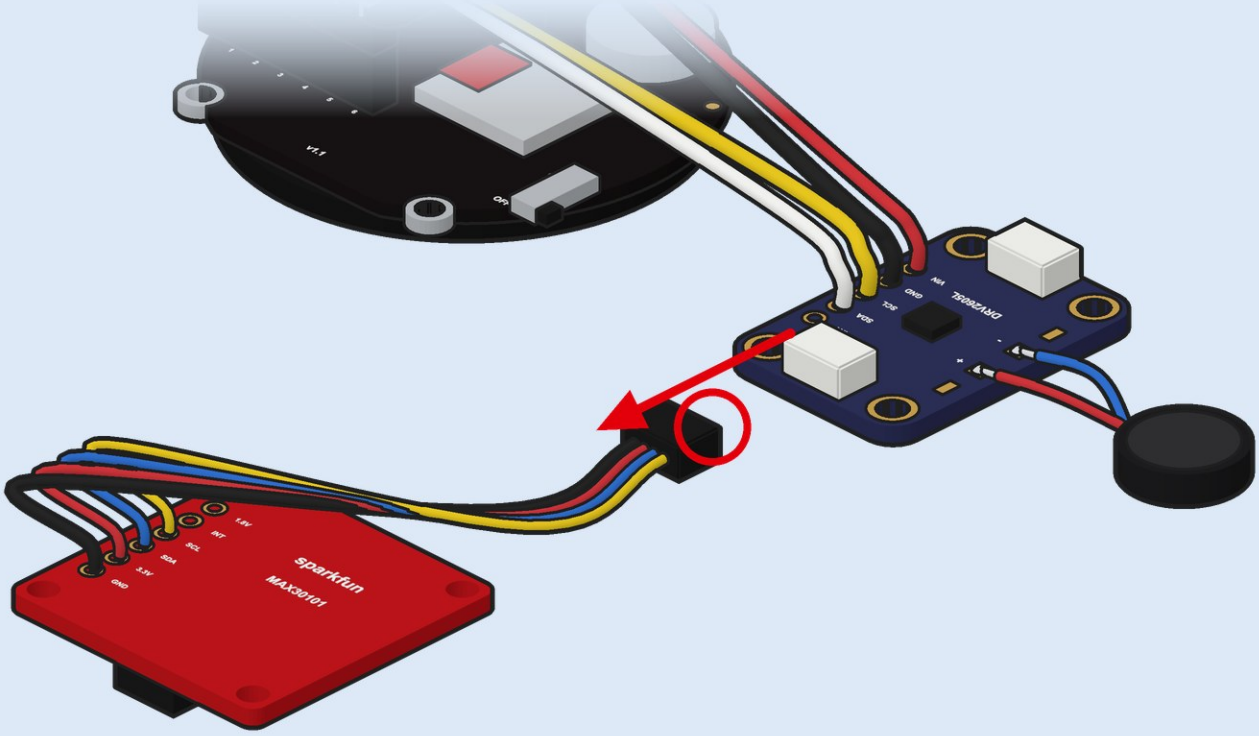


Pull the small plug out of the DRV

4

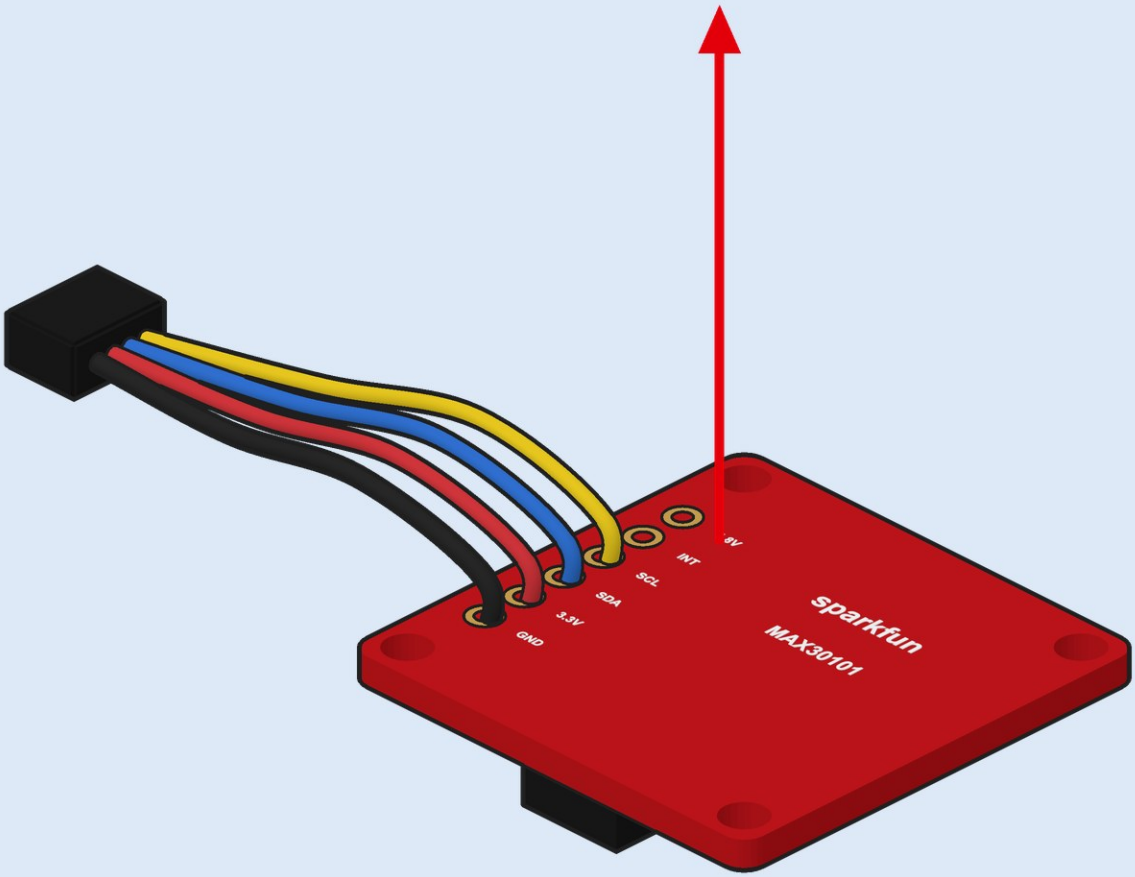

Lift the sensor out, cable and all

5

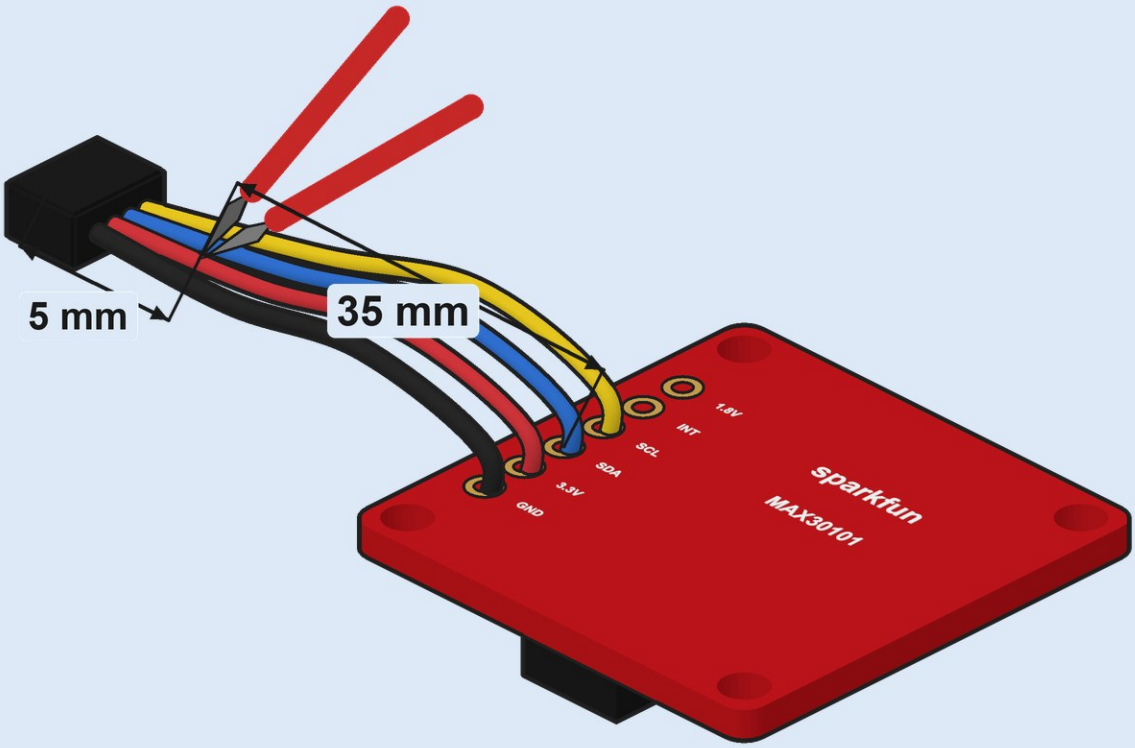

Cut 5 mm from the plug


6



Black: strip 2 mm

7



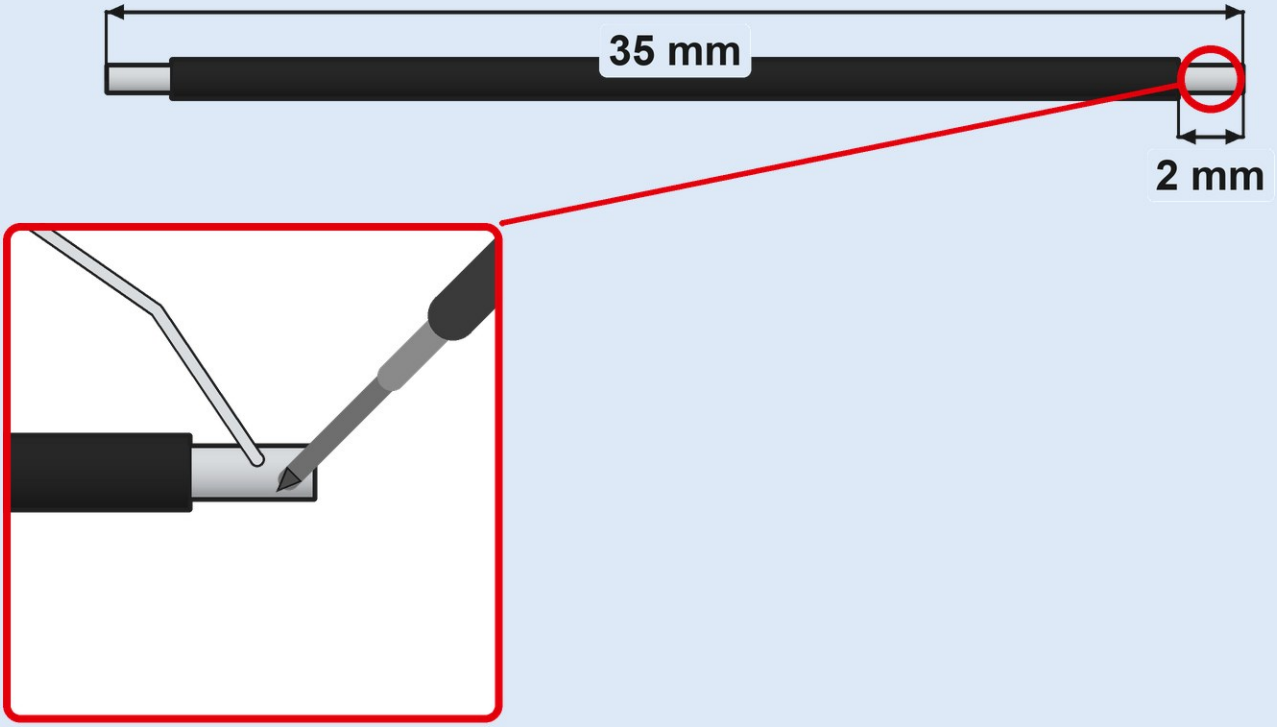

Tin black


8



Red: strip 2 mm

9



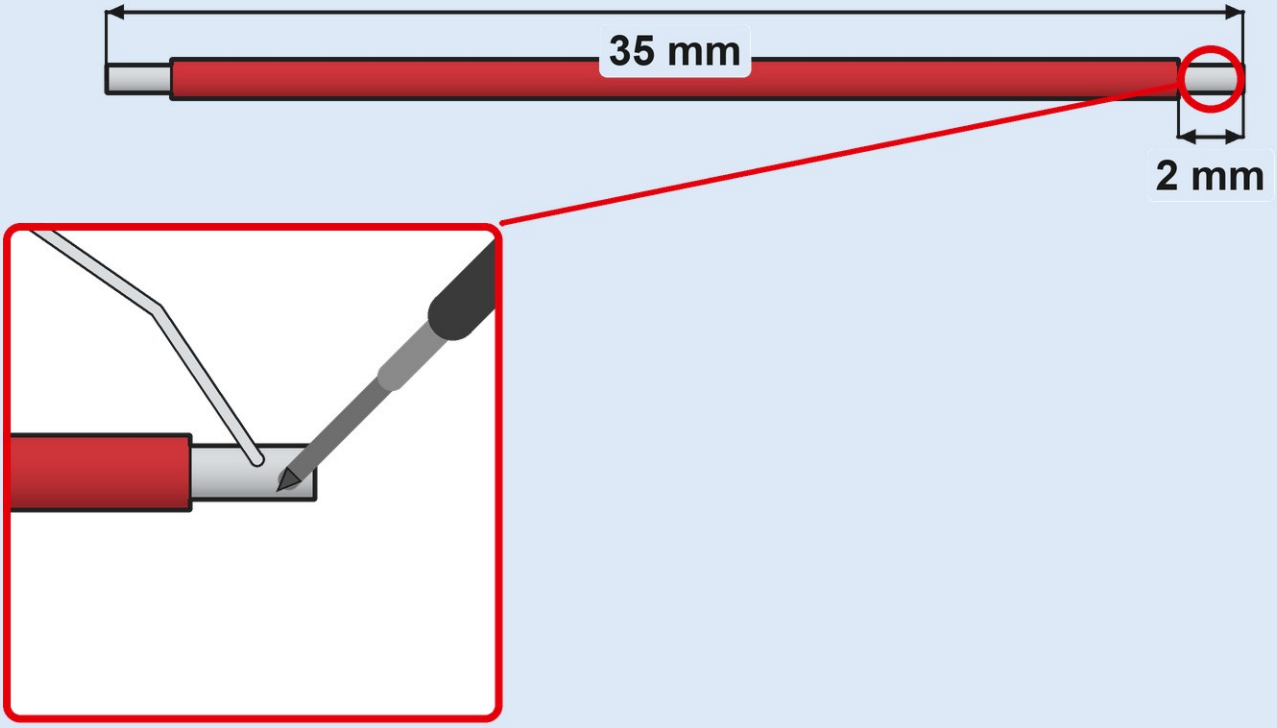


Tin red

10



Blue: strip 2 mm

11

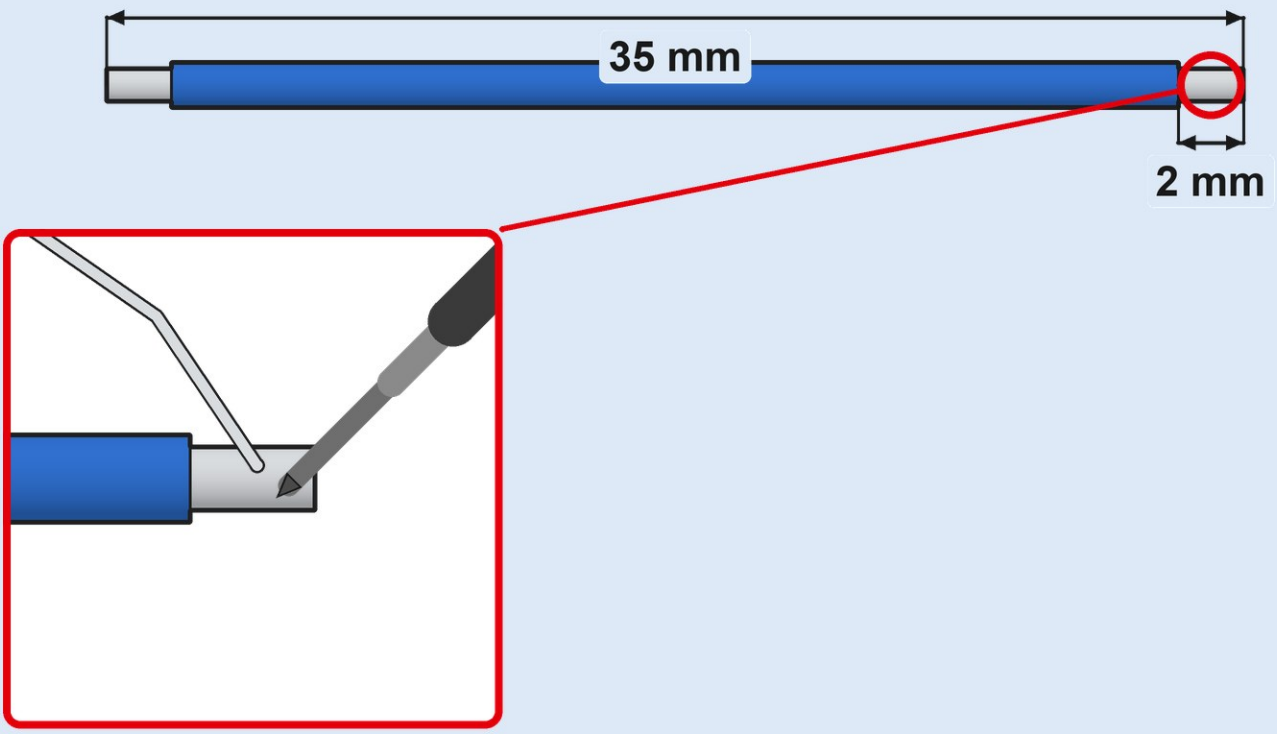


Tin blue

12



Yellow: strip 2 mm


13

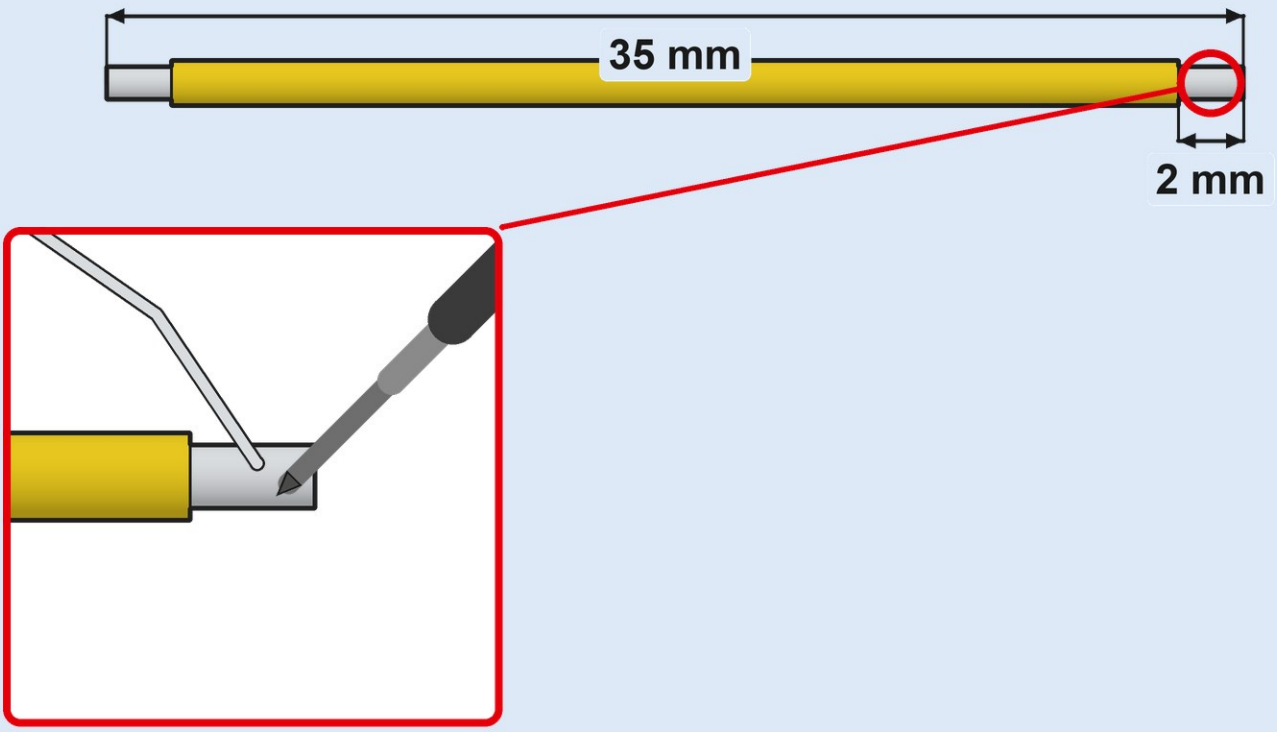

Tin yellow


14

Switch OFF first

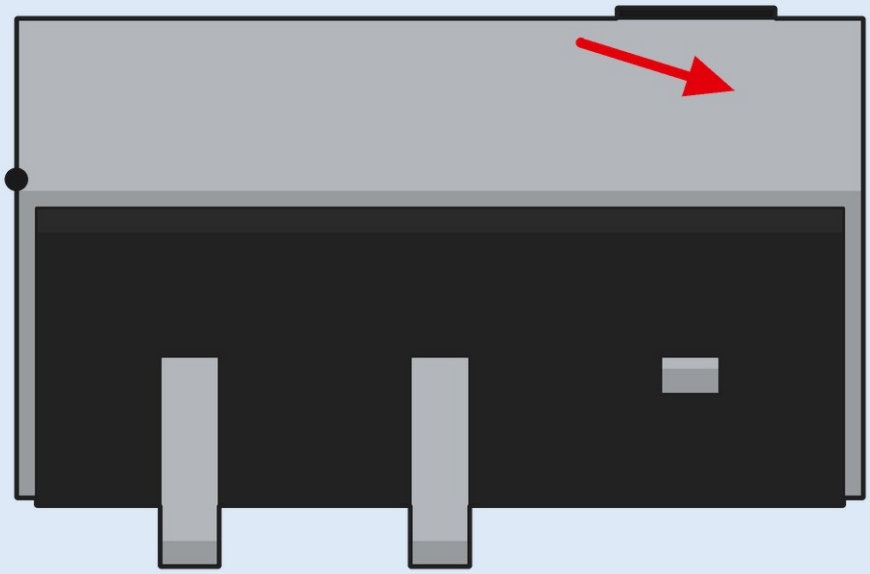

Switch OFF before anything


15

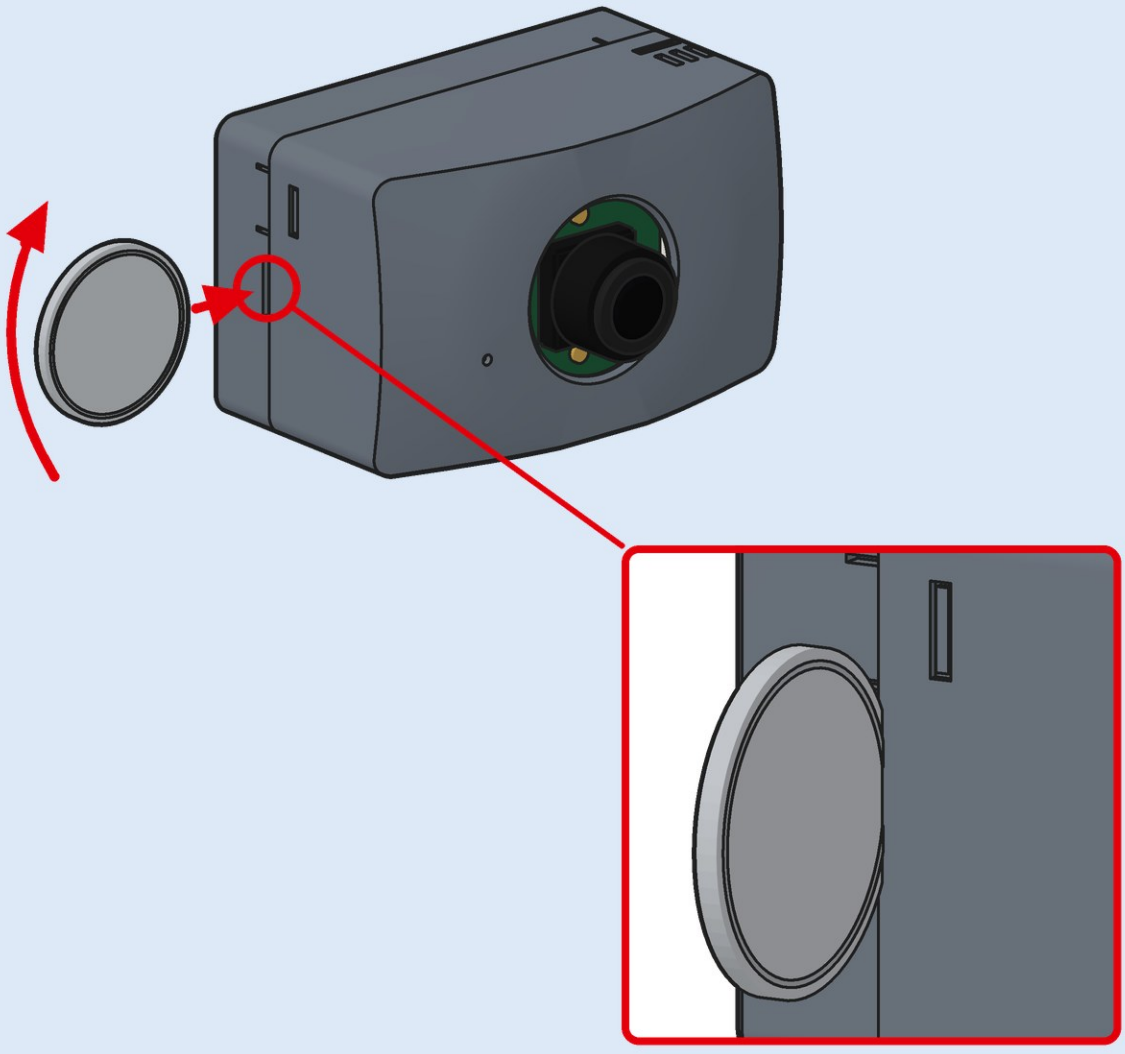

Coin in the notch, twist


16

Battery out before the iron

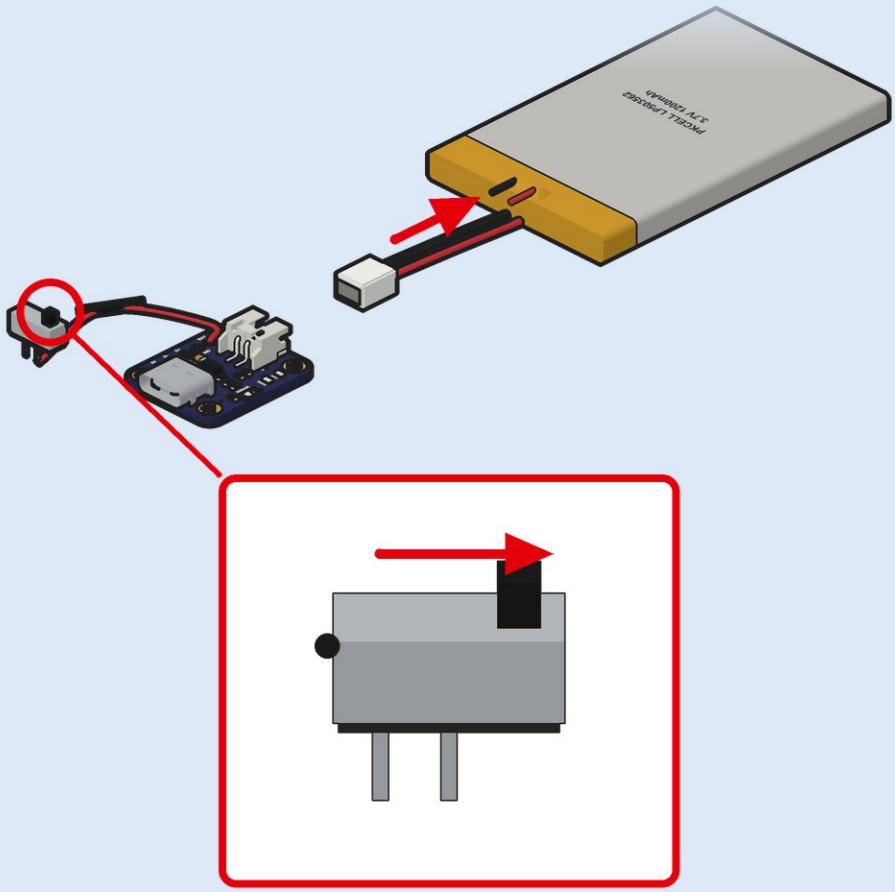


Unplug the battery before the iron

17

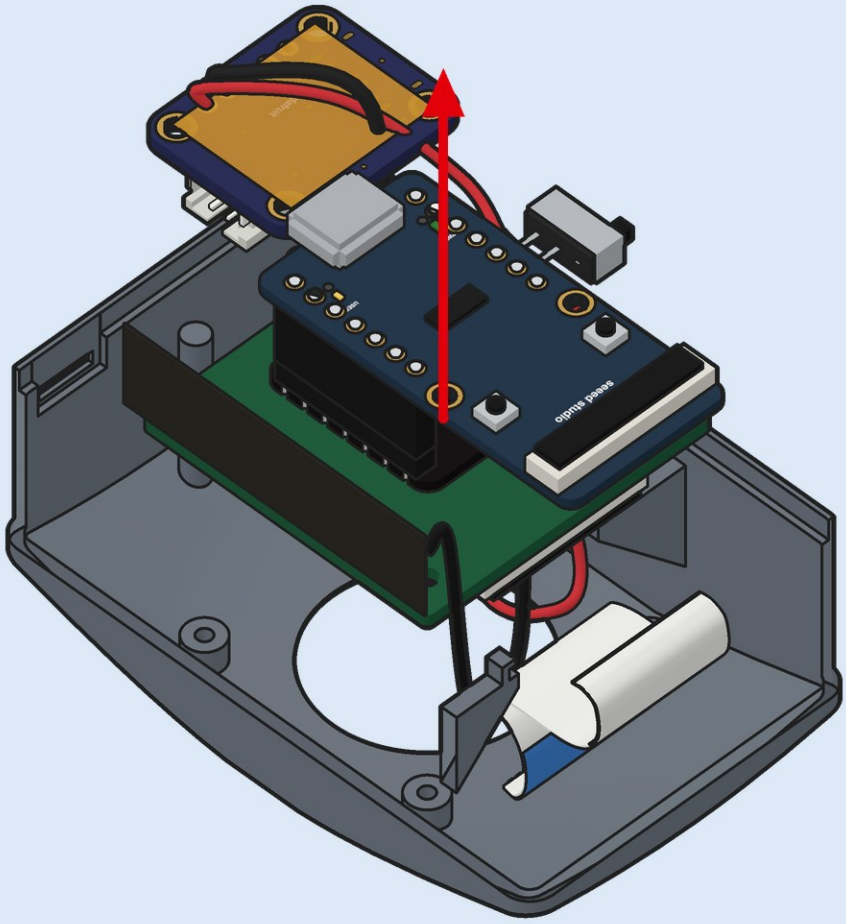


Lift the boards out of the case

18

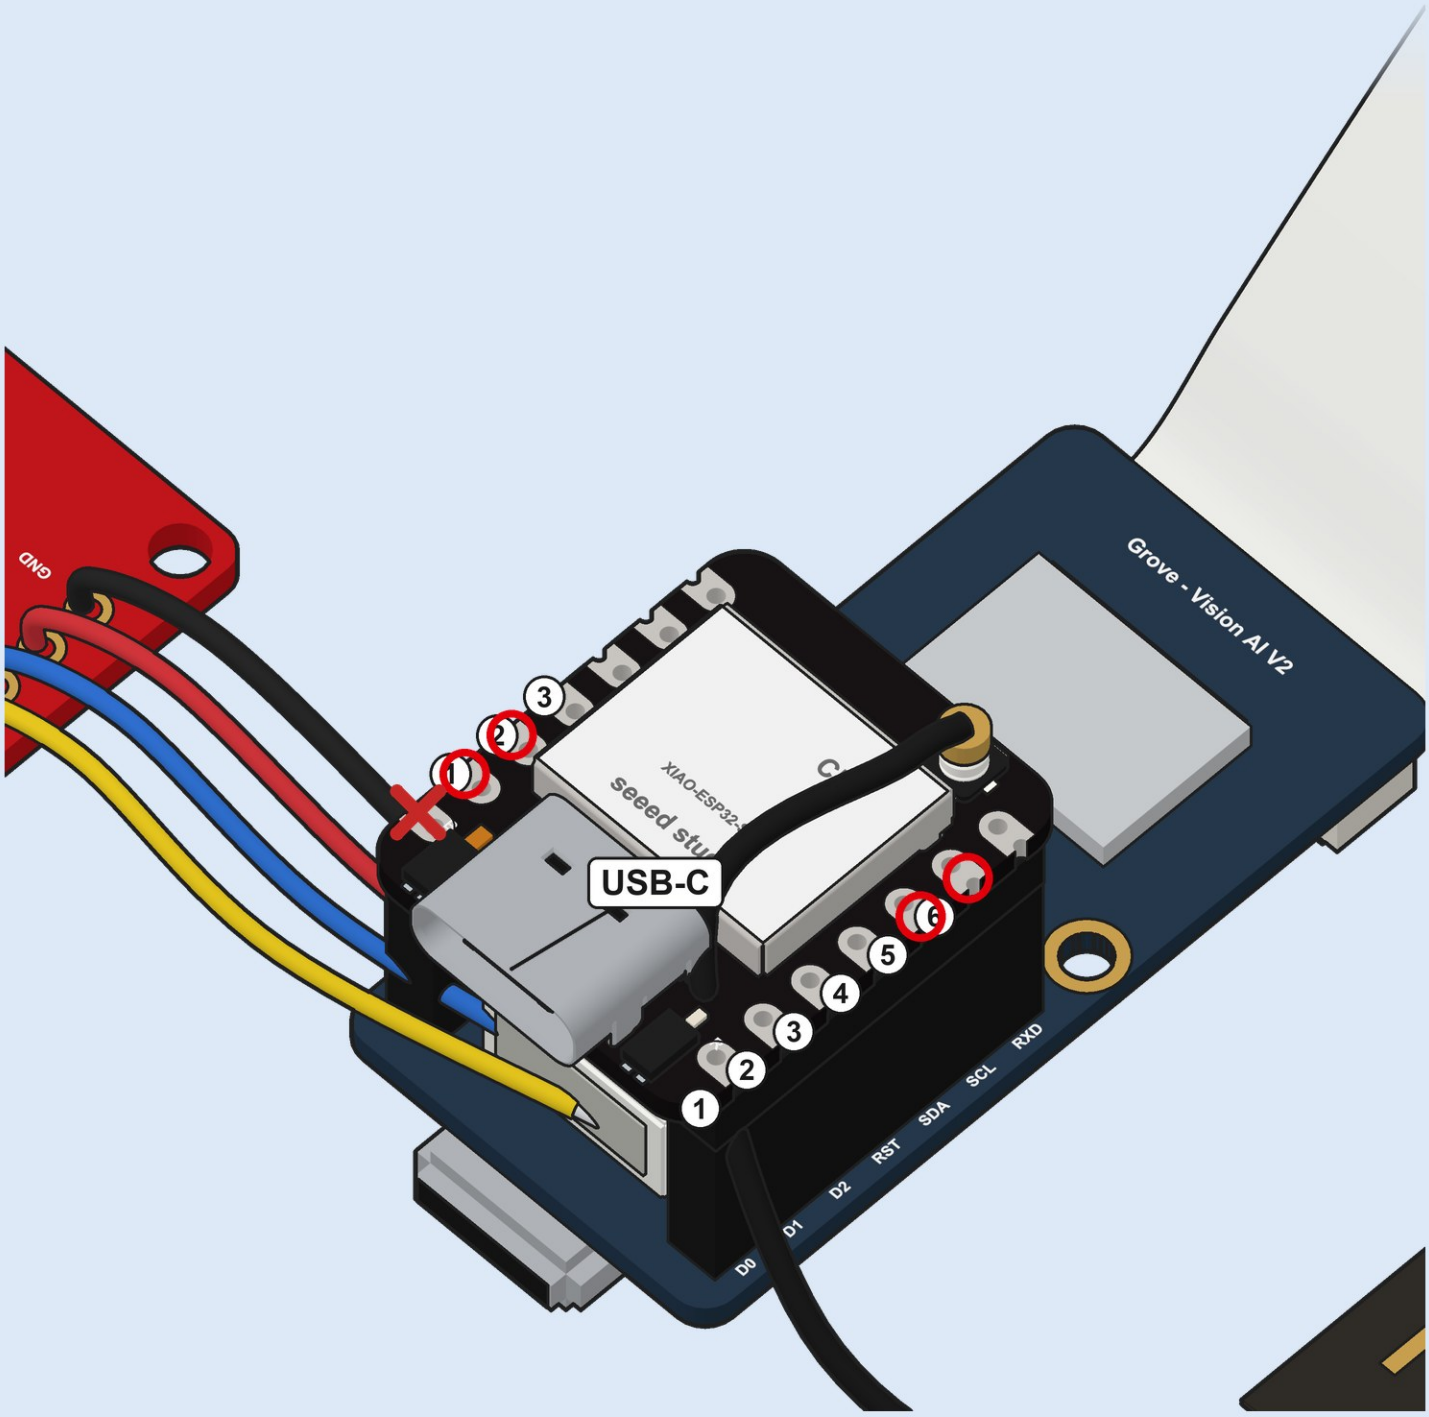


Count from USB-C: GND, 3V3, D4, D5

19

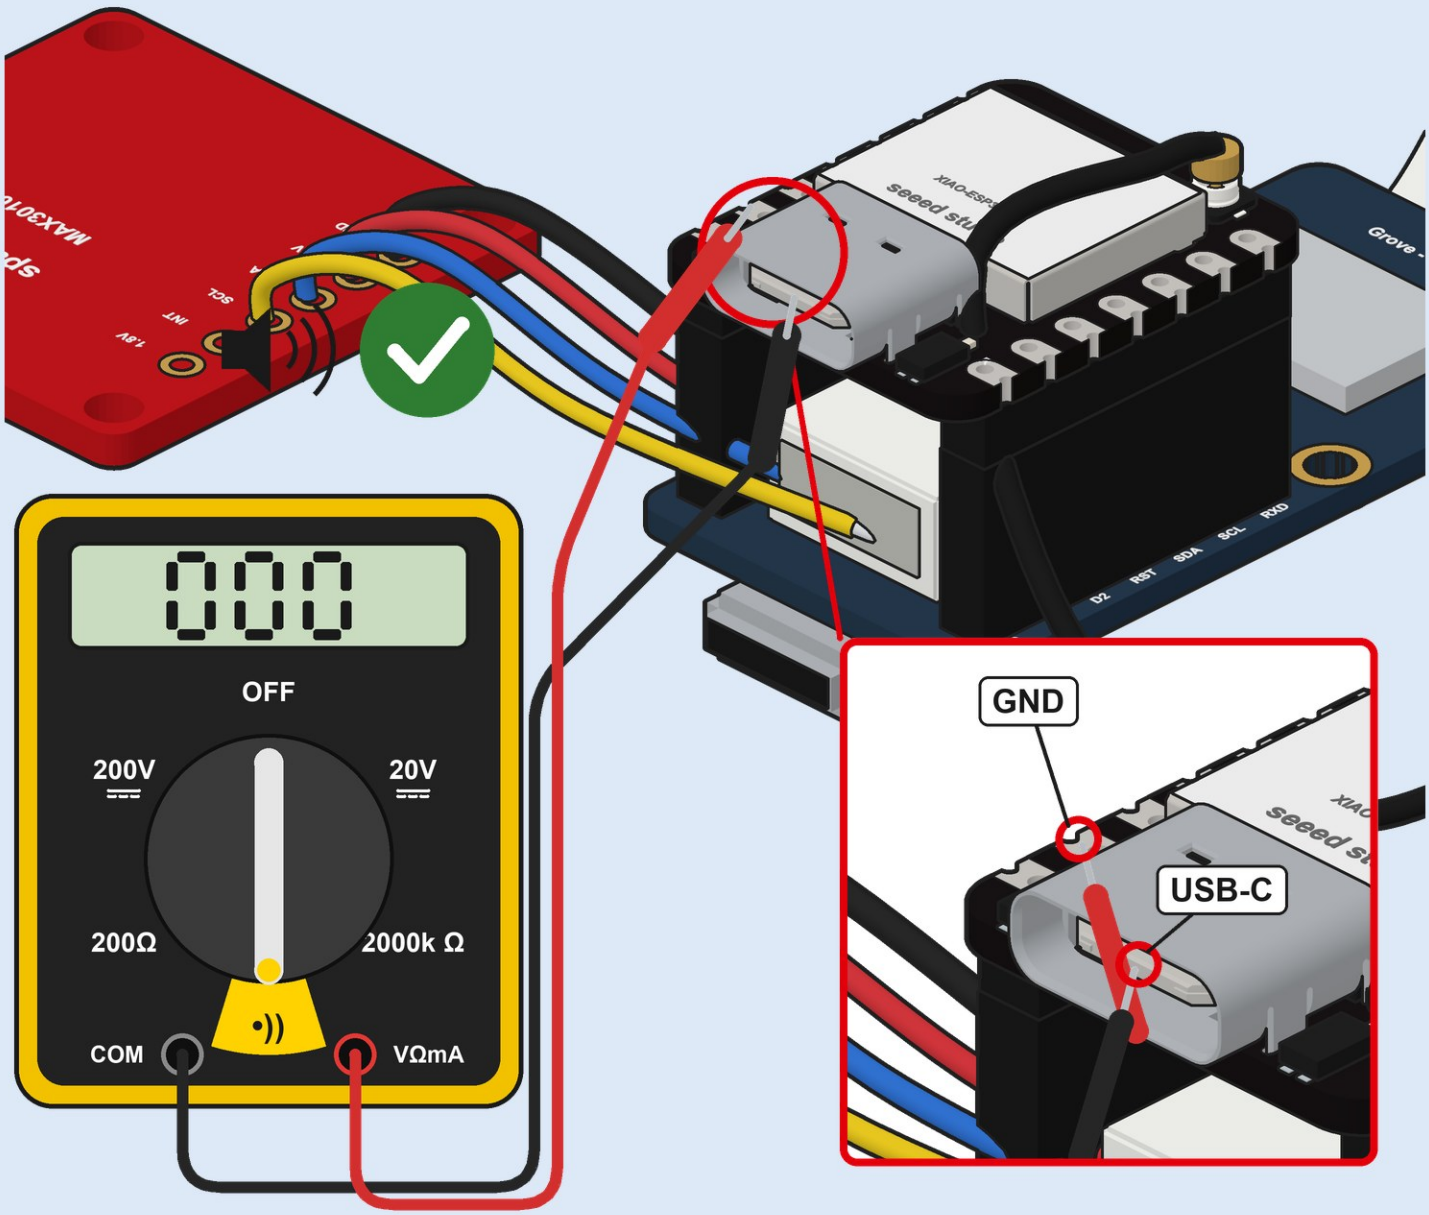

GND pin beeps to USB-C shell


20

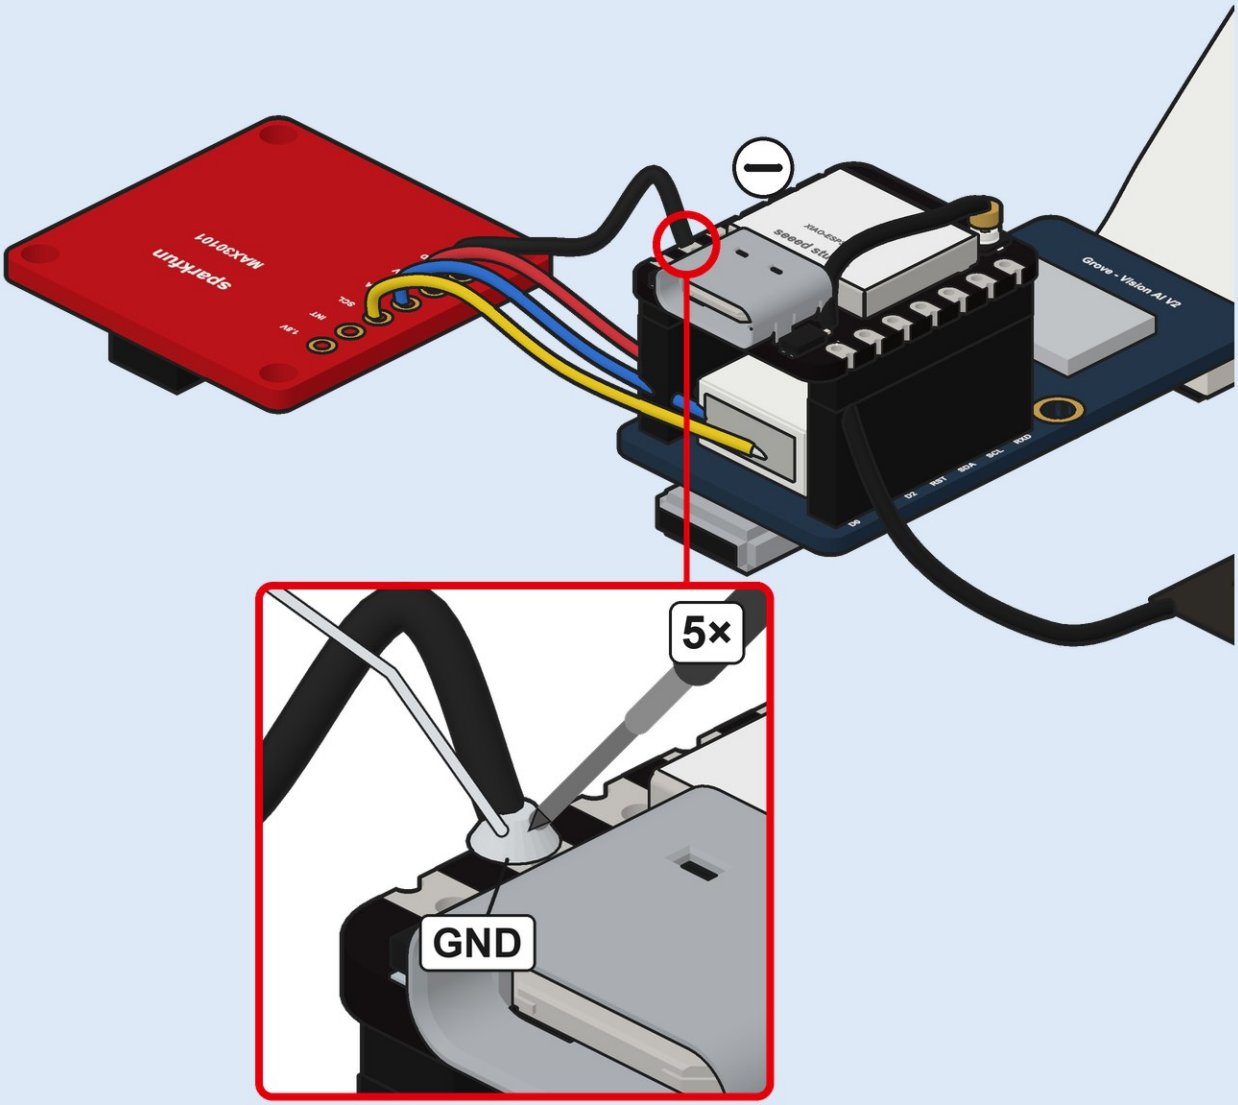

Black on right pin 2 (GND)


21

3V3, never the 5V pin

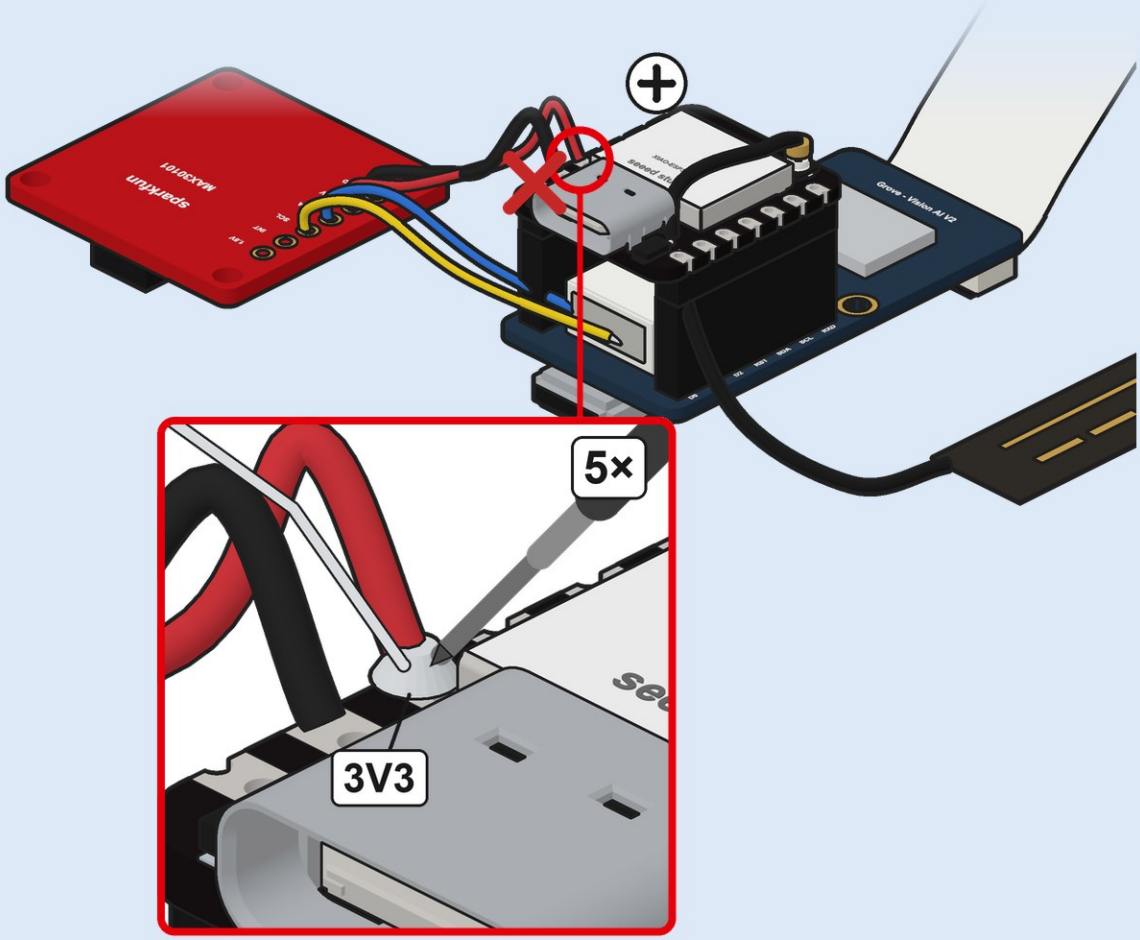


Red on right pin 3 (3V3)

22

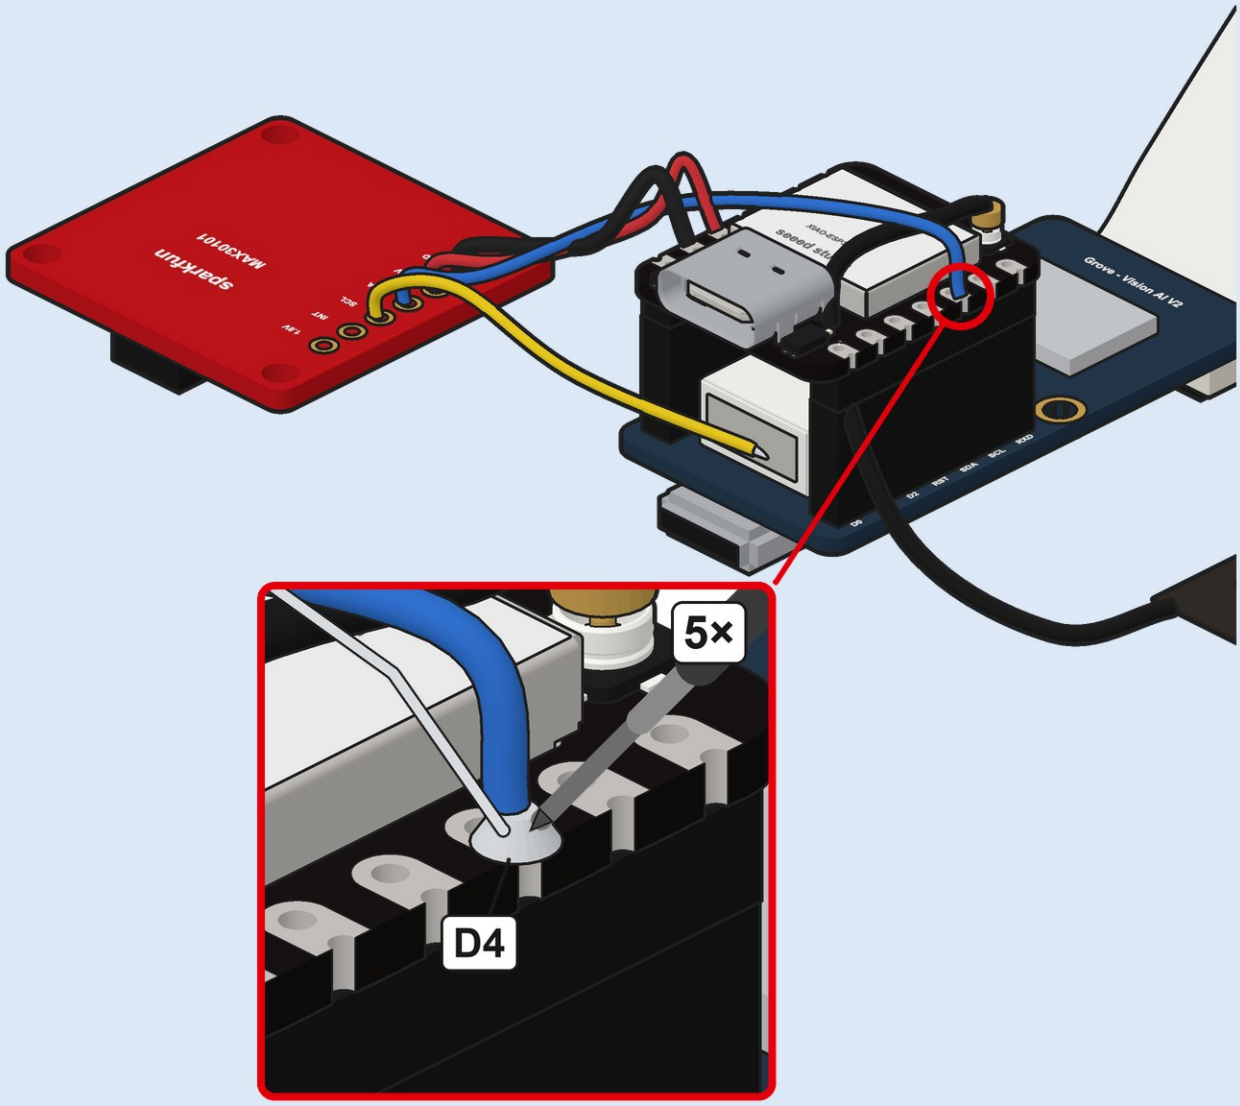


Blue on left pin 5 (SDA)

23

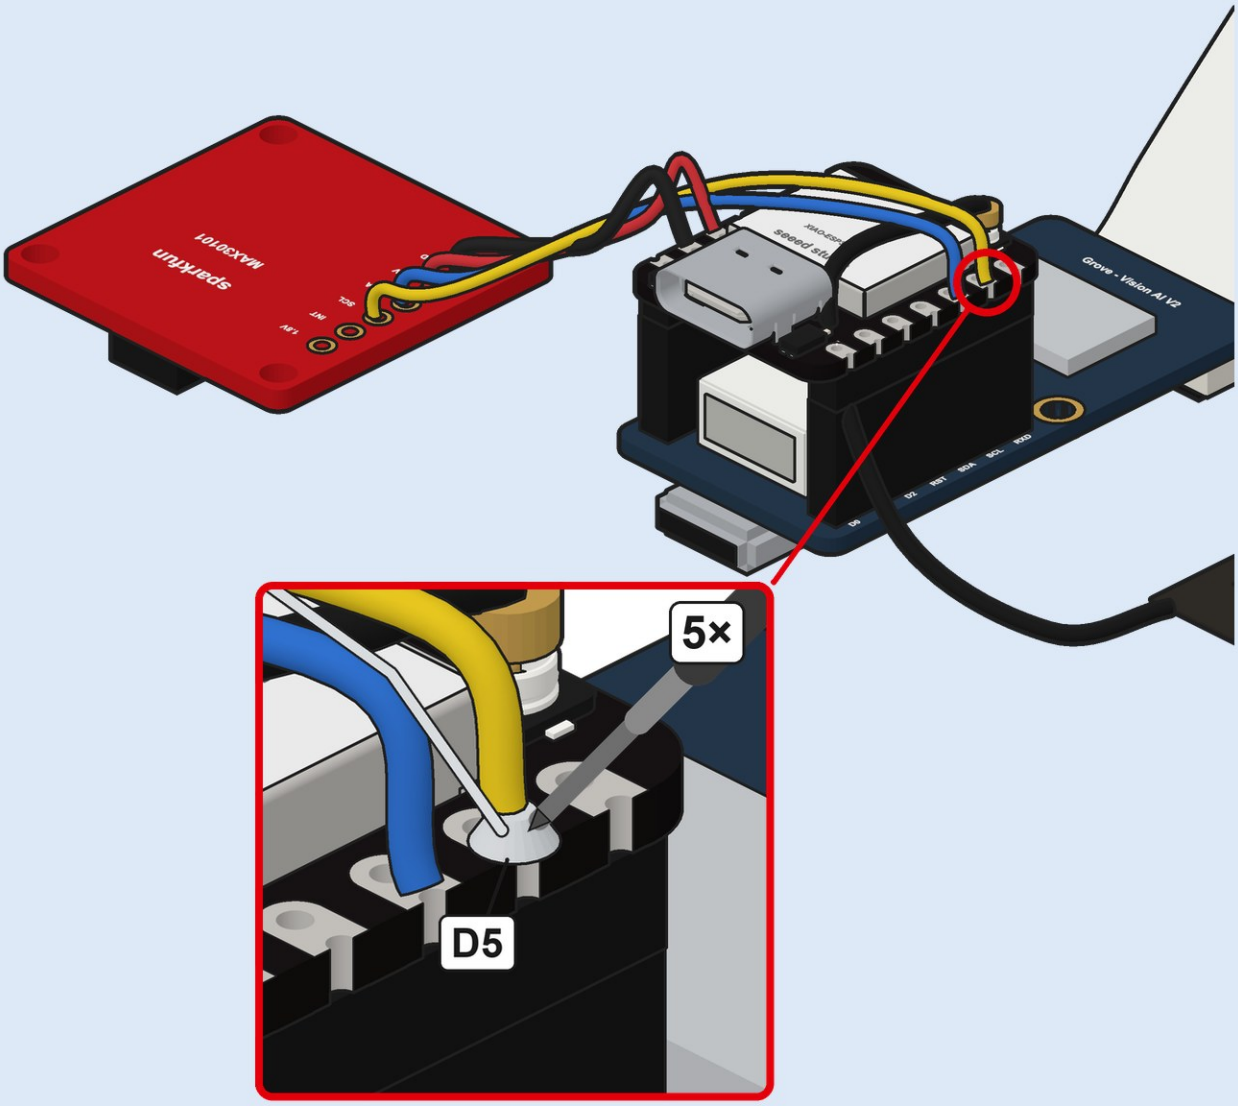


Yellow on left pin 6 (SCL)

24

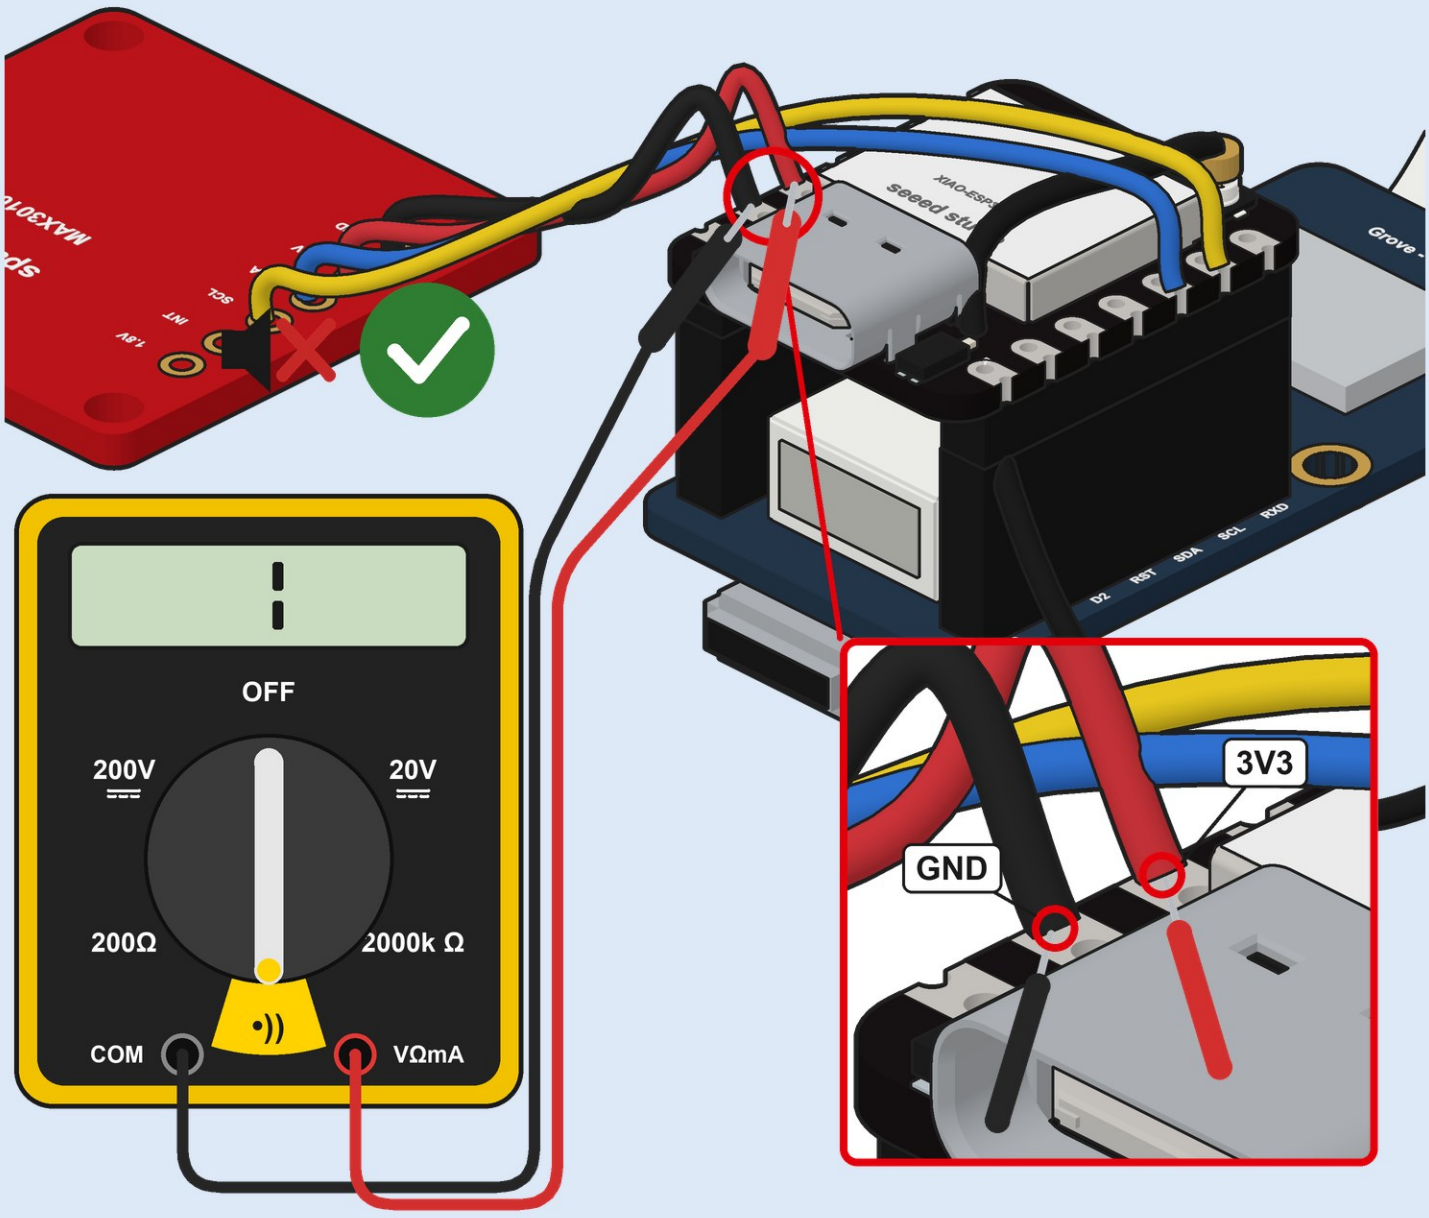


Red joint to black joint: no beep

25

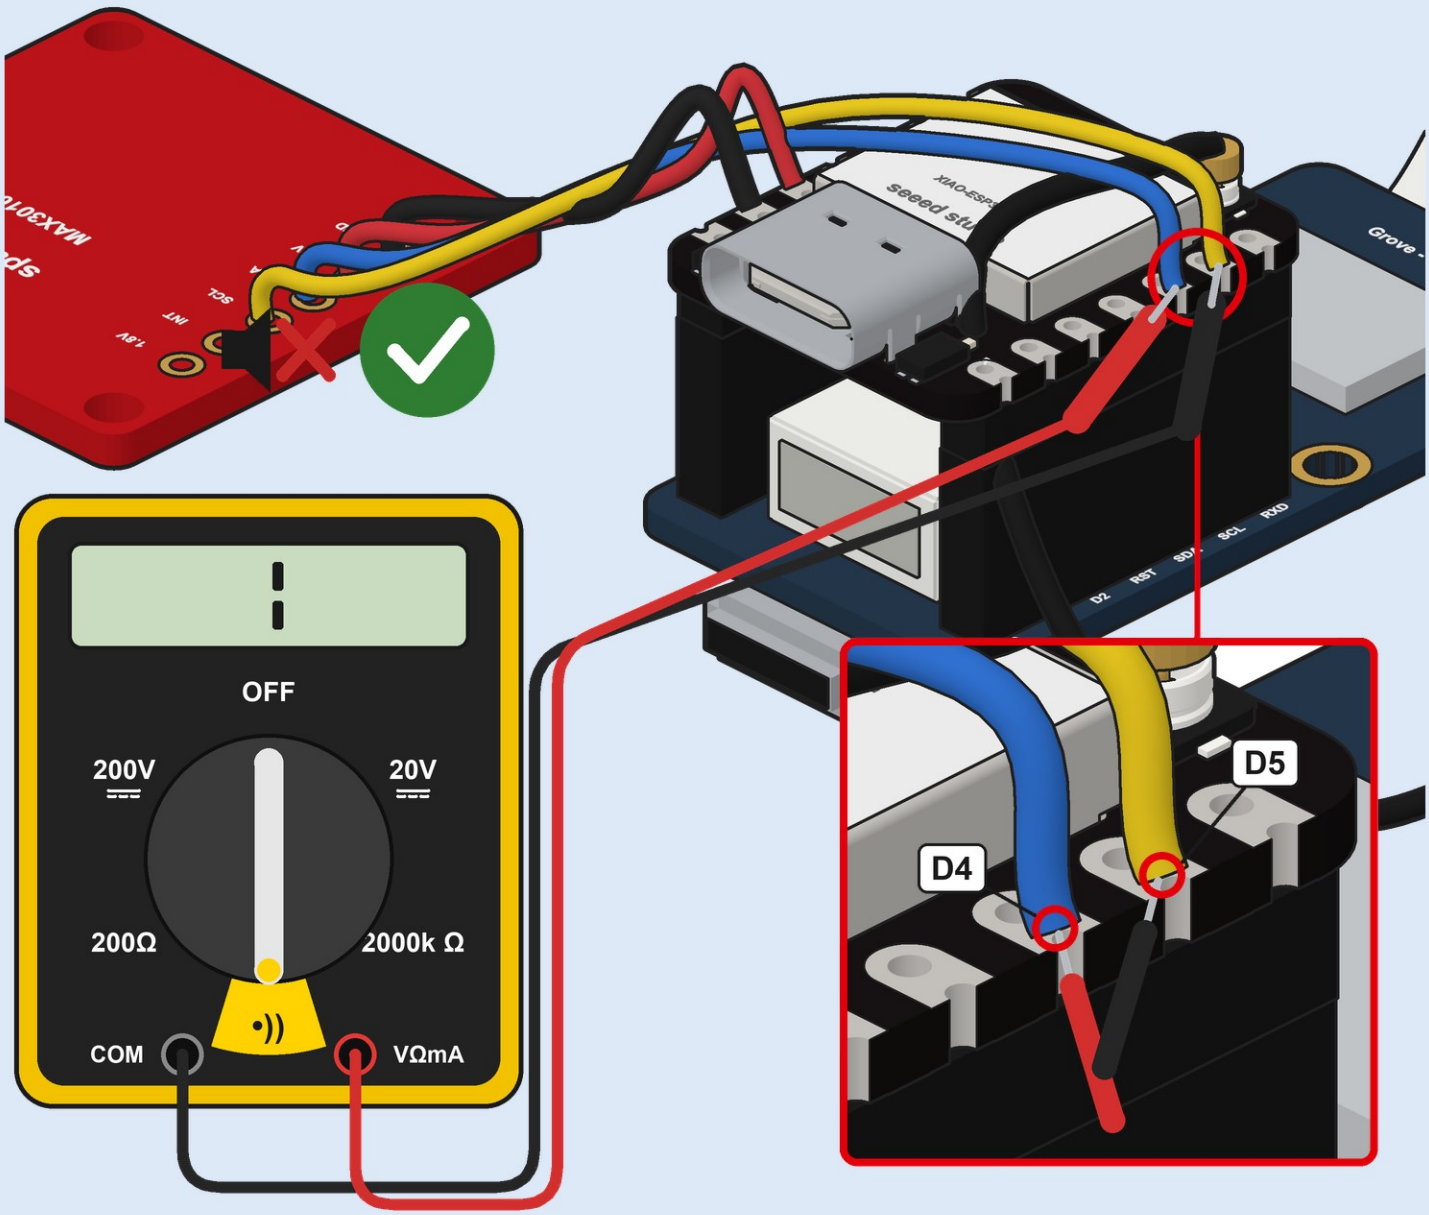


Blue joint to yellow joint: silent

26

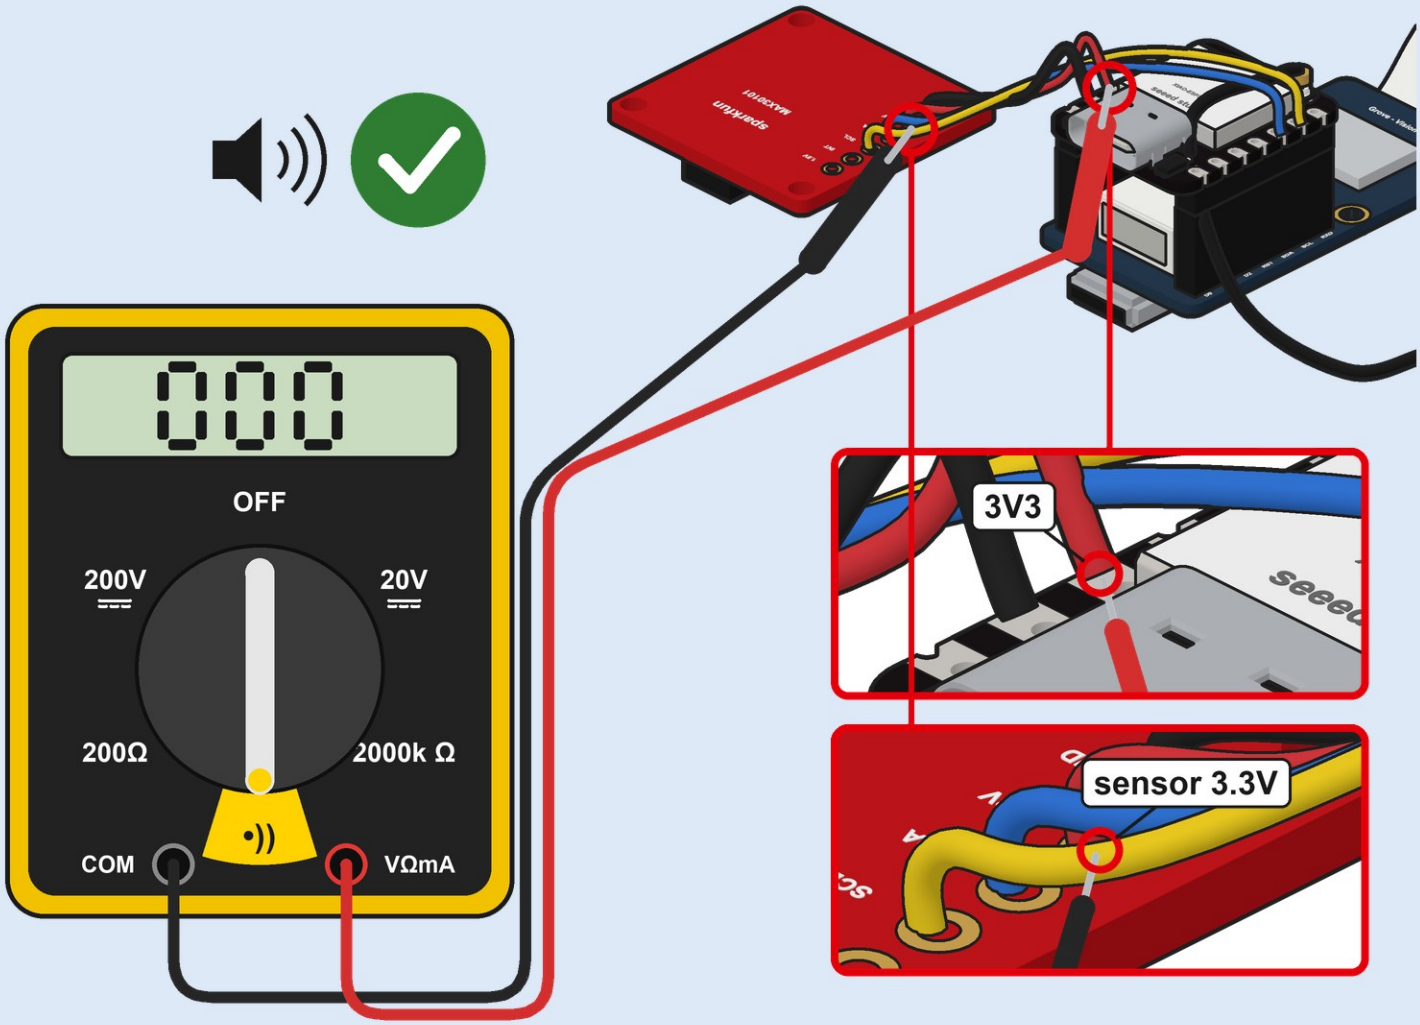


XIAO 3V3 to sensor 3.3V: beep


27

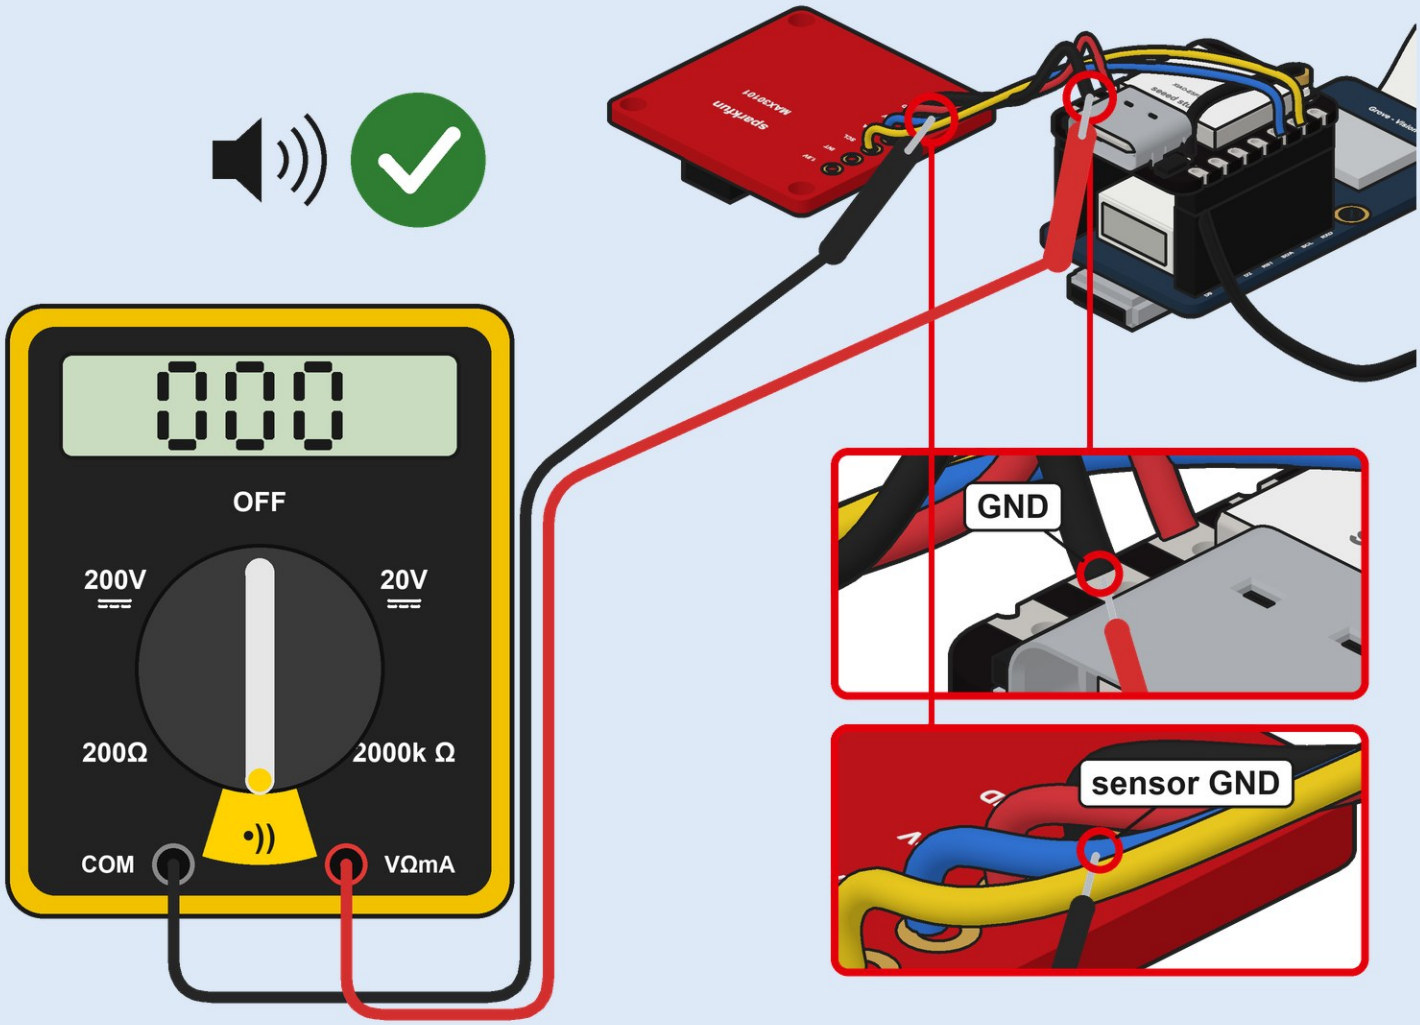

XIAO GND to sensor GND: beep

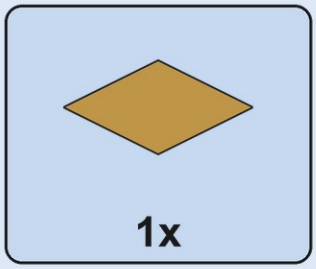


28

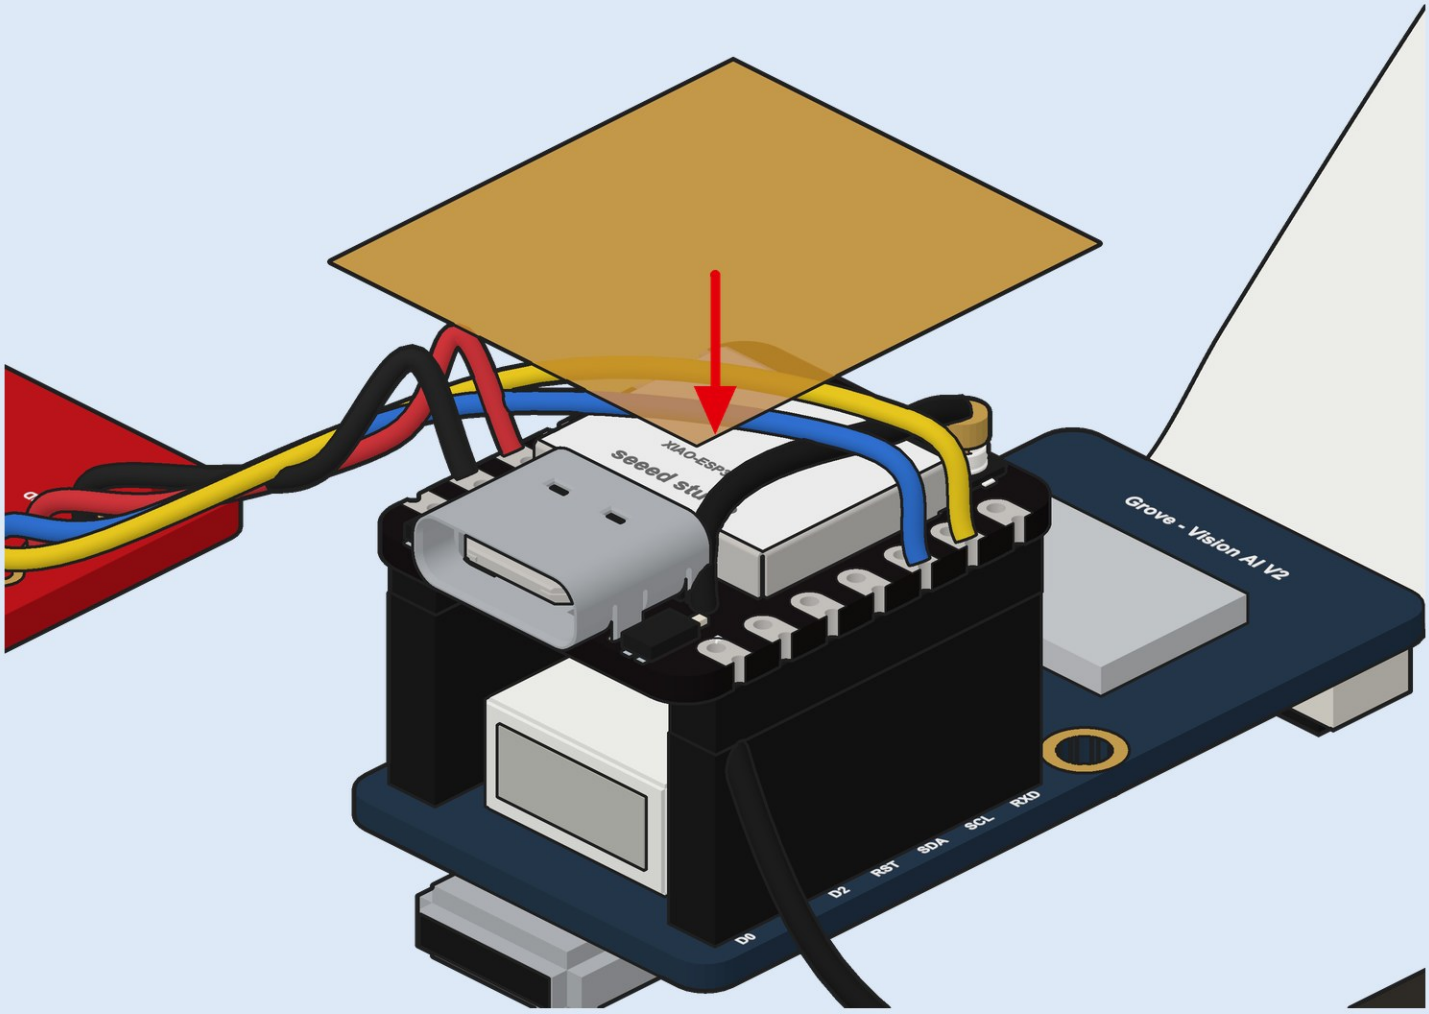


Kapton over the four joints


29

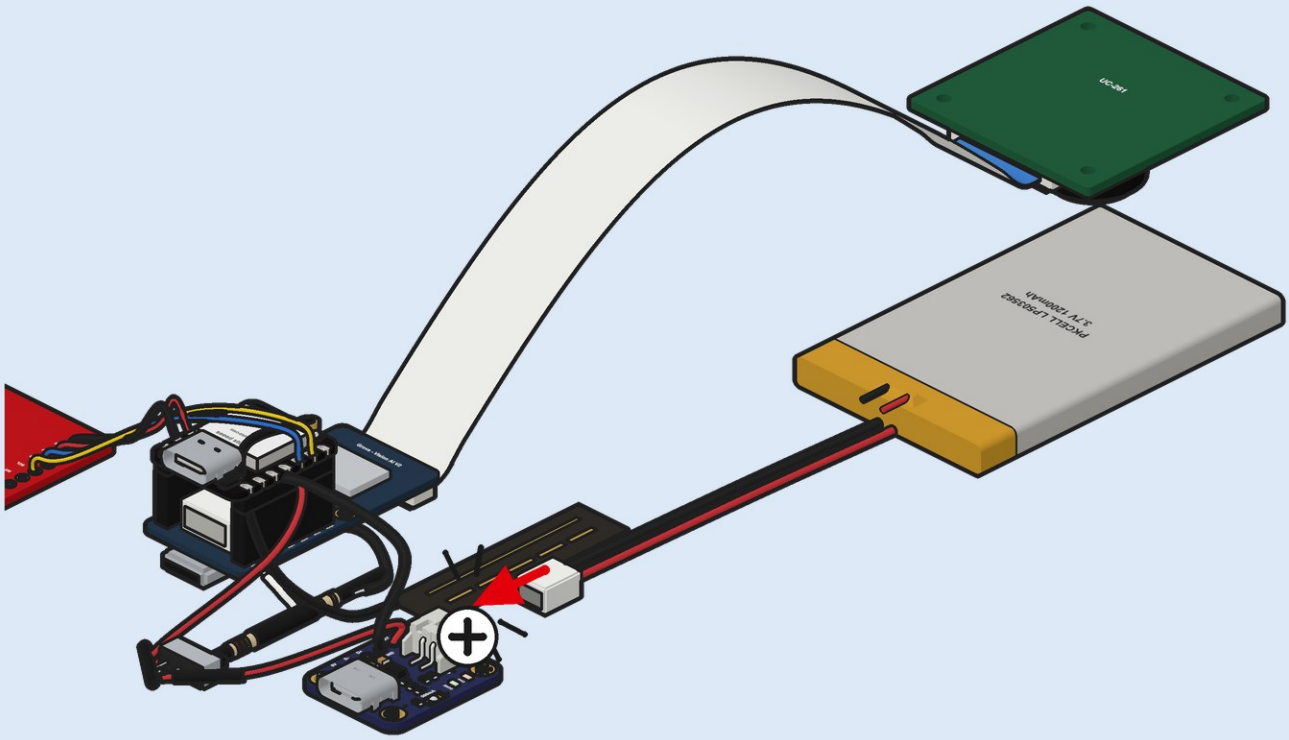

Plug the battery into the charger


30

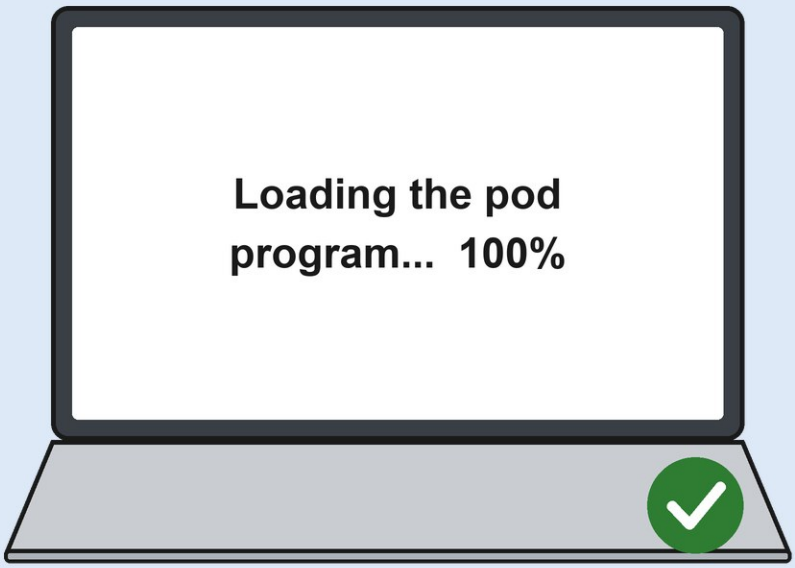

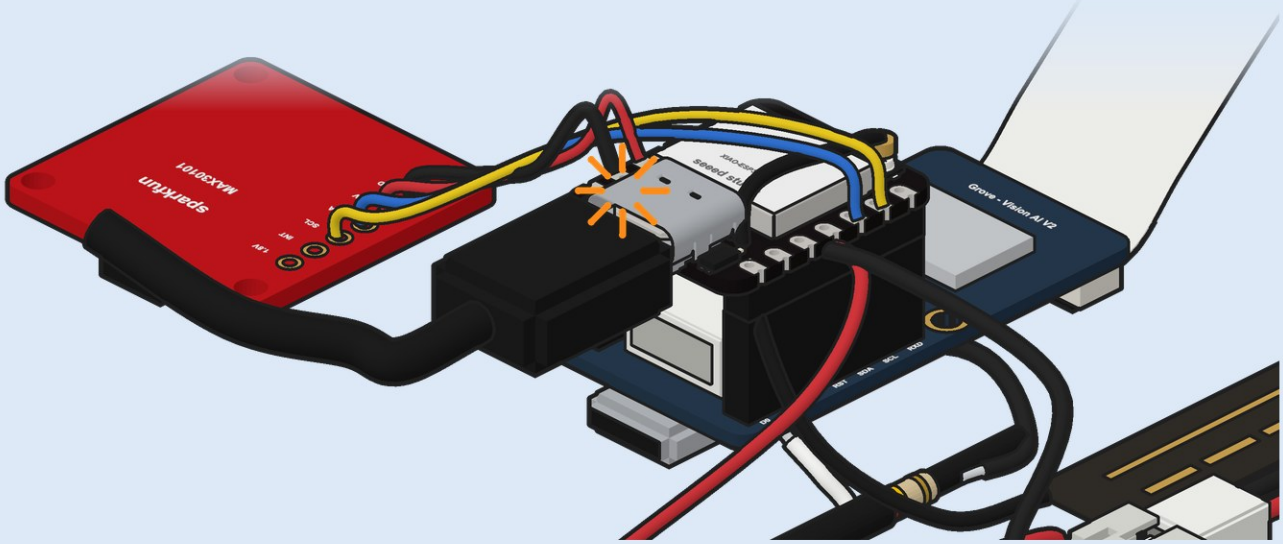


USB-C into the radio: Claude loads it


31

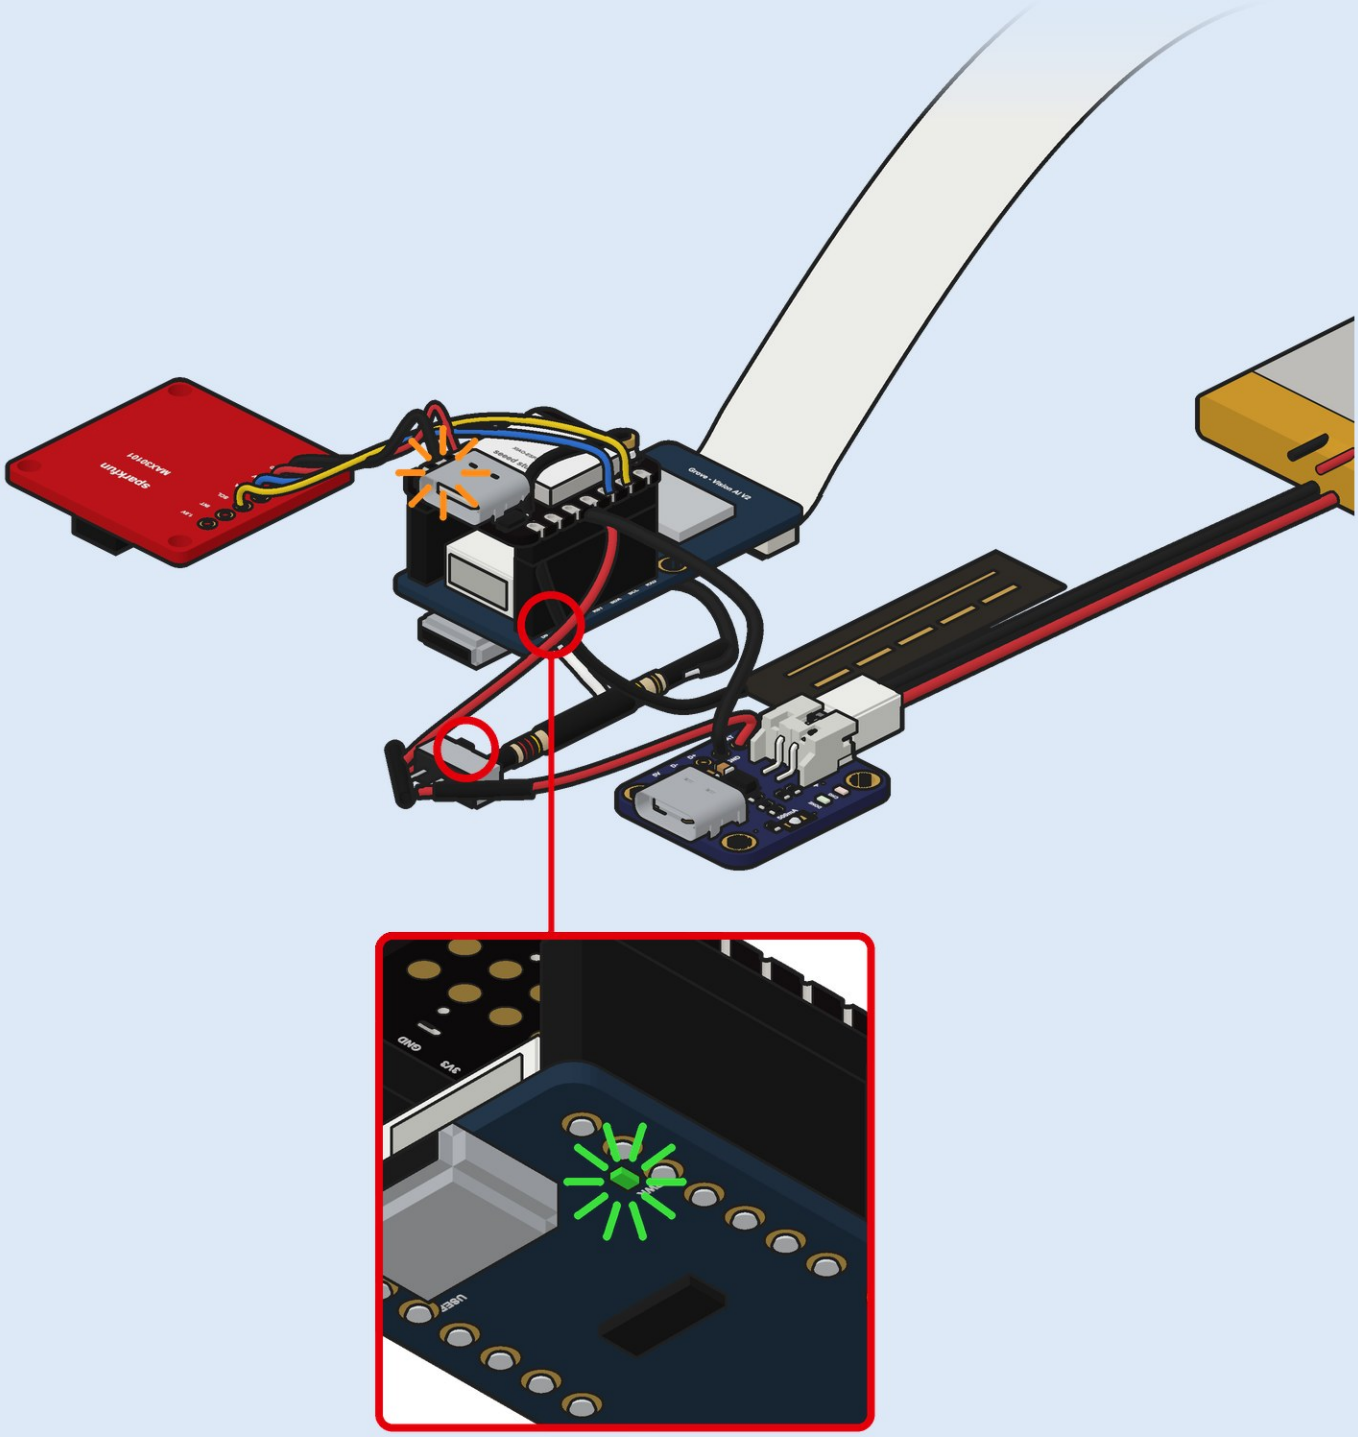

Slide to ON: green PWR light


32

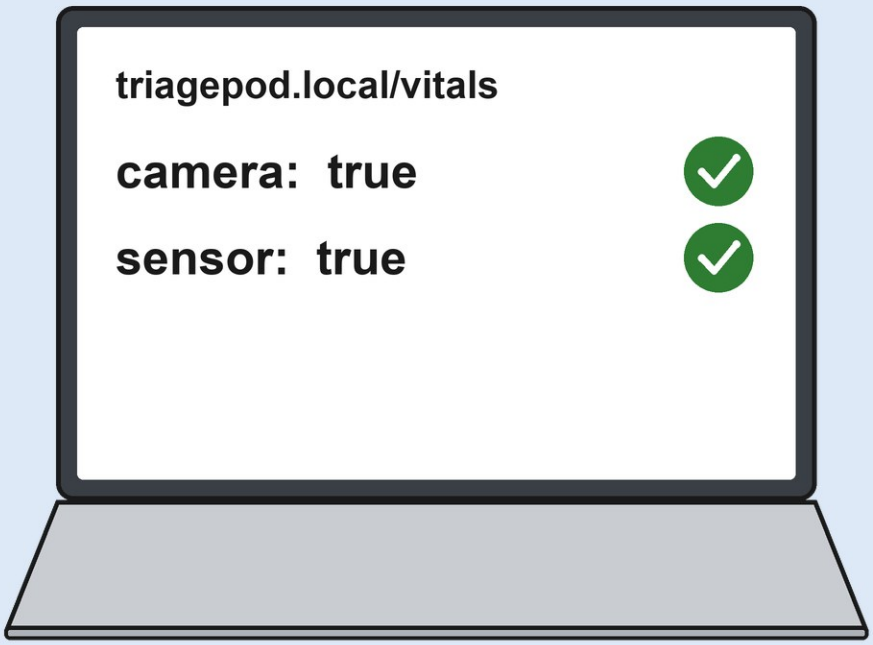


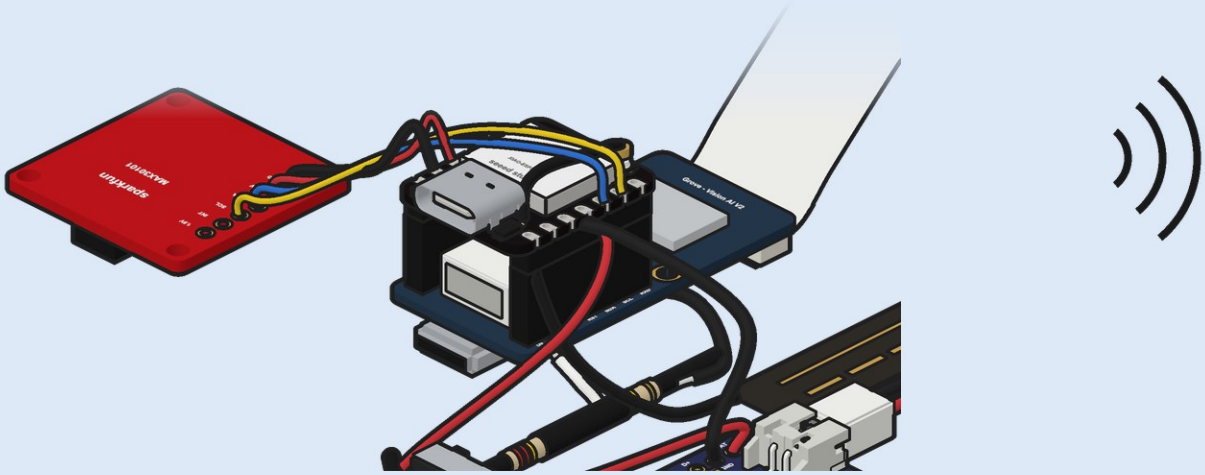

triagepod.local/vitals: camera, sensor true

33

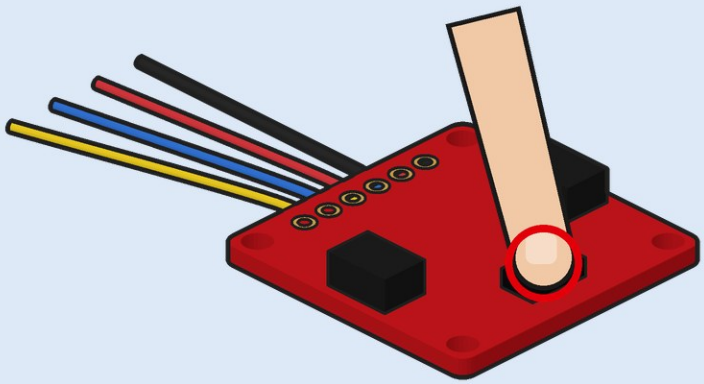


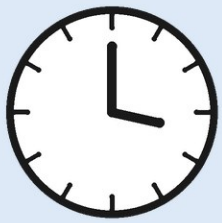

10 s

Fingertip flat on the window, 10 s

34

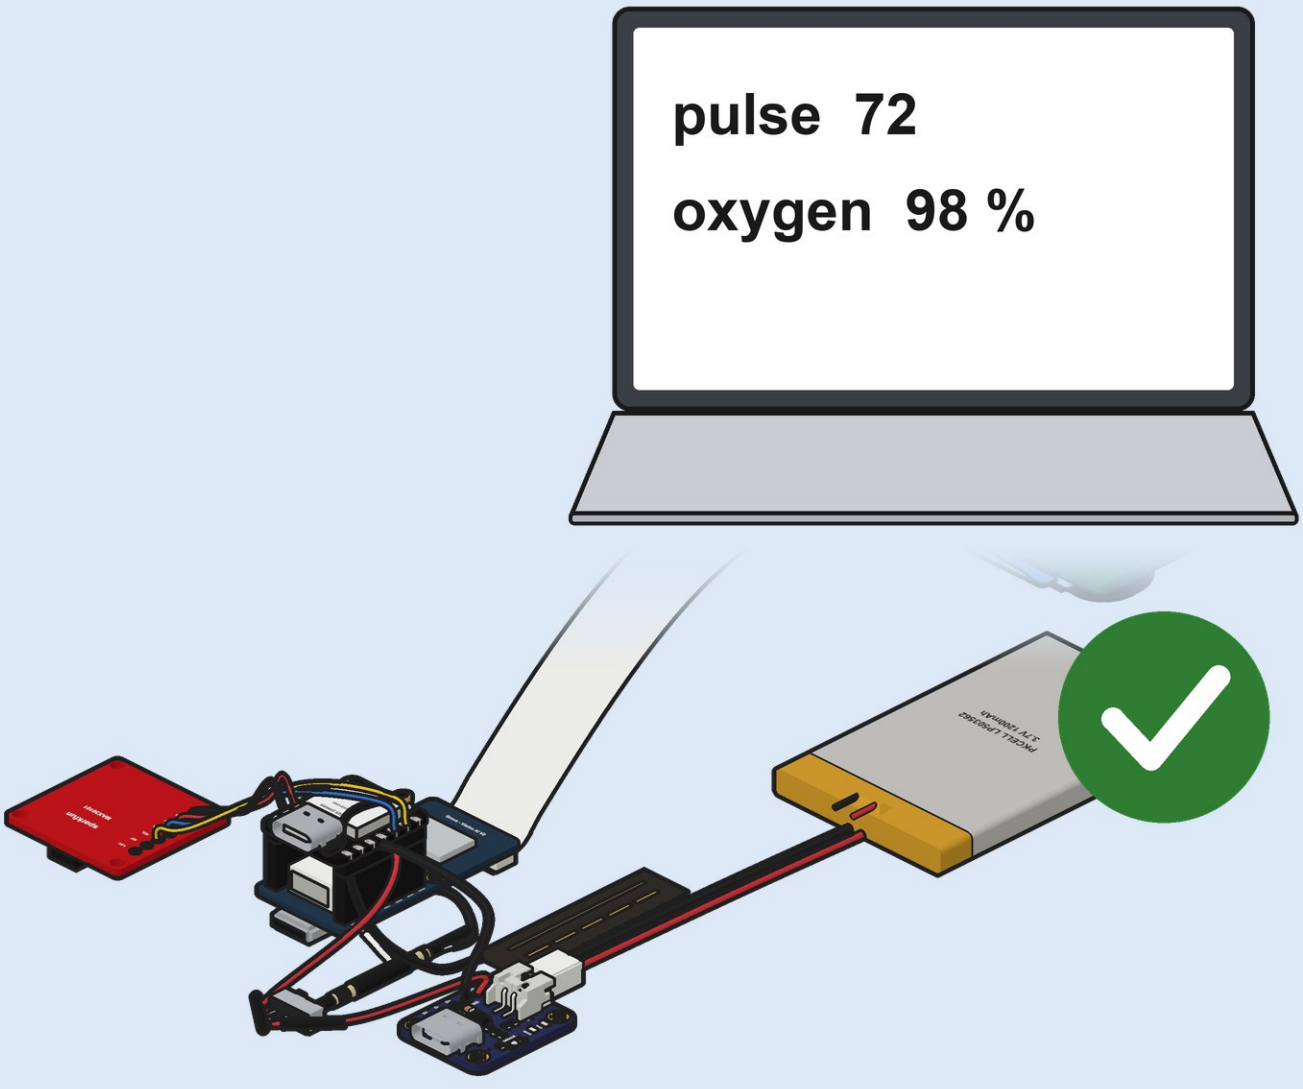

Pod answers with pulse and oxygen