


1

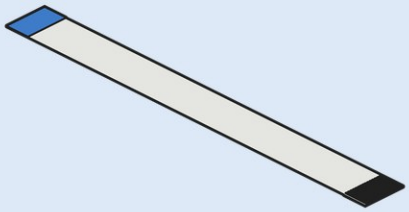

1x
ribbon

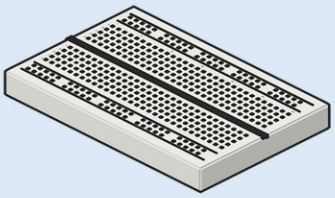


1x
breadboard

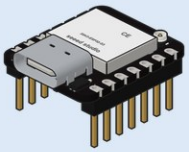


1x
radio




1x
jumper wires



1x
Qwiic cable



1x
spare brain



1x
camera




1x
heart sensor




2

Switch OFF first

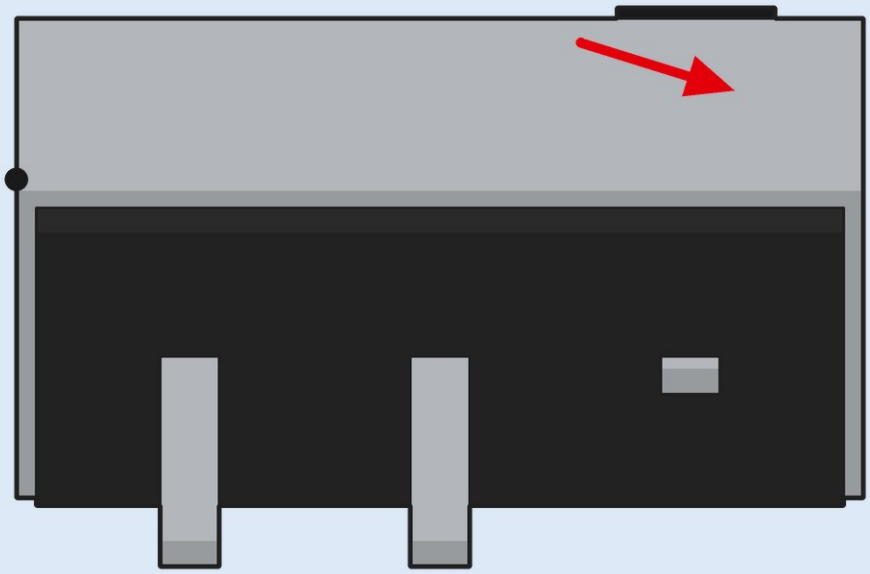

Switch OFF before anything


3

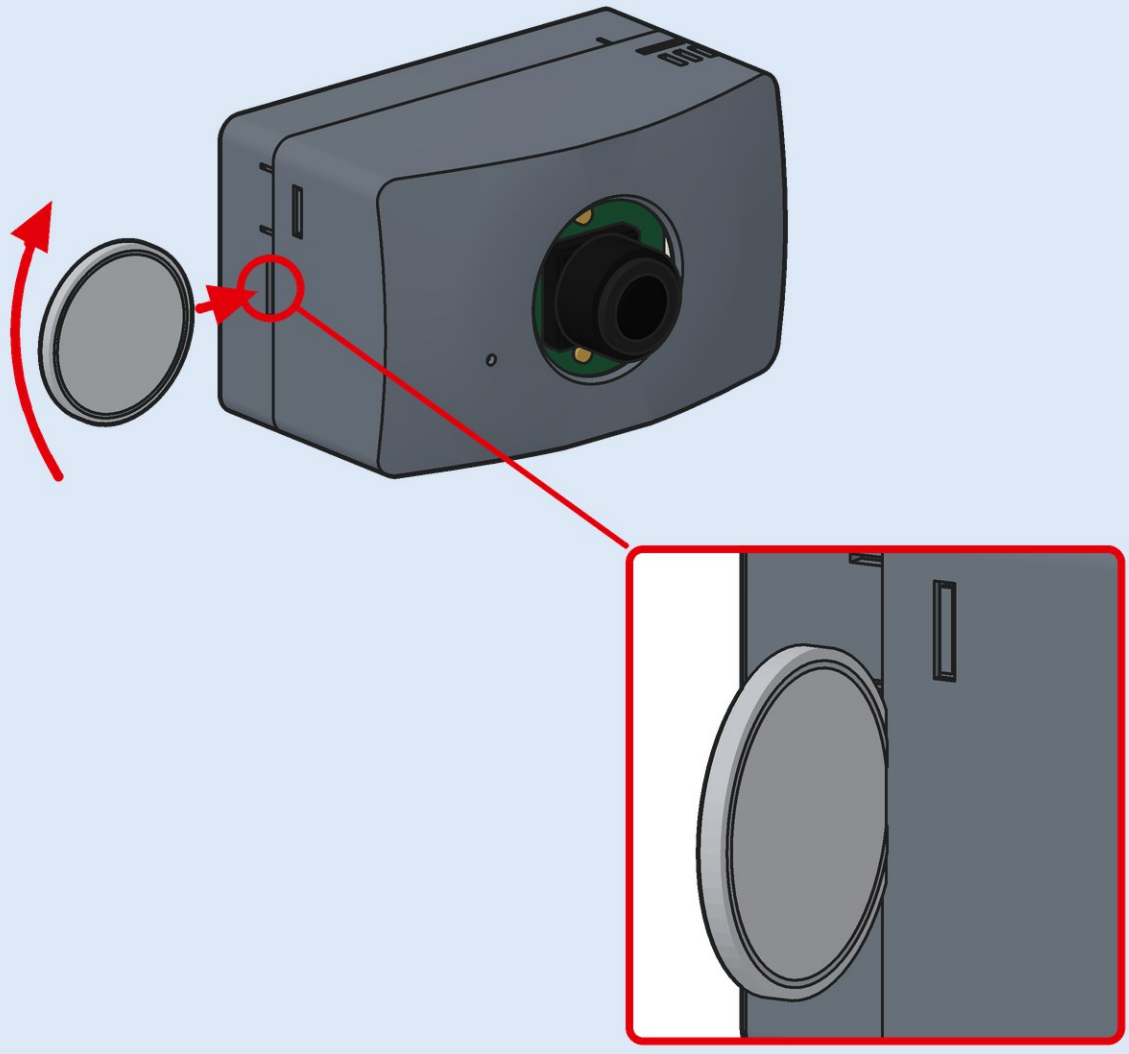

Coin in the notch, twist


4

Battery out first

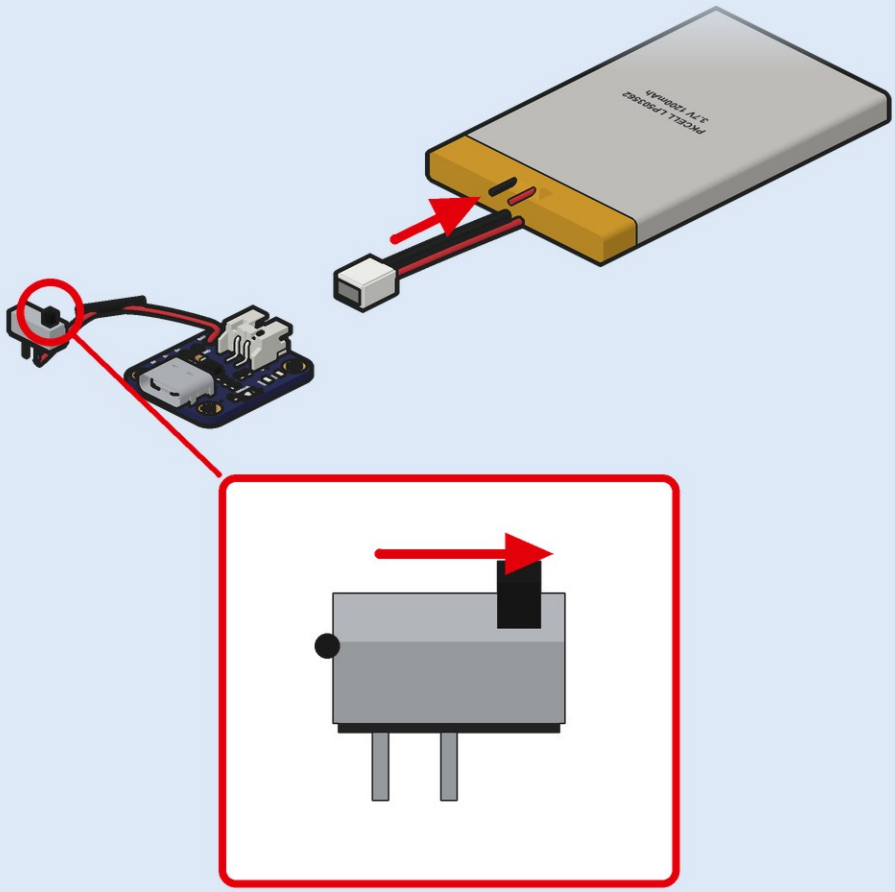


Unplug the battery first

5

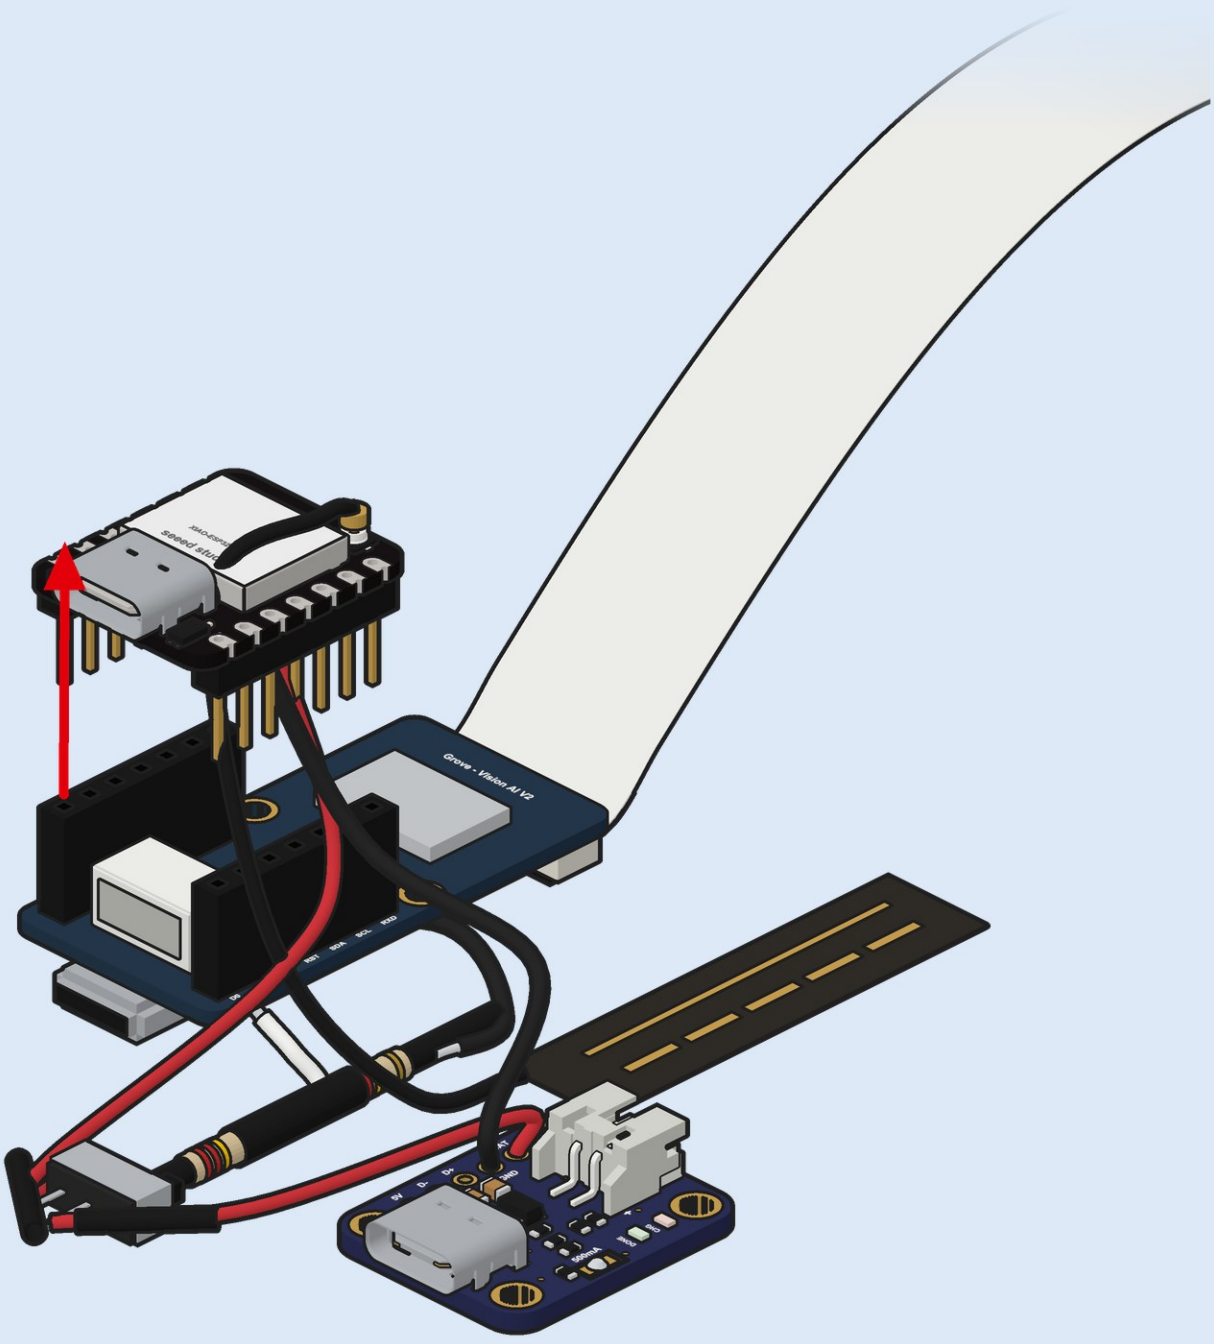


Lift the radio board straight up

6

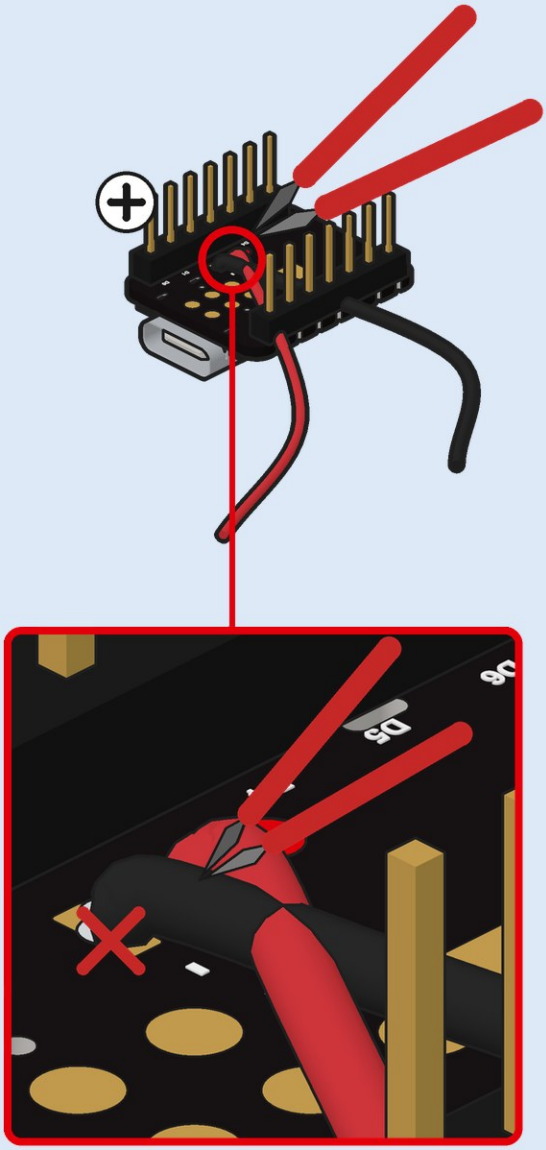

Cut the red wire at the + pad


7

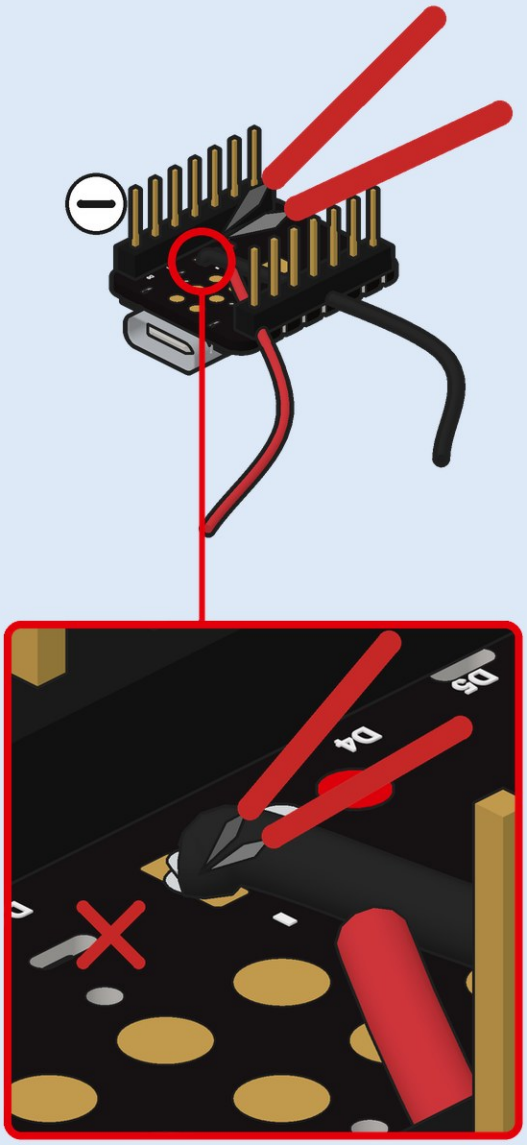

Cut the black wire at the - pad


8

No screwdriver on latch

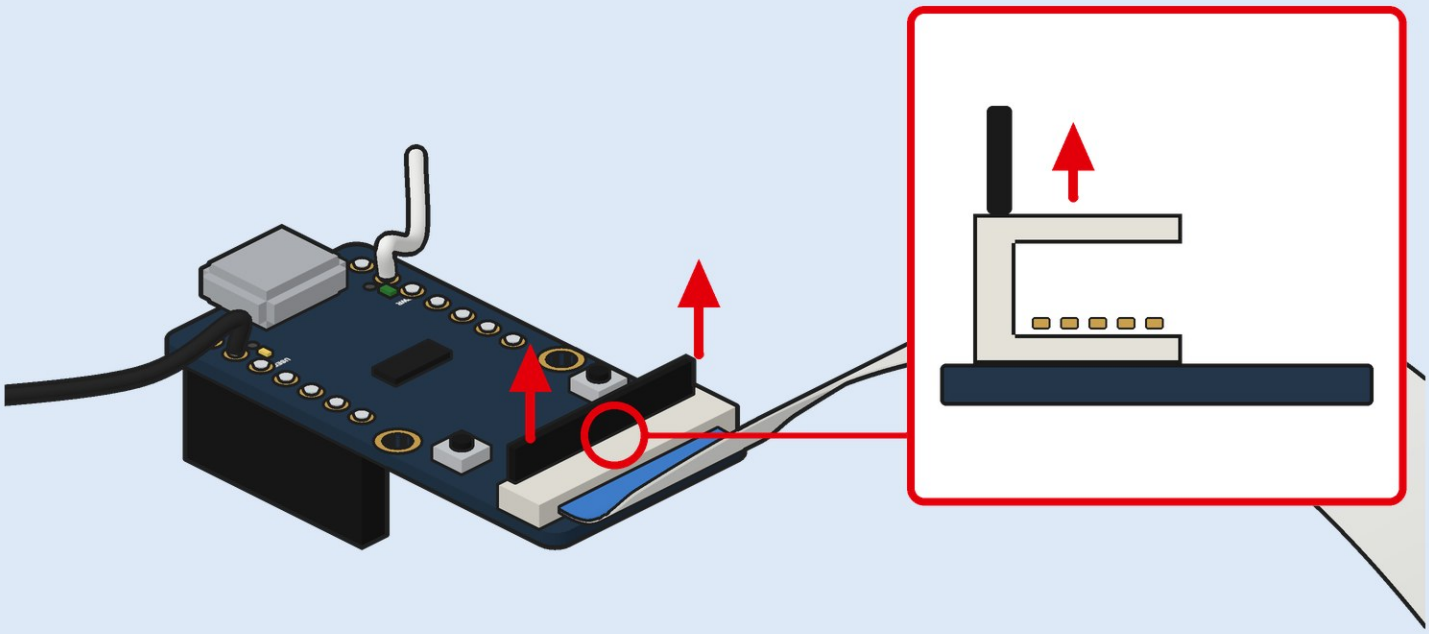

Lift the latch, both corners


9

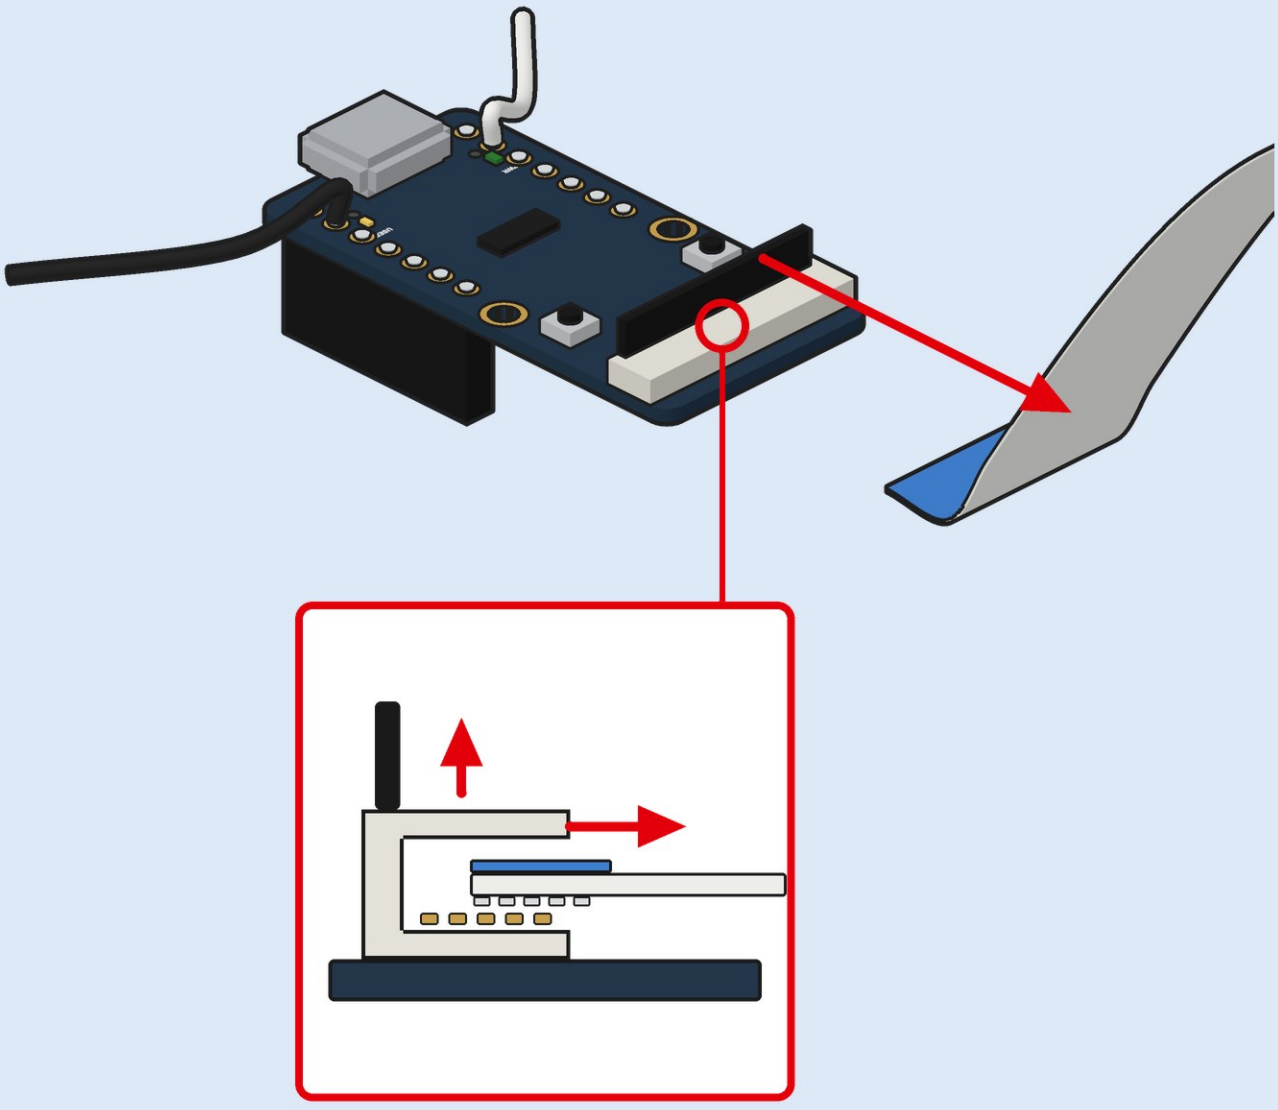

Pull the ribbon straight out

10


Switch OFF first

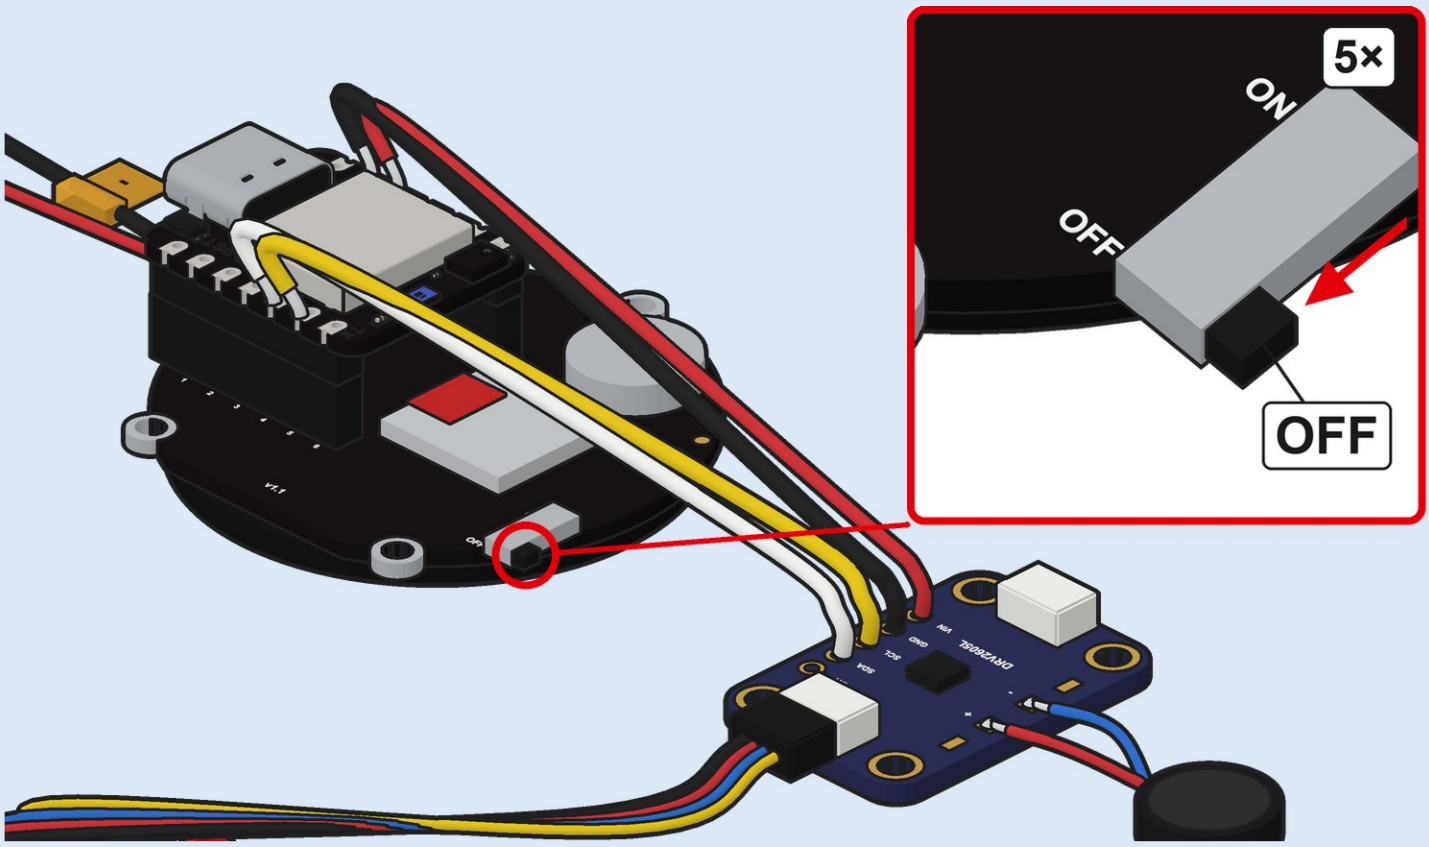

Display switch OFF


11

Pull the plug, not wires

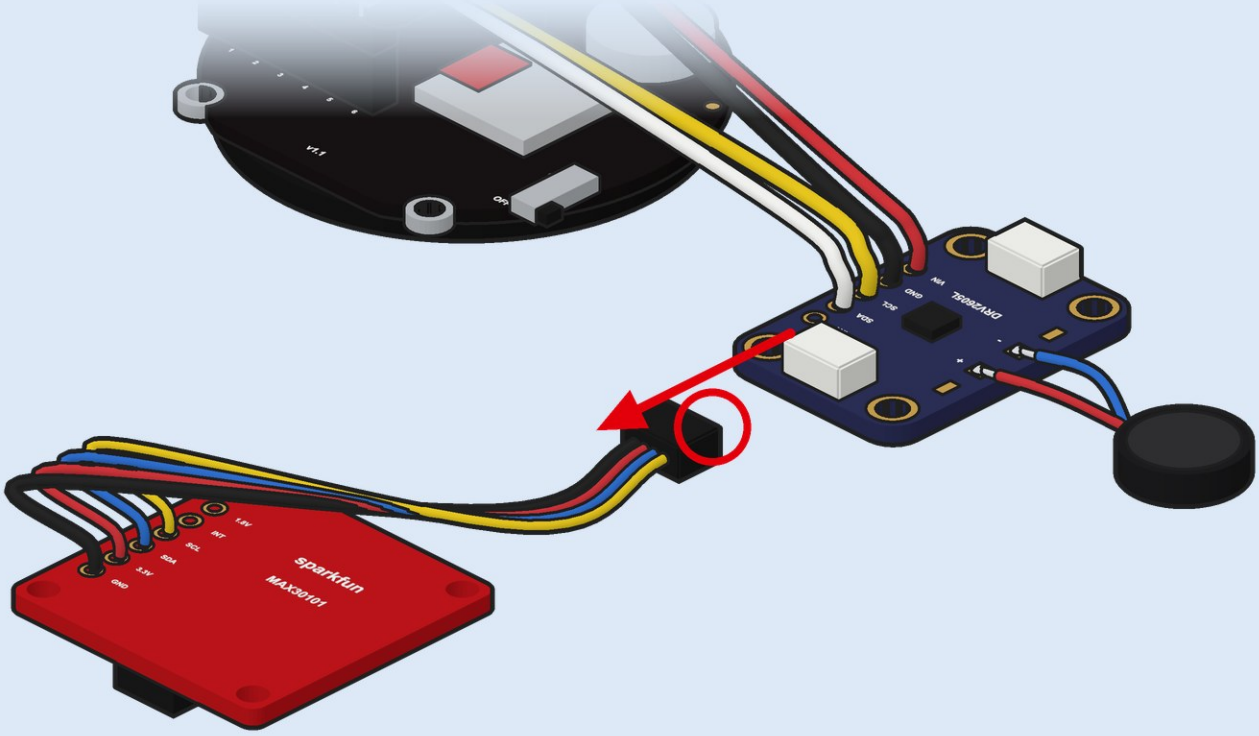


Pull the small plug out of the DRV

12

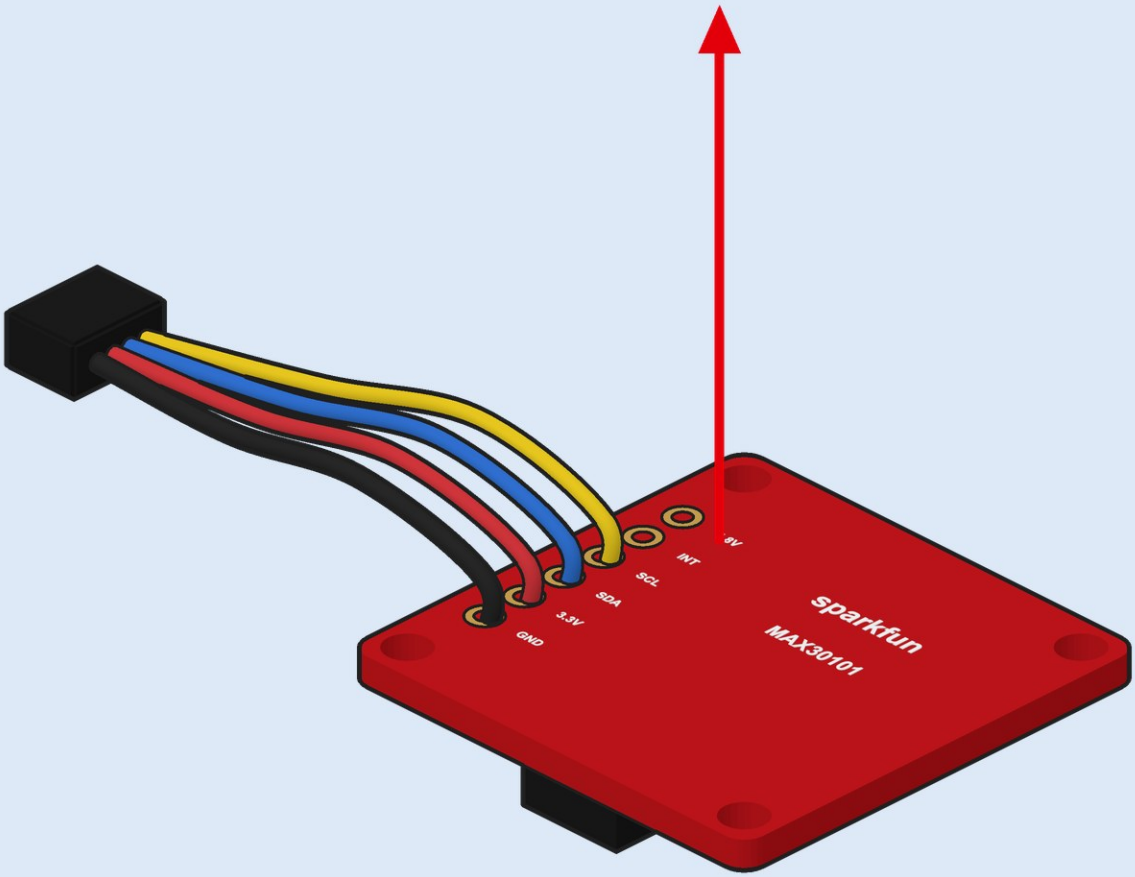


Lift the sensor out; old cable stays on

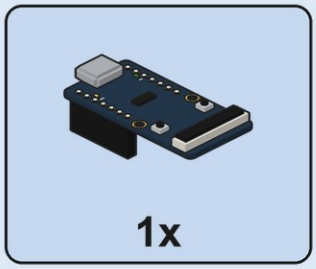


13


No screwdriver on latch

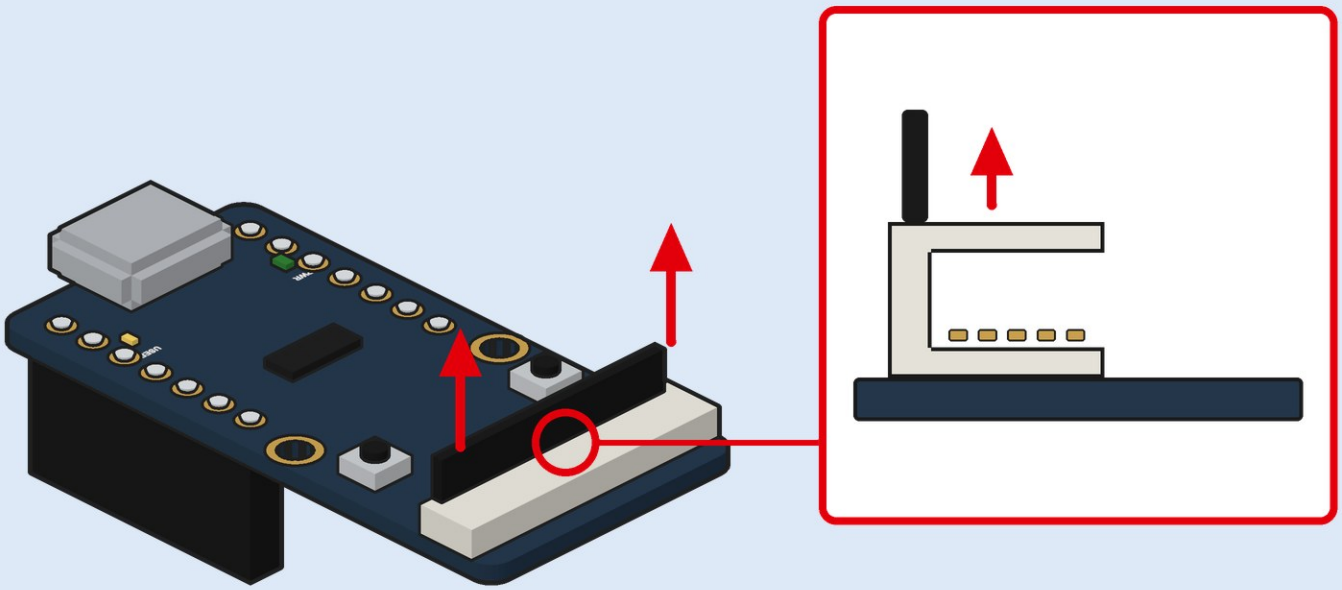

Lift the latch, both corners

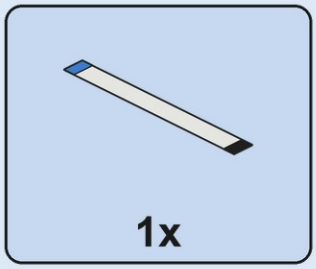


14

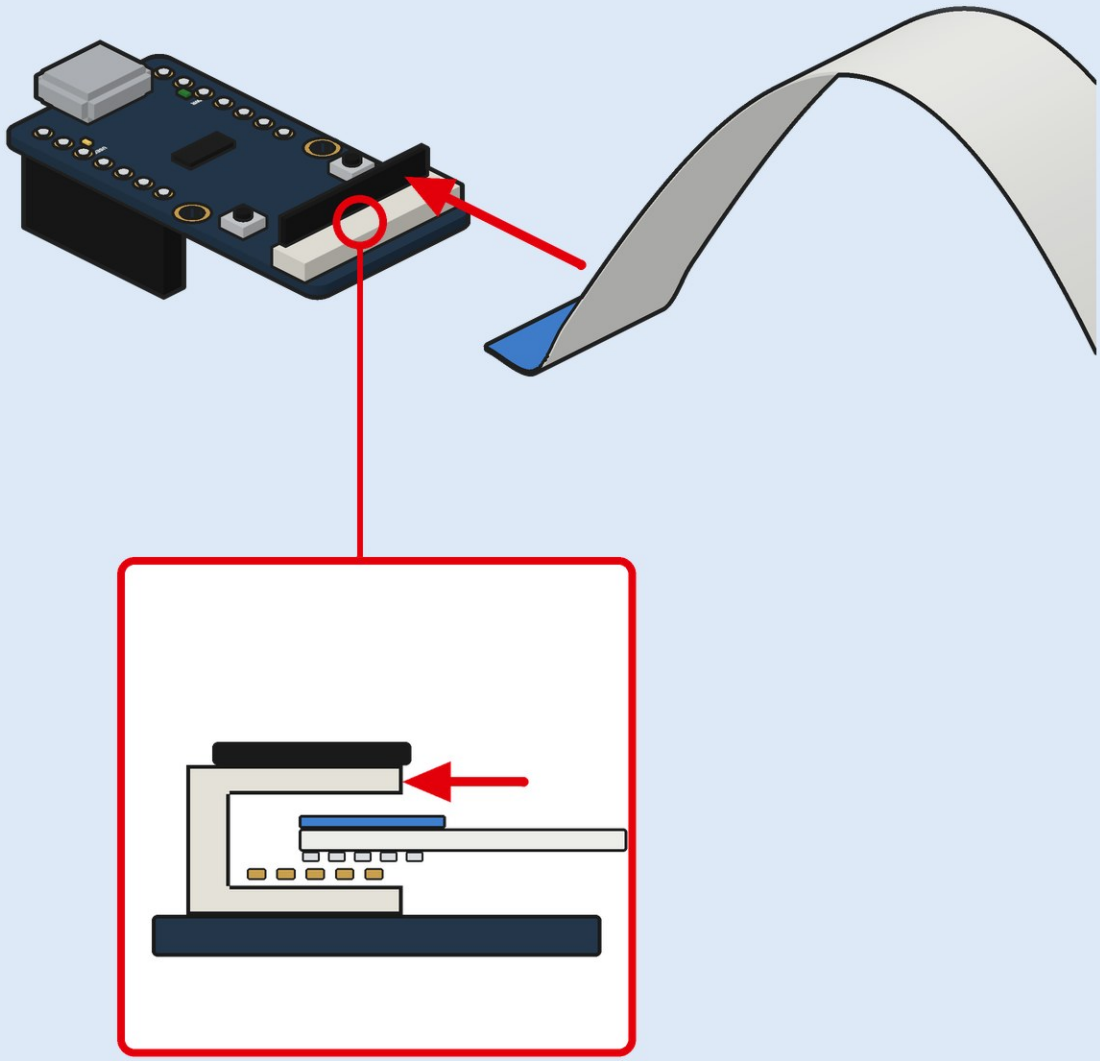


Silver contacts down, push in

15

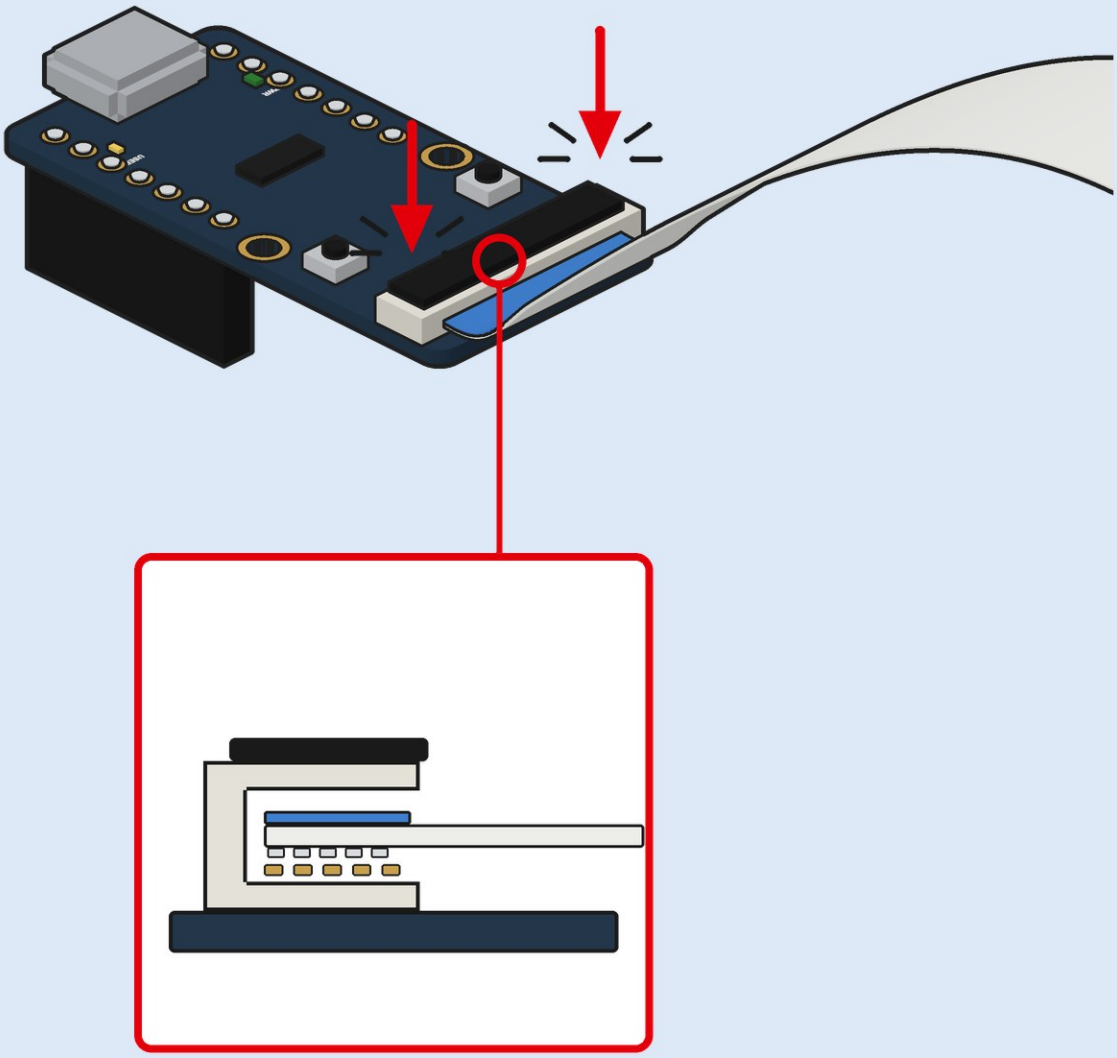


Press the latch down: click

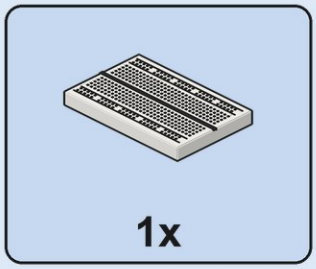


1x


16

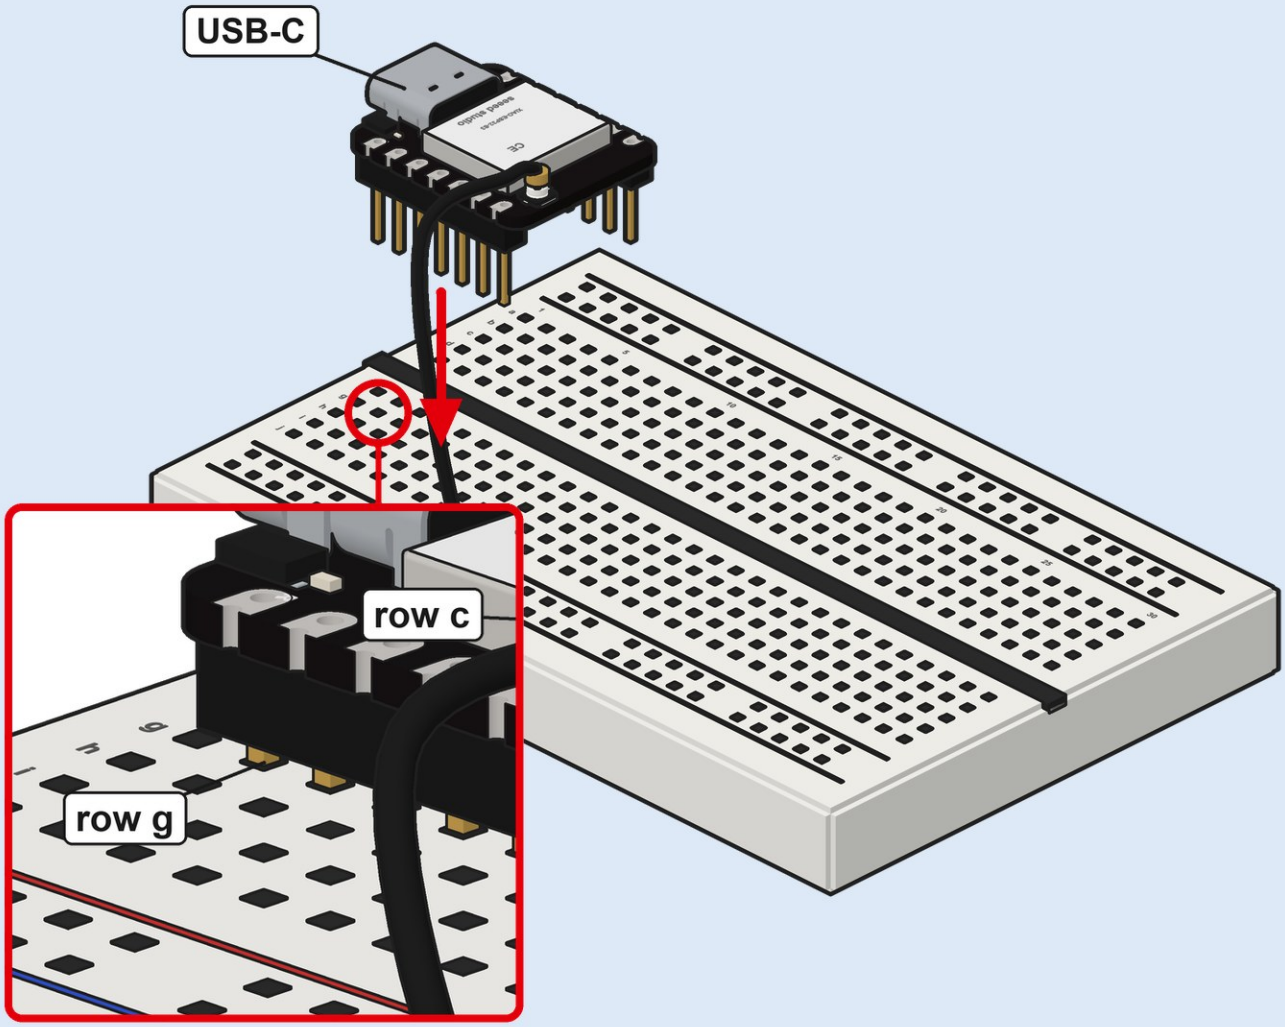

Pins across the middle gap, USB-C out

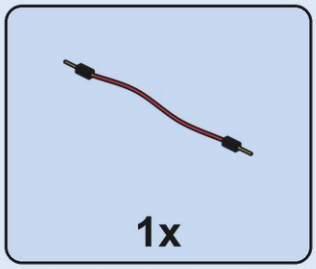


17

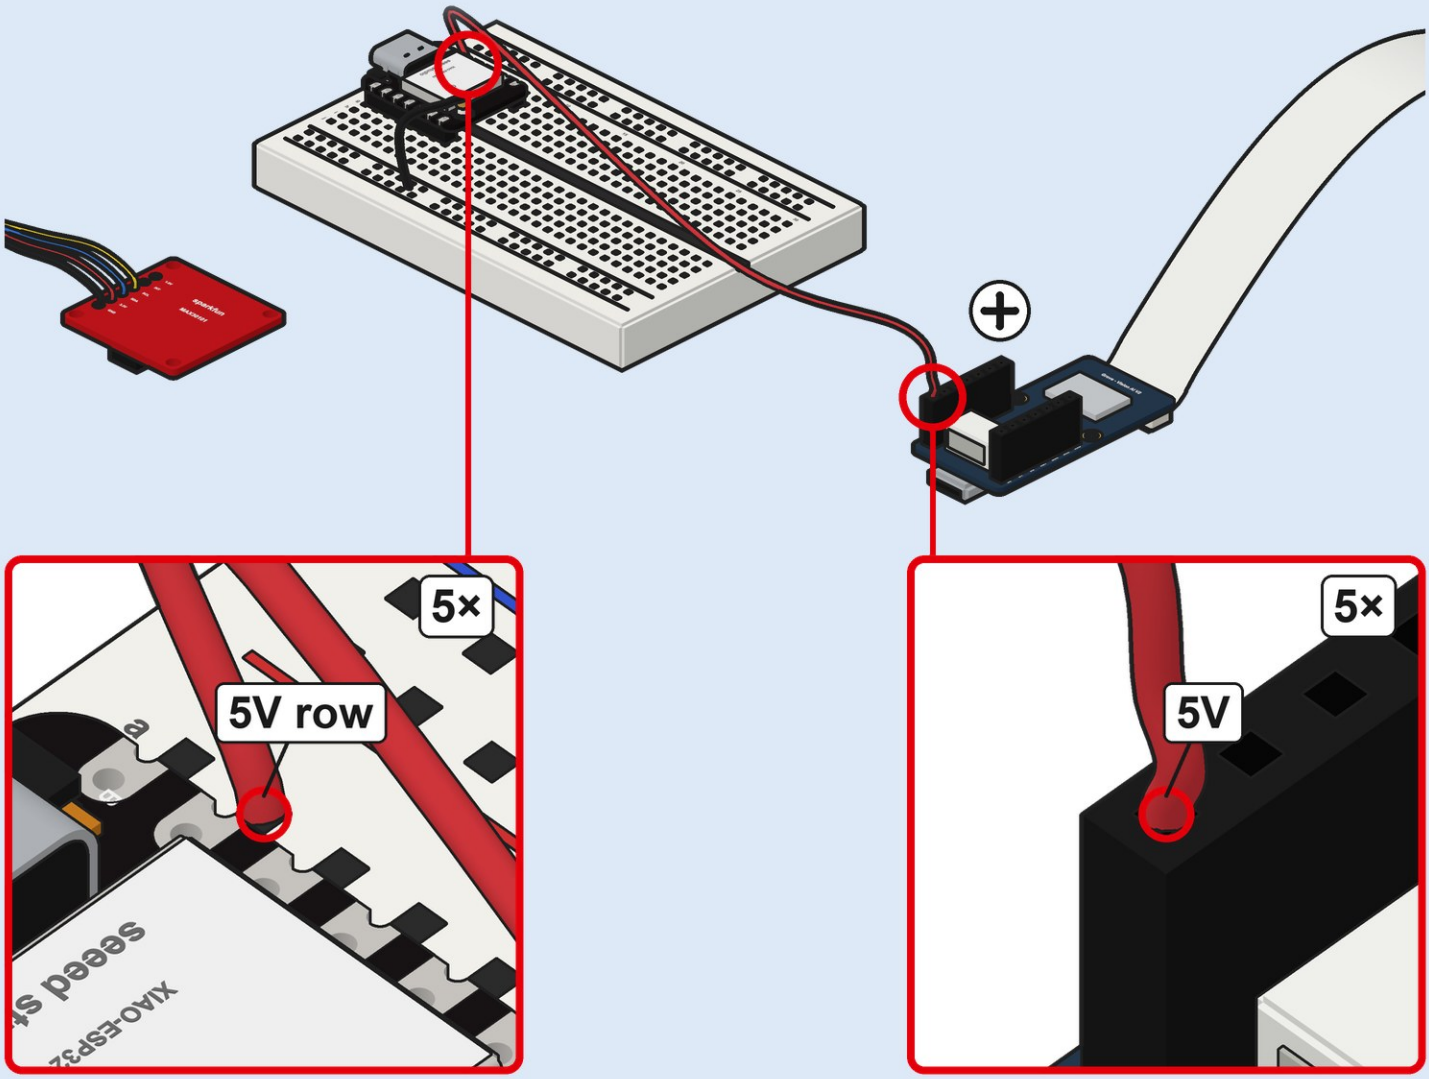


XIAO 5V row to brain hole '5V'

18

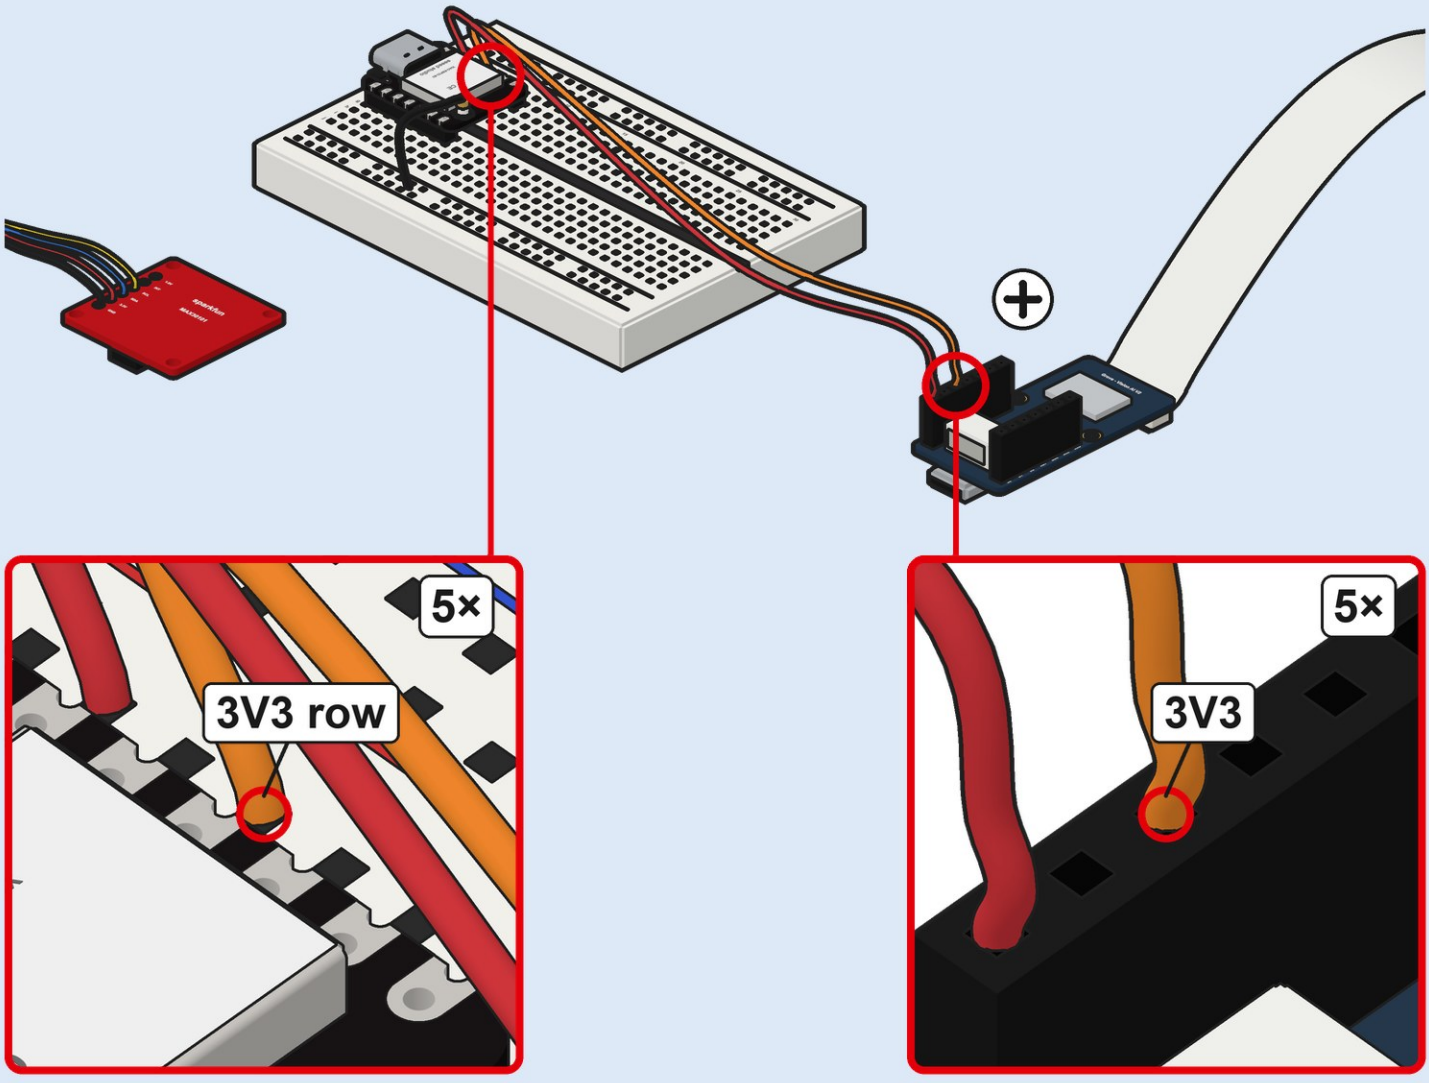


XIAO 3V3 row to brain hole '3V3'

19

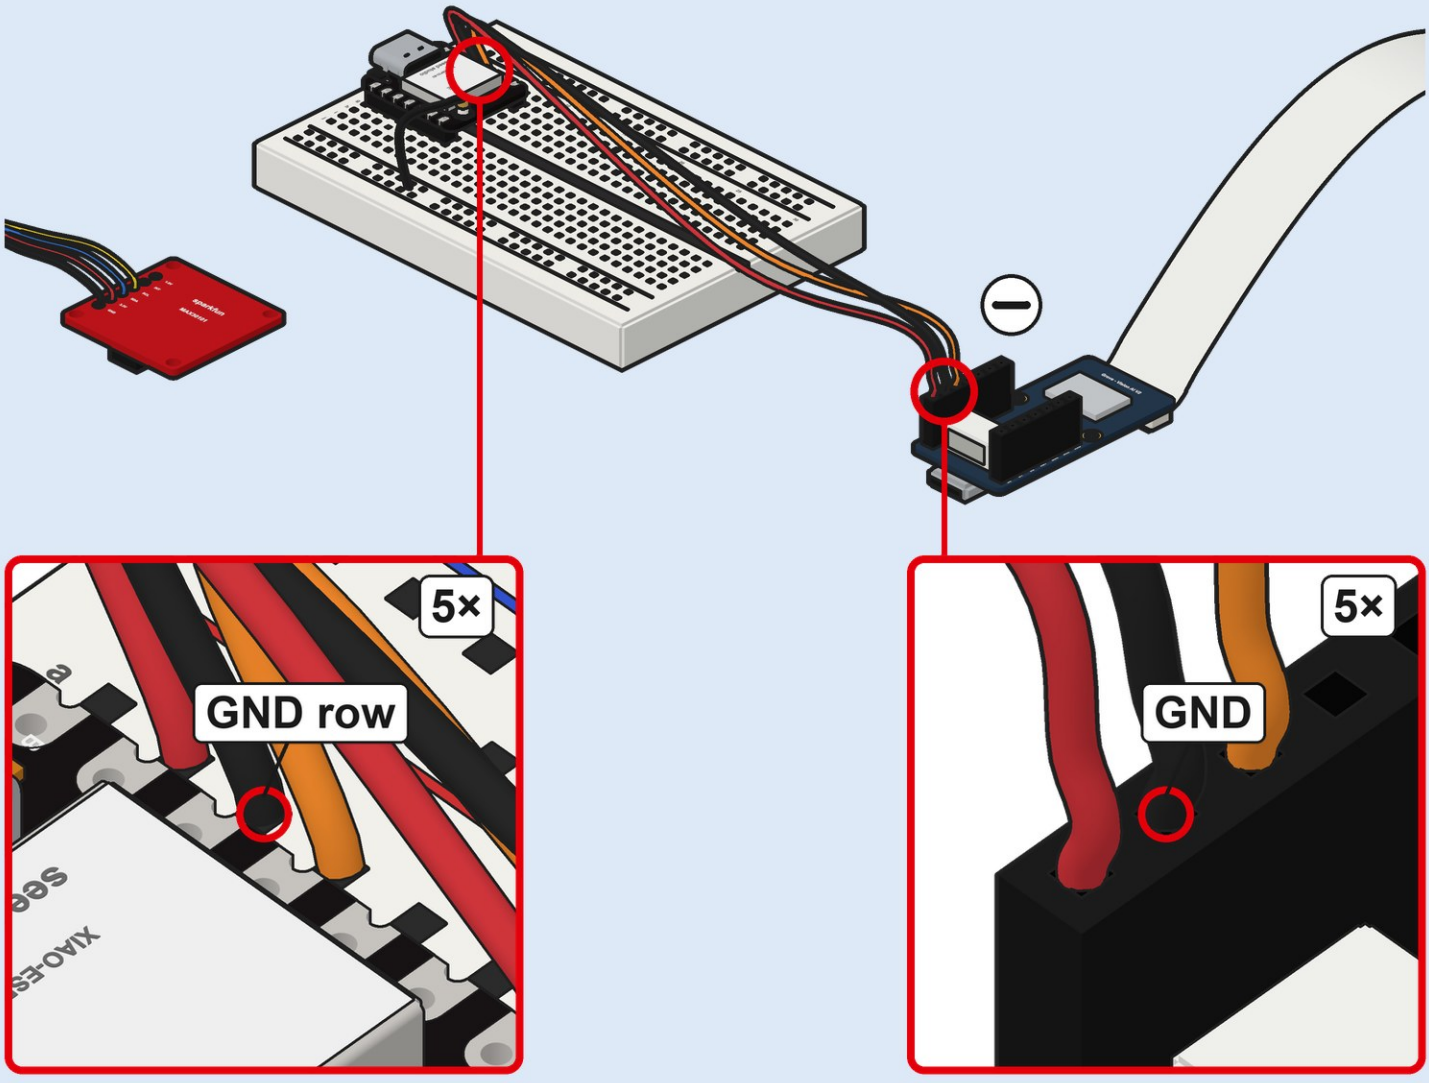


XIAO GND row to brain hole 'GND'

20

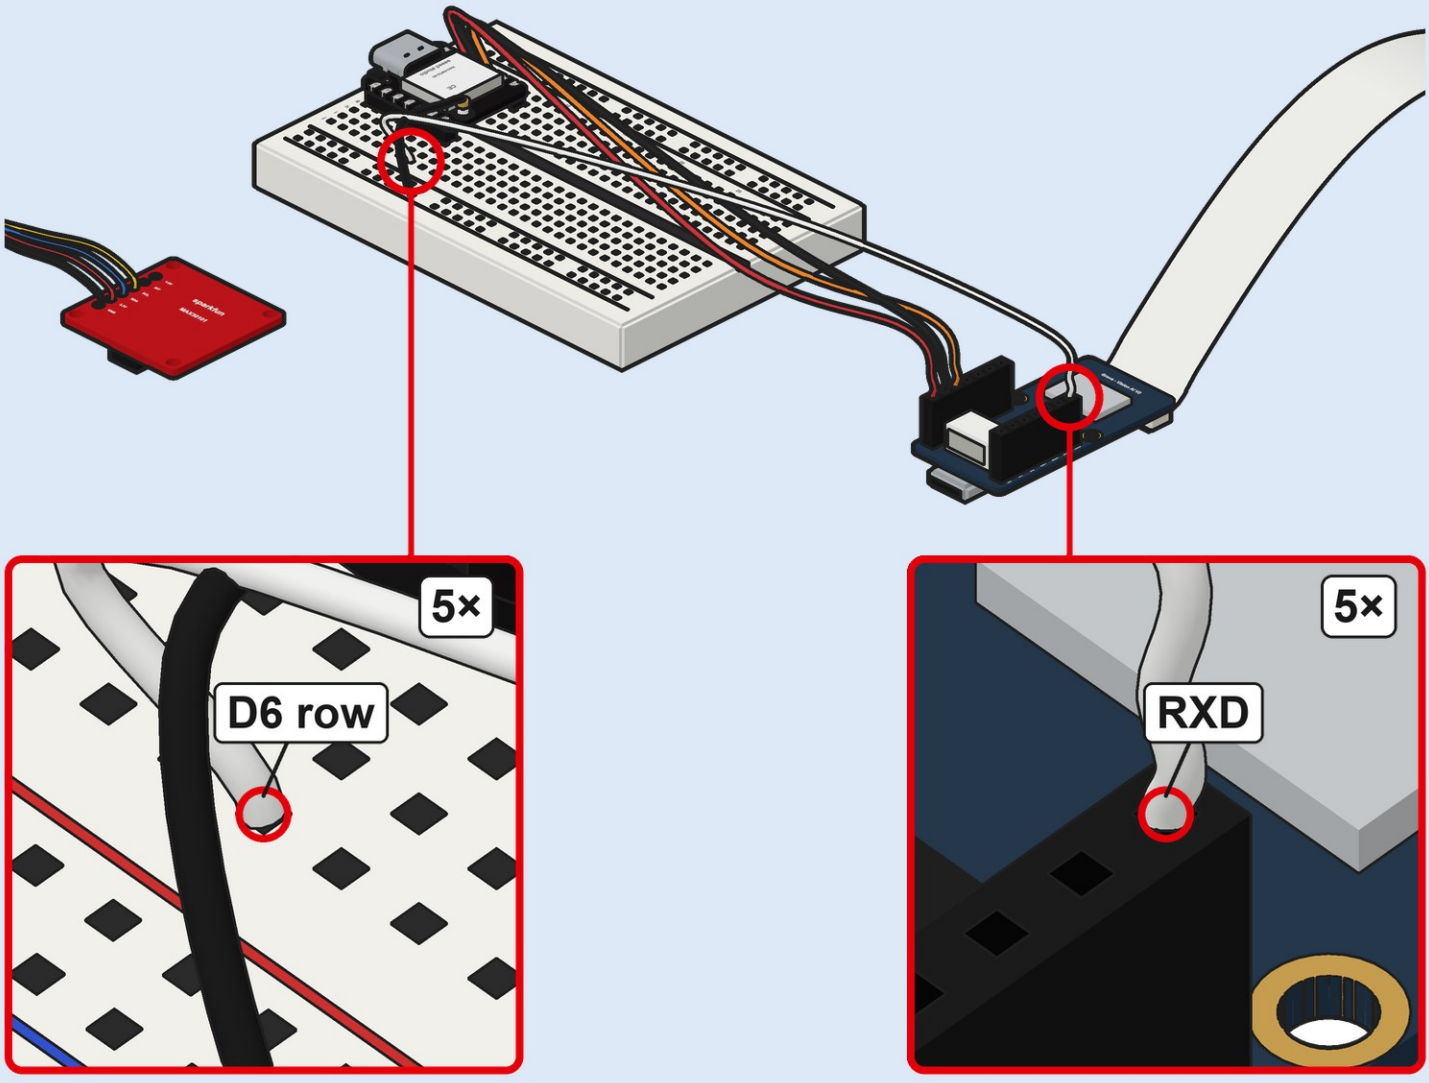


XIAO D6 row to brain hole 'RXD'


21

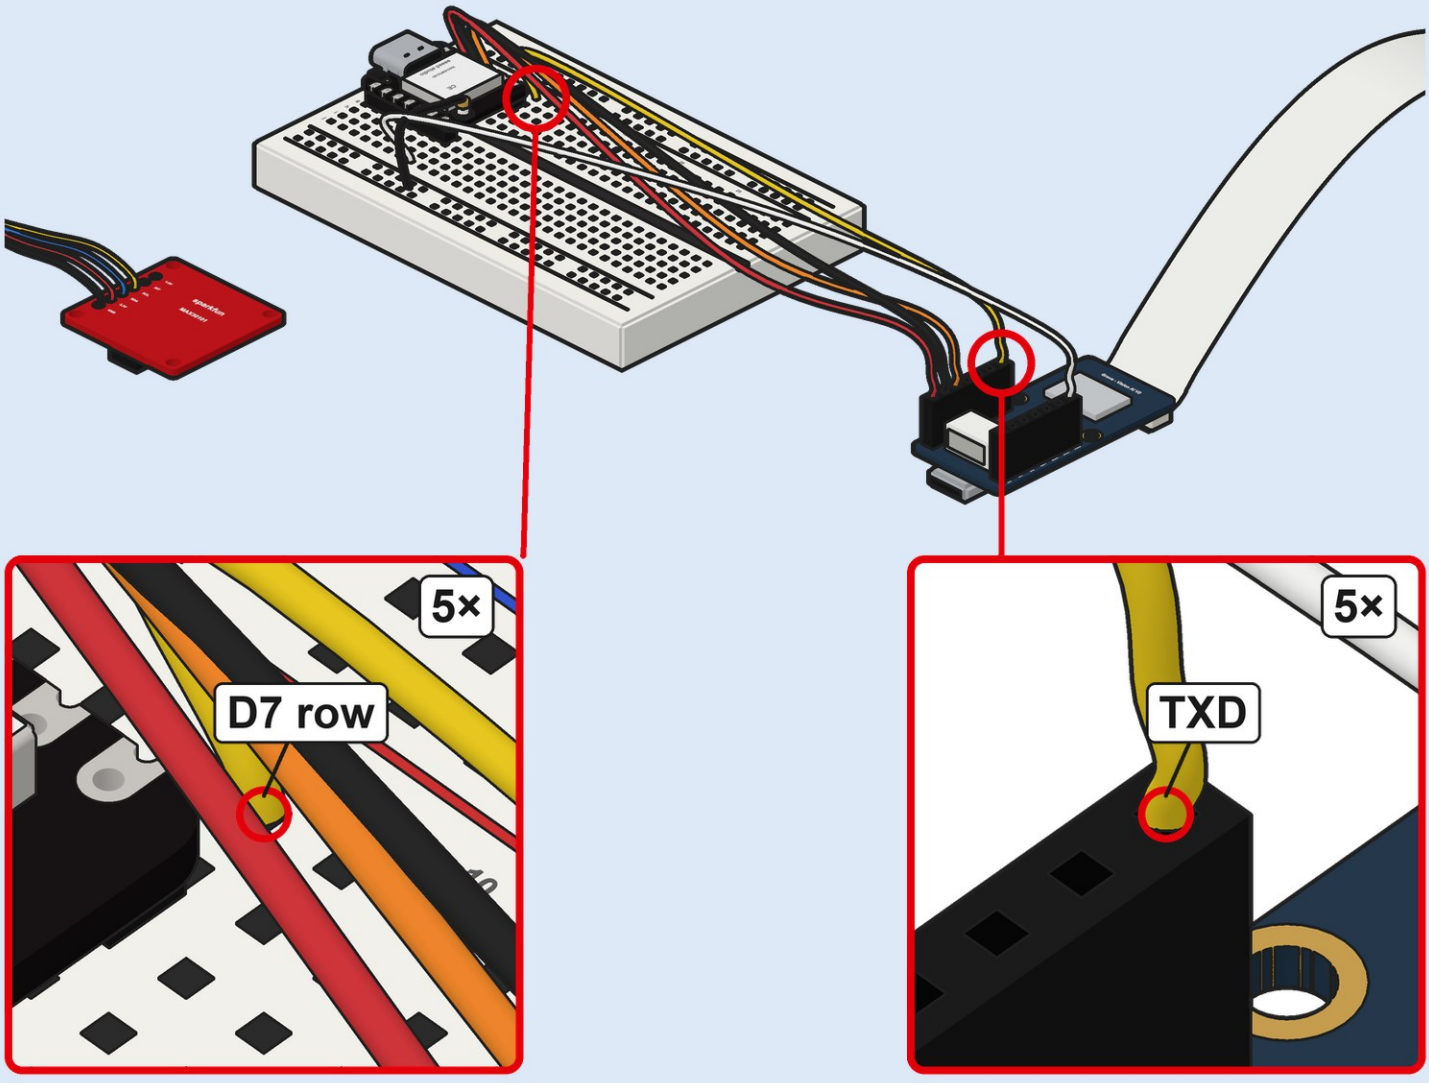

XIAO D7 row to brain hole 'TXD'

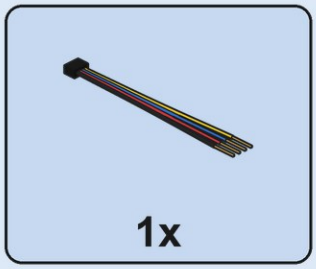


22

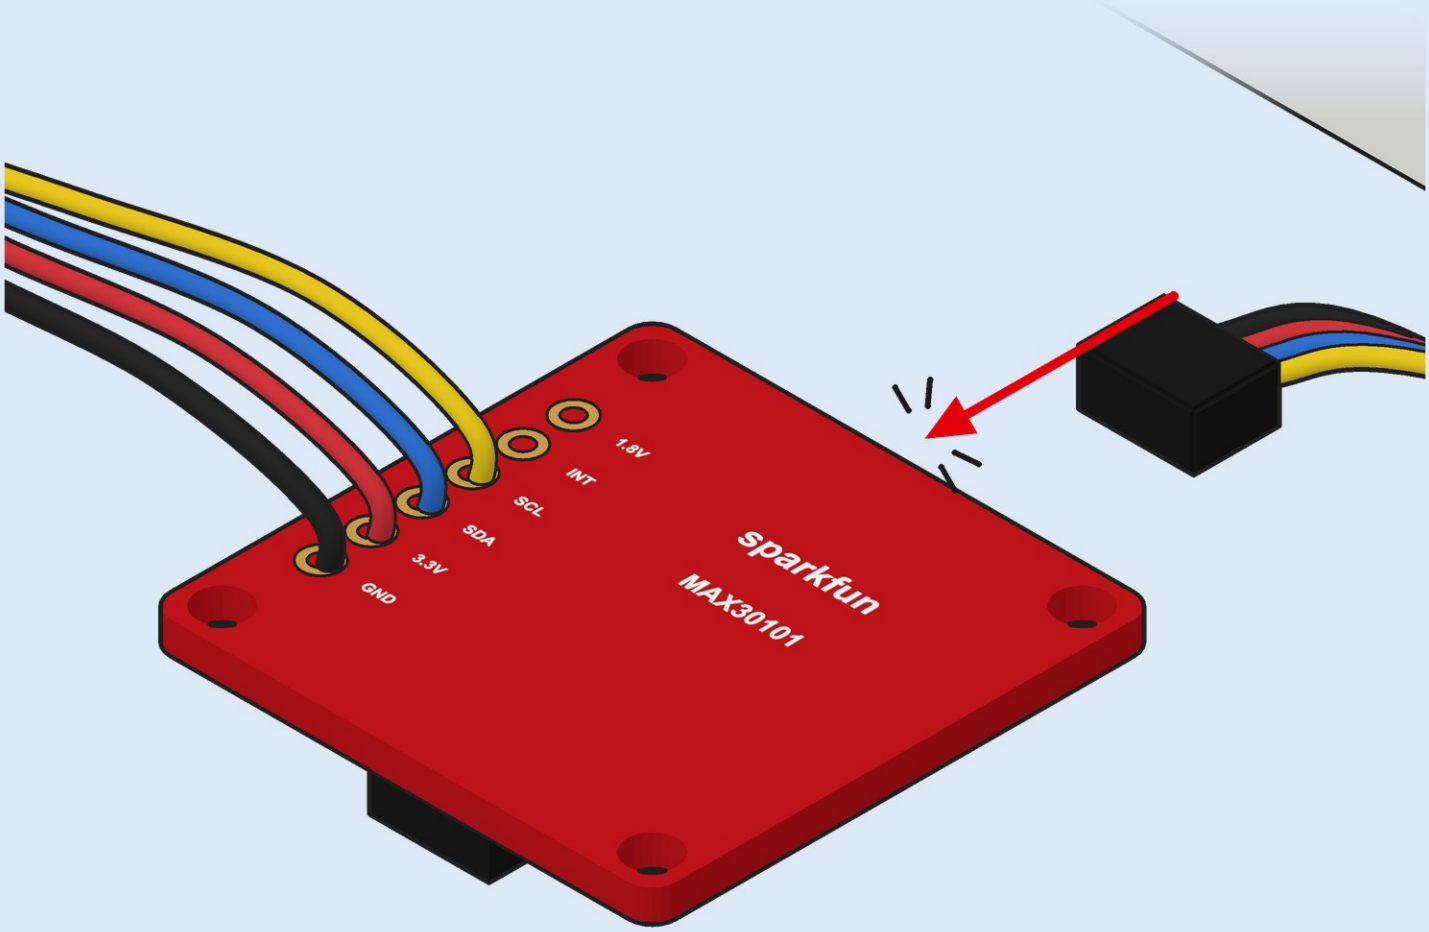

Small plug into either sensor socket


23

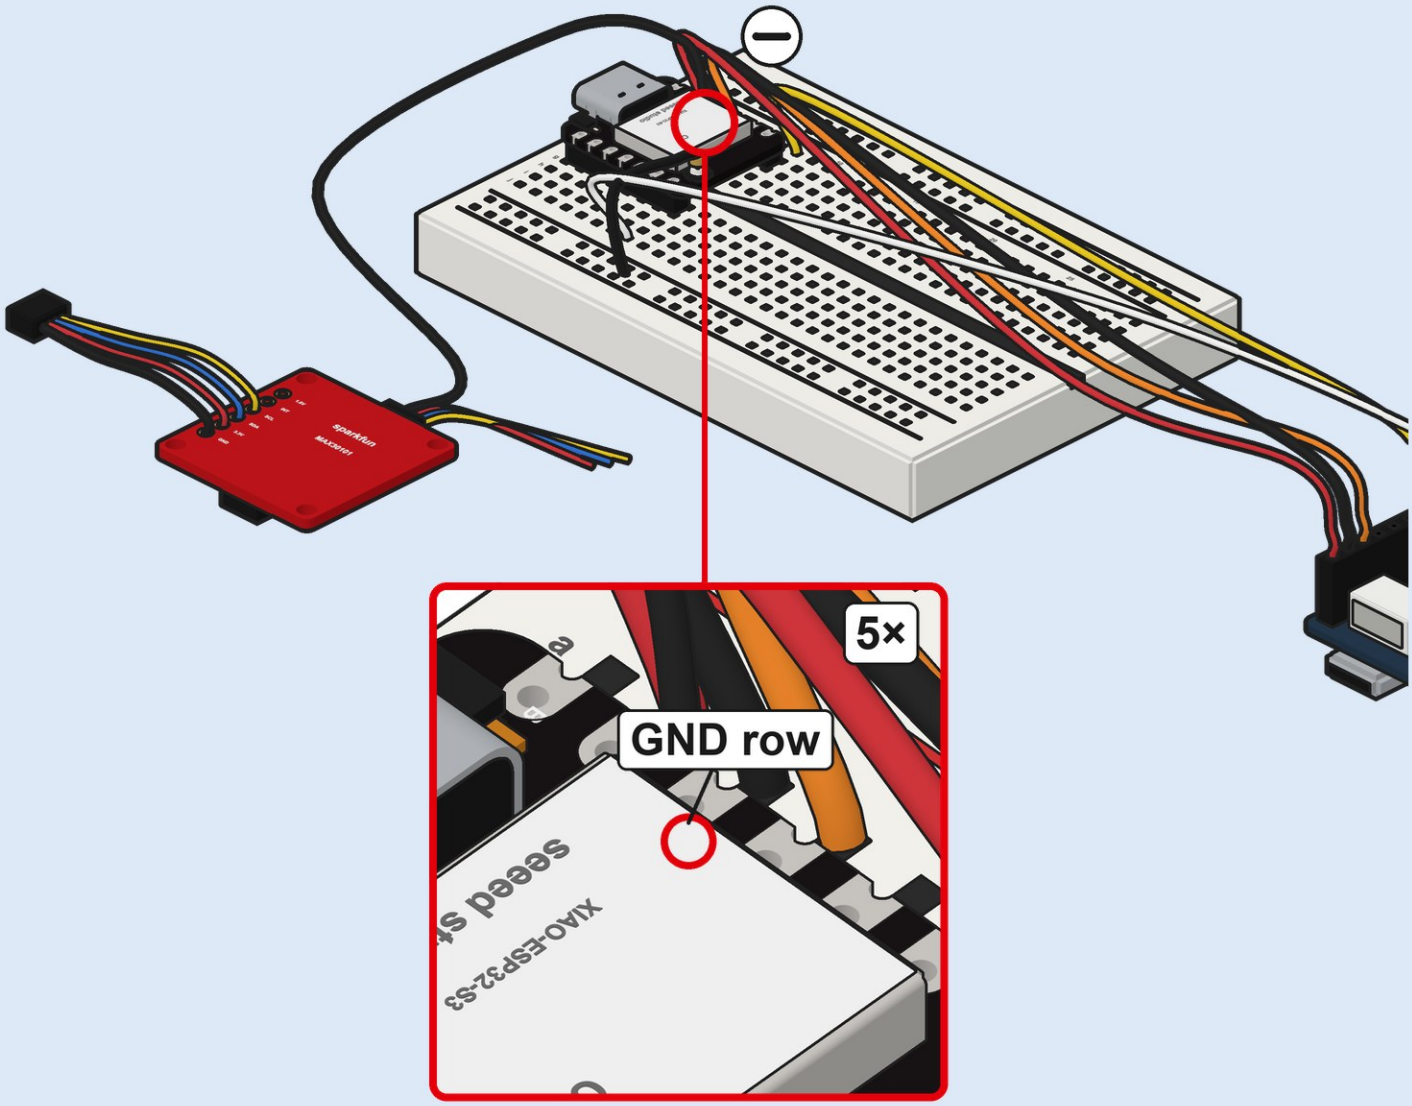

Black pin into the GND row


24

3V3 row, never the 5V row

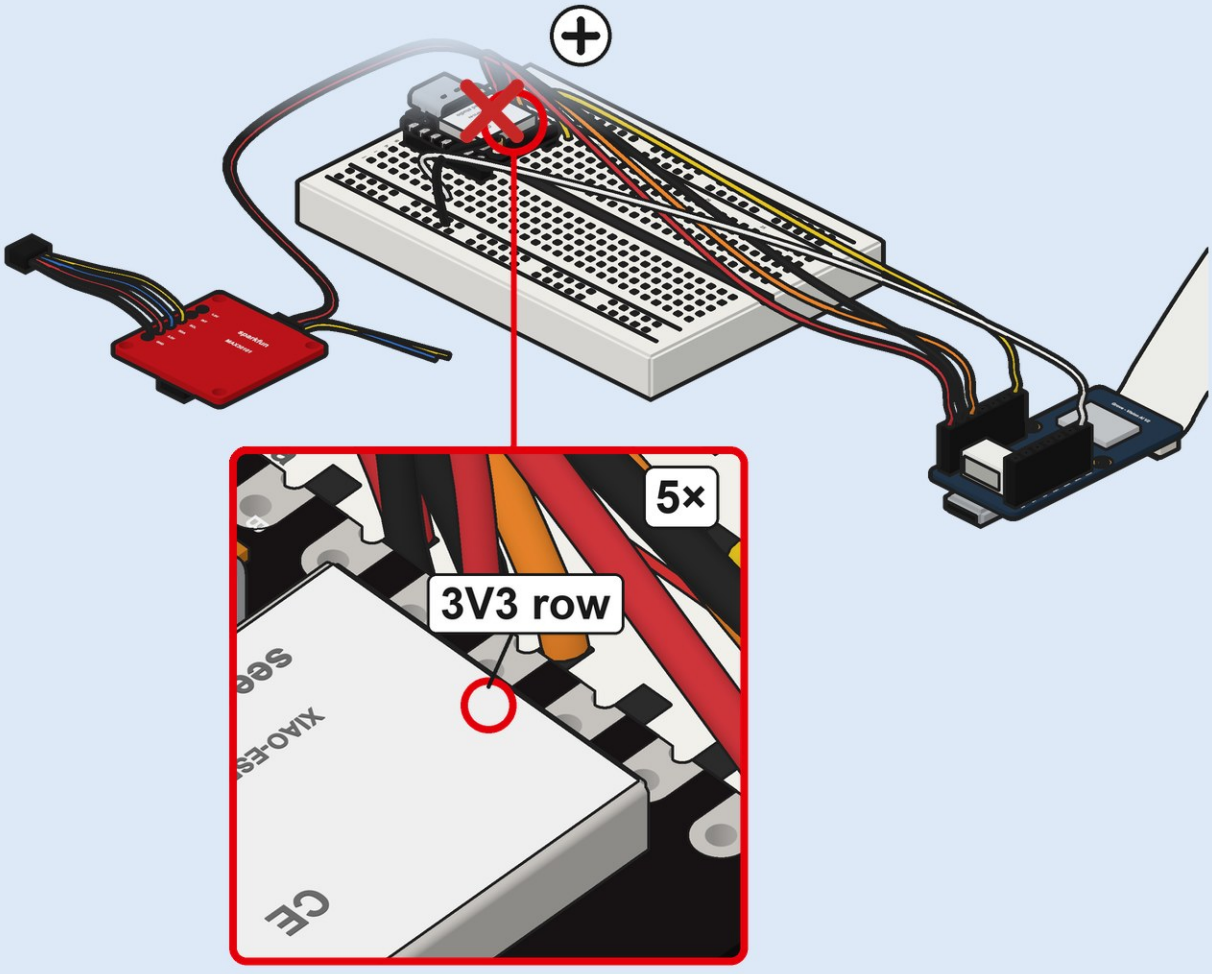


Red pin into the 3V3 row, not 5V

25

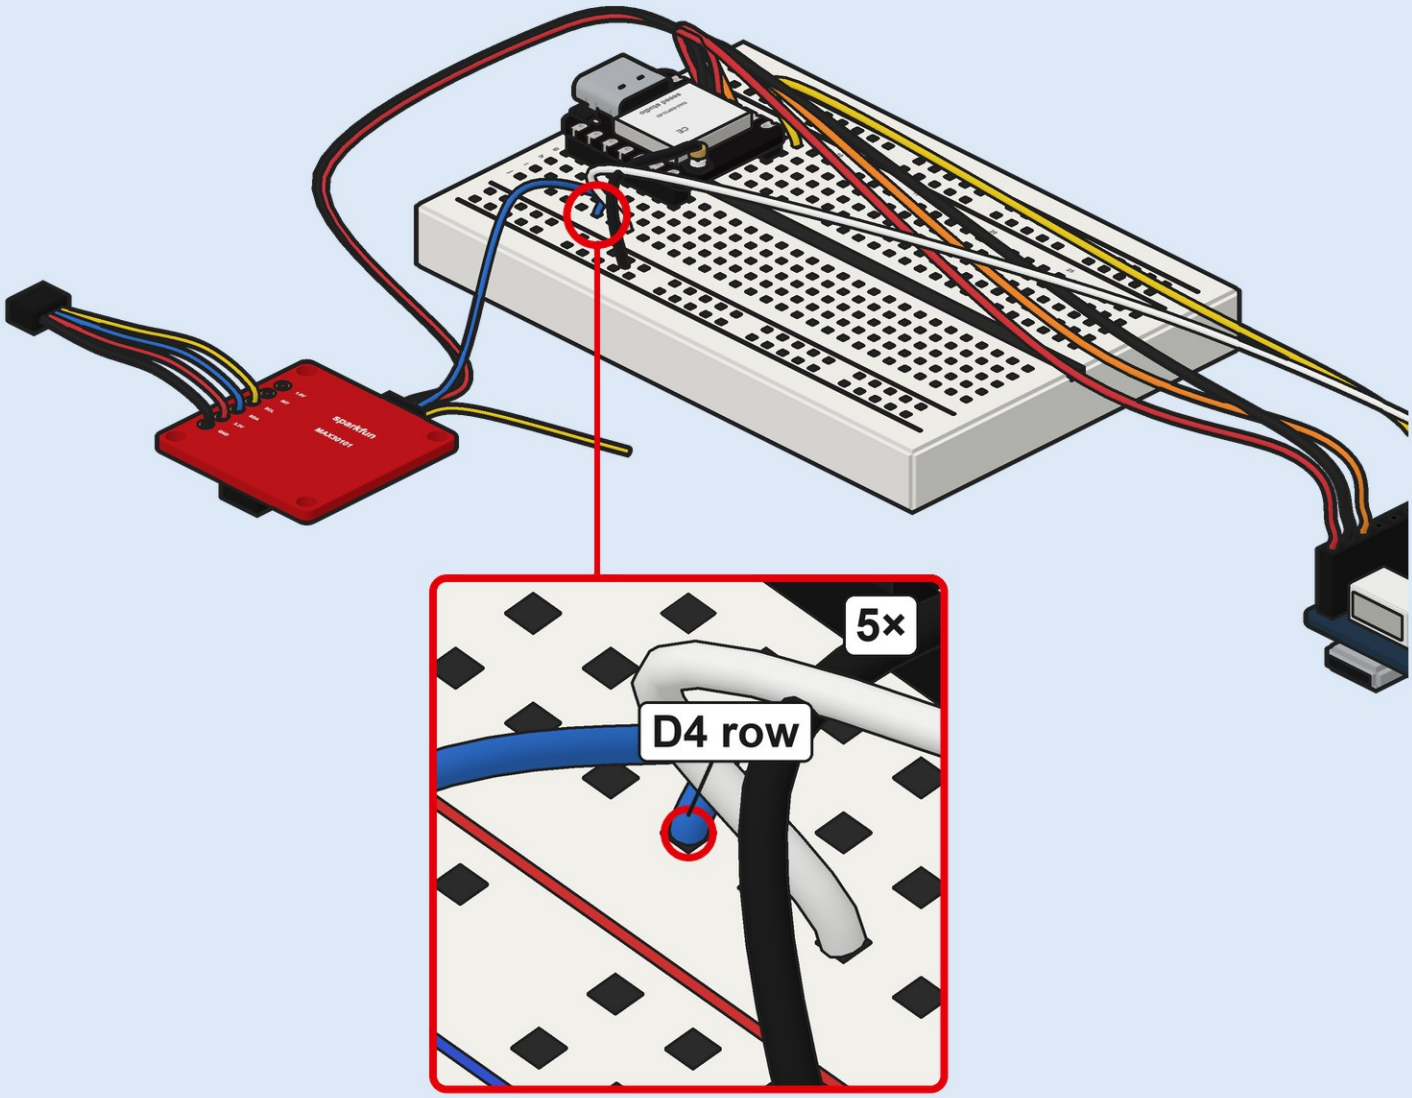

Blue pin into the D4 row

26

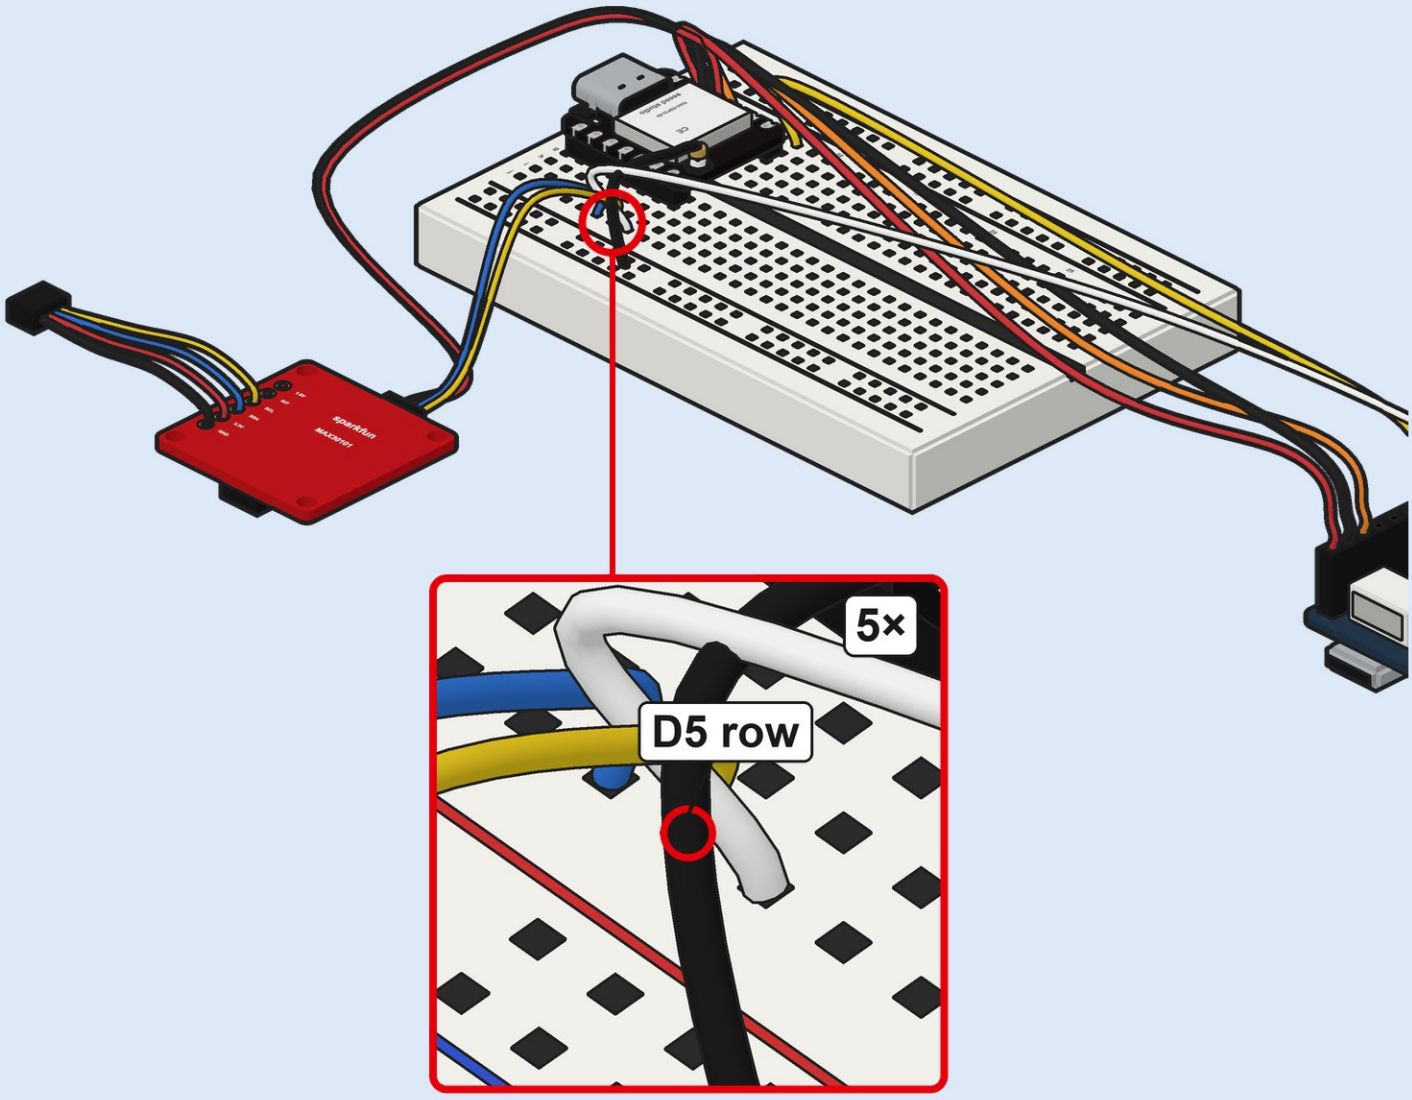


Yellow pin into the D5 row

27


Stop. Look.


- 5V: one wire only
- sensor red on 3V3
- pins fully in
- latch closed

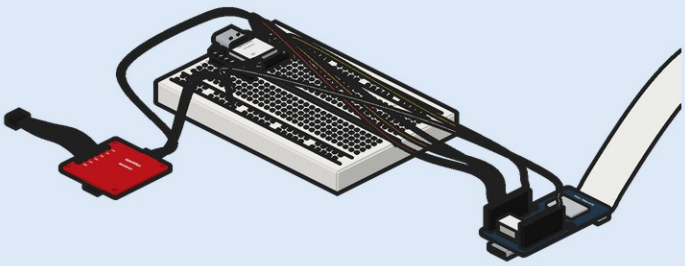

Red on 3V3, one wire in 5V


28

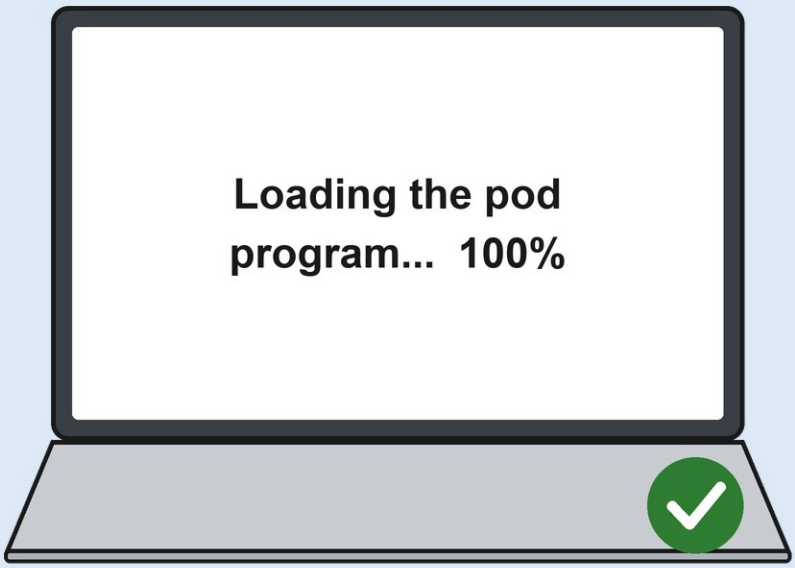


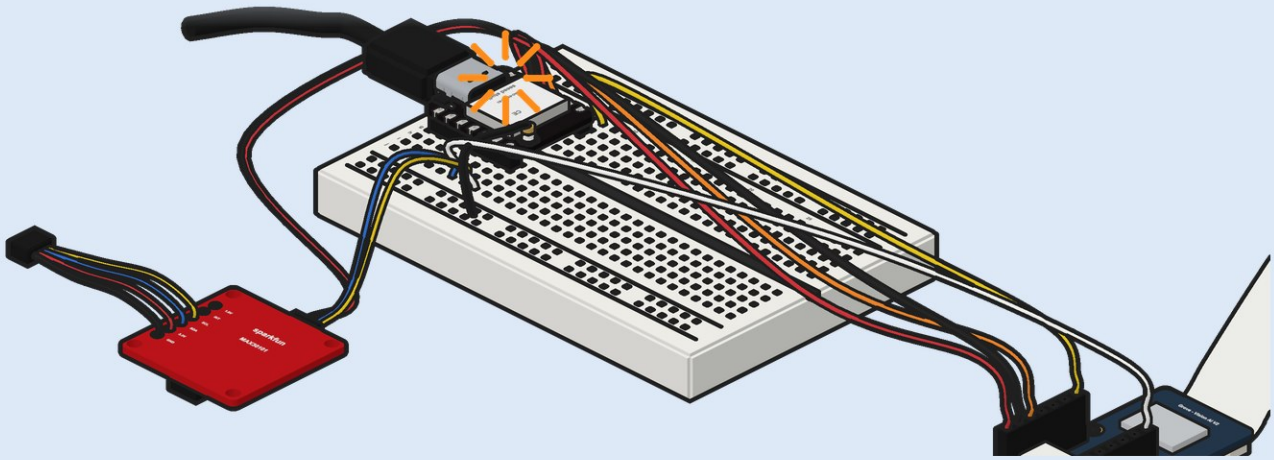

USB-C into the radio: Claude loads it


29

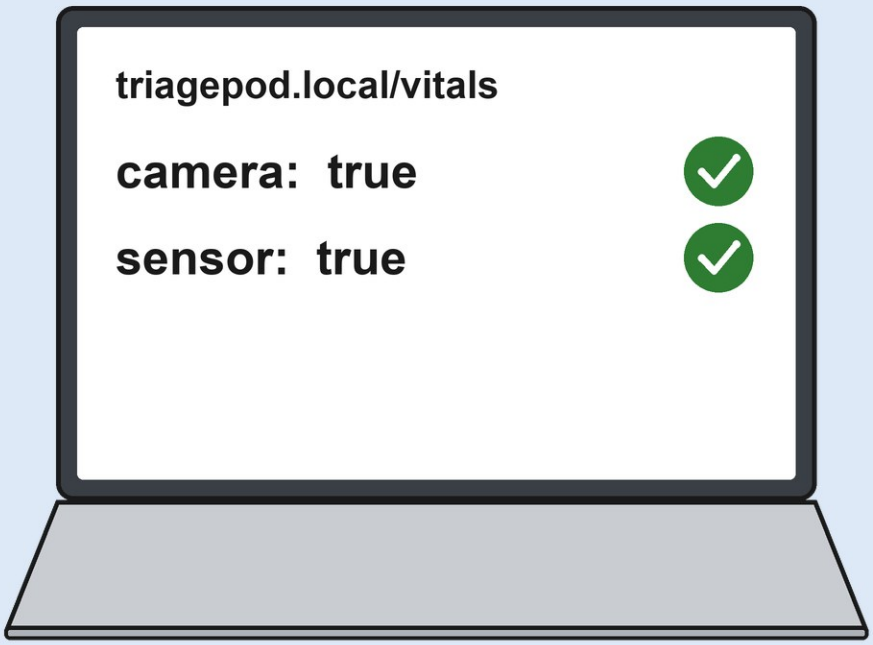


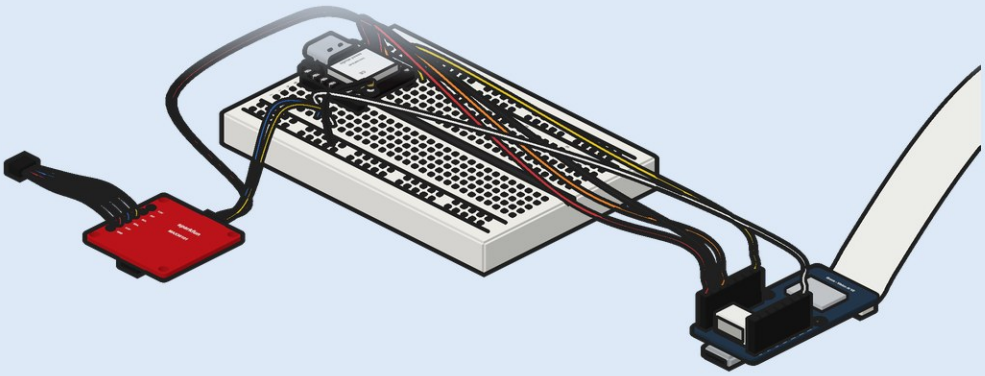

triagepod.local/vitals: camera, sensor true

30

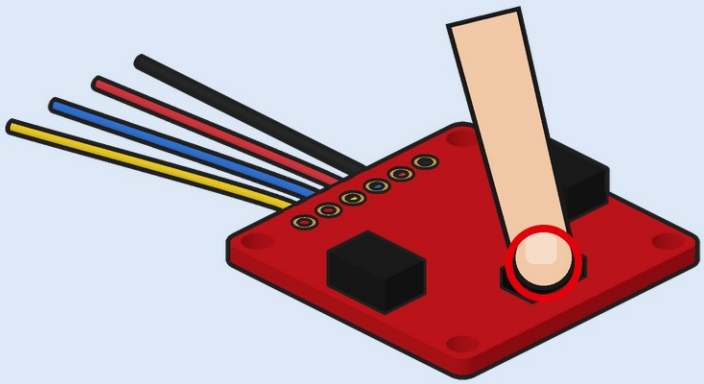


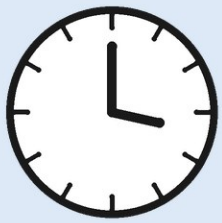

10 s

Fingertip flat on the window, 10 s

31

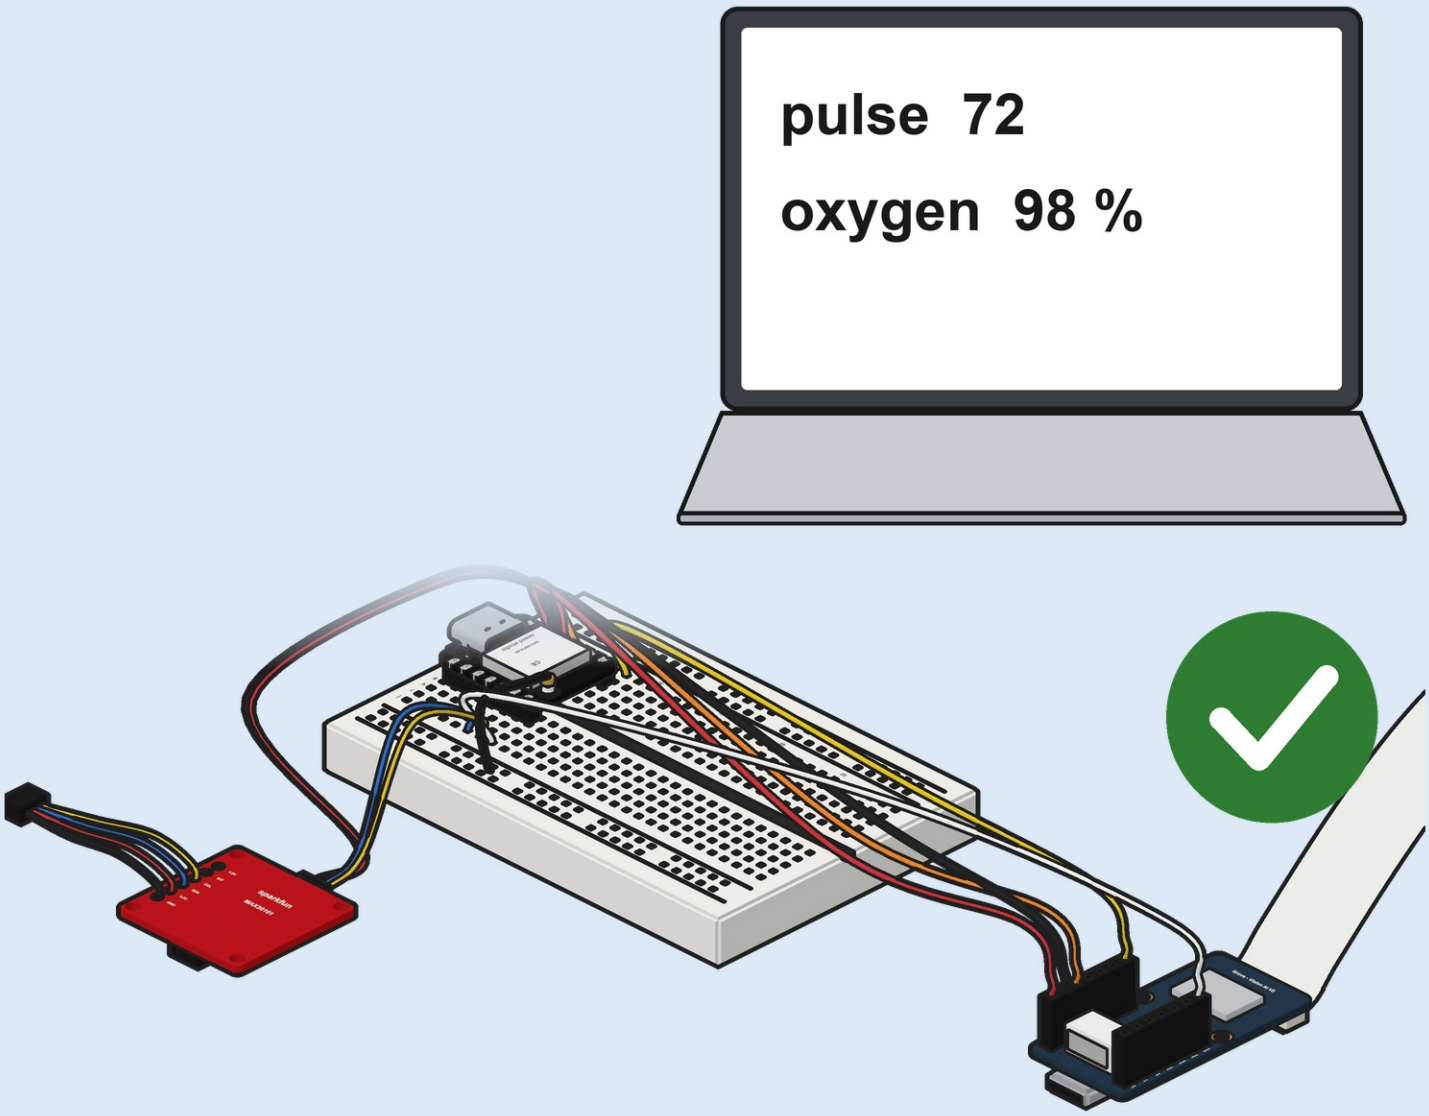

Pod answers with pulse and oxygen