


1

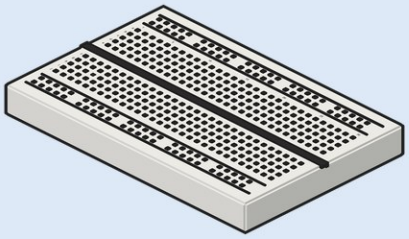

1x
breadboard

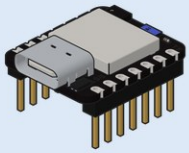

1x
XIAO



1x
DRV + sensor cable




1x
heart sensor




2

Switch OFF first

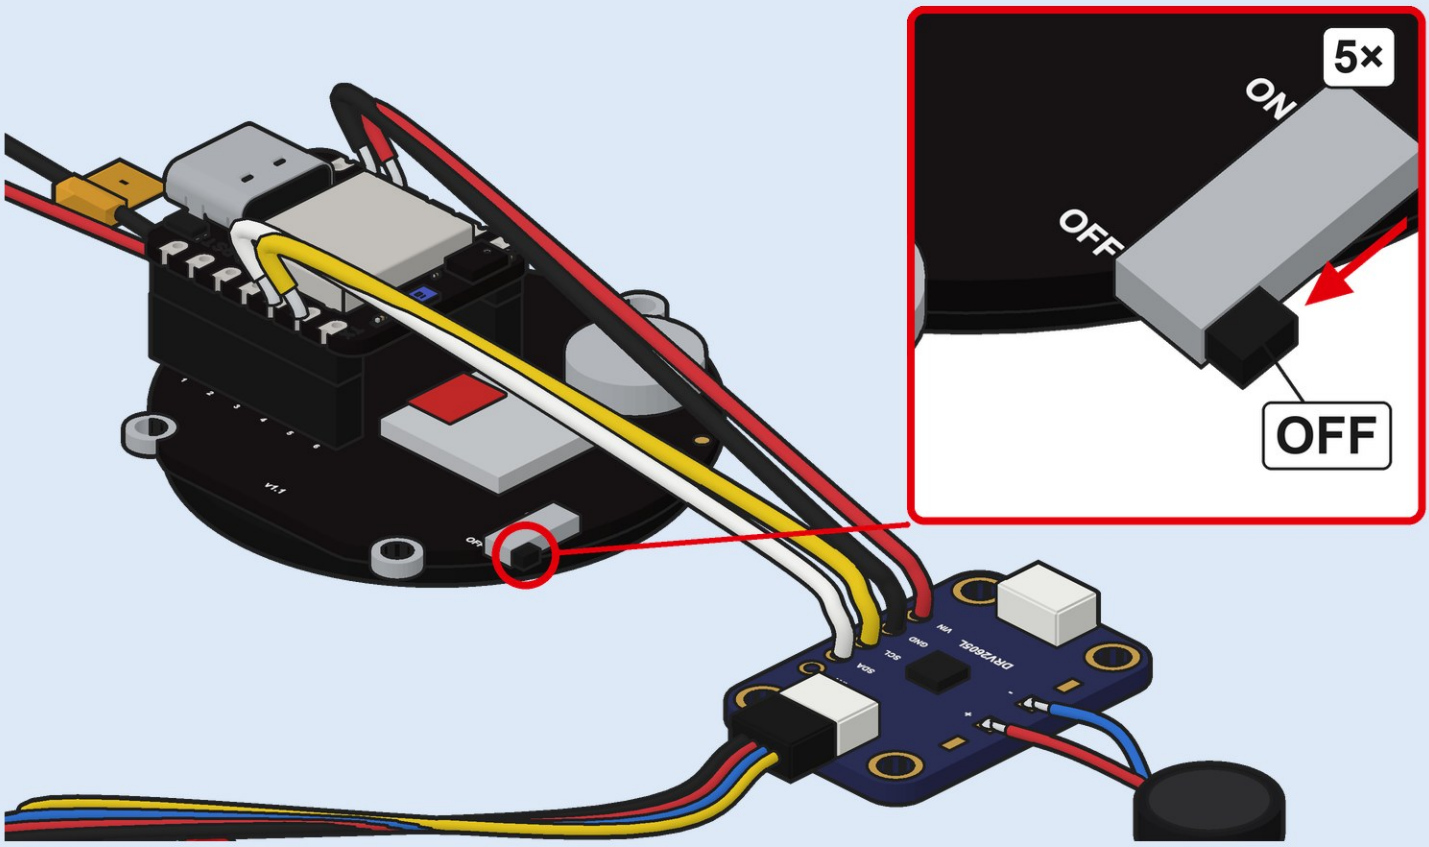


Display switch OFF

3

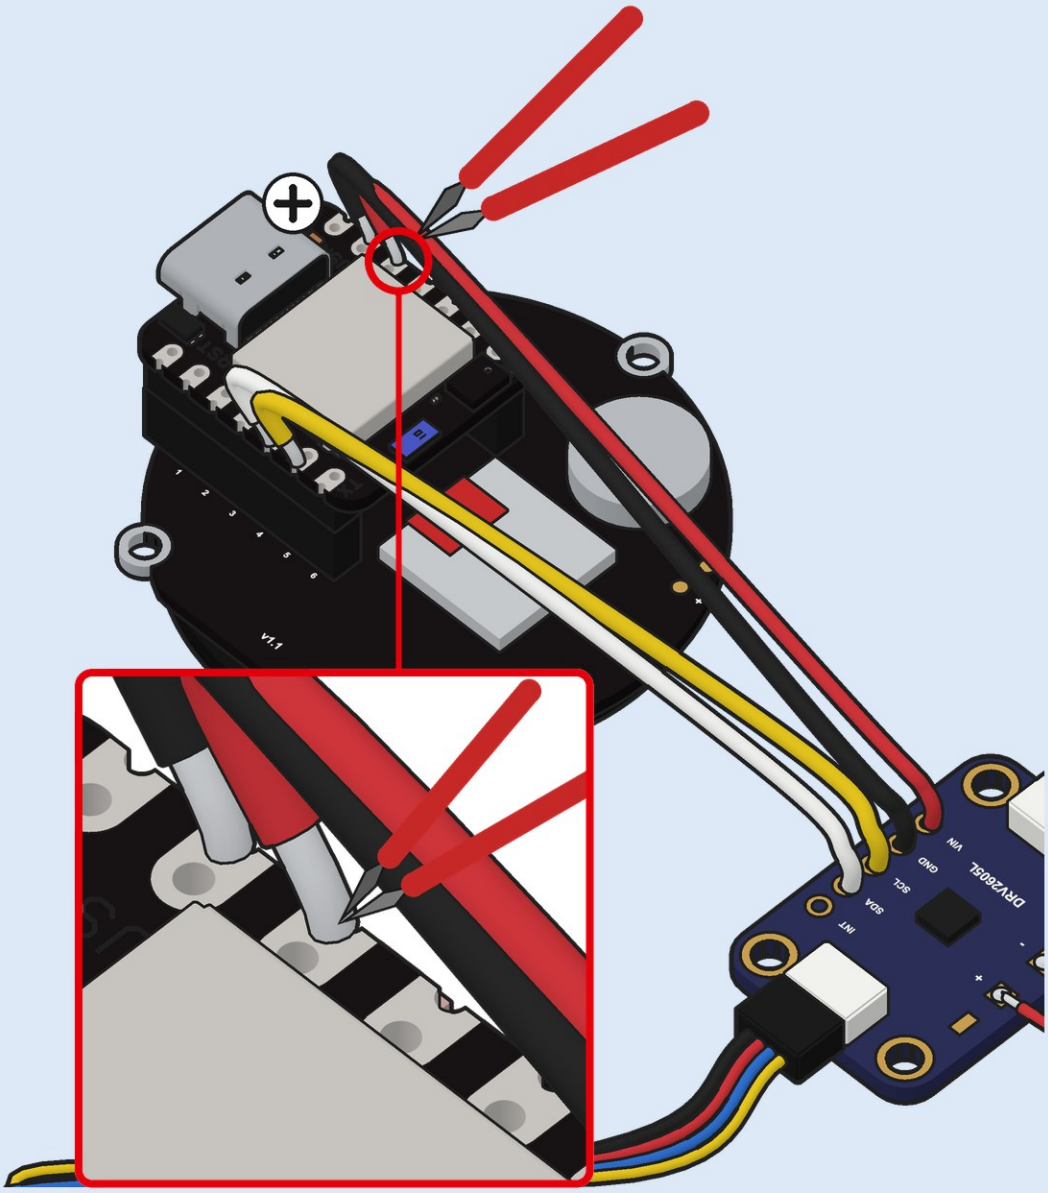


Cut the red wire at the XIAO pin

4

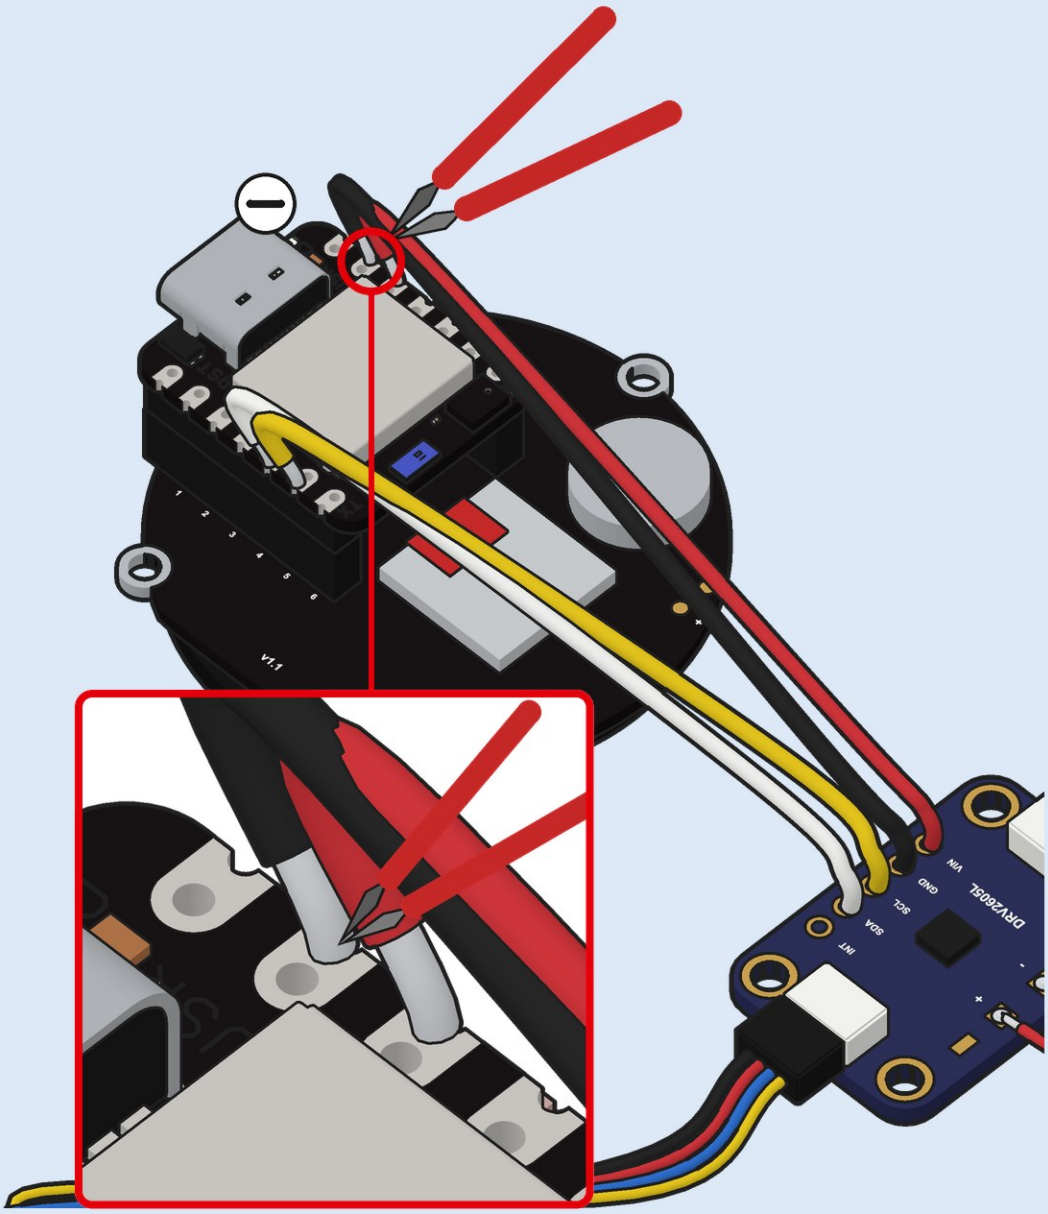


Cut the black wire at the XIAO pin

5

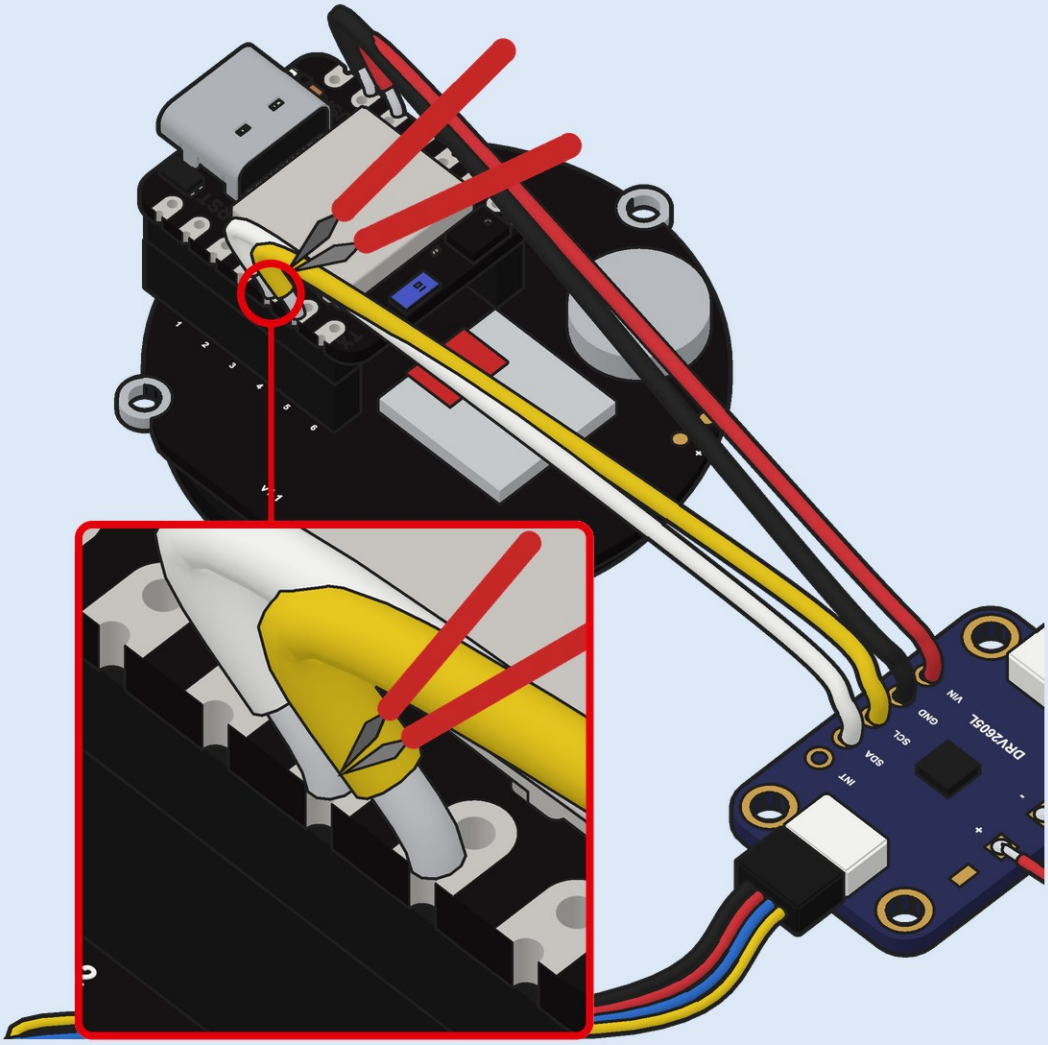


Cut the white wire at the XIAO pin

6

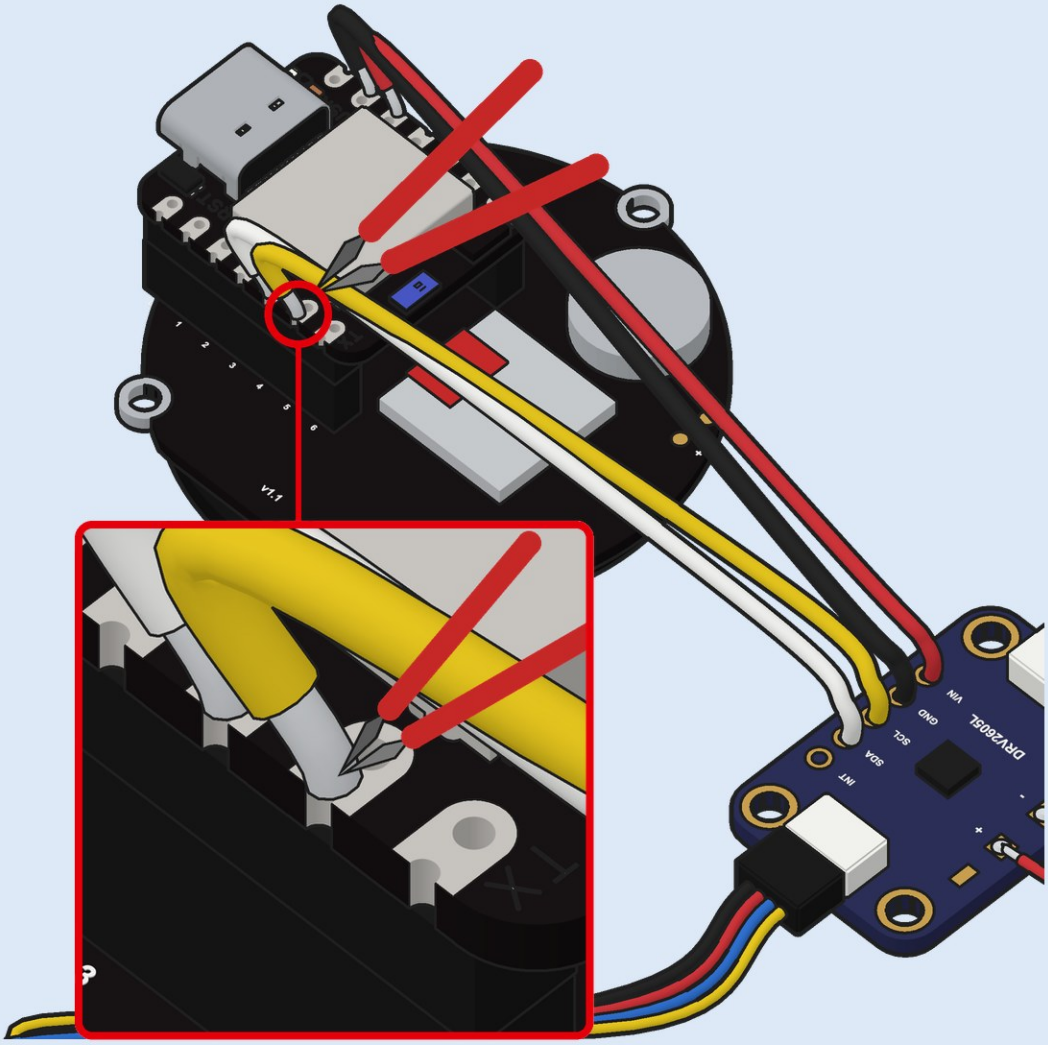


Cut the yellow wire at the XIAO pin

7

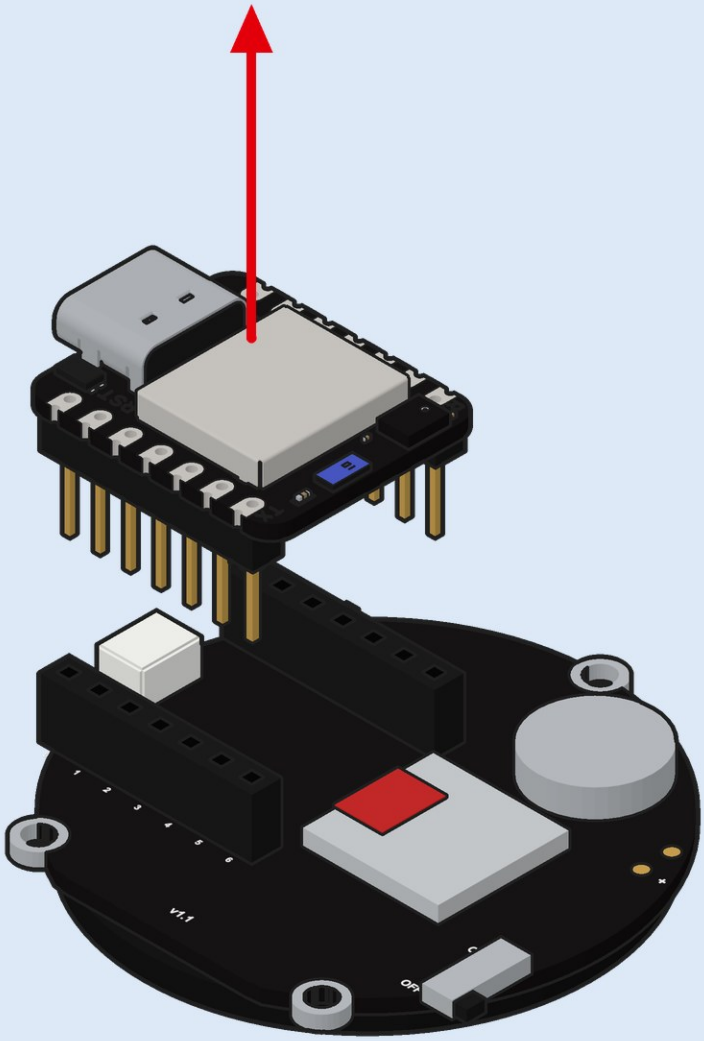


Lift the XIAO straight up

8

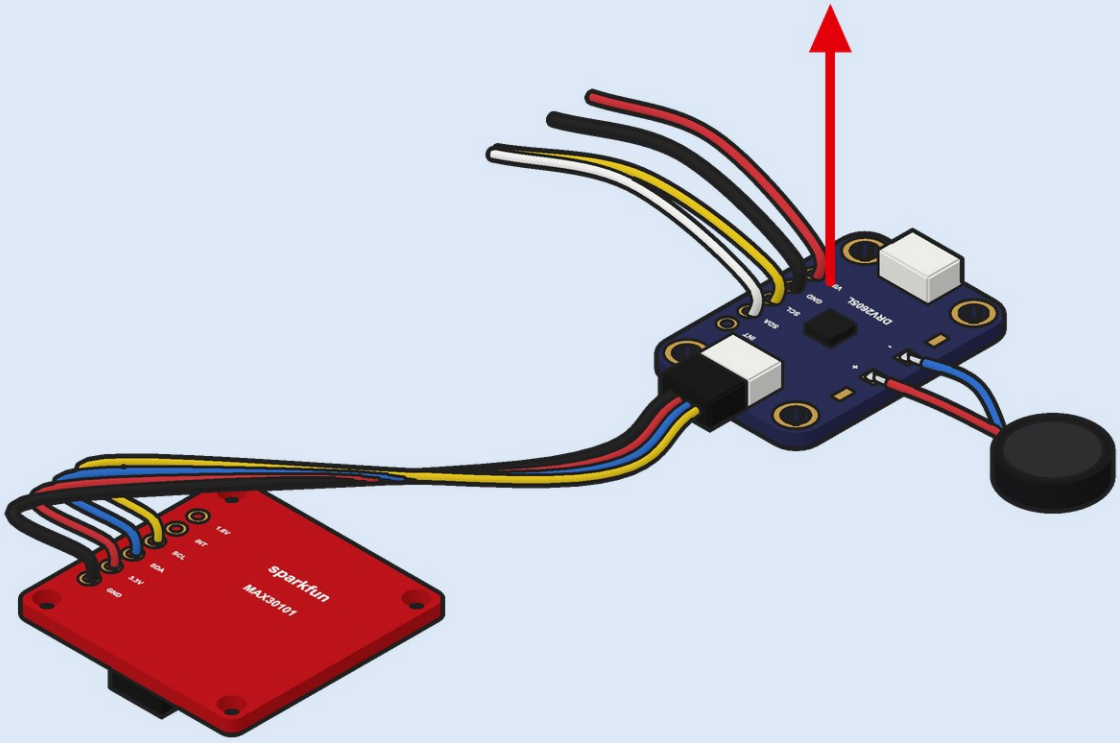

Lift the DRV, sensor and motor out

9

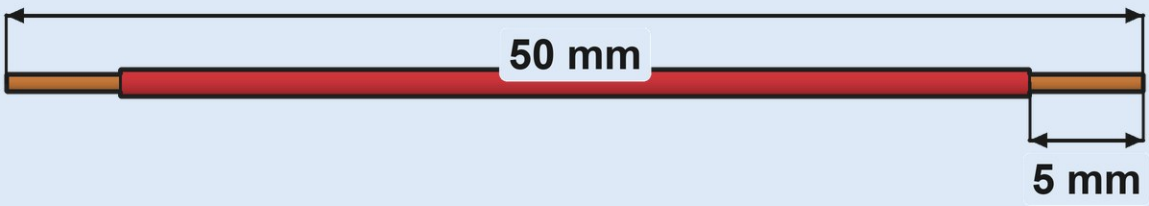


Red: strip 5 mm, twist tight

10




Black: strip 5 mm, twist tight

11

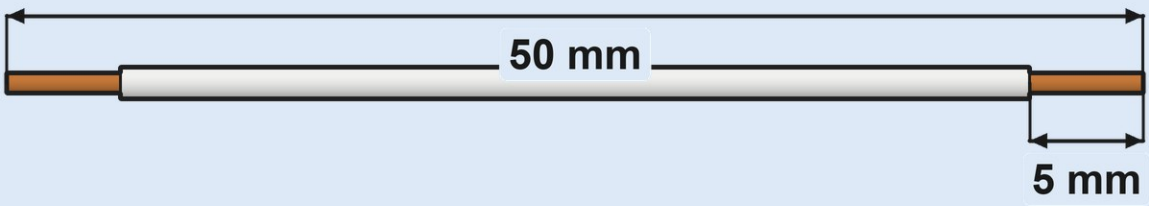


White: strip 5 mm, twist tight

12

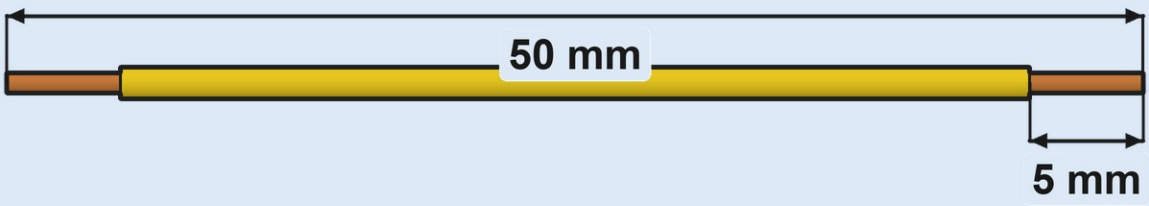


Yellow: strip 5 mm, twist tight

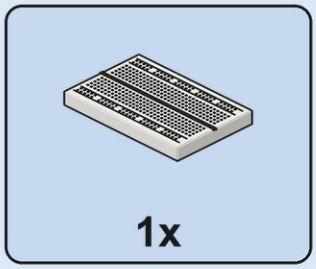


1x

13

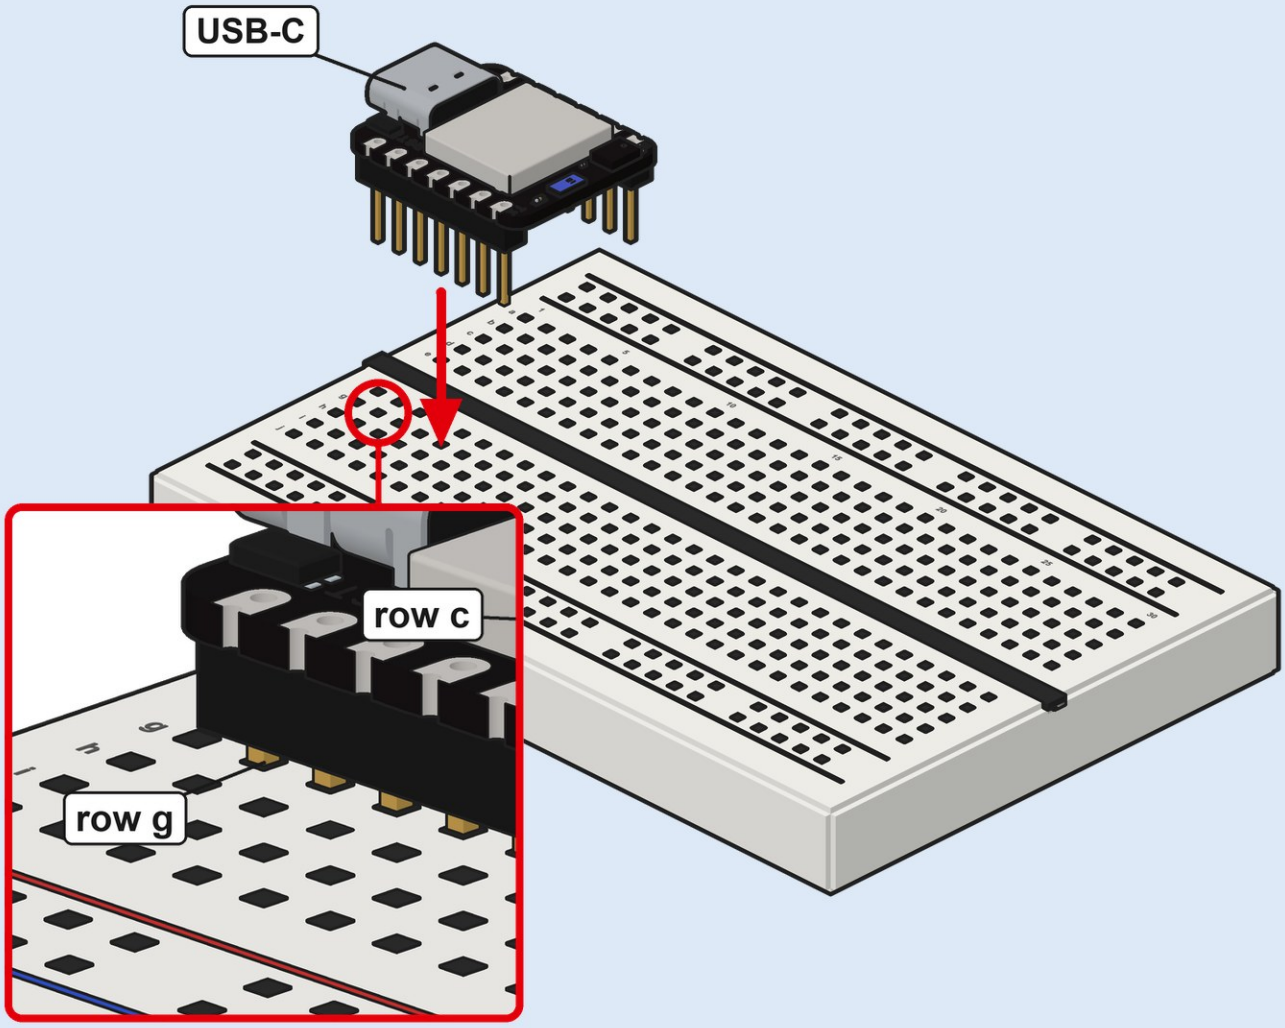


Pins across the middle gap, USB-C out

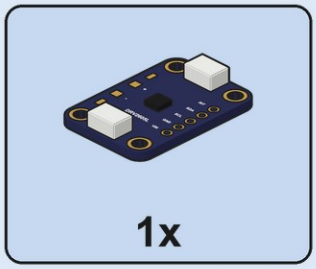

1x


14

3V3 row, never the 5V row

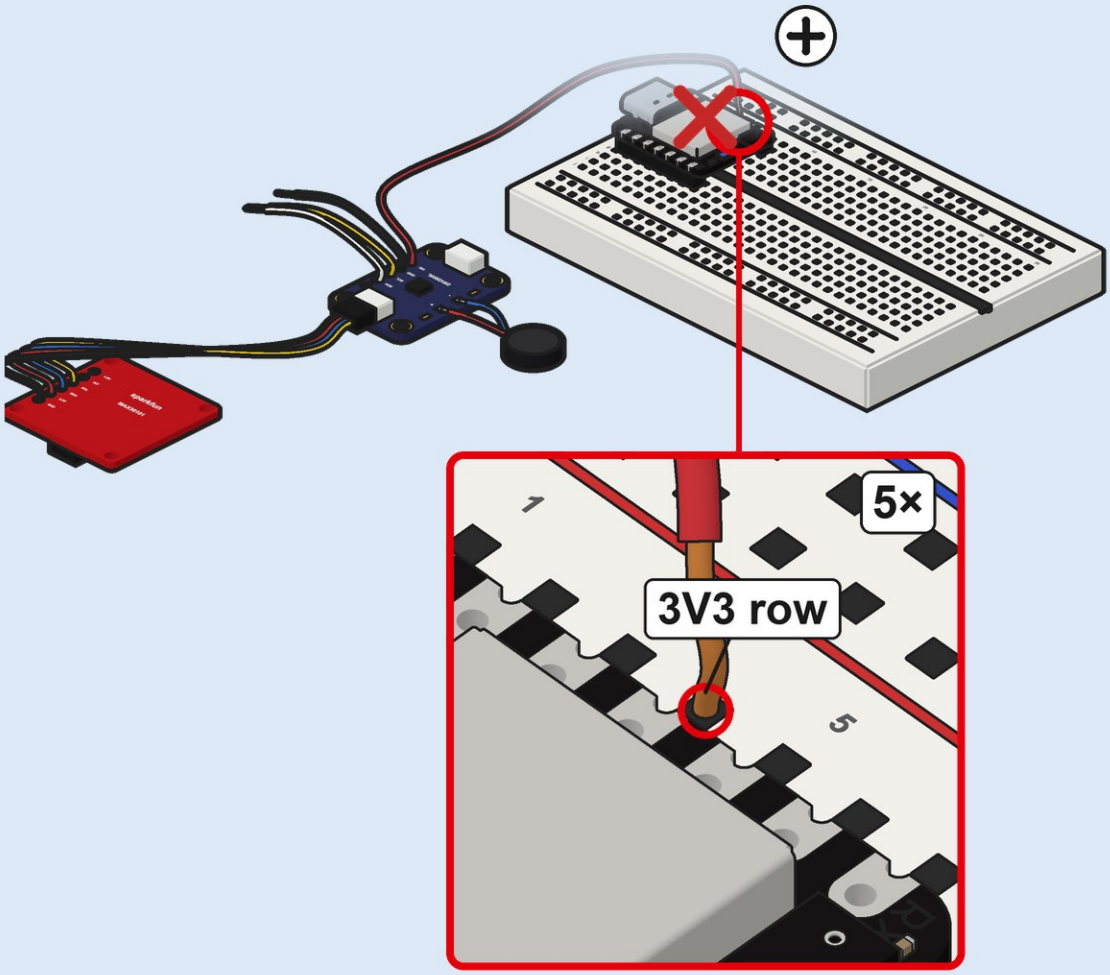


Red into the 3V3 row, not 5V

15

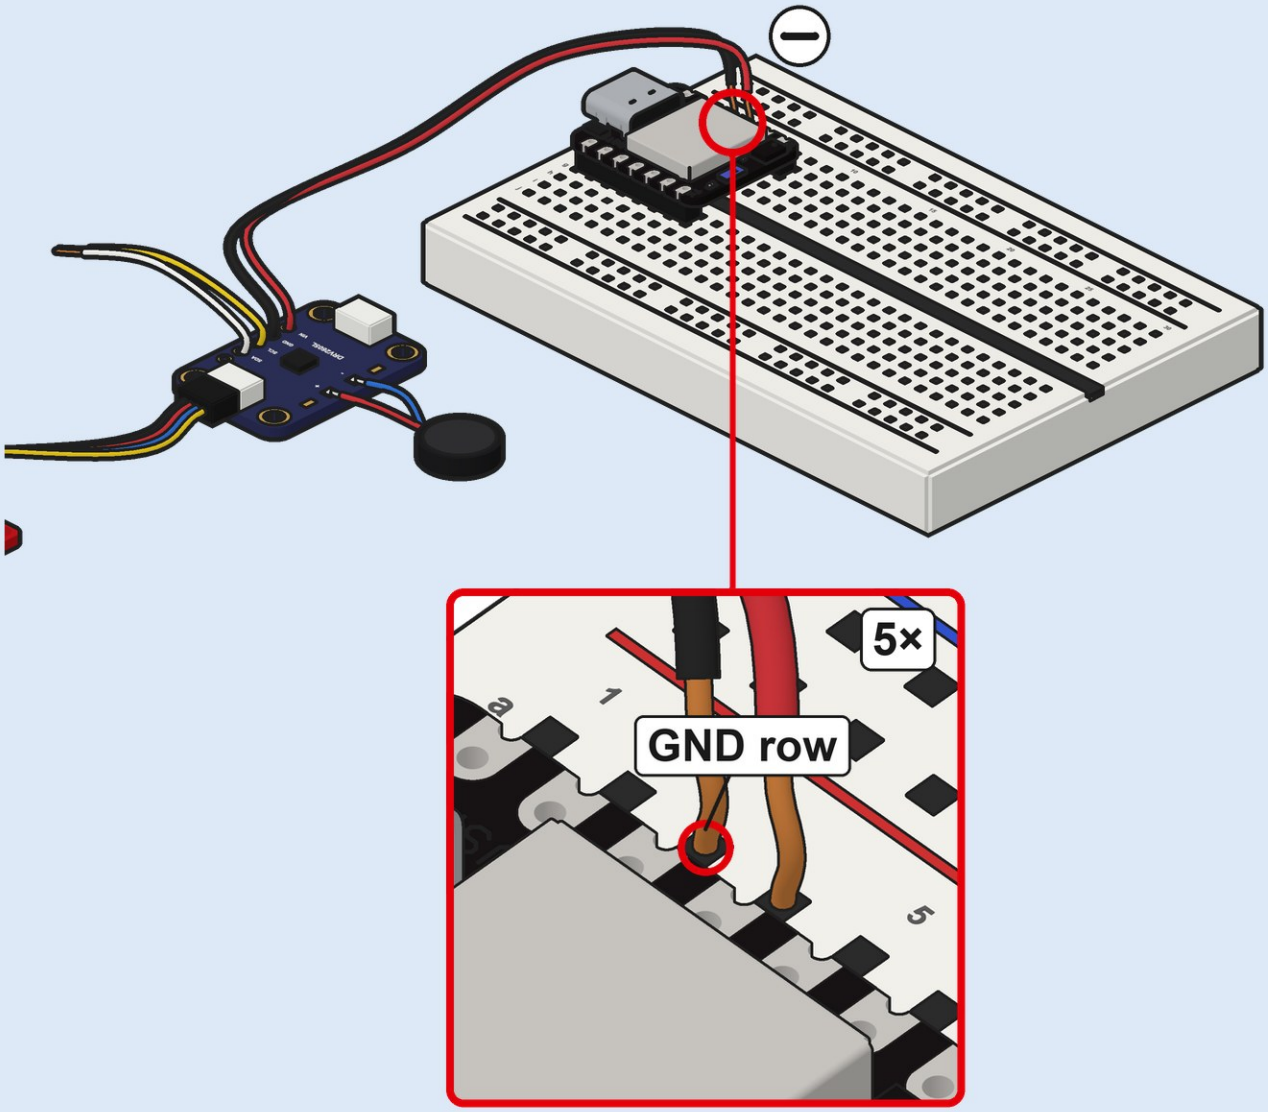


Black into the GND row

16

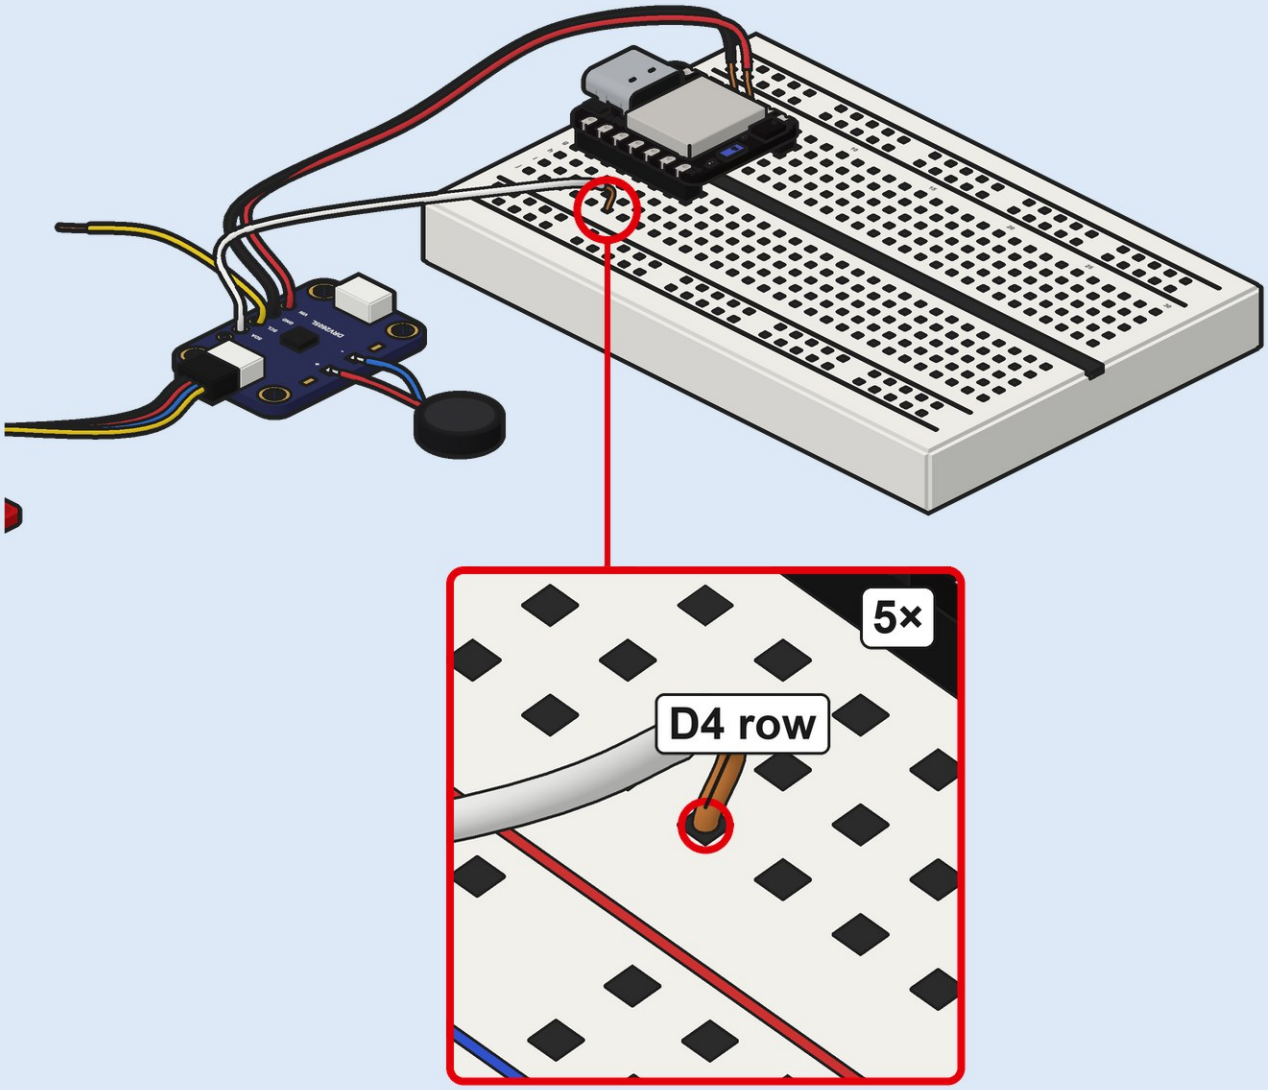

White into the D4 row

17

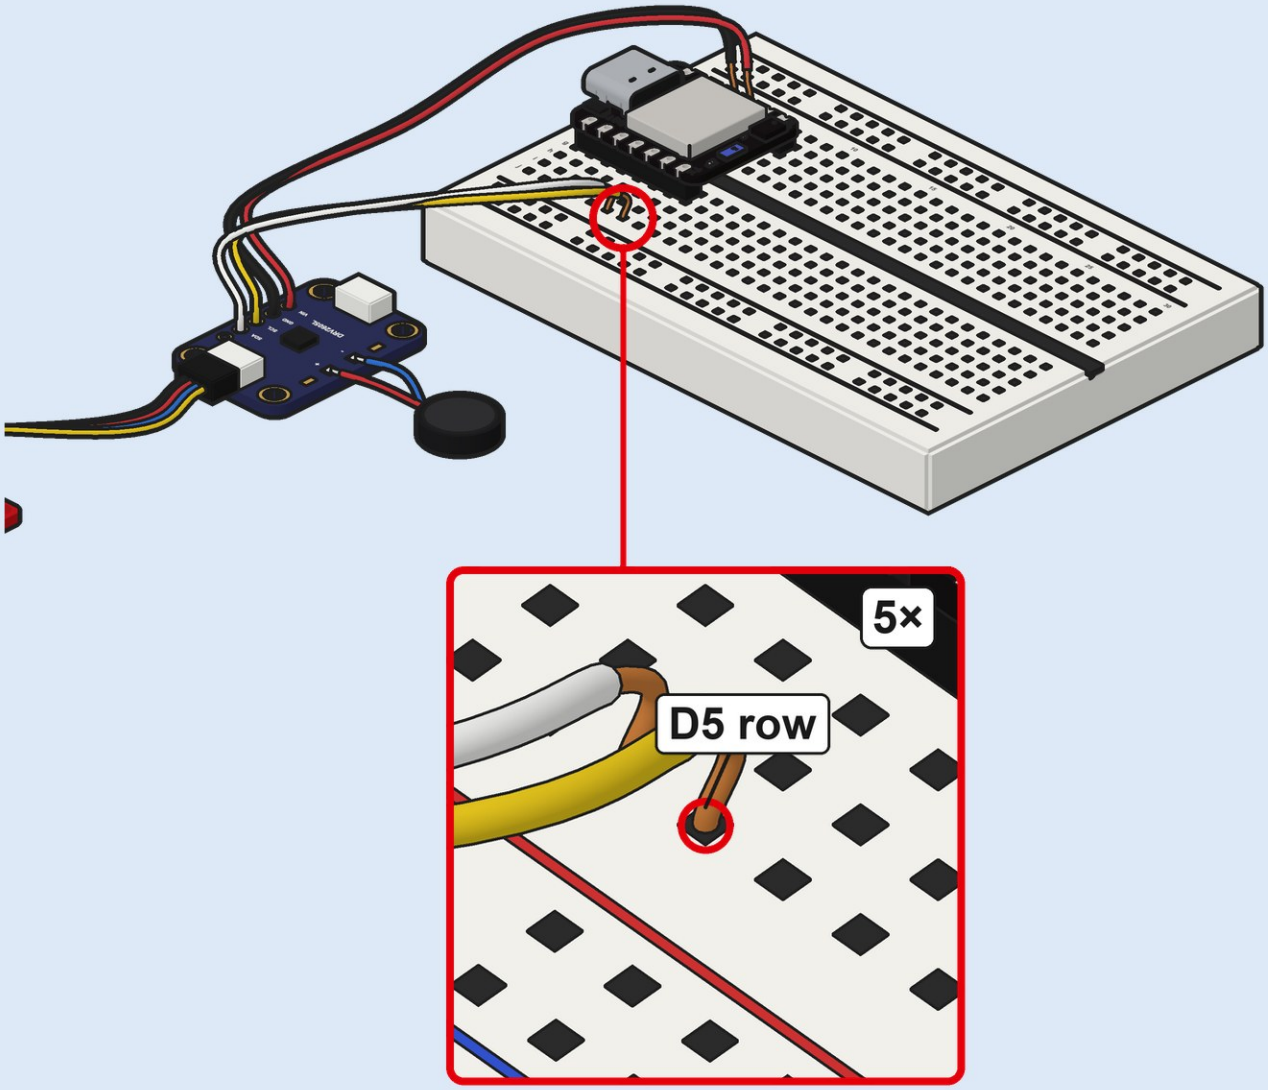

Yellow into the D5 row

18


Stop. Look.


- red in the 3V3 row
- each wire its own row
- ends pushed fully in
- sensor plug clicked in



Red on 3V3, four rows, all in

19

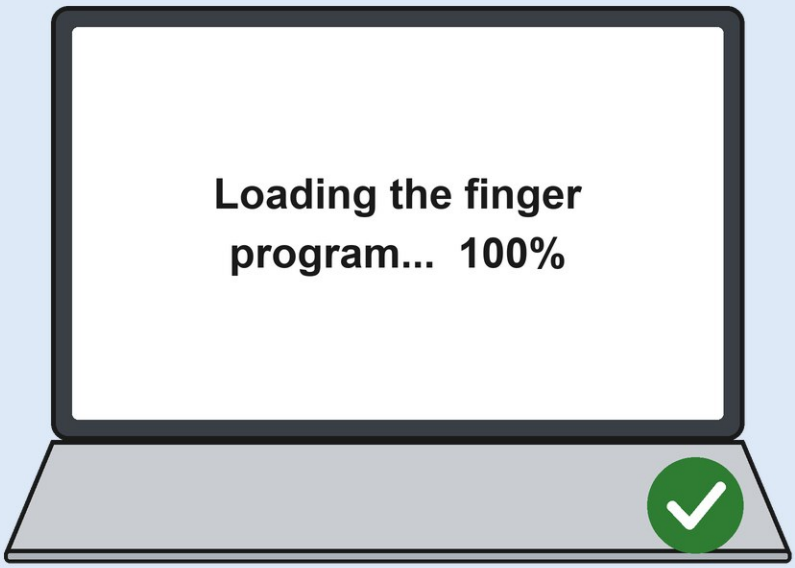


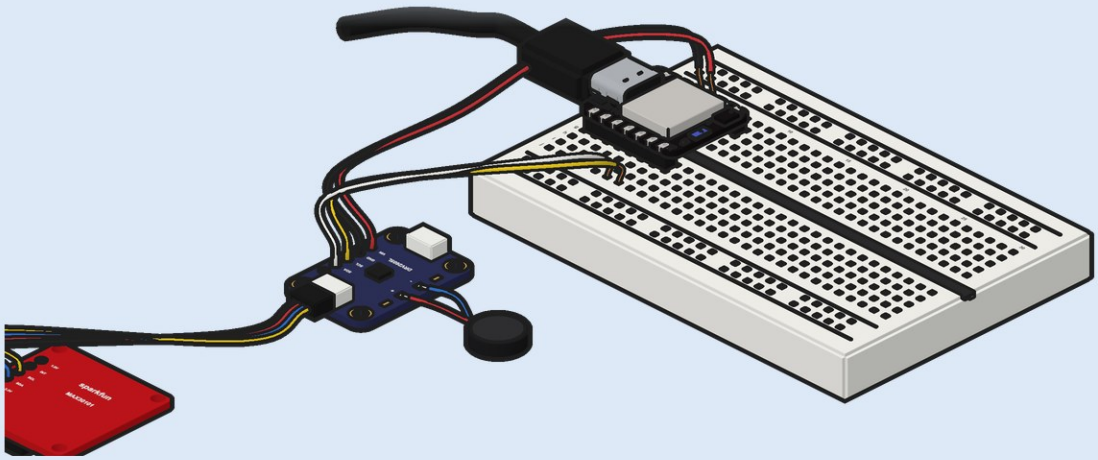

USB-C into the XIAO: Claude loads it


20




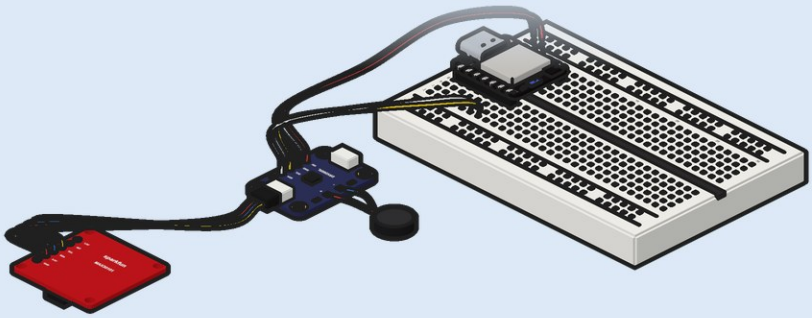

Terminal: python3 hardware/pod-serial-bridge.py


21

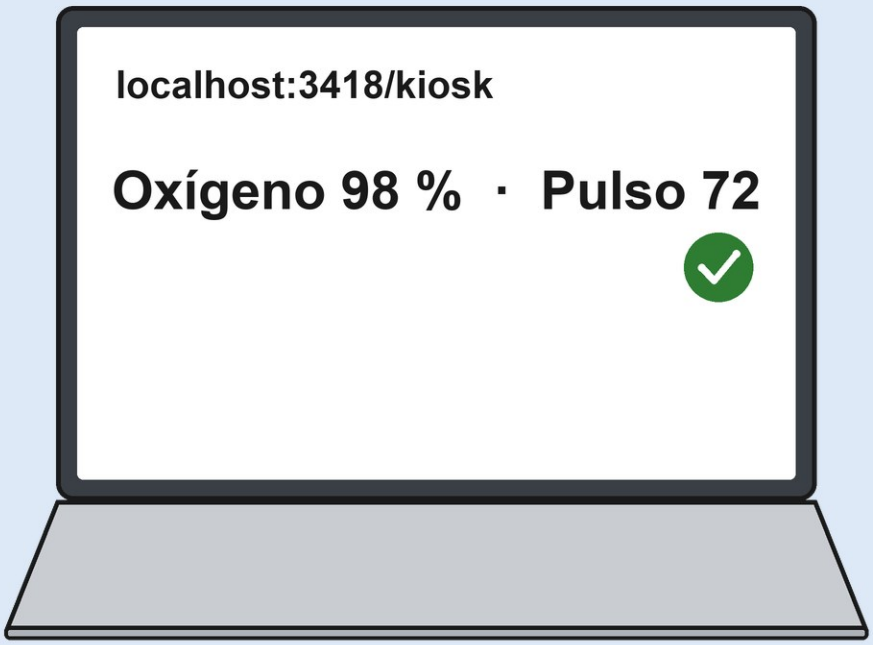


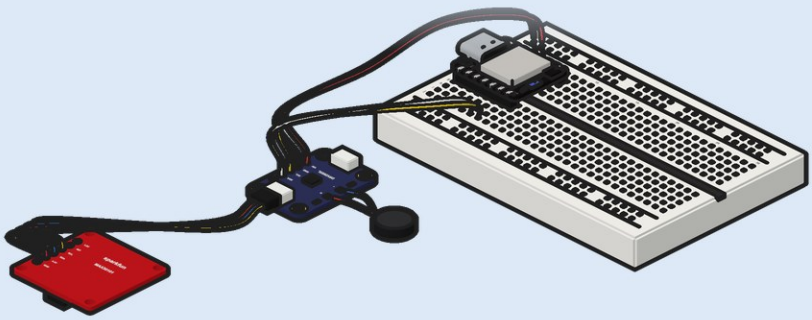

Kiosk shows oxygen and pulse

22

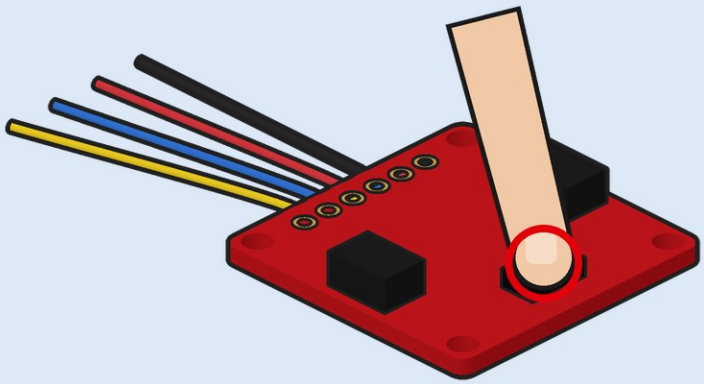


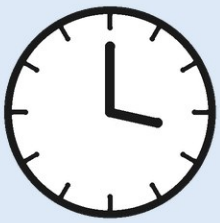

10 s

Fingertip flat on the window, 10 s

23

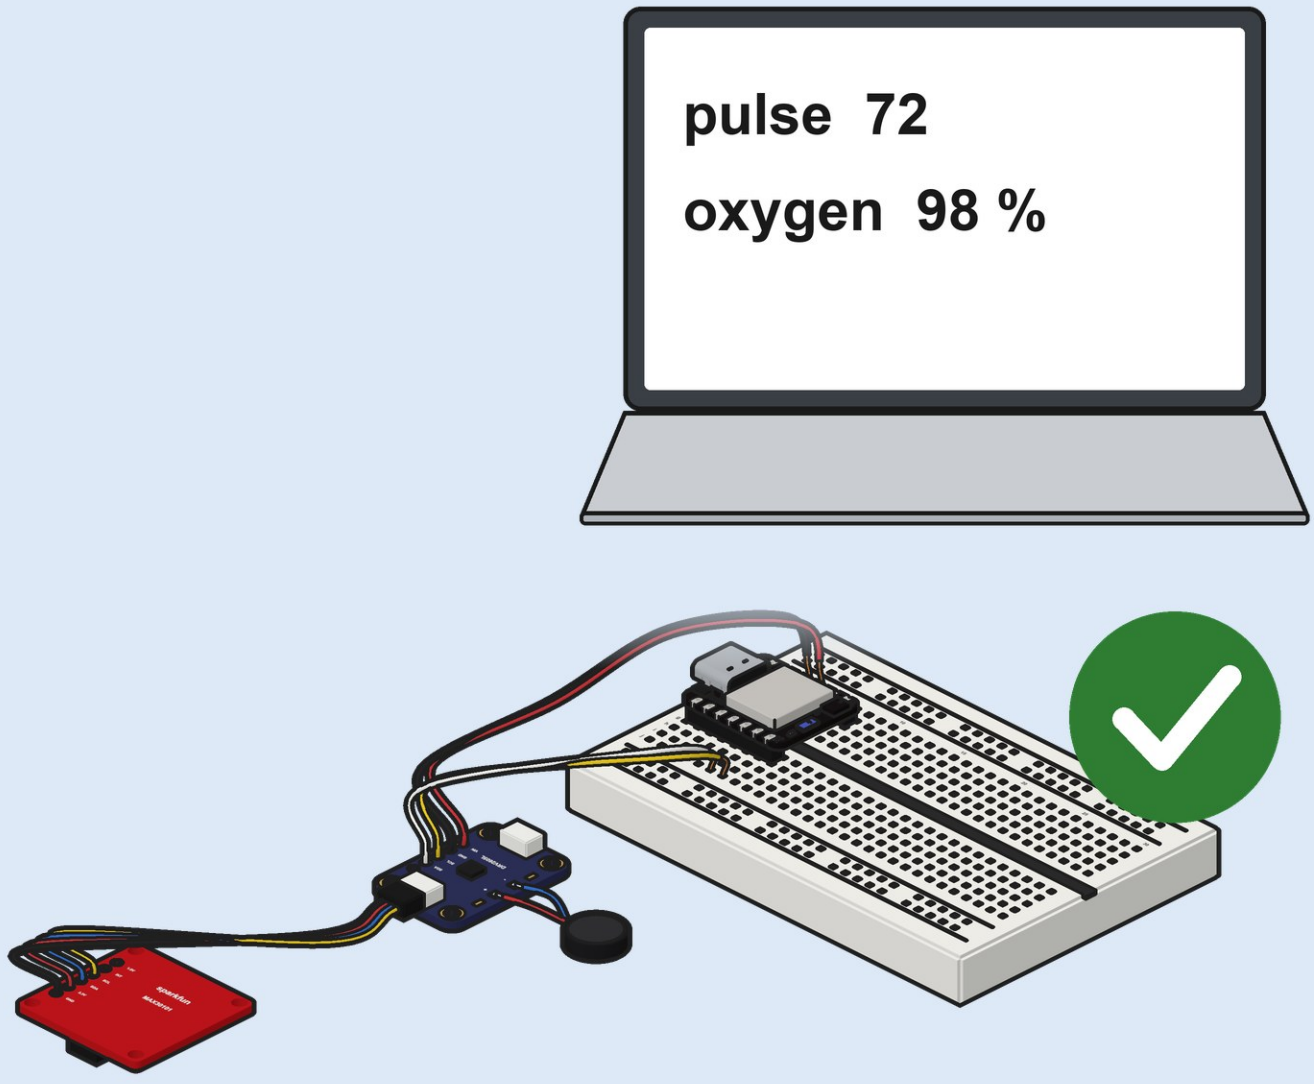

Pod answers with pulse and oxygen