



iOSTools · ฟังก์ชันเสริม

คู่มือ iOSTools

ขึ้นเครื่อง iPhone แบบ “ไม่ต้องล้างเครื่อง”

📌 ใช้เมื่อ ลูกค้าไม่อยากล้างเครื่อง

ขึ้นระบบล็อกได้เลย โดยข้อมูลลูกค้าอยู่ครบ (รูป / แอป / ค่าตั้งค่า)

เว็บไซต์: iostools.cc · ใช้ขั้นตอนเดียวกันทั้งแอดมินและเมสพนักงาน

📌 ใช้ตอนไหน?

✅ ใช้ iOSTools เมื่อ

ลูกค้า

ไม่อยากล้างเครื่อง

— อยากเก็บรูป แอป และข้อมูลไว้ทั้งหมด แต่เราต้องการขึ้น
ล็อกเครื่อง

✗ ไม่ต้องใช้เมื่อ

ลูกค้ายอมให้ล้างเครื่อง — กรณีนี้ขึ้นล็อกตามขั้นตอนปกติ
ของบริษัทได้เลย

ขั้นตอนการใช้งาน (6 ขั้นตอน)

🚫 2 ข้อสำคัญที่ห้ามลืม: ① ปิด Find My iPhone ก่อนเริ่มเสมอ ② หลังจับคู่สำเร็จ ห้ามถอดสาย จนกว่าจะรีเซ็ตาร์กเสร็จ

1

อนุญาตเครื่องในระบบ

Authorize Device

เข้าเว็บ iostools.cc → ใส่ **Serial Number** ของเครื่อง แล้วกด Submit (หรือใช้ License Key ที่มีอยู่)

Step 1 Authorize Device

Log in to the iOSTools admin panel:

1. Serial number authorization: authorize a specific device;
2. License authorization: authorize a certain number of Credits for others without limiting them to a specific device.

1 Authorize Devices by Serial Number

Enter the device serial number and select the authorization mode, then click "Submit" or "Batch Add" to complete the authorization.

2 Generate License Quota


Go to the "Licenses" page, set the license quota and generate the License Key.

ต่อ iPhone เข้าคอมด้วยสาย Data → กด Trust บนเครื่อง

⚠️ ปิด Find My iPhone: ตั้งค่า → [ชื่อ] → Find My → Find My iPhone → ปิด

Step 2 Trust This Computer

Use a data cable to connect your iPhone to the computer, then tap "Trust" on your iPhone to allow **iostools** to access and manage your device data.

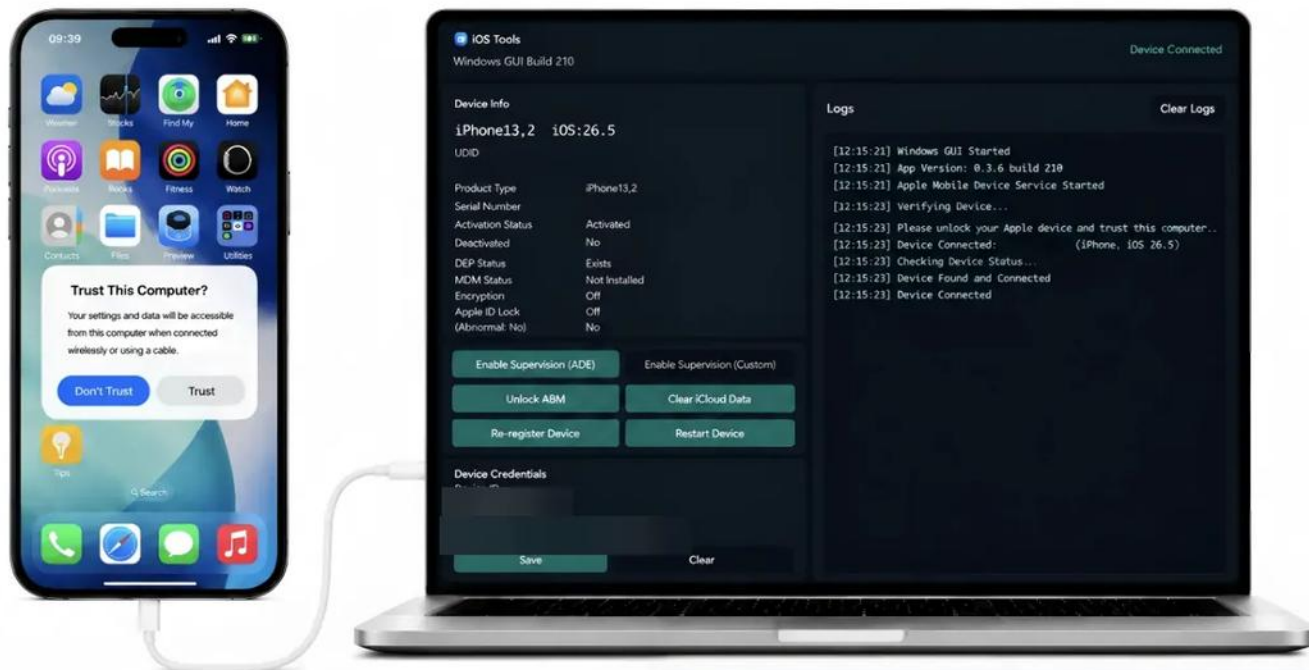

Important Tips


Please make sure the "Find My iPhone" feature is turned off before proceeding, or it may affect the connection or flashing process.

Path: Settings > [Your Name] > Find My > Find My iPhone > Off

ในโปรแกรมกด “Enable Supervision (ADE)” → รอเครื่องดังไปหน้าเลือก Wi-Fi

Step 3 Enable Supervision (ADE)

Click “Enable Supervision (ADE)” and wait for the iPhone to enter the Wi-Fi page.

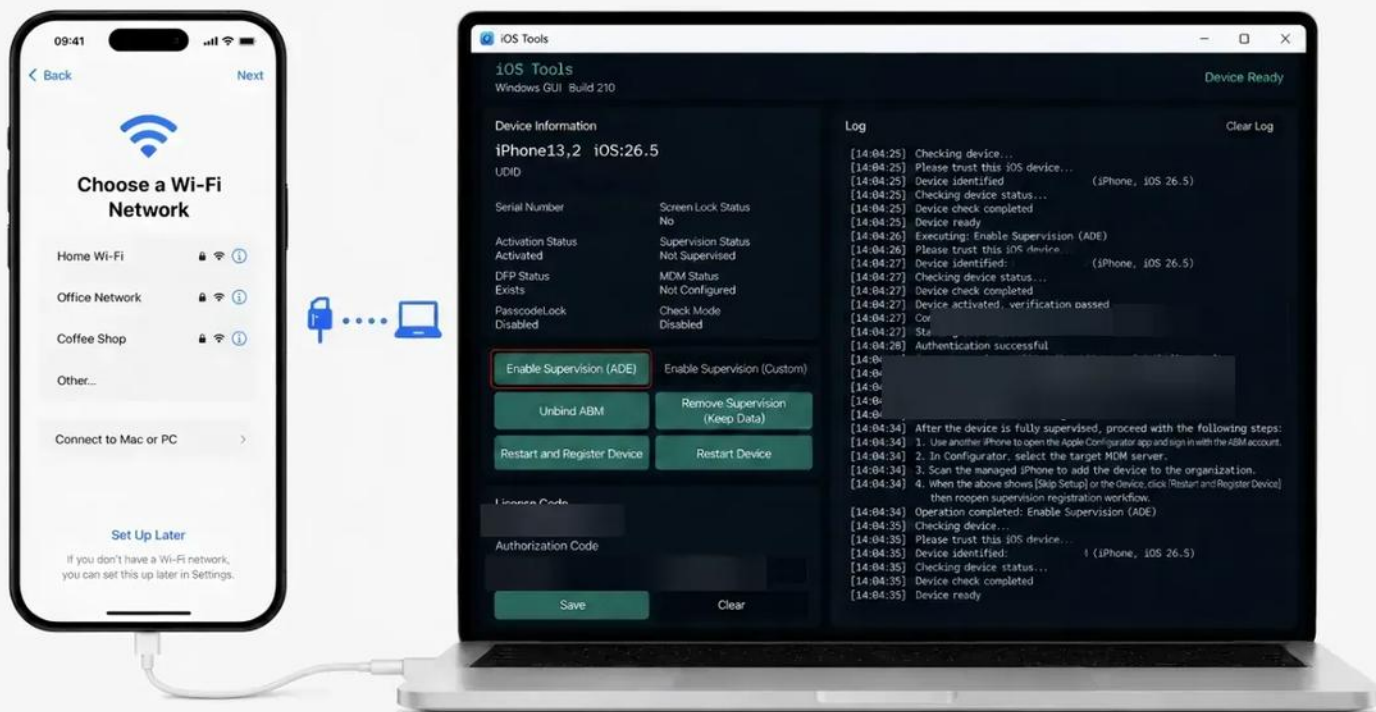

Tip

Click “Enable Supervision (ADE)” and wait for the iPhone to enter the Wi-Fi page.

(If the device does not enter the Wi-Fi page normally, you can skip Wi-Fi to return to the Wi-Fi page.)

4

จับคู่เข้า ABM

Add to Apple Business Manager

เปิด **Apple Configurator** → เมื่อขึ้นโค้ด ให้สแกนจับคู่ → เครื่องจะเข้าระบบอัตโนมัติ

Step 4 Add to Apple Business Manager

Sign in to Apple Configurator with an Apple Business Manager (ABM) account. When the pairing code appears, use your current device to complete the pairing, and the device will be added to Apple Business Manager.


**Important**

Make sure Apple Configurator is signed in with an account that has device management permissions in Apple Business Manager (ABM). Once the pairing is successful, the device will be automatically added to Apple Business Manager.

⚠️ **อย่าถอดสาย!** กด “Restart and Re-enroll Device” → เครื่องจะรีสตาร์ทเองและขึ้นระบบต่อ

Step 5 Restart and Re-enroll Device

Click “Restart and Re-enroll Device”. The device will automatically restart and enter the supervision enrollment process.

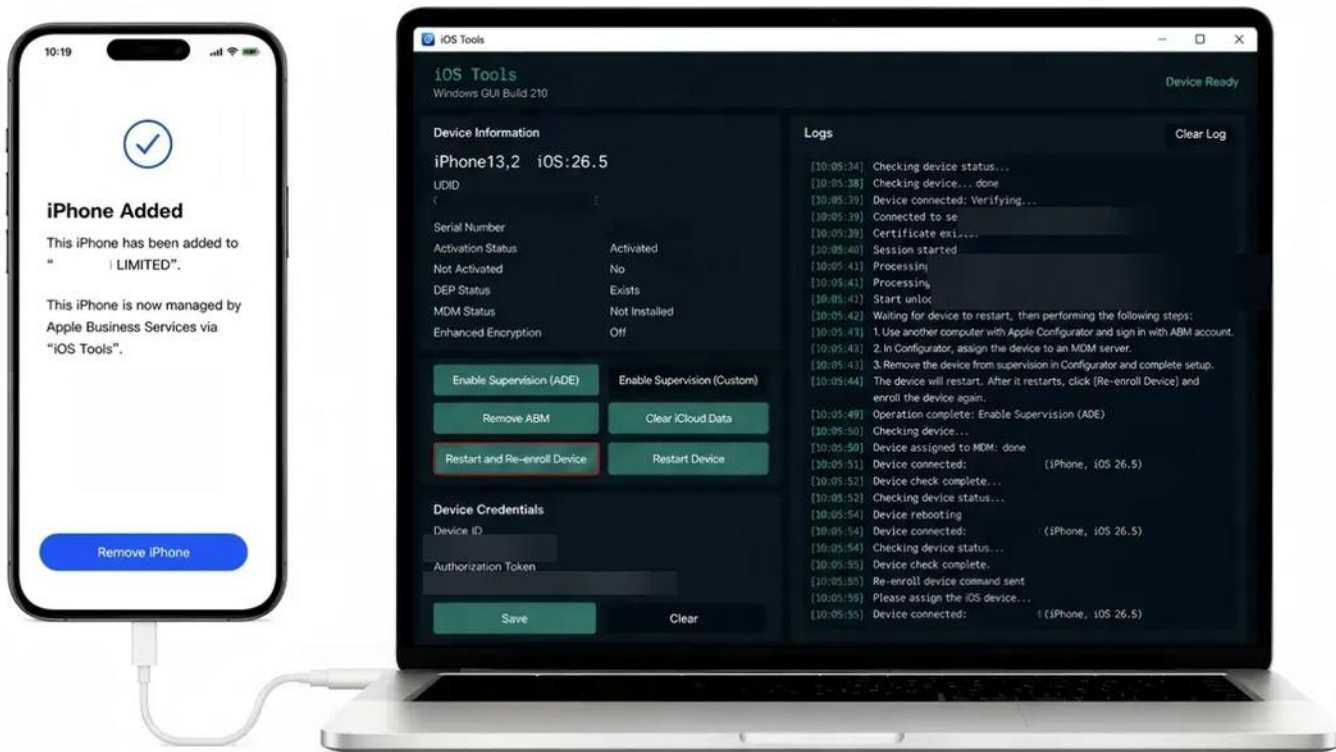

Important Tip

After successful scanning in Apple Configurator, do not unplug the iPhone. Click “Restart and Re-enroll Device” to start the supervision enrollment process.

เครื่องเปิดมาจะมีหน้า **Device Management** → กด “Enroll This iPhone” → ขึ้นล็อกสำเร็จ ✓

Step 6 Activate the Device and Complete Enrollment

During the normal activation process of the iPhone, enroll this iPhone to the MDM management backend.

