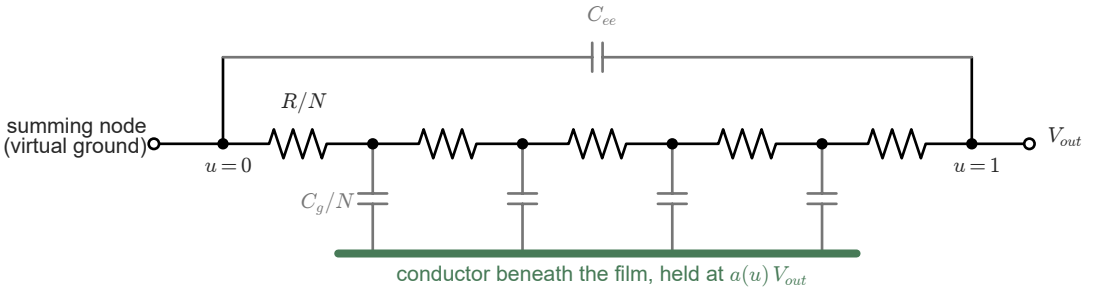
C_{ee}
R/N
summing node
(virtual ground)
$u=0$
$u=1$
V_{out}
C_g/N
conductor beneath the film, held at $a(u)\,V_{out}$