# Allegro® PCB Router Design Language Reference

Product Version 16.0 June 2007

© 1994–2007 Cadence Design Systems, Inc. All rights reserved.

Portions © Apache Software Foundation, Sun Microsystems, Free Software Foundation, Inc., Regents of the University of California, Massachusetts Institute of Technology, University of Florida. Used by permission. Printed in the United States of America.

Cadence Design Systems, Inc. (Cadence), 2655 Seely Ave., San Jose, CA 95134, USA.

Allegro PCB Router contains technology licensed from, and copyrighted by: Apache Software Foundation, 1901 Munsey Drive Forest Hill, MD 21050, USA © 2000-2005, Apache Software Foundation. Sun Microsystems, 4150 Network Circle, Santa Clara, CA 95054 USA © 1994-2007, Sun Microsystems, Inc. Free Software Foundation, 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA © 1989, 1991, Free Software Foundation, Inc. Regents of the University of California, Sun Microsystems, Inc., Scriptics Corporation, © 2001, Regents of the University of California. Daniel Stenberg, © 1996 - 2006, Daniel Stenberg. UMFPACK © 2005, Timothy A. Davis, University of Florida, (davis@cise.ulf.edu). Ken Martin, Will Schroeder, Bill Lorensen © 1993-2002, Ken Martin, Will Schroeder, Bill Lorensen. Massachusetts Institute of Technology, 77 Massachusetts Avenue, Cambridge, Massachusetts, USA © 2003, the Board of Trustees of Massachusetts Institute of Technology. All rights reserved.

**Trademarks**: Trademarks and service marks of Cadence Design Systems, Inc. contained in this document are attributed to Cadence with the appropriate symbol. For queries regarding Cadence's trademarks, contact the corporate legal department at the address shown above or call 800.862.4522.

Open SystemC, Open SystemC Initiative, OSCI, SystemC, and SystemC Initiative are trademarks or registered trademarks of Open SystemC Initiative, Inc. in the United States and other countries and are used with permission.

All other trademarks are the property of their respective holders.

**Restricted Permission:** This publication is protected by copyright law and international treaties and contains trade secrets and proprietary information owned by Cadence. Unauthorized reproduction or distribution of this publication, or any portion of it, may result in civil and criminal penalties. Except as specified in this permission statement, this publication may not be copied, reproduced, modified, published, uploaded, posted, transmitted, or distributed in any way, without prior written permission from Cadence. Unless otherwise agreed to by Cadence in writing, this statement grants Cadence customers permission to print one (1) hard copy of this publication subject to the following conditions:

- 1. The publication may be used only in accordance with a written agreement between Cadence and its customer.
- 2. The publication may not be modified in any way.
- 3. Any authorized copy of the publication or portion thereof must include all original copyright, trademark, and other proprietary notices and this permission statement.
- 4. The information contained in this document cannot be used in the development of like products or software, whether for internal or external use, and shall not be used for the benefit of any other party, whether or not for consideration.

**Patents:** Allegro PCB Router, described in this document, is protected by U.S. Patents 5,481,695; 5,510,998; 5,550,748; 5,590,049; 5,625,565; 5,715,408; 6,516,447; 6,594,799; 6,851,094; 7,017,137; 7,143,341; 7,168,041.

**Disclaimer:** Information in this publication is subject to change without notice and does not represent a commitment on the part of Cadence. Except as may be explicitly set forth in such agreement, Cadence does not make, and expressly disclaims, any representations or warranties as to the completeness, accuracy or usefulness of the information contained in this document. Cadence does not warrant that use of such information will not infringe any third party rights, nor does Cadence assume any liability for damages or costs of any kind that may result from use of such information.

**Restricted Rights:** Use, duplication, or disclosure by the Government is subject to restrictions as set forth in FAR52.227-14 and DFAR252.227-7013 et seq. or its successor.

# Allegro PCB Router Design Language Reference

# **Contents**

About this Manual 5
Welcome
 Audience
Where to Find Information in this Manual
<u>Conventions</u> 5
Special Terms
Where to Find Additional Information
How to Contact Technical Support
<u>1</u>
Design Language Syntax
<u> Overview</u>
Syntax Conventions
Top Level Design File Prototype
Second Level Design File Prototype
Routing and Placement Rule Hierarchies14
Special Differential Pair Rule Considerations
The Syntax
$\circ$
<u> </u>
<u>Sample Files</u> 158
<u> Overview</u>
 Sample Design File
Placement Data
<u>Library Data</u>
Network Data
Prerouted Wiring Data
Sample Design File with High Speed Rules

# Allegro PCB Router Design Language Reference

Placeme	ent Dat	<u>a</u>		 	 		 	 					 	 	 	 	 . ′	183
Library [	<u>Data</u>			 	 		 	 					 	 	 	 	 . ′	184
<u>Network</u>	data			 	 		 						 	 	 	 	 . ′	193
<u>Preroute</u>	<u>ed Wirir</u>	ng Dat	<u>a</u>	 	 		 						 	 	 	 	 . 2	203
Index				 	 		 	 					 	 	 	 	 . 2	206

# **About this Manual**

#### Welcome

The Allegro® PCB Router is a printed circuit board (PCB) design automation tool that runs on UNIX and Windows platforms. You can use the PCB Router to automatically and interactively place and route dense surface-mount (SMD) and through-pin (PTH) designs.

All Series 200 and 600 PCB routers include a graphical user interface (GUI) and the same adaptive, ShapeBased technology. SMD pads, through-pins, wires, and other circuit elements are modeled as basic geometric shapes. Each shape can have rules associated with it, which enforce design constraints such as component spacing and orientation, wire width and clearance, timing, noise, and crosstalk.

The Allegro PCB Router Design Language Reference describes the design language used to define PCB designs within the PCB Router.

#### **Audience**

This manual is written for software programmers who develop software to translate design data between the PCB Router and a PCB layout system.

#### Where to Find Information in this Manual

<u>Chapter 1, "Design Language Syntax,"</u> provides an alphabetical design language reference.

<u>Chapter 2, "Sample Files,"</u> provides samples of PCB Router design files.

#### **Conventions**

The following fonts, characters, and styles have specific meanings throughout this manual.

■ **Boldface** type identifies text that you type exactly as shown, such as PCB Router command names, keywords, and other syntax elements. In the following example, **on**, and **off** are keywords.

#### Allegro PCB Router Design Language Reference

About this Manual

```
(average_pair_length [on | off])
```

Syntax or command examples that appear on a separate line are not bold.

```
(boundary (rect pcb 0 0 9000 4000))
```

The Backus-Naur Form (BNF) metalanguage conventions used to represent the design language syntax is explained at the beginning of Chapter 1.

■ *Italic* type identifies titles of books and emphasizes portions of text.

For installation information, see the *Allegro PCB Router User Guide*.

Italicized words enclosed in angle brackets (<>) are placeholders for keywords, values, filenames, or other information that you must supply.

```
<directory_path_name>::= <id>
```

References to keys on your keyboard and mouse buttons are enclosed in brackets. [Shift] refers to the shift key. The carriage return key is labeled "Enter" on some keyboards and "Return" on others. This manual uses [Enter].

Mouse buttons are identified by two uppercase letters enclosed in brackets.

```
[LB] left button
```

[MB] middle button

[RB] right button

If you have a 2-button mouse, press [ALT] and [RB] simultaneously when you see [MB].

# **Special Terms**

The following special terms are used in this manual.

- The word *enter* used with commands means type the command and press [Enter].
  - "Enter the command grid wire 1" means
    - 1. Type grid wire 1.
    - 2. Press [Enter].
- Click means press and release the left mouse button.
- *Click-middle* means press and release the middle mouse button.
- Click-right means press and release the right mouse button.
- Drag means press and hold the left mouse button while you move the pointer.

#### Allegro PCB Router Design Language Reference

About this Manual

- *Drag* [MB] means press and hold the middle mouse button while you move the pointer.
- Double-click means press and release the left mouse button twice in rapid succession.
- Click twice means click twice at the same location in the PCB Router work area.
- Select means to identity objects (such as wires, nets, or components) for exclusive processing by routing or placement commands. When you select objects before using a command, the PCB Router works only on the objects that are selected.
- Switch refers to one or more characters you can use with an operating system command, such as the command you use to start the PCB Router. A hyphen (-) precedes each command line switch.

#### Where to Find Additional Information

To access additional technical documentation from within the PCB Router's user interface, display the online Help page by choosing  $Help - Product \ Help$  from the main menu.

# **How to Contact Technical Support**

If you have questions about installing or using the PCB Router, contact the Cadence Customer Response Center at:

http://sourcelink.cadence.com/supportcontacts.html

# Allegro PCB Router Design Language Reference About this Manual

# **Design Language Syntax**

#### In this chapter. . .

- Overview on page 10
- Syntax Conventions on page 10
- Top Level Design File Prototype on page 11
- Second Level Design File Prototype on page 12
- Routing and Placement Rule Hierarchies on page 14
- Special Differential Pair Rule Considerations on page 15
- The Syntax on page 16

Design Language Syntax

#### **Overview**

This chapter defines the syntax and semantics to represent a printed circuit board (PCB) in a design file or session file. Design prototypes at the beginning of the chapter show how a design is represented at the highest level. The remainder of the chapter lists descriptors in alphabetical order, fully expands them, and describes their functions.

A design file contains all the data, or a portion of the data with pointers to other files that contain additional data, to define a PCB. The design file is a text file.

# **Syntax Conventions**

Design language syntax consists of keywords and descriptors. Keywords are usually followed by one or more descriptors. Keywords and descriptors are sometimes enclosed within parentheses.

Keywords and parentheses must appear in a design or session file exactly as shown. Descriptors are alphabetic, numeric, or alphanumeric character strings, such as identifiers, values, filenames, or additional syntax. Angle brackets < > enclose all descriptors.

The Backus-Naur Form (BNF) metalanguage conventions are used to expand descriptors, and to show whether they are optional or exclusive and whether they can be repeated.

The ::= symbol indicates that an expanded definition follows. This symbol can be interpreted to mean: *is defined as*.

Square brackets [ ] enclose a set. When a set contains only one keyword or descriptor, the set is optional. For example:

[a]—Can include a.

When a set contains alternatives, the keywords or descriptors are separated by a vertical bar ( | ). For example:

- [a | b | c]—Must include either a or b or c.
- [a  $\mid$  b  $\mid$  c  $\mid$  null]—Can include either a or b or c.

If the word *null* appears within the brackets, the set is optional. Any member of the set other than null can be used. Null is only a symbol to indicate that all the enclosed keywords or descriptors are optional.

Braces { } indicate that the enclosed set can occur one or more times.

Design Language Syntax

## **Top Level Design File Prototype**

The following design file prototype lists the syntax at the highest level in the order each construct must appear in a design file. Five sections that must be included in every design file are pcb, structure, placement, library, and network. All other sections are optional.

File descriptors can substitute for all or part of the structure, placement, library, floor\_plan, or network section descriptors. Each file descriptor must point to a file that only contains descriptors appropriate to that section.

```
<design_descriptor>::=
    (pcb <pcb_id>
      [<parser descriptor>]
      [<capacitance_resolution_descriptor>]
      [<conductance_resolution_descriptor>]
      [<current resolution descriptor>]
      [<inductance_resolution_descriptor>]
      [<resistance_resolution_descriptor>]
      [<resolution descriptor>]
      [<time resolution descriptor>]
      [<voltage_resolution_descriptor>]
      [<unit descriptor>]
      [<structure_descriptor> | <file_descriptor>]
      [<placement descriptor> | <file descriptor>]
      [library_descriptor> | <file_descriptor>]
      [<floor_plan_descriptor> | <file_descriptor>]
      [<part_library_descriptor> | <file_descriptor>]
      [<network_descriptor> | <file_descriptor>]
      [<wiring_descriptor>]
      [<color_descriptor>]
```

## **Second Level Design File Prototype**

The next design file prototype expands the highest level keywords to include descriptors and keywords at the next level below.

```
(pcb <pcb_id>
  (parser
    [(string_quote < quote_char>)]
     (space_in_quoted_tokens [on | off]
    [(host cad < id >)]
    [(host_version < id>)]
    [{(constant < id> < id>)}]
    [(write_resolution {<character> <positive_integer})]
    [(routes include {[testpoint | guides | image conductor]})]
    [(wires_include testpoint)]
    [(case sensitive [on | off])]
    [(rotate_first [on | off])]
  (resolution < dimension_unit> < positive_integer>
  (unit < dimension_unit>
  (structure
    [<unit_descriptor> | <resolution_descriptor> | null]
     {<layer_descriptor>}
    [<layer_noise_weight_descriptor>]
     {<box|>descriptor>}
     {<place_boundary_descriptor>}
    [{<plane descriptor>}]
    [{<region_descriptor>}]
    [{<keepout_descriptor>}]
     <via descriptor>
    [<control_descriptor>]
     <rule_descriptor>
    [<structure_place_rule_descriptor>]
    {<grid_descriptor>}
  (placement
    [<unit_descriptor> | <resolution_descriptor> | null]
    [<place_control_descriptor>]
    {<component_instance>}
  (library
```

Design Language Syntax

```
[<unit_descriptor>]
  {<image_descriptor>}
  [{<jumper_descriptor>}]
  {<padstack_descriptor>}
  [<directory_descriptor>]
  [<extra image directory descriptor>]
  [{<family_family_descriptor>}]
  [{<image_image_descriptor>}]
(floor_plan
  [<unit_descriptor>]
  [<resolution descriptor>]
  [{<cluster_descriptor>}]
  [{<room_descriptor>}]
(part_library
  [{<physical_part_mapping_descriptor>}]
  {<logical_part_mapping_descriptor>}
  [{<logical_part_descriptor>}]
  [<directory_descriptor>]
)
(network
  {<net_descriptor>}
  [{<class_descriptor>}]
  [{<class_class_descriptor>}]
  [{<group_descriptor>}]
  [{<group_set_descriptor>}]
  [{<pair_descriptor>}]
  [{<bundle_descriptor>}]
(wiring
  [<unit_descriptor> | <resolution_descriptor> | null]
  {<wire_descriptor>}
  <test_points_descriptor>]
(colors
  {(color <color_number> <color_name> <R> <G> <B>)}
  {(set_color < color_object> < color_name>)}
  {(set_pattern < pattern_object> < pattern_name>)}
```

)

Design Language Syntax

## **Routing and Placement Rule Hierarchies**

Routing and placement rules can be defined at multiple levels of design specification. When a routing or placement rule is defined for an object at multiple levels, a predefined routing or placement precedence order automatically determines which rule to apply to the object.

The routing rule precedence order is

```
pcb < layer < class < class layer < group_set < group_set layer < net < net layer < group < group layer < fromto < fromto layer < class_class < class_class layer < padstack < region < class region < net region < class_class region
```

A pcb rule (global rule for the PCB design) has the lowest precedence in the hierarchy. A class-to-class region rule has the highest precedence. Rules set at one level of the hierarchy override conflicting rules set at lower levels.

The placement rule precedence order is

```
pcb < image_set < image < component < super cluster < room < room_image_set < family_family < image_image
```

A pcb rule (global rule for the PCB design) has the lowest precedence in the hierarchy. An image-to-image rule has the highest precedence. Rules set at one level of the hierarchy override conflicting rules set at lower levels.

June 2007 14 Product Version 16.0

Design Language Syntax

# **Special Differential Pair Rule Considerations**

Differential pair rules use a special parsing routine that is different from the one used for other PCB Router rules. As rules are parsed, checks are made to see if the rule contains a diff pair keyword such as edge\_primary\_gap to determine which routine to use. As a result, the following considerations must be adhered to when including diff pair rules in a design file.

- Diff pair rules cannot be combined with other rules.
- Only one diff pair rule may be specified at a time.

#### Example 1

If Net A is to have a wire-to-wire clearance rule specified, as well as a diff pair edge\_primary\_gap rule, the two rules would need to be specified as separate constructs as shown.

```
rule net A (clearance 5 (type wire_wire))
rule net A (edge_primary_gap 10)
```

The following rule syntax is illegal.

```
rule net A (clearance 5 (type wire_wire)) (edge_primary_gap 10)
```

#### **Example 2**

If Net B is to have two diff pair rules, once again, each rule needs to be specified as a separate construct as shown.

```
rule net B (edge_primary_gap 10)
rule net B (neck_down_gap 5)
```

The following rule syntax is illegal.

```
rule net B (edge_primary_gap 10) (neck_down_gap 5)
```

Design Language Syntax

# The Syntax

This section lists the complete design language syntax in alphabetical order.

The <ancestor\_file\_descriptor> is included in a session file to identify previous session files on which the current session might depend. The <file\_path\_name> is the directory path and filename for a previous session file. The **comment** block is optional.

```
<aperture_width>
<aperture_width>::= <positive_dimension>
<attach_descriptor>
<attach_descriptor>::=
    (attach_foff on [(use_via <via_id>)]])
```

The **attach** control determines whether a via padstack can be positioned under an SMD pad. The default is **on**, which allows vias under SMD pads. The **via\_at\_smd** rule must also be turned **on** to place vias under SMD pads (the default **via at smd** rule is **off**).

The **use\_via** control specifies which via padstack is used when a via is located under an SMD pad. The **use\_via** control applies only when the **via\_at\_smd** rule is turned on. The <*via\_id>* must be a padstack that is defined in the design file.

```
<br/>
```

Design Language Syntax

Use < boundary\_descriptor> to define the PCB boundary for all features of the printed circuit board and the signal boundary for routing. A boundary is considered as an area object type.

The *<boundary\_descriptor>* must form a closed loop. The boundary automatically closes, if the last *<vertex>* in a *<path\_descriptor>* is not the same as the first *<vertex>*.

Every design must have a PCB boundary that defines the absolute bounding box for storing shapes. For example:

```
(boundary (rect pcb -18900.00 9800.00 -3351.00 17496.00))
```

The PCB boundary must be equal to or larger than the signal boundary. Only the <rectangle\_descriptor> should be used when the pcb reserved layer name is used as the <layer\_id> in the cpath\_descriptor>.

The area inside the signal boundary is available for routing. A signal keepin boundary can be defined as follows:

```
(boundary (path signal 0.00 -18400.00 10300.00 -3851.00 10300.00 -3851.00 16996.00 -7851.00 16996.00 -7851.00 16317.00 -18400.00 16317.00 -18400.00 10300.00))
```

When < rectangle\_descriptor > is used to describe a boundary, it is not considered a filled shape.

A signal type of boundary cannot contain arcs.

Design Language Syntax

The *<burble descriptor>* defines named bundled nets. Bundled nets are two or more nets that you want to route side by side with the same topology for each connection.

Use **nets** to identify the nets you want included in a bundle.

Use **gap** to control the minimum distance (<positive\_dimension>) allowed between each routed wire in the bundle. If **gap** is not included in a <positive\_descriptor>, the wire-to-wire clearance rule is used. To reset a specified **gap** to the default wire-to-wire clearance, use -1 for the **gap** value. The **gap** can apply to one or more layers, and multiple gaps can be specified.

Symbol	Capacitance Unit
farad	farad
mfarad	millifarad
ufarad	microfarad
nfarad	nanofarad
pfarad	picofarad
ffarad	femtofarad

The default capacitance unit is **nfarad** with a *<positive\_integer>* equal to 1000.

Design Language Syntax

```
<character>
    <character>::= [<letter> | <digit> | <special_character>]
<checking_trim_descriptor>
    <checking_trim_descriptor>::=
    (checking_trim_by_pin [on | off])
The checking trim by pin control defaults to on. When a shape terminates in a pin (or
SMD), the checker automatically trims the end point to the edge of the pin. If
checking_trim_by_pin is off, the automatic trimming of shapes is not performed.
<circle_descriptor>
    <circle_descriptor>::=
    (circle <layer_id> <a href="mailto:circle"><diameter> [<vertex>])</a>
The default < vertex> is the PCB origin.
<circuit_descriptor>
    <circuit_descriptor>::= (circuit {<circuit_descriptors>})
<circuit_descriptors>
    <circuit descriptors>::=
    [<delay descriptor>|
    <total delay descriptor> |
    <length_descriptor> |
    <total length descriptor> |
    <match fromto length descriptor>
    <match_fromto_delay_descriptor> |
    <match group length descriptor>
    <match group delay descriptor>
    <match_net_length_descriptor> |
    <match net delay descriptor>
    <relative delay descriptor> |
    <relative group delay descriptor>
    <relative group length descriptor> |
    <relative length descriptor>
```

<sample\_window\_descriptor> |

Design Language Syntax

```
<switch window descriptor> |
<shield descriptor> |
<max restricted layer length descriptor> |
(priority <positive_integer>) |
(use_layer {<layer name>}) |
(use_layerset {<layerset name>}) |
(use_via {[<padstack_id> | (use_array < via array template id> [<row> <column>])]})]
```

The **priority** values range from 1 to 255. If you specify **-1**, priority is set to the default value of 10. A value of 0 is invalid. The highest priority is 255. Higher priority nets route first. Automatic placement also uses net priorities to determine the order in which components are placed and the proximity among components that share a priority net. Components with higher priority nets tend to be placed earlier and closer together during automatic placement.

If a **use\_layer** rule applies to a net or class of nets, the net or class of nets are routed on the assigned layers even if the assigned layers are unselected for routing.

The **use\_via** rule can include a via array specification, where <*row>* and <*column>* define the size of the array. (This requires **microvia on** in the <<u><*control\_descriptor>*</u>.) The dimensions can be interchanged based on routing topology. In the following example, the via array identified as via2a is used instead of the default via array in nets A and B. In net B, the array size is specified as 1x4.

```
(net A
     (use_via (use_array via2a))
)
(net B
     (use_via (use_array via2a 1 4))
)
```

The *<circuit\_descriptor>* is closely related to rule setting. Design rules, which can be set at multiple levels of a design, have a precedence hierarchy. For the order of routing rule precedence, see the Routing and Placement Rule Hierarchy section at the beginning of this manual.

Example of circuit syntax:

```
(network
    (class c1 sig1 sig2 sig3 (circuit (match_net_length on (tolerance 500))))
```

Design Language Syntax

#### Manhattan lengths:

```
sig1 - 1500 mils
sig2 - 1750 mils
sig3 - 1600 mils
```

All nets in class c1 are matched to the routed length of sig2 within a tolerance of plus or minus 500 mils.

Nets sig10, sig11 and sig12 have a class\_layer width rule of 0.020 on layers S1 and S4, and a class\_layer width rule of 0.015 on layers S2 and S3.

```
<class_class_descriptor>
<class_class_descriptor>::=
(class_class
(class_class
(classes <class_id> {<class_id>})
{[<rule descriptor> | <layer rule descriptor>]}
)
```

A class pair is formed for each possible combination of two class id's. The <class\_class\_descriptor> defines clearance rules, parallel noise and segment rules, and tandem noise and segment rules between wires in different classes and between wires in the same class. For example, a design file could include the following:

Design Language Syntax

```
(network
    (class TTL tnet1 tnet2)
    (class ECL enet1 enet2)
    (class CLKS clk1 clk2 clk3)
    (class INTS in0 in1 in2 in3)
    (class SENSE sx sy sz)
    (class_class (classes TTL ECL) (rule
    (tandem_segment gap .01) (limit .1))))
    (class_class (classes CLKS INTS TTL SENSE)
        (rule (parallel_segment (gap .02)(limit .2))))
    (class_class (classes CLKS CLKS) (rule
        (parallel_segment (gap .015) (limit .15))))
```

In this sample design file:

- Five classes are defined: TTL, ECL, CLKS, INTS, and SENSE. A class\_class tandem rule is defined between the TTL wires and the ECL wires.
- A class\_class parallel rule is applied between the wires of six paired classes CLKS-to-INTS, CLKS-to-TTL, CLKS-to-SENSE, INTS-to-TTL, INTS-to-SENSE, and TTL-to-SENSE.
- A class\_class parallel rule is applied between wires that belong to class CLKS. The rules applied with this construct apply only between wires of the CLKS class.

A class\_class rule has higher precedence than a fromto rule. For routing rule precedence order, see the Routing and Placement Rule Hierarchies section at the beginning of this manual.

All via-to-object and wire-to-object clearance rules can be specified in *<class\_class\_descriptor>*.


When two or more classes are included in a *<classes\_descriptor>*, each class is paired with every other class but not paired with itself. For example: (classes A B C) pairs AB, AC, and BC.

```
<class_id>
<class_id>::= <id>
```

Design Language Syntax

The **smd\_via\_same\_net** clearance is the minimum clearance from the SMD pad to the first via, as shown in the following figure.


#### Smd\_via\_same\_net Clearance



The **via\_via\_same\_net** clearance is the minimum clearance between any two vias on the same net and the same layer.

Design Language Syntax


#### Via\_via\_same\_net Clearance

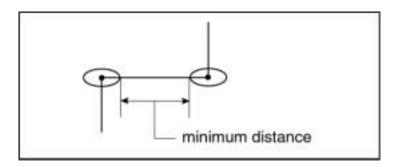

The **buried\_via\_gap** is the gap between coincident vias for hybrid circuits. The following rules apply:


- A **buried\_via\_gap** can be defined in the design file by using the clearance rule. You can also define **buried\_via\_gap** in a do file, from the command line, and by using the GUI.
- A **buried\_via\_gap** can prevent coincident vias. If **buried\_via\_gap** is not specified (or is a negative number), coincident vias can occur as shown in the following figure.

#### Specifying a Buried\_via\_gap Prevents Coincidient Vias

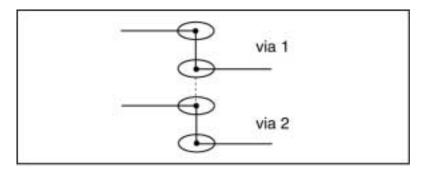

A buried\_via\_gap has no effect on vias that have shapes on the same layer. The via\_via clearance rule is used instead.


#### Via\_via clearance Applies to Via Shapes on the Same Layer

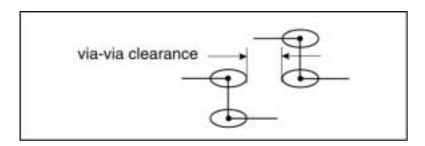

Design Language Syntax

If a **buried\_via\_gap** is used, this value defines the clearance between buried vias that do not share a common layer, as shown in the following figure. The **layer\_depth** option specifies the number of layers over which the clearance rule applies. See also the **bbv\_ctr2ctr** setting in the <<u>control\_descriptor</u>>.

#### Buried\_via\_gap Defines Clearance

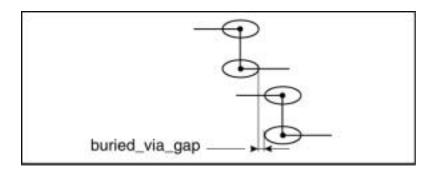

The **antipad\_gap** clearance defines the gap between antipads for power nets to power nets and power nets to signal nets. Signal nets to signal nets are not checked for antipad gap clearance. The following apply:


- An antipad\_gap can be defined in the <<u>rule descriptor></u> within the <<u>structure descriptor></u> of the design file. The user can also define antipad\_gap in a do file, from the command line, and by using the GUI.
- If the antipad\_gap is not explicitly defined, there is no restriction on power layers and the via\_via (or pin\_via) rule checking does not involve the power layer and antipad sizes.
- If the antipad\_gap is greater than or equal to 0, the value defines the clearance between antipads. The router considers the antipad shapes as circles or squares and symmetrical around the padstack origin.
- If the antipad\_gap is not specified or is less than 0, no restriction is assumed.

The following example shows how to specify **antipad\_gap**:

```
(pcb...
  (structure...
            (rule (clearance 0.2 (type antipad_gap)))
...))
```


The **pad\_to\_turn\_gap** clearance is the minimum clearance from any through-pin to the first 90 degree turn in the wire.

#### Pad\_to\_turn\_gap Clearance

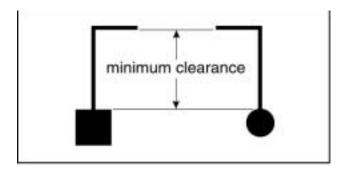

The **smd\_to\_turn\_gap** clearance is defined as the minimum clearance from any SMD pad to the first 90 degree turn in the wire.

#### Smd\_to\_turn\_gap Clearance

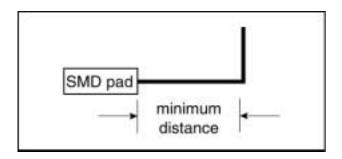

```
<cluster_descriptor>
```

The crule\_descriptor> applies only to type super or type super piggyback clusters. The default cluster type is plan.

```
<cluster_id>
<cluster_id>::= <id>
```

Design Language Syntax

```
<color_descriptor>
    <color_descriptor>::=
    (colors
       {(color <color number> <color name> <R> <G> <B>)}
       {(set_color < color_object> < color_name>)}
       {(set_pattern < pattern object> < pattern name>)}
\langle R \rangle, \langle G \rangle, \langle B \rangle::= \langle positive integer \rangle in the range from 0 to 255.
Color definitions can be overwritten if more than one color has the same ID.
<color name>
    <color name>::= <id>
<color_number>
    <color_number>::= <positive_integer>
The range for <color_number> is from 0 to 99. The application default range is from 0 to 15.
<color_object>
    <color_object >::=
       [antipad | background | component back |
       component front | error balance | error clearance |
       error crosstalk | error length | error placement |
      fix component | grid major | grid major place |
       grid major route | grid place | grid via |
       grid wiring | guide | highlight | histogram grid |
       histogram peak | histogram segment | iroute target |
       power < layer number > | pin | protect | routability max | routability min |
       ruler | select | signal < layer_number > | site | testpoint | viakeepouts | vias |
The default colors are
    (colors
       (color 0 background 170 210 255)
       (color 1 blue
                       0 0 255)
       (color 2 green
                        0 255 0)
       (color 3 violet 175 0 175)
```

# SPECCTRA® Design Language Reference Design Language Syntax

(color 4 red 255 0 0) (color 5 magenta 125 0 125) (color 6 white 255 255 255) (color 7 lgtgray 180 180 180) (color 8 drkgray 120 120 120) (color 9 drkblue 0 0 170) (color 10 drkgreen 0 170 0) (color 11 coral 255 127 0) (color 12 drkred 170 0 0) (color 13 lgtmgnta 255 0 255) (color 14 yellow 255 255 0) (color 15 black 0 0 0) (set_color background black) (set_color vias drkgreen) (set_color viakeepouts drkgreen (set_color pin darkgray) (set_color antipad white) (set_color histogram grid blue) (set_color histogram grid blue) (set_color grid wiring white) (set_color grid major lightmagenta) (set_color grid major route drkgreen) (set_color error clearance yellow) (set_color error balance white (set_color error balance white) (set_color routability max coral) (set_color riuler drkgray) (set_color route drkgreen) (set_color routability max coral) (set_color router drkgray) (set_color routability max coral) (set_color router drkgray) (set_color router drkgray) (set_color routability max coral) (set_color router drkgray) (set_color fix component front red)
(set_color component front red) (set_color fix component lgtmgnta (set_color signal 1 red)

Design Language Syntax

```
(set_color signal 2 drkblue)
(set_color signal 3 drkred)
(set color signal 4 coral)
(set_color signal 5 violet)
(set_color signal 6 drkgreen)
(set color signal 7 lgtmgnta)
(set_color signal 8 magenta)
(set color signal 9 red)
(set color signal 10 drkblue)
(set_color signal 11 drkred)
(set_color signal 12 coral)
(set color signal 13 violet)
(set_color signal 14 drkgreen)
(set_color signal 15 blue)
(set_color component back blue)
(set_color power 1 drkred)
(set color power 2 violet)
(set color power 3 coral)
(set color power 4 drkgreen)
(set_color power 5 drkblue)
(set color power 6 red)
(set_color power 7 magenta)
(set_color power 8 lgtmgnta)
(set_color power 9 drkred)
(set_color power 10 violet )
(set_color power 11 coral)
(set color power 12 drkgreen)
(set_color power 13 drkblue)
(set_color power 14 red)
(set color power 15 magenta)
```

)

Design Language Syntax

Signal and power layer numbers are determined by the order in which they are defined in the design file. For example:

Layer	Color	Layer Number
s1	red	1 (signal)
s2	drkblue	2 (signal)
p1	drkgreen	1 (power)
s3	drkred	3 (signal)
s4	coral	4 (signal)
p2	violet	2 (power)
s5	violet	5 (signal)
s6	blue	6 (signal)

If the number of power or signal layers exceeds 15, the color is determined by the formula:

SMD pins use the color of the layer (top or bottom) on which they are mounted.

The bottom signal layer is always the signal 15 color.

#### <column>

```
<column>::= <positive_integer>
```

#### <command>

<command>::=

Any command.

#### <command\_group>

```
<command_group>::=
<command> [{<continuation character> <command>}]
```

Design Language Syntax

The **comp\_order** keyword orders nets or classes of nets, by using only component reference designators, when exact pin numbers are not known. For example

```
(net sig1 (comp_order U1 U2 U3))
```

The placer finds the shortest connection from U1 to U2 and from U2 to U3. If more than one pin from a component is used in the net, they are joined by using the shortest path. For example, the result could be U1-12 to U1-15, to U2-3 to U2-5 to U2-7, and U2-7 to U3-8.

The *<placement\_id>* can contain wildcards to specify one or more component reference designators. The placer finds all components that match the wildcard pattern, but ignores the components that do not have pins on the specified nets.

See also <topology descriptor>.

Design Language Syntax

If you add or change the <physical\_property\_descriptor> or <electrical\_value\_descriptor> during a session, the session file or the placement file reflects the change. If you add or change the property\_value\_descriptor>, the session or placement file does not reflect the change.

```
<component_status_descriptor>
<component_status_descriptor>::= (status [added | deleted | substituted])
```

This option appears in session file placement references and in the placement descriptor> created by the write placement command. The added status means the component is not specified in the design file and was added during the session. The deleted status means the component is specified in the design file, but was deleted during the session. The substituted status means the component is specified in the design file and the component's image was substituted during the session.

Symbol	Conductance Unit
kg	kilomho
g	mho
mg	millimho

Design Language Syntax

The default conductance unit symbol is **kg** with a positive integer of 1000. (mho is reciprocal ohm)

The **conductor** keyword defines wires embedded within an image. A **route** type conductor cannot be altered, although the router can complete a connection to this conductor type. The default **type** is **route**.

The **via** keyword defines vias embedded within an image. A **route** type conductor cannot be altered, although the router can complete a connection to this conductor type.

The default **type** is **route**. Conductors and vias are written to a routes or wires file only if **routes\_include** is set to **image\_conductor** (see <<u>parser\_descriptor></u> for details).

For example:

Design Language Syntax

```
<conflict_descriptor>
    <conflict_descriptor>::=
    ([cross | near] < layer_id > {< vertex > })
<conflict_file_descriptor>
    <conflict_file_descriptor>::=
    (conflict < resolution descriptor> { < conflict descriptor>})
<continuation character>
    <continuation_character>::= [; | \n]
<control descriptor>
    <control_descriptor>::=
    (control
      [<via_at_smd_descriptor>]
      [<off grid descriptor>]
      [<route to fanout only descriptor>]
      [<force_to_terminal_point_descriptor>]
      [<same net checking descriptor>]
      [<checking trim descriptor>]
      [<noise_calculation_descriptor>]
      [<noise accumulation descriptor>]
      [(include_pins_in_crosstalk [on | off])]
      [(bbv_ctr2ctr [on | off])]
      [(average_pair_length [on | off])]
      [(crosstalk model [cct1 | cct1a])]
      [(roundoff_rotation [on | off])]
      [(microvia [on | off])]
      [(reroute order viols [on | off])]
    ) [(via_pin_length [on | off])]
      [((pindelay_prop_velocity_factor factor)]
      [(viadelay_prop_velocity_factor factor)]
```

When **include\_pins\_in\_crosstalk** is **on**, pin shapes are included in the measurements for calculations that use parallel and tandem noise rules. The default is **off**.

Design Language Syntax

When **bbv\_ctr2ctr** is **on**, the minimum distance (gap) allowed between buried vias is measured from via center to via center. The default is **off**, meaning gap is measured from via edge to via edge. See also **buried\_via\_gap** in <u><clearance\_type></u>.

When **average\_pair\_length** is **on**, rule checking that involves wire length uses the average length of the wires in a pair. When **average\_pair\_length** is **off**, the rule checker uses the actual length of each wire. The default is **on**.

The **cct1** crosstalk model uses parallel and tandem noise rules to control routing and report cumulative noise violations on routed nets. The **cct1a** crosstalk model takes into account saturation noise rules. The default is **cct1**.

The **roundoff\_rotation** control prevents design rule checking discrepancies with the PCB Editor or other layout systems that roundoff rotation calculations. When **on**, pad rotation values are rounded off. When **off**, pad rotation values are truncated. The default is **off**.

When **microvia** is **on**, features licensed under the RouteMVIA license are enabled. See the **set microvia** command in the online help for a list of features.

When **reroute\_order\_viols** is **on**, the autorouter reroutes connections with order violations. When **off** (the default), connections with order violations can exist at the end of routing passes. You can report and highlight order violations.

When **via\_pin\_length** is **on**, the length of vias and through hole pins between connection layers are included in DRC calculations for the DIFFERENTIAL PAIR PHASE TOLERANCE, PROPAGATION DELAY, and RELATIVE PROPAGATION DELAY properties. Via length comprises the thickness through the board from the placed symbol layer where a net enters a padstack, which may be a via or a through hole pin, to the layer it exits. All the layer dielectric thickness lengths and copper thickness lengths between the entry and exit layers are included in via length calculations. Copper thickness for the entry and exit layers are excluded. When **off**, via length is excluded from DRC calculations.

**Note:** Setting the *Effective Via Length* field on the **PCB Wiring Rules Dialog Box**, available by running *Rules – PCB – Wiring – General*, overrides and excludes the via length from delay calculations. In addition, the *Max Length* field on the **Fanout Dialog Box**, available by running *Auto – PreRoute – Fanout*, is not applied to via length delay calculations.

The **pindelay\_prop\_velocity\_factor** factor can only be applied in the control descriptor of a design file. Pin delay, as defined by associating the PIN\_DELAY property to component instance or definition pins, constitutes the length of a through pin. When pin delay is measured in time units, it is multiplied by the **pindelay\_prop\_velocity\_factor** factor, which sets a constant to convert from time to etch layer length units if you defined DIFFERENTIAL PAIR PHASE TOLERANCE, PROPAGATION DELAY, and RELATIVE PROPAGATION DELAY in time units.

Design Language Syntax

SPIF only translates pin delay values to the PCB Router if the *Pin Delay Include in All Propagation Delays and in DiffPair Phase Checks* field is enabled in the *Options tab* of the **Electrical Constraints Dialog Box**, accessible by running the cns electrical command in the PCB Editor. Even if pin delays exist on component instance or defintion pins, this field must be enabled to include pin delay contributions in delay/length calculations.

The **viadelay\_prop\_velocity\_factor** factor can only be applied in the control descriptor of a design file and specifies the *Via Z Propagation Velocity Factor* used to convert between time and length units if you defined DIFFERENTIAL PAIR PHASE TOLERANCE, PROPAGATION DELAY, and RELATIVE PROPAGATION DELAY in time units. Via delay entails adding the length of vias and through hole pins between connection layers to DRC calculations for DIFFERENTIAL PAIR PHASE TOLERANCE, PROPAGATION DELAY, and RELATIVE PROPAGATION DELAY.

SPIF only translates via delay values to the PCB Router if the *Via Z Include in All Propagation Delays and in DiffPair Phase Checks* field is enabled in the *Options tab* of the **Electrical Constraints Dialog Box**, accessible by running the PCB Editor's cns electrical command.

Design Language Syntax

<current\_resolution\_descriptor>

```
<current_resolution_descriptor>::=
(current_resolution [amp | mamp] < positive_integer>)
```

The symbol mamp means milliampere. The default unit of current is **mamp** with a *<positive\_integer>* equal to 1000.

Use **type** to specify **mid\_driven** or **balanced** daisy chain routing, rather than simple daisy chain routing. See <<u>order\_type</u>> for a description of simple daisy chain routing.

The *<daisy\_type>* keywords are described in the following table.

Keyword	Description
mid_driven	Applies to any net that has exactly two terminator pins and one or more source pins. The tool first chains all source pins together and then attaches each terminator pin to its nearest load pin. The load pins are connected to the next nearest load or source pin. This progression continues until all loads are chained together back to a source pin. If the net does not contain exactly two terminator pins and one or more source pins, the net is ordered as a simple daisy chain.
balanced	Applies to nets that have one or more source pins and two or more terminator pins. Loads are evenly distributed between the source and terminator pins. If the net does not contain two or more terminator pins and one or more source pins, the net is ordered as a simple daisy chain.

Design Language Syntax

```
<degree>
    <degree>::= <positive_integer>
The range of values for <degree> is 0 - 360.
<delay_descriptor>
    <delay_descriptor>::=
    ([max_delay | min_delay] < delay value>)
<delay_value>
    <delay_value>::= <real>
<design descriptor>
    <design descriptor>::=
    (pcb <pcb_id>
      [<parser descriptor>]
      [<capacitance resolution descriptor>]
      [<conductance_resolution_descriptor>]
      [<current resolution descriptor>]
      [<inductance resolution descriptor>]
      [<resistance_resolution_descriptor>]
      [<resolution descriptor>]
      [<time resolution descriptor>]
      [<voltage_resolution_descriptor>]
      [<unit descriptor>]
      [<structure descriptor> | <file descriptor>]
      [<placement_descriptor> | <file_descriptor>]
      [library descriptor> | <file descriptor>]
      [<floor plan descriptor>| <file descriptor>]
      [<part_library_descriptor> | <file_descriptor>]
      [<network descriptor>] <file descriptor>]
      [<wiring descriptor>]
      [<color_descriptor>]
   )
```

Design Language Syntax

```
<diameter>
     <diameter>::=
          <positive_dimension>

<diffpair_group_level_descriptor>
          <diffpair_group_level_descriptor>::=
          (diffpair_group_level_individual | total | unspecified))
```

The **diffpair\_group\_level** rule specifies the level at which the **max\_uncoupled\_length** rule is to be applied to a group of fromtos. Diff pairs that are part of Xnet in a design can be handled as a group within the PCB Router. If a group does not represent an Xnet, then **max\_uncoupled\_length** can be is applied to each fromto individually.

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region. When the **diffpair\_group\_level** value for a diff pair is **unspecified**, the rule is listed as *unspecified* in reports.

```
<diffpair_line_width_descriptor>
    <diffpair_line_width_descriptor>::=
    (diffpair_line_width [<positive_dimension> | -1])
```

The **diffpair\_line\_width** rule specifies the wire width for differential pairs. This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region. When the **diffpair\_line\_width** value for a diff pair is **-1**, the rule is unspecified.

Dimension implies a length value associated with a <<u>dimension unit</u>> such as **mm** or **inch**.

Design Language Syntax

### <dimension\_unit>

<dimension\_unit>::=
[inch | mil | cm | mm | um]

#### <direction\_type>

<direction\_type>::=

[horizontal | vertical | orthogonal | positive\_diagonal | negative\_diagonal | diagonal | off]

The *<direction\_type>* keywords are described in the following table.

Keyword	Description
horizontal	Routing is free (cost = 0) in the horizontal direction.
vertical	Routing is free (cost = 0) in the vertical direction.
orthogonal	Routing is free (cost = 0) in both horizontal and vertical directions.
positive_diagonal	Routing is free (cost = 0) in the positive diagonal direction, which is from bottom left-to-top right and top right-to-bottom left.
negative_diagonal	Routing is free (cost = 0) in the negative diagonal direction, which is from bottom right-to-top left and top left-to-bottom right.
diagonal	Routing is free (cost = 0) in both positive and negative diagonal directions.
off	The layer is not available for routing.

### <directory\_descriptor>

<directory\_descriptor>::=
(directory {<directory path name>})

Design Language Syntax

The **edge\_coupled\_tolerance\_minus** rule specifies an *allowable negative deviation* from the primary separation gap. The **edge\_coupled\_tolerance\_minus** and **edge\_coupled\_tolerance\_plus** values, when summed with the primary separation gap define a *range* within which a differential pair is considered coupled.

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region. When the **edge\_coupled\_tolerance\_minus** value for a diff pair is **-1**, the rule is unspecified.

```
<edge_coupled_tolerance__plus_descriptor>
    <edge_coupled_tolerance_plus_descriptor>::=
    (edge_coupled_tolerance_plus [<positive_dimension> | 0 | -1])
```

The **edge\_coupled\_tolerance\_plus** rule specifies an *allowable negative deviation* from the primary separation gap. The **edge\_coupled\_tolerance\_minus** and **edge\_coupled\_tolerance\_plus** values, when summed with the primary separation gap define a *range* within which a differential pair is considered coupled.

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region. When the **edge\_coupled\_tolerance\_plus** value for a diff pair is **-1**, the rule is unspecified.

```
<edge_primary_gap_descriptor>
  <edge_primary_gap_descriptor>::=
  (edge_primary_gap [<positive_dimension> | -1])
```

The **edge\_primary\_gap** rule specifies the required gap for a differential pair. This gap represents the normal trace-edge to trace-edge separation for the pair

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region. When the **edge\_primary\_gap** value for a diff pair is **-1**, the rule is unspecified.

Design Language Syntax

```
<effective_via_length_descriptor>
  <effective_via_length_descriptor>::=
    (effective_via_length [<positive_dimension> | -1])
```

For each via in a connection, the **effective\_via\_length** value adds to the wire length to determine the total effective length of the connection.

If consistive\_dimension is 0, vias have no effective length. Only wire length is used to perform length calculations. (See also length\_factor rule.)

When effective\_via\_length value is -1, the rule is unspecified.

The <exclude\_descriptor> excludes components from a room. The **remain** keyword can be used to specify all remaining components. The **type hard** keywords specify that no part of the excluded components can occupy the room. The **type soft** keywords specify that a portion of the excluded components can occupy the room.

See also <<u>room rule descriptor></u>.

```
<expression>
  <expression>::=
  [<numeric expression> | <string expression>]
```

Design Language Syntax

```
<extra_image_directory_descriptor>
  <extra_image_directory_descriptor>::=
  (extra_image_directory_directory_path_name>)
```

This directory lets you add image files for new images during a session. The files must be named <image\_id>.i. Specifying the <image\_id> in a command that defines a new component or assigns a component to a different image reads the image file from this directory.

The <family family spacing descriptor> rule applies between images in the family identified by the first <family\_id> and images in one or more of the other families. You can repeat the first <family\_id> to apply the spacing rule between images in the same family. If an image belongs to more than one family, the rule applied is the largest family\_family spacing rule specified for any of the families.

```
<family_family_spacing_descriptor>
<family_family_spacing_descriptor>::=
(family_family_spacing
        [<positive_dimension> | -1]
        [(type [pad_pad | pad_body | body_body])]
        [(side [front | back | both])])
```

The **family\_spacing** rule applies minimum edge-to-edge spacing values between image pad edges and body edges (pad-to-pad, pad-to-body, or body-to-body). When **type** is not specified, the spacing rule is applied to all types. The default **side** is **both**.

An **image\_image\_spacing** rule has higher precedence than a **family\_family\_spacing** rule. For the order of placement rule precedence, see the Routing and Placement Rule Hierarchies section at the beginning of this manual.

The default rule is -1, which means the family\_family\_spacing rule is undefined.

Design Language Syntax

```
<family_id>
<family_id>::= <id>
<family_property>
<family_property>::=
(family {<family_id>})

<file_descriptor>
<file_descriptor>::=
(file <file_path_name>)
```

The <file\_descriptor> construct can be substituted in <design\_descriptor> for any of the constructs listed in this chapter. The <file\_descriptor> points to a file whose contents are immediately processed. This file must contain the entire syntax for the construct replaced.

For example, a sample PCB could be defined as

```
(pcb sample
  (file gpcb/sample/structure)
  (file gpcb/sample/placement)
  (file gpcb/sample/library)
  (file gpcb/sample/network)
)
```

The gpcb/sample/structure file must contain all the rule, via, grid, boundary, and layer definitions. This technique allows you to create reusable libraries for printed circuit board technologies and for component definitions.

```
<filename>
<filename>::= <id>
<file_path_name>
<file_path_name>::= <id>
<file_prefix>
<file_prefix>::= <id>
```

Design Language Syntax

The **mirror\_first** flip style flips and mirrors the component, and then rotates it. The **rotate first** flip style applies rotation before the component is flipped to the opposite surface.

The default **flip\_style** is **mirror\_first**, but the preferred **flip\_style** is **rotate\_first**. Although **rotate\_first** is used for new design files, **mirror\_first** is maintained as the default for compatibility with design files from previous versions.

See also control descriptor>.

The default **force\_to\_terminal\_point** is **off**, which means the router can connect to a point on any side of a polygonal pad shape. If **force\_to\_terminal\_point** is **on**, the router must wire to the origin of the pad.

Design Language Syntax

Fromto type options are described as follows:

Option	Description
fix	A fromto that cannot be routed.
normal	A fromto that is unrestricted.
soft	A fromto that is defined for length or delay measurements only. It does not define the net topology.

The default **type** is **normal**. The **type soft** fromto does not define the pin order on a net. To explicitly order the fromtos on a net, include that definition as well as the soft definition.

Use the **net** keyword for a fromto that is part of a group and contains two virtual pins.

```
<gate_id>
     <gate_id>::= <id>
See also <part_pin_descriptor>.
```

Design Language Syntax

```
<gate_pin_id>
    <gate_pin_id>::= <id>
The < gate_pin_id > is the logical name of a pin in a gate.
See also <part pin descriptor>.
<gate_pin_swap_code>
    <gate_pin_swap_code>::= <integer>
Pins that belong to the same subgate, or to the same gate if the gate contains no subgates,
and that have the same < gate_pin_swap_code > are swappable. A
<gate pin swap code> of 0 means the pin is not swappable.
See also <part_pin_descriptor>.
<gate swap code>
    <gate_swap_code>::= <integer>
Gates that have the same < gate_swap_code> are swappable. A < gate_swap_code> of 0
means that the gate is not swappable.
See also <part_pin_descriptor>.
<grid_descriptor>
    <grid_descriptor>::=
    [(grid via <positive_dimension> [<via_id>]
      [(direction [x | y])] [(offset < positive dimension > )]) |
    (grid wire <positive_dimension> [<layer_name>]
```

[(direction [x | y])] [(offset < positive\_dimension>)]) |

[(direction [x | y])] [(offset < positive\_dimension>)]) |

[(direction [x | y])] [(offset < positive\_dimension>)])

(grid via\_keepout <positive\_dimension>

(grid place <positive\_dimension>
 [(image\_type [smd | pin])]) |
(grid snap <positive\_dimension>

Design Language Syntax

The statement (grid via 0.020) defines a via grid of 0.020 for all vias. Grids can also be assigned to specific vias. For example, (grid via 0.025 V25) defines a 0.025 grid for via V25.

The statement (grid wire 0.007) defines a wire grid of 0.007 for all layers. Wire grids can also be assigned to specific layers. For example, the statement (grid wire 0.005 L1) defines a 0.005 routing grid on layer L1.

The **grid via\_keepout** keyword identifies grid positions that the router can't use. The following example specifies that the router can place vias on 0.025, 0.050, and 0.075 centers but cannot place vias on .100 centers.

```
(grid via 0.025)
(grid via_keepout .100)
```

The **grid place** keyword defines a single placement grid for all components, or separate placement grids for SMD components and through-pin components.

The **grid snap** keyword defines grid points that the pointer snaps to during interactive modes.

The via, wire, via keepout, and placement grids have precedence over snap grids.

The **direction** and **offset** options apply to via, wire, via keepout, and snap grids. If a **direction** option is not specified, the grid spacing value and offset value (if given) apply equally in the x and y directions. If a **direction** option is specified, the grid spacing value and offset value (if given) only apply to the specified direction. To specify nonuniform grids or offsets in the x and y directions, you must use two **grid via**, **grid wire**, **grid via\_keepout**, or **grid snap** option expressions.

Design Language Syntax

The <history descriptor> is included in a session file to provide a list of all session files created for a design. The **history** block always includes a <self\_descriptor> that identifies the current session file. Each <ancestor\_file\_descriptor> identifies a previous session file.

```
<id><id><id>:id>::= [<character> | <character> <id>]<ignore_gather_length_descriptor><ignore_gather_length_descriptor>::= (ignore_gather_length [on | off | unspecified])
```

The **ignore\_gather\_length** rule only applies to uncoupled length on differential pairs. It tells the PCB Router whether to ignore trace gather length accumulation or not. When this rule is disabled (off), then trace gather length is accumulated and considered by the **max\_uncoupled\_length** rule. Conversely, if it is enabled (on) then gather length is ignored and not accumulated.

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region. When the **ignore\_gather\_length** value for a diff pair is **unspecified**, the rule is listed as *unspecified* in reports.

Design Language Syntax

```
<image_descriptor>
    <image_descriptor>::=
    (image <image id>
      [(side [front | back | both])]
      [<unit_descriptor>]
      [<outline descriptor>]
      {(pin <padstack_id> [(rotate <<u>rotation></u>)] [(pin_delay <<u>delay value></u>)]
           [(pin_length < positive dimension > | 0]]))
           [<reference descriptor> | <pin array descriptor>]
         [<user property descriptor>])}
      [{<conductor shape descriptor>}]
      [{<conductor via descriptor>}]
      [<rule_descriptor>]
      [<place rule descriptor>]
      [{<keepout descriptor>}]
    [<image property descriptor>]
```

The *<outline\_descriptor>* is the true outline of a component. The accuracy of the image outline specification in the design file is important to assure correct intercomponent spacing. The outline must be defined from the top view of the design.

If the image outline does not encompass all pins on the image, the outline expands to cover the pins. If an image outline is not defined in the design file, the tool generates a bounding box that includes all pins or pads of the component.

One library part can have two images linked, where one image is used when the component is placed on the front (primary side) of the design, and the other image is used when the component is placed on the back (secondary side) of the PCB. If **side** is **both** or not specified, front and back instances use the same image definition. Each image can have different padstacks associated with it, but this is not necessary. The images must be defined from the top view.

See also <a href="mailto:see"><a href="mailto:see">see</a><a href="mailto:see"><a href="mailto:see">see</a><a href="mailto:see">

Use **pin\_delay** to specify pin delay in a time value on component pins and **pin\_length** to specify pin length in an etch layer length value on component pins. Pin delay, as defined by associating the PIN\_DELAY property to component instance or definition pins, constitutes the length of a through pin. When pin delay is measured in time units, it is multiplied by the **pindelay\_prop\_velocity\_factor** factor, which sets a constant to convert from time to etch layer length units if you defined DIFFERENTIAL PAIR PHASE TOLERANCE, PROPAGATION DELAY, and RELATIVE PROPAGATION DELAY in time units.

Design Language Syntax

#### **Examples:**

```
(placement
:
:
(component IU1
(place U1 0 0 front 0)
(place U1 0 0 back 0)
)
:
:
:
(image IU1
(side front)
(pin p25x25 layer_1 0.0000 0.1500)
(pin p25x75 layer_1 0.0000 -0.1500)
)
(image IU1
(side back)
(pin p25x75 layer_1 0.0000 0.2000)
(pin p25x75 layer_1 0.0000 -0.2000)
)
(pin p25x75 layer_1 0.0000 -0.2000)
)
:
:
:
)
```

The geometric features of front and back instances of U1 are different because the geometric definition of image IU1 is different for the front and back sides.

Design Language Syntax

```
(ARRAY 2 3 1 0.0500 0.1500 0.05 0.0 (pin_delay 1.1))
   )
<image_image_descriptor>
   <image_image_descriptor>::=
   (image_image
        {(image <image_id> {<image_id>})}
        {<image_image_place_rule_descriptor>})
<image image place rule descriptor>
   <image_image_place_rule_descriptor>::=
   (place_rule {<image image spacing descriptor>})
<image image spacing descriptor>
   <image_image_spacing_descriptor>::=
   (image image spacing
      [<positive_dimension> | -1]
      [(type [pad_pad | pad_body | body_body])]
      [(side [front | back | both])])
```

The **image\_image\_spacing** rule applies minimum edge-to-edge spacing values between image pad edges and body edges (pad-to-pad, pad-to-body, body-to-body). When **type** is not specified, the spacing rule applies to all types. The default **side** is **both**.

An **image\_image\_spacing** rule has higher precedence than any other spacing rule. For the order of placement rule precedence, see the Routing and Placement Rule Hierarchies section at the beginning of this manual.

The default rule is **-1**, which means the **image\_image\_spacing** rule is undefined.

```
<image_id>
<image_id>::= <id>
```

Design Language Syntax

If you add or change the <physical\_property\_descriptor> or <family\_property> during a session, the session or placement file includes these changes. If you add or change the changes, the session or placement file does not include these changes.

The <include\_descriptor> includes components from a room. The **remain** keyword can be used to specify all remaining components. The **type hard** keywords specify that no part of the included components can occupy the room. The **type soft** keywords specify that a portion of the included components can occupy the room.

See also < room rule descriptor>.

Design Language Syntax

Symbol	Inductance Unit		
mhenry	millihenry		
uhenry	microhenry		
nhenry	nanohenry		

The default inductance unit is **nhenry** with a positive integer of 1000.

```
<index_step>
<index_step>::= <positive_integer>
<integer>
<integer>::=
[<sign>] <positive_integer>
<interlayer_clearance_descriptor>
<interlayer_clearance_descriptor>::=
(inter_layer_clearance <positive_dimension>
[(type {<object_type> <object_type>})]
[(layer_pair <layer_id> <layer_id>)]
[(layer_depth <integer>)]
)
```

The **layer\_pair** option specifies two layers between which the clearance rule applies. Clearance rules between layer pairs are followed even if the pair is separated by a power layer.

Design Language Syntax

The **layer\_depth** option specifies the number of layers above and below the current layer over which the clearance rule applies. An adjacent layer separated by a power layer is not considered even if it falls in the layer range controlled by the **layer\_depth** value.

The **layer\_pair** option is applicable only at the pcb (global) level of the rule hierarchy. The **layer\_depth** option is applicable only at the class\_class level of the rule hierarchy.

```
<jumper_descriptor>
    <jumper_descriptor>::=
    (jumper (length <positive_dimension>)
        [(use_via <padstack_id>)]
        [(height <max_height>)]
    )
```

The **length** value defines the fixed jumper length used when jumper vias are added on the jumper layer. The jumper attribute attaches to jumper vias and wires on the jumper layer. The jumper vias, wires, and attributes are included in the wires and routes files.

The autorouter chooses vias for jumpers from the via padstack list unless a particular via padstack name is specified in the **use\_via** option.

The autorouter can rotate nonsymmetrical jumper vias when the **set rotate\_jumper\_via** command is **on**. See the online help for more information.

The **height** option allows jumpers under components whose height is greater than <max\_height>. Jumpers are not allowed under components whose height is equal to or less than <max\_height>. When **height** is not specified, jumpers are also not allowed under components. The autorouter uses the actual component outline as a jumper keepout on the jumper layer. These are visible when the jumper layer is defined.

For more information about jumper layers, see also < layer type>.

```
<junction_type_descriptor>
<junction_type_descriptor>::=
  (junction_type [term_only | all | supply_only])
```

The **junction\_type** determines where tjunctions can occur.

The **term\_only** option permits tjunctions only at pins, SMD pads, and vias. The **all** option permits tjunctions at pins, SMD pads, vias, and wires. The **supply\_only** option does not permit tjunctions. This means that power nets and signal nets are routed directly from pin to source terminal. If **junction\_type** is not specified, it defaults to **all**.

Design Language Syntax

The **junction\_type** also controls the type of connection that can be used for virtual pins. If **term\_only** is set, virtual pins use only vias. If **all** is set, virtual pins use vias or wire tjunctions. See also <<u>virtual pin descriptor</u>>.

All shapes defined by < keepout\_descriptor > are treated as area object types.

The <id> is used only in the session file to record a defined keepout area. If you do not assign an <id> when you define the keepout, the tool assigns one. Keepout areas defined in an <image\_descriptor> can't be changed.

The **sequence\_number** option provides the sequence number of a modified keepout that was defined in the structure section and is written in the structure section of the session file.

The rules that you can specify depend on the keepout type.


- A <<u>clearance descriptor</u>> can be specified with keepout, via\_keepout, wire\_keepout, bend\_keepout, or elongate\_keepout. The clearance type must be area\_pin, area\_smd, area\_wire, or area\_via.
- A <<u>spacing descriptor</u>> can be specified with **keepout** or **place\_keepout**. The spacing type must be **area**.

The following figure illustrates an unrouted design without keepouts, and the separate layers after keepouts are defined. A keepout is positioned on each signal layer. The keepout definitions are specified as

```
(keepout (rect s2 0.560 0.909 1.739 0.589))
(keepout (rect s1 0.992 1.477 1.319 0.170))
```

Design Language Syntax

#### A Sample Design With and Without Keepouts

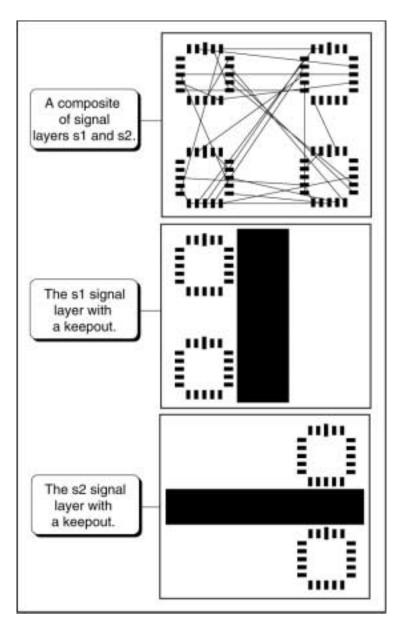

#### <keepout\_sequence\_number>

<keepout\_sequence\_number>::= <positive\_integer>

This integer indicates the sequence number of a keepout added, modified, or deleted during the session.

Design Language Syntax

Normally, layer cost is free.

Layers are ordered by their relative positions in the structure data. The first layer is the top physical layer and the last layer is the bottom physical layer.

The maximum number of signal and power layers is 255.

Design Language Syntax

The following example shows how layer noise weight is specified in a design file:

```
(layer_noise_weight
    (layer_pair L1 L1 1.000)
    (layer_pair L1 L2 1.000)
    (layer_pair L2 L2 .900)
    (layer_pair L4 L4 .870)
    (layer_pair L4 L5 .880)
    (layer_pair L5 L5 .870)
    .
    .
    .
)
```

This syntax example can be illustrated by the layer noise weight matrix in the following table. Shaded boxes represent power layers.

	L1	L2	L3	L4	L5	L6	L7	L8
L1	1.000	1.000		0.000	0.000		0.000	0.000
L2	1.000	.900		0.000	0.000		0.000	0.000
L3								
L4	0.000	0.000		.870	.880		0.000	0.000
L5	0.000	0.000		.880	.870		0.000	0.000
L6								
L7	0.000	0.000		0.000	0.000		1.000	1.000
L8	0.000	0.000		0.000	0.000		1.000	1.000

When **layer\_noise\_weight** is supplied in a design file, it must appear in the structure section.

Design Language Syntax

A **layer\_noise\_weight** matrix can also be specified in a do file by using the **define** command. Layer pairs not assigned a **layer\_noise\_weight** value have a default value of 1.0. If layers are separated by a power layer, the default **layer\_noise\_weight** value is 0.

Net sig9 has a net\_layer width rule of 0.01 on layers S1 and S4, and a net layer width rule of 0.015 on layers S2 and S3. For the order of routing rule precedence, see the Routing and Placement Rule Hierarchies section at the beginning of this manual.

```
<layer_type>
  <layer_type>::=
  [signal | power | mixed | jumper]
```

Design Language Syntax


The following table defines the layer types.

_	
Types	Description
signal	Layers used to route wires. Wires are made up of sets of overlapping filled shapes. The shapes can consist of pins, vias, wire segments, and wiring polygons. Wire segments can connect to polygons, which act as blockages for the routing of other nets.
power	A layer that supplies voltage or ground. Connections to power layers can be made by through-pins or vias. The router observes clearance rules for all shapes on power layers. Power planes can be either continuous or split.
mixed	Mixed layers provide a combination of signal and power layer features. Routing of short signal wires at a very high cost is allowed on mixed layers.
jumper	Jumper layers are used to define jumper connections that are installed during the PCB assembly process. Jumper layers must be defined as the top-most or bottom-most layer of a design. The cost to use the jumper layer is greater than the cost to use a wire on a signal layer. Wrongway connections are forbidden on the jumper layer unless orthogonal is specified in the <direction_type> descriptor. See also <jumper_descriptor>.</jumper_descriptor></direction_type>


Continuous power layers are the most common. The entire layer is dedicated to a single voltage or ground net. Split power layers are defined by non-overlapping polygons. Each polygon represents a different power net, as shown in the following figures.

Design Language Syntax

#### **Polygons Represent Different Power Nets**

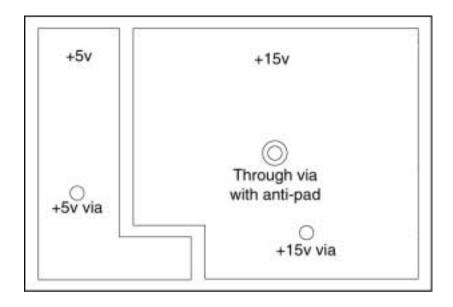

#### Illustration of Mixed Layer with a Wired Connection

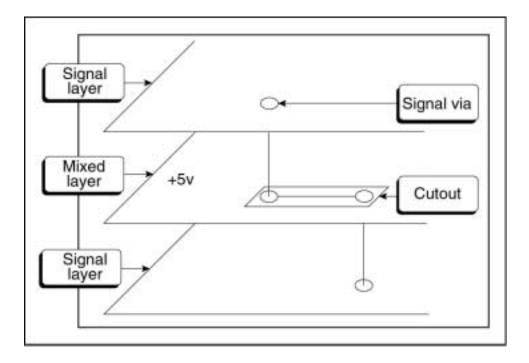

Design Language Syntax

```
<layer_weight>
```

The < layer\_weight> value is a factor that adjusts parallel and tandem noise calculations by layer. For example, noise coupling between wires on outer layers can be different from the coupling that occurs when the same nets are routed on an inner layer.

```
<length_amplitude_descriptor>
  <length_amplitude_descriptor>::=
  (length_amplitude < max amp> [< min amp>])
```

The length amplitude rule controls the maximum and optional minimum peak-to-peak excursion from a straight wire path when the autorouter uses an accordion pattern to lengthen a wire.

The <max\_length> value must be specified before the <min\_length> value. A value of -1 means the maximum length is undefined. If you don't want to control minimum length, either specify -1 or omit the value. If only <min\_length> is specified, set <max\_length> to -1. For example:

```
(net sig1 QR2 (circuit (length -1 23)))...
```

If the <max\_length> value is less than the <min\_length> value, the <max\_length> value is ignored.

You can specify maximum and minimum lengths as dimensional values or as ratios of routed length to Manhattan length. The **type** rule controls whether the length values are actual dimensions or ratios. Length values are actual if **type** is not specified. For example

```
(net XYZ (circuit (length 1500 500))) is the same as
```

```
(net XYZ (circuit (length 1500 500 (type actual))))
```

Design Language Syntax

The following example sets length rules as a ratio of maximum and minimum Manhattan length:

```
(net XYZ (circuit (length 1.5 1.1 (type ratio))))
```

A maximum length rule of 1.5 times the Manhattan distance is set, and a minimum length rule of 1.1 times the Manhattan distance is set.

See also the circuit command in the online help.

```
<length_factor_descriptor>
<length_factor_descriptor>::=
   (length_factor )
```

The **length\_factor** adjusts calculated wire lengths to account for the distance between layers or for layer characteristics. A **length\_factor** is usually used in controlled-impedance applications that impose different length constraints on different layers.

```
<length_gap_descriptor>
  <length_gap_descriptor>::=
   (length_gap <positive_dimension>)
```

The **length\_gap** rule controls the minimum gap between wire segments when accordion or trombone patterns are used to increase wire length. A value equal to three times the wire width is used, if **length\_gap** is set to a value less than three times the wire width or is not specified.

```
</etter>
</etter>::=
Any letter in the English alphabet.

</ibrary_descriptor>
</ibrary_descriptor>::=
(library_
[<unit_descriptor>]
{<image_descriptor>}]
{<iumper_descriptor>}]
```

Design Language Syntax

```
{{<padstack descriptor>}
{<via array template descriptor>}
[<directory descriptor>]
[<extra image directory descriptor>]
[{<family family descriptor>}]
[{<image image descriptor>}]
)
```

When a directory descriptor or extra image directory descriptor is used in place of image descriptors or padstack descriptors, the system expects one or more files in that directory with <image\_id>.i or <padstack\_id>.i filenames.

The bend limit applies to fromtos of nets or classes. When you apply a limit value of **-1**, the rule is set to the unspecified state.

```
crossing_descriptor>

crossing_descriptor>::=
(limit_crossing [<positive_integer> | -1])
```

The crossing limit applies to fromtos of nets or classes. When you apply a limit value of **-1**, the rule is set to the unspecified state.

```
limit_vias_descriptor>

(limit_vias [<positive_integer> | -1])
```

The via limit applies to fromtos of nets or classes. When a limit value of **-1** is applied, the rule is set to the unspecified state.

See also <max total vias descriptor>.

Design Language Syntax

```
limit_way_descriptor>
    limit_way_descriptor>::=
    (limit_way [<positive_dimension> | -1])
The way limit applies to fromtos of nets or classes. When a limit value of -1 is applied, the rule
is set to the unspecified state.
<logical_part_descriptor>
    <logical_part_descriptor>::=
    (logical_part < logical_part_id> {<part_pin_descriptor>})
See also <part library descriptor>.
<logical_part_id>
    <logical_part_id>::= <id>
See also < logical_part_descriptor > and < logical_part_mapping_descriptor >.
<logical_part_mapping_descriptor>
    <logical_part_mapping_descriptor>::=
    (logical_part_mapping <logical_part_id> {[(component {< component_id>}) |
    (image {<image id>}) | (physical {<physical part id>})]})
See also <part library descriptor>.
<match_fromto_delay_descriptor>
    <match_fromto_delay_descriptor>::=
    (match_fromto_delay [off | on]
      [(tolerance < delay value>)]
```

A **match\_fromto\_delay** rule applies to only nets, classes of nets, and groups of fromtos.

)

Design Language Syntax

The **match\_fromto\_length** rule applies to only nets, classes of nets, and groups of fromtos. It forces the autorouter to match the length of all fromtos of each net or group within the specified **tolerance** value. If the actual routed fromto lengths in each net or group differ by more than the **tolerance** value, the condition is a violation.

The **ratio\_tolerance** value is a percentage value that can contain up to two digits after the decimal point. The autorouter calculates a dimensional ratio based on the longest total Manhattan length. For example, if the **ratio\_tolerance** is .20 and the longest total Manhattan length is 1.5 inches, the autorouter calculates a tolerance of 0.3 inches, which is 20% of 1.5 inches.

The default setting for match\_fromto\_length is off.

```
<match_group_delay_descriptor>
  <match_group_delay_descriptor>::=
  (match_group_delay [off | on]
       [(tolerance <delay value>)]
  )
```

A **match\_group\_delay** rule can be applied only to a set of groups. The total routed delay of all groups in the set must match within the specified **tolerance** value. If the total routed delay of a group in the group set differs by more than the **tolerance** value, the condition is a violation. The default **tolerance** value is one inch.

A **match\_group\_length** rule can be applied only to a set of groups. The total routed length of all groups in the set must match within the specified **tolerance** value. If the total routed

Design Language Syntax

length of a group in the group set differs by more than the **tolerance** value, the condition is a violation. The default **tolerance** value is one inch.

The **ratio\_tolerance** value is a percentage value that can contain up to two digits after the decimal point. The autorouter calculates a dimensional ratio based on the longest total Manhattan length. For example, if the **ratio\_tolerance** value is .15 and the group's longest total Manhattan length is 1.8 inches, The autorouter calculates a tolerance of 0.27 inches, which is 15% of 1.8 inches.

```
<match_net_delay_descriptor>
<match_net_delay_descriptor>::=
(match_net_delay [off | on]
        [(tolerance <delay value>)]
)
```

A **match\_net\_delay** rule can be applied only to a class of nets. The routed delay of all nets in the class must match within the specified **tolerance** value. If the routed delays differ by more than the **tolerance** value, the condition is a violation. The default **tolerance** value is one inch.

```
<match_net_length_descriptor>
<match_net_length_descriptor>::=
(match_net_length [off | on]
        [(tolerance <positive_dimension>) |
        (ratio_tolerance <real>) | null]
)
```

The **match\_net\_length** rule can be applied only to a class of nets. The routed length of all nets in the class must match within the specified **tolerance** value. If the routed lengths differ by more than the **tolerance** value, the condition is a violation. The default **tolerance** value is one inch.

The **ratio\_tolerance** value is a percentage value that can contain up to two digits after the decimal point. The autorouter calculates a dimensional ratio based on the longest total Manhattan length. For example, if the **ratio\_tolerance** value is .20 and the net's longest total Manhattan length is 1.5 inches, The autorouter calculates a tolerance of 0.3 inches, which is 20% of 1.5 inches.

Design Language Syntax

```
<max_amp>
```

```
<max_amp>::= [<positive_dimension> | 0 | -1]
```

If you set maximum amplitude to  $\mathbf{0}$ , the autorouter cannot use an accordion pattern, which can result in more length violations. To reset amplitude to unspecified, use a value of -1.

See also < length amplitude descriptor>.

```
<max_height>
<max_height>::=
[<positive_dimension> | -1]
```

A < max\_height > value of -1 sets the maximum height value to unspecified.

See also <<u>room\_rule\_descriptor></u>, <<u>physical\_property\_descriptor></u>, and <<u>jumper\_descriptor></u>.

```
<max_length>
<max_length>::= <positive_dimension>
<max_noise_descriptor>
<max_noise_descriptor>::=
(max_noise[<real>|-1])
```

The **max\_noise** rule controls the maximum noise that can accumulate on a net before a coupled noise violation occurs. This rule can be applied at the pcb, net, and class levels of the rule hierarchy, and is typically expressed in units of millivolts. When the **max\_noise** value for a net is **-1**, the net is not checked for parallel and tandem noise violations.

```
<max_restricted_layer_length_descriptor>
<max_restricted_layer_length_descriptor>::=
   (max_restricted_layer_length < real> [(total)])
```

A max\_restricted\_layer\_length rule applies to nets, classes of nets, groups of fromtos, and group sets. It specifies a maximum length limit on certain layers for each fromto in a net, each net in a class, each fromto in a group, and each group in a group set.

Design Language Syntax

The **total** syntax applies only to groups. When used, the sum of the routed fromtos in the group must be within the **max\_restricted\_layer\_length** limit.

If the actual routes are greater in length than the **max\_restricted\_layer\_length** value, the condition is a violation. The **max\_restricted\_layer\_length** must be a positive real value.

When using the max\_restricted\_layer\_length rule, you must assign a length factor (see also <a href="restricted\_layer\_length\_factor\_descriptor">restricted\_layer\_length\_factor\_descriptor</a>). For example, to limit routing on the external layers of a PCB for EMI control, you could do the following. Assign a restricted\_layer\_length\_factor value of 1.0 to the external layers and a value of 0.0 to the internal signal layers, and then limit the routing on the outer layers to the max\_restricted\_layer\_length value.

```
<max_stagger_descriptor>
<max_stagger_descriptor>::=
(max_stagger [<positive_dimension> | -1])
```

The **max\_stagger** rule controls the maximum wire length allowed on a mixed layer. The tolerance for **max\_stagger** is one times the specified length value. For example, if you use a value of 100, the resulting routing length could be 200.

An example that allows routing for short distances on the GND layer is

```
(network
     (net #162
           (rule layer GND (max_stagger 500))
     )
)
```

The **max\_stagger** rule can also control the maximum wire length allowed on certain signal layers. An example that specifies routing all clock signals on int2 and int3, and allows only short distances on int1 and int4 is

```
(network
    (class CLK clk*
        (circuit (use_layer int2 int3 in1 int4))
        (layer_rule int1 int4 (rule (max_stagger 100)))
    )
)
```

Design Language Syntax

```
<max_stub_descriptor>
<max_stub_descriptor>::=
(max_stub [<positive_dimension> | 0])
```

The max\_stub rule controls tjunction routing at pads and pins on daisy-chain nets.

If the **max\_stub** value is greater than zero, tjunctions are allowed up to <positive\_dimension> distance from the terminal point, based on which **junction\_type** option is set. If the **max\_stub** value equals zero, no tjunctions are allowed on the nets; pad and pin entry or exit must be unique for each wire. The maximum stub condition is defined from the center of the pad to the center of the tjunction.

```
<max_total_vias_descriptor>
<max_total_vias_descriptor>::=
(max_total_vias [<positive_integer> | -1]
```

The **max\_total\_vias** rule limits the total number of vias in a group of fromtos or on a net. The **max\_total\_vias** rule applies to the entire net or group. A value of **-1** means there is no limit to the number of vias that can be used.

```
<max_uncoupled_length_descriptor>
      <max_uncoupled_length_descriptor>::=
      (max_uncoupled_length [<positive_dimension> | 0 | -1])
```

The **max\_uncoupled\_length** rule is used to monitor the accumulation of uncoupled length in a differential pair and define the amount of acceptable uncoupled length that the PCB Router routes to.

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region. When the **max\_uncoupled\_length** value for a diff pair is **-1**, the rule is unspecified.

```
<microvia_descriptor>
  <microvia_descriptor>::=
  (via
         (via_size < via width> [< via height>])
         (clear < x clearance> [< y clearance>])
         {(overlap < layer_id> < x overlap> [< y overlap>])}
)
```

Design Language Syntax

The <microvia\_descriptor> is used with the <<u>via array template descriptor></u> to generate via arrays during routing. (This requires **microvia on** in the <<u>control descriptor</u>>.)

The via size dimensions of a single via are <*via\_width>* and <*via\_height>*. If only <*via\_width>* is defined, <*via\_height>* is set to the same value.

The horizontal and vertical edge-to-edge distances between two vias are  $< x\_clearance >$  and  $< y\_clearance >$ , respectively. If only  $< x\_clearance >$  is defined,  $< y\_clearance >$  is set to the same value.

Each routing layer spanned by a via array must have an overlap area that covers the via array area. For each layer identified by < layer\_id>, the overlap in the X-dimension and Y-dimension is indicated by < layer\_ap> and < layer\_ap>. If only < layer\_ap> is defined, < layer\_ap> is set to the same value.

Via arrays are generated during routing, based on a particular < via\_array\_template\_id> and < microvia\_descriptor>. The number of rows and columns in an array is determined by the available overlap area. The via array must fit in the overlap area defined by the wire widths on the adjacent levels.

#### Example:

```
(via_array_template VIA2
  (via (via_size 20) (clear 6)
        (overlap L2 20) (overlap L3 18)
  )
)
```

#### <min\_amp>

```
<min_amp>::= [<positive_dimension> | 0 | -1]
```

When minimum amplitude is set to **-1**, the autorouter uses the default value, which is the larger of the following

- Three times the wire width
- One wire width plus one wire-to-wire clearance value

See also < length amplitude descriptor >.

Design Language Syntax

Use <mirror\_descriptor> to control the X and Y mirroring of a component when you translate. You can mirror a component with respect to its X axis, its Y axis, or both. A mirrored component cannot be changed by the user in a PCB design.

A mirror image is generated with respect to the origin of the component's image. For example, suppose a component appears in your layout system with pin 1 at the top left corner. If you specify **mirror X** to mirror the component across its X axis, it appears with pin 1 at the bottom left corner after you translate.

If you specify **mirror off**, the component is always displayed as it appears in your layout system. If mirror is not specified, mirroring is not performed, and components are displayed according to the side of the PCB on which they are placed.

Design Language Syntax

The **neck\_down\_gap** rule controls trace edge to trace edge gap when a squeeze is necessary for a diff pair to get through a tight pin field such as connector pins or into the fanout region of a BGA. This rule is used in conjunction with the **neck\_down\_width** rule to allow a diff pair to pass through the obstacle. If the value is unspecified then the standard primary separation gap is used.

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region. When the **neck\_down\_gap** value for a diff pair is **-1**, the rule is unspecified.

```
<neck_down_width_descriptor>
  <neck_down_width_descriptor>::=
  (neck_down_width [<positive_dimension> | -1])
```

The **neck\_down\_width** rule controls trace width when a squeeze is necessary for a diff pair to get through a tight pin field such as connector pins. This rule is used in conjunction with the **neck\_down\_gap** rule to allow a diff pair to pass through the obstacle. If the value is unspecified then the standard wire width is used.

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region. When the **neck\_down\_width** value for a diff pair is **-1**, the rule is unspecified.

```
<net_descriptor>
    <net_descriptor>::=
    (net < net id>
      [(unassigned)]
      [(net_number <integer>)]
      [(pins {<pin reference>}) | (order {<pin reference>})]
      [<component order descriptor>]
      [(type [fix | normal])]
      [<user property descriptor>]
      [<circuit descriptor>]
      [<rule_descriptor>]
      [{< layer rule descriptor>}]
      [<fromto_descriptor>]
      [(expose {<pin reference>})]
      [(noexpose {<pin reference>})]
      [(source {<pin reference>})]
```

Design Language Syntax

```
[(load {<pin reference>})]
[(terminator {<pin reference>})]
[(supply [power | ground])]
[(pin_delay <delay value> {<pin reference>})]
[(pin_length <positive dimension> | 0] {<pin reference>})]
)
```

The **unassigned** keyword, if used, must follow the *<net\_id>*. This keyword designates wiring polygons as unassigned (no net assignment). Unassigned wiring polygons are saved in the network\_out section of the routes or session file.

The **net\_number** option is for use only with translators. The router does not use them.

All the pins in a net must be listed by using either the **pins** list or the **order** list. If the **order** list and the <u><fromto descriptor></u> are both used, the pin ordering in the **fromto** list must match the ordering in the **order** list.

The **expose** pin list treats the referenced through-pins as SMD pins. The autorouter routes from the exposed pin to an escape via on an external layer. Routing from the escape via can continue on any signal layer. The following example forces routing from pins U1-1 and U4-5 to escape vias on an external layer.

```
(network (net net1 (pins U1-1 U2-3 U4-5 U5-7) (expose U1-1 U4-5)))
```

The fanout (pintype signal) and fanout (pintype power) commands generate vias for **expose** type through-hole pins. Pins specified in the **noexpose** list in the design file are not affected by the **fanout** command.

If a <net\_descriptor> includes **source**, **load**, or **terminator** pin lists, it must also include the **reorder daisy** rule. The autorouter routes the net in daisy-chain fashion, combining the source, load, and terminator pins into a single daisy chain with the source pins at one end, the load pins in the middle, and the terminator pins at the other end.

The following example shows a design file entry for a <net\_descriptor> with source, load, and terminator pin lists:

```
(net net1
(pins U1-1 U2-1 U3-1 U4-1)
(source U2-1)
(load U3-1 U4-1)
(rule (reorder daisy))
```

Design Language Syntax

See <<u>component order descriptor</u>> for details about ordering nets using component reference designators.

Use pin\_delay <a href="mailto:square"><a href="mailto:square"><a href="mailto:square">square<a href="mailto:square">square<a href="mailto:square<a href="mailto:square<">square<a href="mailto:square<a href="mailto:square<

Pin delay, as defined by associating the PIN\_DELAY property to component instance or definition pins, constitutes the length of a through pin. When pin delay is measured in time units, it is multiplied by the **pindelay\_prop\_velocity\_factor** factor, which sets a constant to convert from time to etch layer length units if you defined DIFFERENTIAL PAIR PHASE TOLERANCE, PROPAGATION DELAY, and RELATIVE PROPAGATION DELAY in time units.

The <supply\_pin\_descriptor> identifies wire shapes in routes and session files that are used as source terminals. Other shapes assigned to the same net are routed directly to the source terminal. See the <supply\_pin\_descriptor> for more details.

```
<net_pair_descriptor>
<net_pair_descriptor>::=
   (nets <net_id> <net_id>
        {[(gap [<positive_dimension> | -1] {[(layer < layer_id>)]})]}
   )
```

Use **nets** to identify the two nets you want included in a pair. Use question marks (?) as wildcards to specify multiple pairs in which the nets have similar names. The wildcards must

Design Language Syntax

appear in the same position in each < net\_id>. For example, to pair net sig1A with net sig1B and net sig2A with net sig2B, specify

```
(nets sig?A sig?B)
```

Use **gap** to control the minimum distance (<positive\_dimension>) allowed between the two routed wires in the pair. If **gap** is not included in a <net\_pair\_descriptor>, the wire-to-wire clearance rule is used. To reset a specified **gap** to the default wire-to-wire clearance, use -1 for the **gap** value.

You can use the **layer** keyword to apply the **gap** value to only the layer identified in <*layer\_id>*.

```
<net_pin_changes_descriptor>
<net_pin_changes_descriptor>::=
(net_pin_changes
{(net <net_id>
            [(add_pins {<pin_reference>})])}
            [(delete_pins {<pin_reference>})])}
)
```

This descriptor only appears in a session file and indicates pin changes that were made to the design during the session. The **add\_pins** option lists the pin references for the added pins, and the **delete\_pins** option lists the pin references for the deleted (forgotten) pins.

The <net\_id> can be the name of a net not specified in the <network descriptor> of the design file if you defined the net in the session.

```
<network_descriptor>
```

```
<network_descriptor>::=
(network
    {<net_descriptor>}
    [{<class_descriptor>}]
    [{<class_class_descriptor>}]
    [{<group_descriptor>}]
    [{<group_set_descriptor>}]
    [{<pair_descriptor>}]
    [{<bundle_descriptor>}]
)
```

Design Language Syntax

Use the <noise\_accumulation\_descriptor> to control whether total accumulated noise is calculated as the sum of the noise at each interaction between a victim net and the aggressor nets (**linear**) or as the root of the sum of the squares (**RSS**). The default is **linear**.

Either method looks up lengths for each gap specified in the noise table provided by **parallel\_noise** and **tandem\_noise** rules.

```
<noise_calculation_descriptor>
     <noise_calculation_descriptor>::=
     (noise_calculation
     [linear_interpolation | stairstep])
```

Accumulated noise calculation uses either stairstep or linear interpolation when looking up noise values from the noise table provided by **parallel\_noise** and **tandem\_noise** rules. The default is **stairstep**.

```
<number>
<number>::=
[<sign>] [<positive integer> | <real> | <fraction>]

Exponential numbers are not supported.

<numeric_binary_operator>
<numeric_binary_operator>::=
[== |!= | < | > | <= | >= | + | - | * | / | % | && | ||]
```

Design Language Syntax

When more than one operator is used in an expression, rules of precedence determine the order of evaluation. Evaluation of operators at the same precedence level in a single expression is from left to right.

The following table lists the numeric binary operators in descending order of precedence, with the highest precedence operator at the top. Operators that have the same precedence level are grouped together. For example, multiply, divide, and modulo have the same precedence level.

Operator	Function
()	grouping
-	negation
!	logical NOT
* / %	multiply divide modulo
+	add or concatenate subtract
< > <= >=	less than greater than less than or equal to greater than or equal to
== !=	equal to not equal to
&&	logical AND
<u>II</u>	logical OR

#### <numeric\_expression>

Design Language Syntax

```
<numeric_unary_operator>
```

```
<numeric_unary_operator>::= [- | !]
```

For an explanation of operator precedence, see the <<u>numeric binary operator></u> syntax note.

```
<object_type>
<object_type>::=
[pin | smd | via | wire | area | testpoint]
```

Object types are defined in the following table.

Types	Description
pin	Through-pin shapes or oval pin shapes using a <path_descriptor></path_descriptor>
smd	Surface mount pad shapes
via	Via shapes
wire	Wire shapes using a <path_descriptor></path_descriptor>
area	Keepout, boundary, or wire shapes using a <polygon_descriptor></polygon_descriptor>
testpoint	Through-pins or vias marked as test points because a <b>testpoint</b> rule is in effect for the net containing the pin or via

```
<off_grid_descriptor>
<off_grid_descriptor>::=
(off_grid [on | off])
```

The **off\_grid** option controls whether off grid routing is permitted or prohibited. The default is **on**. When **off\_grid off** is set in the design file, off grid routing is prohibited. You can also use the **cost off\_grid forbidden** command to prohibit off grid routing.

Design Language Syntax

```
<opposite_side_descriptor>
  <opposite_side_descriptor>::=
  (opposite_side [on| off]
       [(type {[large_large | large_small | small_small]})]
    )
```

This rule controls the back-to-back placement of one type of component (large or small) with respect to the same or other type of component. The default is **opposite\_side on**, which means opposite placement is permitted for all types of components. You can also use the **place\_rule** command to control opposite side placement.

```
<order_type>
  <order_type>::=
  [starburst | daisy [<daisy type>]]
```

Use **starburst** when multiple entries and exits on pins are permitted in your design. Use **daisy** to order a net as a simple daisy chain, which permits a single entry and a single exit on each pin in the net and does not allow tjunctions. Use <daisy\_type> to specify mid-driven or balanced daisy chain routing.

The **outline** shape can be a path, polygon, rectangle, or circle. The *<shape\_descriptor>* must be defined from the top view of the image. For example:

```
(outline (rect signal_1 0.0000 0.0000 1.2500 0.3250))
(outline (polygon signal_1 0.0 0.0550 0.0000 0.4100
0.0000 0.4650 0.0550 0.4650 0.4250 0.4250 0.4650
0.0550 0.4650 0.0000 0.4100 0.0000 0.0550 0.0550
0.0000))
```

Design Language Syntax

The *<outline\_descriptor>* of an image is used to assure optimum component-to-component spacing during placement. The layer of the outline shape is ignored.

See also <image descriptor>.

```
<padstack_descriptor>
  <padstack_descriptor>::=
  (padstack <padstack_id>
        [<unit_descriptor>]
        {(shape <shape_descriptor>}
        [<reduced_shape_descriptor>]
        [(connect [on | off])]
        [{<window_descriptor>}]
    ))
    [<attach_descriptor>]
    [{<pad_via_site_descriptor>}]
    [(rotate [on | off])]
    [(absolute [on | off])]
    [(rule <clearance_descriptor>)]
    )
}
```

The following table explains the main keyword parameters used in the <padstack\_descriptor>.

Keyword	Description
shape <shape_descriptor></shape_descriptor>	Controls the geometry of the padstack.
connect	Controls connection of a wire to the padstack. The default is <b>on</b> . This control applies only to vias and component through-pins.
rotate	Controls whether a pin padstack rotates when a component is rotated. The default is <b>on</b> . If <b>rotate</b> is turned <b>off</b> , any pin rotation, flipping, or mirroring that results from component placement or rotation that you specify is ignored.

Design Language Syntax

Keyword	Description
absolute	Controls whether the Z-direction stackup of a pin padstack is flipped 180 degrees (Z rotation) when a component is placed on the back side of the PCB. If <b>absolute</b> is <b>on</b> , the padstack is not flipped. By default, <b>absolute</b> is <b>off</b> and pin padstacks are flipped when components are flipped.
rule <clearance_descriptor></clearance_descriptor>	Assigns clearance rules for the padstack.

The padstack origin must be inside at least one shape of the padstack.

The <u><attach\_descriptor></u> controls whether a via padstack can be positioned under an SMD pad. The default is **on**, which allows vias under SMD pads. The **via\_at\_smd** rule must also be turned **on** to place vias under SMD pads (the default **via\_at\_smd** rule is **off**).

The <a href="reduced shape descriptor"> places an optional, smaller shape in a pin padstack. If the autorouter has difficulty in the converge routing phase, this smaller shape can be substituted to increase wiring space. Substitution is permitted on any layer where the padstack is not connected. The presence of a reduced shape in a design file indicates that the layout system supports reduced shapes.

If a padstack includes shapes on signal layers that have one or more intervening power layers, the router can connect through the padstack to the power layers even though padstack shapes are not included on the power layers. By contrast, a padstack must have a shape on a power layer to form a connection on that layer when the power layer is not bounded by two signal layers.

In the following example, a single via is defined by padstack V1\_2 for a four-signal-layer, two-power-layer PCB. Both power layers can be accessed from layers L1 and L2 with this single via.

Design Language Syntax


```
(padstack V1_2
(shape (circle L1 0.2360))
(shape (circle L2 0.2360))
(shape (circle P2 0.3100))
```

Padstack shape versus layer connectivity is shown in the table below.

Layer	Туре	Shape	Connected
L1	signal	yes	yes
P1	power	no	yes
L2	signal	yes	yes
P2	power	yes	yes
L3	signal	no	no
L4	signal	no	no

This relationship can also be illustrated by the following figure.

#### Single Via Defined for PCB with Four Signal Layers and Two Power Layers

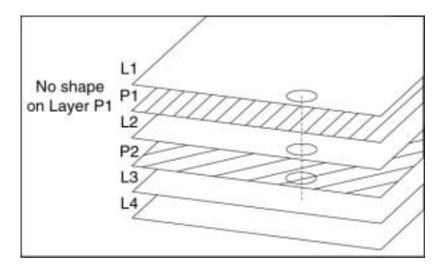

```
<padstack_id>
<padstack_id>::= <id>
```

Design Language Syntax

```
<pad_via_site_descriptor>
  <pad_via_site_descriptor>::=
  (via_site < vertex> | off)
```

Use the pad via site rule to place a via under an SMD pad at a specific location such as the edge of an SMD padstack. The <*vertex*> value is a coordinate relative to the padstack origin. To remove the via site data, specify **off**.

```
<pair_descriptor>
  <pair_descriptor>::=
   (pair {[<wire pair descriptor> | <net pair descriptor>]})
```

The *<pair\_descriptor>* defines differential pairs. Differential pairs are two nets or wires that you want to route side by side with the same topology for each connection.

Use the <net\_pair\_descriptor> to define a pair as two nets and the <wire\_pair\_descriptor> to define a pair as two fromtos (pin-to-pin connections).

Noise coupling between nets is controlled by computing the total noise that impinges on receiving nets from surrounding transmitting nets. Each net in a design can have a different noise weight or transmitting characteristic. A net's noise weight determines how much noise it transmits. Each net can also have a different maximum noise specification or receiving characteristic. The maximum noise specification determines how much noise a net can accumulate or pick up from other nets before a noise violation occurs. See also <max noise descriptor>.

Design Language Syntax

The following table describes criptor> keywords.

Keyword	Description
off	Resets a rule to the unspecified state. To change existing parallel noise rules, always use <b>parallel_noise off</b> before specifying new rules.
gap	Is measured edge-to-edge between parallel wires on the same layer. Coupled noise is calculated for parallel wires when the edge-to-edge distance is equal to or less than the specified <b>gap</b> value and the wires are parallel for a distance that exceeds the <b>threshold</b> value. If a wire does not have a <b>max_noise</b> value, no noise is computed for that wire.
threshold	Is the minimum parallel length that is considered when parallel noise violations are computed. When <b>threshold</b> is unspecified, its value defaults to the <b>gap</b> value.
weight	Represents units of noise per unit of length, where the unit of noise is typically volts or millivolts and the unit of length is the current dimensional unit. The <b>weight</b> value corresponds to the noise transmitted by the net over a unit length of wire to surrounding wires. the tool computes the noise coupled from a parallel transmitting wire by multiplying the transmitting wire's parallel length by its <b>weight</b> value. All coupled noise sources are accumulated for each receiving net and the sum is compared against that net's maximum noise specification to determine if a violation exists.

A coupled noise weight and gap curve can be approximated for a net by entering two or more weight and gap rules. For example:


```
unit inch
rule net clk1 (parallel_noise (gap .010) (threshold .050)
(weight .015))
```

Design Language Syntax

```
(parallel_noise (gap .020) (threshold .100)
  (weight .010))
(parallel_noise (gap .036) (threshold .100)
  (weight .005))
```

The following illustration shows the approximation.

#### **Coupled Noise Weight Versus Gap Approximation**

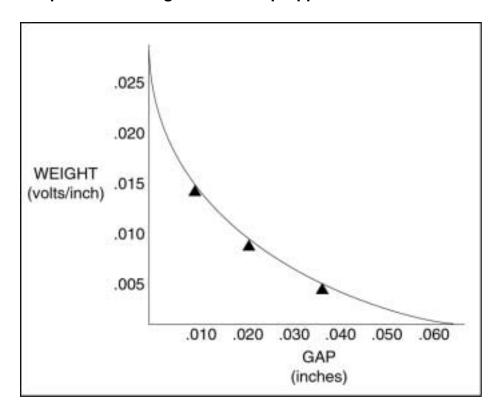

If multiple **parallel\_noise** rules apply to the same net, at different precedence levels, violations are checked only for the highest level rule. For the order of routing rule precedence, see the Routing and Placement Rule Hierarchies section at the beginning of this manual.

```
<parallel_segment_descriptor>
```

```
<parallel_segment_descriptor>::=
(parallel_segment
    [off |
        (gap <positive_dimension>)
        (limit <positive_dimension>)]
)
```

Design Language Syntax

Parallelism between wire segments on the same layer is controlled by setting a parallel segment length limit and a minimum wire-to-wire gap.

The following table describes *<parallel\_segment\_descriptor>* keywords.

Keyword	Description
off	Resets the rule to the unspecified state. To change existing parallel segment rules, always use <b>parallel_segment off</b> before specifying new rules.
gap	Is measured edge-to-edge between parallel wire segments on the same layer. Parallel segment violations do not occur when <b>gap</b> is greater than the specified value.
limit	Is the maximum parallel length that is allowed before a parallel segment violation occurs. When <b>limit</b> is unspecified or is less than the <b>gap</b> value, the <b>limit</b> value defaults to the <b>gap</b> value.

Power nets are not included in parallel segment rule checking. The following example illustrates how a table of rules can be created by supplying multiple parallel segment rules.

```
(Net clk1
(pins...)
(rule (parallel_segment (gap 11) (limit 500))
(parallel_segment (gap 14) (limit 1200))
(parallel_segment (gap 16) (limit 1800))
)
```

For the two parallel wire segments, violations occur when:

- **gap** is less than or equal to 11 and the parallel length is greater than 500
- gap is less than or equal to 14 and the parallel length is greater than 1200
- gap is less than 16 and the parallel length is greater than 1800

Design Language Syntax

If multiple **parallel\_segment** rules apply to a wire, at different precedence levels, violations are checked only for the highest level rule. For the order of routing rule precedence, see the Routing and Placement Rule Hierarchies section at the beginning of this manual.

The **parser** keyword embeds information about the PCB layout in your design file.

# SPECCTRA® Design Language Reference Design Language Syntax

The following table describes the types of data that can be included in the parser section of the design file.

Keyword	Description
string_quote	Temporarily disables parentheses as delimiters for text strings. A blank space is an absolute delimiter in a design file unless you set
	space_in_quoted_tokens on
	Once you define the <quote_char>, you can use it to include parentheses in <id> strings such as net names, component names, and layer names. You must include a blank space after the closing string quote character.</id></quote_char>
	Within a command, if a name or other <id> string includes a parentheses, enclose the string within string quote characters. For example, if the string quote character is the single quotation mark, you can enter the command</id>
	select net 'DATA_BUS(0)'
	Valid string quote characters are single quotation mark ('), double quotation mark ("), and dollar sign (\$). There is no default string quote character.
space_in_quoted_tokens	Controls the use of blank spaces within quoted strings. By default (off), blank spaces are an absolute delimiter. For example, a blank space indicates the end of the string if its used within a quoted string. When on, blank spaces are permitted within quoted strings. You must use the closing quote to end a string.
host_version	Identifies layout system version.
host_cad	Identifies the layout system.

# SPECCTRA® Design Language Reference Design Language Syntax

Keyword	Description
constant	Generates two constant <id> strings.  These character strings pass from the design file to the routes file. The translator uses them to generate constant information in the layout system interface file.</id>
write_resolution	Defines the dimensional units and resolution of the data in the translated design file.
routes_include testpoint	Forces the <b>write routes</b> command to include testpoint records in routes files.
routes_include guides	Forces the <b>write routes</b> command to include guides information automatically in routes files.
routes_include image_conductor	Forces the <b>write routes</b> and <b>write wires</b> commands to include wires and vias embedded within an image in the routes or wires file.
wires_include testpoint	Forces the <b>write wire</b> command to include testpoint records in wires files.
case_sensitive	Controls case-sensitivity for object names. For example, by default (off), the tool recognizes two nets called clk and CLK as a single net. When on, the tool recognizes clk and CLK as separate nets.
via_rotate_first	Controls whether vias rotate or mirror first. For example, by default (on), rotation is done before mirroring. When off, mirroring is done before rotation. The via_rotate_first control prevents data translation discrepancies between the PCB Editor and other layout systems that do mirroring first.

Design Language Syntax

```
<part_library_descriptor>
  <part_library_descriptor>::=
  (part_library
     [{<physical_part_mapping_descriptor>}]
     {<logical_part_mapping_descriptor>}
     [{<logical_part_descriptor>}]
     [<directory_descriptor>]
     )
```

The *<part\_library\_descriptor>* describes the equivalency of gates, subgates, and pins.

- A gate is a set of pins for which net connections can be swapped between components or within a component. A gate consists of all the input and output pins of a functional block.
- A subgate is a set of pins for which net connections can be swapped only within a gate. A subgate usually consists of only a subset of the input pins in a functional block.

You can replace all logical part descriptors with a directory descriptor that identifies a common user library directory. When a directory descriptor is used, the tool expects to find one or more files that contain logical part information.

You can combine one or more logical part descriptors with a directory descriptor in the same part library descriptor. For example:

```
(part_library (physical_part_mapping MC54HC688 (component U1 U2)) (logical_part_mapping SN54HC688 (physical MC54HC688) (component U3 U4)) (logical_part_mapping SN54HC804 (comp U5 U6 U7)) (logical_part_mapping SN54HC139 (comp U9 U10)) (directory /usr/designer/library)
```

The following information explains the example:

- The logic definition for components U1, U2, U3, and U4 is contained in part SN54HC688.
- The logic definition for components U5, U6, and U7 is defined by part SN54HC804.
- MC54HC688 and SN54HC688 are logically equivalent.
- The logic definition for components U9 and U10 is contained in SN54HC139.

A logical part descriptor looks like a table in the design file. Note that pin IDs in the logical part table must be the same as the pin IDs used with the <a href="reference"><a href="re

Design Language Syntax

The following pages show examples of logical part descriptors for the parts SN54HC688, SN54HC804, and SN54HC139. The *<logical\_part\_id>* is a filename consisting of the name of the part followed by .part. For example, the logical part SN54HC688 has a filename of SN54HC688.part. The SN54HC688.part file contains:

(logical\_part SN54HC688

#Physical #Pin ID	Pin Type	Gate	Gate Swa p	Gate Pins	Gate Pin Swap	Subga te	Subg ate Swa p	Subg ate Pins
(pin 1	3	gate1	1	1	0	sub1	0	1 )
(pin 2	3	gate1	1	2	1	sub2	1	1 )
(pin 3	3	gate1	1	3	1	sub2	1	2)
(pin 4	3	gate1	1	4	2	sub2	1	3)
(pin 5	3	gate1	1	5	2	sub2	1	4 )
(pin 6	3	gate1	1	6	3	sub2	1	5)
(pin 7	3	gate1	1	7	3	sub2	1	6)
(pin 8	3	gate1	1	8	1	sub3	1	1 )
(pin 9	3	gate1	1	9	1	sub3	1	2)
(pin 10	2	gate1	1	10	0	sub5	0	1 )
(pin 11	3	gate1	1	11	2	sub3	1	3)
(pin 12	3	gate1	1	12	2	sub3	1	4 )
(pin 13	3	gate1	1	13	3	sub3	1	5)
(pin 14	3	gate1	1	14	3	sub3	1	6)
(pin 15	3	gate1	1	15	1	sub4	0	1 )
(pin 16	3	gate1	1	16	1	sub4	0	2)
(pin 17	3	gate1	1	17	2	sub4	0	3)
(pin 18	3	gate1	1	18	2	sub4	0	4 )
(pin 19	4	gate1	1	19	0	sub6	0	1 )
(pin 20	2	gate1	1	20	0	sub7	0	1 )
)								

# SPECCTRA® Design Language Reference Design Language Syntax

The file SN54HC804.part contains:

(logical\_part SN54HC804

#Physical #Pin ID	Pin Type	Gate	Gate Swa p	Gat e Pins	Gate Pin Swap	Subgate	Subg ate Swa p	Subg ate Pins
(pin 1	3	gate1	2	1	1 )			
(pin 2	3	gate1	2	2	1 )			
(pin 3	4	gate1	2	3	0 )			
(pin 4	3	gate2	2	1	1 )			
(pin 5	3	gate2	2	2	1 )			
(pin 6	4	gate2	2	3	0 )			
(pin 7	3	gate3	2	1	1 )			
(pin 8	3	gate3	2	2	1 )			
(pin 9	4	gate3	2	3	0 )			
(pin 10	2	gate7	0	1	0 )			
(pin 11	4	gate4	2	3	0 )			
(pin 12	3	gate4	2	1	1 )			
(pin 13	3	gate4	2	2	1 )			
(pin 14	4	gate5	2	3	0 )			
(pin 15	3	gate5	2	1	1 )			
(pin 16	3	gate5	2	2	1 )			
(pin 17	4	gate6	2	3	0 )			
(pin 18	3	gate6	2	1	1 )			
(pin 19	3	gate6	2	2	1 )			
(pin 20	2	gate8	0	1	0 )			
)								

# SPECCTRA® Design Language Reference Design Language Syntax

The file SN54HC139.part contains:

(logical\_part SN54HC139

#Physical #Pin ID	Pin Type	Gate	Gate Swa p	Gate Pins	Gate Pin Swa p	Subgate	Subg ate Swa p	Subga te Pins
(pin 1	3	gate1	3	1	0	subg1	0	1)
(pin 2	3	gate1	3	2	0	subg1	0	2)
(pin 3	3	gate1	3	3	0	subg1	0	3)
(pin 4	4	gate1	3	4	0	subg1	0	4 )
(pin 1	3	gate1	3	1	0	subg2	0	1)
(pin 2	3	gate1	3	2	0	subg2	0	2)
(pin 3	3	gate1	3	3	0	subg2	0	3)
(pin 5	4	gate1	3	5	0	subg2	0	4 )
(pin 1	3	gate1	3	1	0	subg3	0	1)
(pin 2	3	gate1	3	2	0	subg3	0	2)
(pin 3	3	gate1	3	3	0	subg3	0	3)
(pin 6	4	gate1	3	6	0	subg3	0	4 )
(pin 1	3	gate1	3	1	0	subg4	0	1 )
(pin 2	3	gate1	3	2	0	subg4	0	2)
(pin 3	3	gate1	3	3	0	subg4	0	3)
(pin 7	4	gate1	3	7	0	subg4	0	4 )
(pin 14	3	gate2	3	1	0	subg1	0	1 )
(pin 13	3	gate2	3	2	0	subg1	0	2)
(pin 15	3	gate2	3	3	0	subg1	0	3)
(pin 12	4	gate2	3	4	0	subg1	0	4 )
(pin 14	3	gate2	3	1	0	subg1	0	1 )
(pin 13	3	gate2	3	2	0	subg2	0	2)
(pin 15	3	gate2	3	3	0	subg2	0	3)

Design Language Syntax

#Physical #Pin ID	Pin Type	Gate	Gate Swa p	Gate Pins	Gate Pin Swa p	Subgate	Subg ate Swa p	Subga te Pins
(pin 11	4	gate2	3	5	0	subg2	0	4 )
(pin 14	3	gate2	3	1	0	subg3	0	1)
(pin 13	3	gate2	3	2	0	subg3	0	2)
(pin 15	3	gate2	3	3	0	subg3	0	3)
(pin 10	4	gate2	3	6	0	subg3	0	4 )
(pin 14	3	gate2	3	1	0	subg4	0	1 )
(pin 13	3	gate2	3	2	0	subg4	0	2)
(pin 15	3	gate2	3	3	0	subg4	0	3)
(pin 9	4	gate2	3	7	0	subg4	0	4 )
(pin 8	2	gate3	0	1	0 )			
(pin 16 )	2	gate4	0	1	0 )			

Note the following equivalency of gates, subgates, and pins shown in the preceding files.

- The gates identified by gate1, gate2, gate3, gate4, gate5, and gate6 of part SN54HC804 are swappable, and the subgates identified by sub2 and sub3 of part SN54HC688 are swappable.
- The gates identified by gate1 on part SN54HC688 and gate1 on part SN54HC804 are not swappable because the <<u>gate swap code</u>> for each is different.
- The pins identified by pin 2 and pin 3 on part SN54HC688 are swappable since they have the same <<u>gate pin swap code</u>>, but pin 3 and pin 4 of part SN54HC688 are not swappable because their swap codes are different. Pin 2 and pin 8 of part SN54HC688 are not swappable because they are in different subgates.
- Part SN54HC139, a dual 2-line to 4-line decoder, is an example of a package with common pins. Physical pins 1, 2, 3, 13, 14, and 15 are common pins. Subgates subg1, subg2, subg3, and subg4 of gate1 and gate2 are not swappable because their outputs must be in order. Gates gate1 and gate2 are swappable.

Design Language Syntax

When a component has a pin that is common to two or more gates, the same *<pin\_id>* is used with different *<gate\_id>*s to construct the *<part\_pin\_descriptor>*.

See also < logical part descriptor>.

A path is drawn by moving the aperture through all vertexes in straight lines. The **path** keyword is used to define wires, oval pins, and the PCB boundary. The default **aperture\_type** is **round**.

where <pattern\_id> is one or more of: meander, accordion, trombone, sawtooth.

Design Language Syntax

```
<pattern_name>
              <pattern_name>::=
              [brickpat | cctpat | checkpat | diaghatchpat | dotpat | empty | gridpat |
              horizdashpat | horizpat | horizwavepat | orthohatchpat | peakpat | plaidpat |
              pluspat | slantleftpat | slantrightpat | tilepat | vertdashpat | vertpat |
              vertwavepat |
              <br/><br/>bit_map_filename>]
<br/>

without the .bit extension becomes the user-defined pattern name.
<pattern_object>
              <pattern_object >::=
              [component front | component back | keepouts | pin | poly_wire |
              power <layer_number> |
              signal < layer number > | viakeepouts | vias |
<pcb id>
              <pcb_id>::= <id>
<permit_orient_descriptor>
               <permit_orient_descriptor>::=
              (permit orient
                       [-1 |
                       {<orientation>} |
                       horizontal |
                       vertical]
                       [(side <place side>)]
              )
```

A **permit\_orient** value of **-1** sets the rule to unspecified. When permit\_orient is not specified, components can be interactively placed at any angle in increments of one degree.


An image is horizontal or vertical based on its footprint. Image footprints are analyzed by examining the rows and columns of pins. A row is a horizontal array of pins that have the identical Y-coordinate. A column is a vertical array of pins that have the identical X-coordinate.

When the number of pins in a row is greater than the number of pins in any column, the image is horizontal. When the number of pins in a column is greater than the number of pins in any

Design Language Syntax

row, the image is vertical. If the largest row and the largest column of pins are equal in number, the lengths of the rows and columns of pins are considered to determine whether the image is horizontal or vertical. If the row and column lengths are also equal, the image is neither horizontally nor vertically oriented. The following figure shows examples of horizontal and vertical images.

#### **Horizontal and Vertical Images**

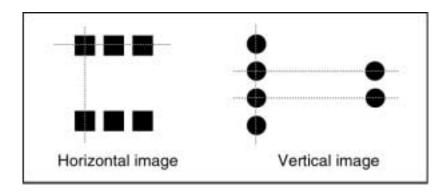

See also <place rule descriptor>.

```
<permit_side_descriptor>
  <permit_side_descriptor>::=
  (permit_side <place_side>)
```

See also <place rule descriptor>.

```
<phase_tolerance_delay_descriptor>
  <phase_tolerance_descriptor>:=
   (phase_tolerance_delay [<positive_dimension> | 0 | -1])
```

The **phase\_tolerance\_delay** rule specifies the maximum amount of delay mismatch that can be tolerated on a differential pair before a phase violation occurs.

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region.

Design Language Syntax

The following table describes *<phase\_tolerance\_length\_descriptor>* keywords.

Keyword	Description
<positive_value></positive_value>	Phase checking is enabled with the specified tolerance.
0	No phase mismatch is allowed.
-1	The rule is unspecified and phase checking is disabled.

```
<phase_tolerance_length_descriptor>
  <phase_tolerance_length_descriptor>:=
    (phase_tolerance_length [<positive_dimension> | 0 | -1])
```

The **phase\_tolerance\_length** rule specifies the maximum amount of length mismatch that can be tolerated on a differential pair before a phase violation occurs. This rule is used in conjunction with the **phase\_control** rule.

This rule can be applied at any level of the rule hierarchy except for Class to Class, Class to Class Layer, Padstack and Region.

The following table describes <phase\_tolerance\_length\_descriptor> keywords.

Keyword	Description
<positive_value></positive_value>	Phase checking is enabled with the specified tolerance.
0	No phase mismatch is allowed.
-1	The rule is unspecified and phase checking is disabled.

```
<physical_part_id>
<physical_part_id>::= <id>
```

See also <physical part mapping descriptor> and <logical part mapping descriptor>.

Design Language Syntax

By default, the placer treats components with three or fewer pins as **small**, and components with more than three pins as **large**. The **large** and **small** types are mutually exclusive. You can assign **type large** to a component or image with three or fewer pins. You cannot assign **type small** to a component or image with more than three pins.

The **capacitor**, **resistor**, and **discrete** types are mutually exclusive. Assigning one type removes a previously assigned mutually exclusive type. You can assign **type capacitor**, **type resistor**, or **type discrete** to any large or small component or image, but only small capacitors, resistors, or discretes can be specified for processing in automatic placement.

A capacitor is defined as a decoupling (bypass) capacitor. If a component with three pins or fewer that are all connected to power nets has not been assigned **type large**, **type resistor**, or **type discrete**, the placer automatically treats it as **type capacitor**.

The **height** property assigns a maximum height value. The **power\_dissipation** property assigns a maximum power dissipation value. Each value must be either a positive number or a **-1**, which means the property is undefined. Note that each value must be expressed in units consistent with your design (usually milliwatts for power dissipation).

See also < room rule descriptor>.

Design Language Syntax

```
<end_index>
      <index step>
      <x0>
      <y0>
      <xstep>
      <ystep>
      [<pin_prefix_id>]
      [<pin suffix id>]
   )
<pin_id>
    <pin_id>::= <id>
Pin IDs cannot include a hyphen.
<pin_prefix_id>
    <pin_prefix_id>::=
   (prefix <id>)
<pin_reference>
    <pin_reference>::=
   <component_id>-<pin_id>
<pin_suffix_id>
    <pin_suffix_id>::=
   (suffix <id>)
<pin_type>
    <pin_type>::= <integer>
```

The following table shows pin type definitions.

Pin Type	Definition
0	not specified

Design Language Syntax

Pin Type	Definition
1	no internal connection
2	power pin
3	logical input
4	logical output
5	input or output

See also <part pin descriptor>.

```
<pin_width_taper_descriptor>
    <pin_width_taper_descriptor>::=
    (pin_width_taper [up | down | up_down | off]
        [(max_length <positive_dimension>)]
    )
```

The controls the width of the wire segment entering or
exiting a pin. This rule is used to match the connecting segment width to the pin width, when
wire and pin widths differ. (All other segments of the wire obey the width rule that applies to
the wire as a whole.) No width tapering occurs if it leads to any rule violation.

If you want to permit only enlarged widths, choose the **up** option. Widths are not reduced for narrow pins. Similarly, if you want to permit only reduced widths, choose the **down** option. Widths are not enlarged for wide pins. To enable both widening and narrowing of segment widths as needed, choose the **up\_down** option. Choose **off** to disable the **pin\_width\_taper** capability. The default is **down**.

If a pin width is smaller than the minimum wire width, as defined by a pcb or layer width rule, tapering **down** does not occur.

If you want to control the maximum length of a tapered wire segment, use **max\_length**. When the wire segment entering or exiting a pin is greater than the **max\_length** value, only the portion of the segment that matches the specified length is tapered. When the wire segment is less than or equal to the **max\_length** value, or **max\_length** is not specified, the entire segment is tapered.

Length is measured from the edge of the pin to the end point of the wire segment.

Design Language Syntax

```
<place_boundary_descriptor>
  <place_boundary_descriptor>::=
  (place_boundary [{<path_descriptor>}) |
```

The cplace\_boundary\_descriptor> defines the area of the PCB that permits component
placement. This boundary must be smaller than the signal boundary defined in
cboundary\_descriptor>. For example

```
(boundary (rect pcb -2000 -2000 2000 2000))
(boundary (rect signal -1900 -2000 1900 2000))
(place_boundary (rect signal -1800 -1800 1800 1800))
```

If cplace\_boundary\_descriptor> is not defined, the placer uses the signal boundary as the boundary for component placement.

The cpath\_descriptor> must describe a closed boundary. The first vertex of a <path\_descriptor> must match the last vertex of the preceding <path\_descriptor>. If the last vertex of the last <path\_descriptor> does not match the first vertex of the first <path\_descriptor>, the boundary automatically closes.

If you use < rectangle\_descriptor > to define < place\_boundary\_descriptor >, the placer does not consider the boundary to be a filled shape.

The < layer\_id> in < path\_descriptor> or < rectangle\_descriptor> must be the **signal** keyword.

```
<place_control_descriptor>
     <place_control_descriptor>::=
          (place_control [<flip_style_descriptor>])
See also <placement_descriptor>.

<place_object>
          <place_object>::=
          [pin | smd | area]
```

The **pin** place object represents through-pin components, **smd** represents surface mount components, and **area** represents general keepouts and placement keepouts.

Design Language Syntax

```
See also < spacing_type>.
<place_rule_descriptor>
    <place_rule_descriptor>::=
    (place_rule
      {[<spacing descriptor>|
      <permit_orient_descriptor> |
      <permit side descriptor> |
      <opposite side descriptor>]}
<place_side>
    <place_side>::=
   [front | back | both]
<placement_descriptor>
    <placement_descriptor>::=
    (placement
      [<unit_descriptor> | <resolution_descriptor> | null]
      [<place control descriptor>]
      {<component instance>}
   )
<placement_id>
    <placement_id>::= <id>
A placement_id> identifies a component reference designator.
<placement_reference>
    <placement_reference>::=
    (place
      <component id>
      [<vertex> <side> <rotation>]
      [<mirror descriptor>]
      [<component status descriptor>]
      [(logical_part < logical_part_id>]
```

Design Language Syntax

```
[<place rule descriptor>]
[<component property descriptor>]
[(lock_type {[position | gate | subgate | pin]})]
[<rule descriptor>> | <region descriptor> | null]
[(PN <part number>)]
)
```

If < vertex> is not specified, the component is placed outside the PCB boundary.

The component status descriptor only appears in the placement descriptor of the session file or placement file.

The logical part descriptor only appears in the placement descriptor of the session file or in the component instance descriptor of the placement file.

The cplane\_descriptor> is used to describe split power planes. The cplane\_descriptor>
must occur after the clayer\_descriptor> in the structure section of the design file. For example:

Two planes are defined as polygons on the power layer named p1. Note that the nets assigned to the planes are identical to those specified in the layer statement for layer p1.

Design Language Syntax

A polygon is a closed, filled shape. The polygon outline is drawn by moving the aperture's center point through all vertexes in straight lines. If **aperture\_type** is not specified, it defaults to **round**. For regions, the *<aperture\_width>* value must be zero.

The keyword **viapop** controls whether vias are allowed to *pop* through the polygon and the keyword **wireplow** controls whether wires are allowed to *plow* through the polygon. By default, these controls are **off** (disabled).

# /Important

Using the **viapop** or **wireplow** syntax for a polygon which *is not* a wiring polygon (a polygon not defined in the Wiring section of a design file, routes files, or wires file) will cause a fatal error.

#### Examples:

A wire polygon that *does not* permit vias or wires to route through it.

Design Language Syntax

A wire polygon that permits vias to route through it.

```
(wiring
     (wire
           (polygon TOP 0
                1000 1000 1000 2000 2000 2000 2000 1000 1000 1000
                (viapop on))
           (net +5) (type route)
     )
A wire polygon that permits vias and wires to route through it.
```

```
(wiring
     (wire
          (polygon TOP 0
               1000 1000 1000 2000 2000 2000 2000 1000 1000 1000
               (viapop on) (wireplow on))
      (net +5) (type route)
     )
)
<positive_dimension>
```

```
<positive_dimension>::=
[<positive_integer> | <real> | <fraction>]
```

```
<positive_integer>
    <positive_integer>::=
   [<digit> | <digit><positive_integer>]
<power_fanout_descriptor>
    <power_fanout_descriptor>::=
    (power_fanout (order
      ([pin_cap_via | pin_via_cap | none]))
```

Design Language Syntax

The **power\_fanout** rule controls the routing order from pins assigned power nets to nearby decoupling capacitors during the fanout operation. The escape wire can connect first to the capacitor (**pin\_cap\_via**) or the escape via (**pin\_via\_cap**).

This rule is applicable at the pcb, class, and net levels of the rule hierarchy. For the order of routing rule precedence, see the Routing Rule Hierarchy section at the beginning of this manual.

The <name\_descriptor> is either a known property or a user-defined property and <value\_descriptor> is the integer, real, or string value of the property. If you add or remove a property, or change a property value during a session, these changes do not record in the session or placement file.

Design Language Syntax

The following table lists known properties for recognized pins. See also <a href="mailto:component property descriptor">component property descriptor</a> and <a href="mailto:cimage property descriptor">cimage property descriptor</a>.

Known Property		
Name	Value	Description
exit_direction	<string></string>	The pin exit-direction property controls wire exit directions from individual pins. The exit directions are
		left and right for the x-direction
		top and bottom for the y-direction
		up and down for the z-direction
		The up direction is toward the first or top layer, and the down direction is toward the last or bottom layer.
force_to_terminal_point	on   off	This is a pin property used in a pin statement to control whether a route connects to the terminal point of the pin. The terminal point is usually the center of the shape.

Design Language Syntax

The <qarc\_descriptor> is the construct used to define an arc. It cannot be used in the **pcb** boundary descriptor within the structure section of the design file.

The first <*vertex*> is the starting point of the arc. The second <*vertex*> is the endpoint of the arc. The third <*vertex*> is the center of the arc. The qarc (quarter arc) is drawn between the first and second vertexes. The four types of qarcs are

The two vertexes define the opposite corners of a rectangle. They can represent either the lower left and upper right corners or the upper left and lower right corners. If you specify upper left and lower right vertexes, the tool calculates and reports the lower left and upper right corner coordinates.

```
<reduced_shape_descriptor>
<reduced_shape_descriptor>::=
(reduced <shape descriptor>)
```

The <reduced\_shape\_descriptor> is added to a padstack to indicate an alternate shape, which can substitute for the normal shape. The reduced shape is smaller than the normal shape and is used if there is difficulty in the converge routing phase. The substitution can be made only if a wire does not connect to the normal shape on a particular layer.

The autorouter uses the <reduced\_shape\_descriptor> in the reduce\_padstack command with the on or auto option, and displays an information message in the output window. An example padstack is

Design Language Syntax

```
(padstack pin_60
    (shape (circle signal 60)
    (reduced (circle signal 40)))
)
```

The autorouter generally uses the first shape (60). The second shape (40) is used for converge routing phase problems.

```
<redundant_wiring_descriptor>
  <redundant_wiring_descriptor>::=
   (allow_redundant_wiring [off | on])
```

The **allow\_redundant\_wiring** rule is applicable only at the pcb, class, and net levels of the rule hierarchy. When this rule is **on** the checker allows redundant wiring on any specified net or nets (not just power nets) during interactive routing. The rule is ignored for nets with daisy ordering. The default is **off**.

The **allow\_redundant\_wiring** rule is used only when Allow Redundant Wiring On Enabled Nets is turned on in the Interactive Routing Setup dialog box.

The <region\_descriptor> defines a rectangular or polygon-shaped region and assigns wire width and object-to-object clearance rules to the area within the region. The tool encloses any diagonal side of the region with a rectangular corner. If you do not specify a <region\_id>, the tool assigns one.

Design Language Syntax

If regions overlap, rules assigned to each region apply to the overlap area. Rules at the higher level of the rule hierarchy take precedence over other region rules. If rules at the same level of the hierarchy conflict, the rules assigned to the most recently defined region apply. Only clearance rules can be assigned to the region class-to-class level. For the order of rule precedence, see the Routing and Placement Rule Hierarchies section at the beginning of this manual.

Layer definitions must precede any region rules in the design file, as shown in the following example.

```
(pcb area
       (structure
          (layer s1 (type signal) (direction horizontal))
          (layer p1 (type power) (use_net +5V GND))
          (layer s2 (type signal) (direction vertical))
          (region (rect signal 4.35 2.75 6.35 4.75)
            (rule (clearance 0.008 (type wire_wire))))
         (region (rect s2 2.0 2.0 6.0 6.0) (rule (width 0.003)))
       )
    )
<region id>
    <region_id>::= <id>
<relative_delay_descriptor>
    <relative_delay_descriptor>::=
    (relative delay [off | on]
       {(fromto [<pin_reference> | (virtual_pin < virtual_pin_name>)]
         [<pin reference> | (virtual_pin < virtual_pin name>)])
       [[(delta < dimension >)] |
       [(tolerance <positive dimension>) | (ratio_tolerance <real>)] | null]}
    )
```

The <relative\_delay\_descriptor> specifies delay for a fromto (pin-to-pin connection) relative to a reference fromto in the same group. Other fromtos within the group use **delta** and **tolerance** values to route relative to the reference fromto.

A fromto without a **delta** or **tolerance** is the reference fromto for the group. If **delta** and **tolerance** values are specified for every fromto in a group, the fromto with the longest manhattan length is considered the reference fromto for the group.

Design Language Syntax

If you do not specify a **delta** value, the default value is 0.

If you do not specify a **tolerance** or **ratio\_tolerance** value, the default is **ratio\_tolerance** with a value of 5. **Ratio\_tolerance** is a percentage of the reference fromto plus the **delta** and uses the same units as the **delta**.

#### Examples:

The first example defines a group, then applies the <relative\_delay\_descriptor> to the fromtos in the group.

```
(group group1
   (fromto U6-3 U12-6)
   (fromto (virtual_pin VP5) ( virtual_pin VP9))
   (fromto U7-9 U8-10)
   (circuit (relative_delay on)
        (fromto U6-3 U12-6)
        (fromto (virtual_pin VP5) ( virtual_pin VP9)) (delta -0.5) (tolerance .01)
        (fromto U7-9 U8-10) (delta 0.5) (ratio_tolerance .05)
   )
)
```

The second example applies the <relative\_delay\_descriptor> to the fromto as part of the group definition.

Design Language Syntax

The <relative\_group\_delay\_descriptor> specifies delay for a group relative to a reference group within the same groupset. Fromtos in other groups within the groupset use **delta** and **tolerance** values to route relative to the reference group.

A group without a **delta** or **tolerance** is the reference group for the groupset. If **delta** and **tolerance** values are specified for every group in a groupset, the group with the fromto having the longest manhattan length is considered the reference group for the groupset.

If you do not specify a **delta** value, the default value is 0.

If you do not specify a **tolerance** or **ratio\_tolerance** value, the default is **ratio\_tolerance** with a value of 5. **Ratio\_tolerance** is a percentage of the reference group plus the **delta** and uses the same units as the **delta**.

#### Examples:

The first example defines a groupset, then applies the <relative\_group\_delay\_descriptor> to the groups in the groupset.

```
(group_set gpset1group1 group2 group3)
(circuit (relative_group_delay on)
  (group group1)
  (group group2 (delta -0.5) (tolerance .05))
  (group group3 (delta 0.5) (ratio_tolerance .01))
)
```

Group1 is the reference group.

The second example applies the <relative\_group\_delay\_descriptor> to each group as part of the groupset definition.

```
(group_set gpset1 (add_group group1)
        (circuit (relative_group_delay on))
        (add_group group2)
        (circuit (relative_group_delay on (delta -0.5) (tolerance .05)))
        (add_group group3)
        (circuit (relative_group_delay on (delta 0.5) (ratio_tolerance .01)))
)

<relative_group_length_descriptor>
        (relative_group_length_descriptor>::=
        (relative_group_length [off | on]
              (group <group_id>)
```

Design Language Syntax

```
[(delta <<u>dimension></u>) |

[(tolerance <<u>positive dimension></u>) | (ratio_tolerance <<u>real></u>)] | null]}
```

The <relative\_group\_length\_descriptor> specifies length for a group relative to a reference group within the same groupset. Fromtos in other groups within the groupset use **delta** and **tolerance** values to route relative to the reference group.

A group without a **delta** or **tolerance** is the reference group for the groupset. If **delta** and **tolerance** values are specified for every group in a groupset, the group with the fromto having the longest manhattan length is considered the reference group for the groupset.

If you do not specify a **delta** value, the default value is 0.

If you do not specify a **tolerance** or **ratio\_tolerance** value, the default is **ratio\_tolerance** with a value of 5. **Ratio\_tolerance** is a percentage of the reference group plus the **delta** and uses the same units as the **delta**.

#### Examples:

The first example defines a groupset, then applies the <relative\_group\_length\_descriptor> to the groups in the groupset.

```
(group_set gpset1group1 group2 group3)
(circuit (relative_group_length on)
   (group group1)
   (group group2 (delta 100) (tolerance 50))
   (group group3 (ratio_tolerance .05))
)
```

The second example applies the <relative\_group\_length\_descriptor> to each group as part of the groupset definition.

```
(group_set gpset1 (add_group group1)
  (circuit (relative_group_length on))
  (add_group group2)
  (circuit (relative_group_length on (delta 100) (tolerance 50)))
  (add_group group3)
  (circuit (relative_group_length on (ratio_tolerance .05)))
)
```

Design Language Syntax

The <*relative\_length\_descriptor*> specifies length for a fromto (pin-to-pin connection) relative to a reference fromto in the same group. Other fromtos within the group use **delta** and **tolerance** values to route relative to the reference fromto.

A fromto without a **delta** or **tolerance** is the reference fromto for the group. If **delta** and **tolerance** values are specified for every fromto in a group, the fromto with the smallest **delta** and **tolerance** values is considered the reference fromto for the group.

If you do not specify a **delta** value, the default value is 0.

If you do not specify a **tolerance** or **ratio\_tolerance** value, the default is **ratio\_tolerance** with a value of 5. **Ratio\_tolerance** is a percentage of the reference fromto plus the **delta** and uses the same units as the **delta**.

#### Examples:

The first example defines a group, then applies the <relative\_length\_descriptor> to the fromtos in the group.

```
(group group1
   (fromto U6-3 U12-6)
   (fromto (virtual_pin VP5) ( virtual_pin VP9))
   (fromto U7-9 U8-10)
   (circuit (relative_length on)
        (fromto U6-3 U12-6)
        (fromto (virtual_pin VP5) ( virtual_pin VP9)) (delta 100) (tolerance 50)
        (fromto U7-9 U8-10) (ratio_tolerance .05)
   )
)
```

The second example applies the <relative\_length\_descriptor> as part of the group definition.

```
(group group1
(fromto U6-3 U12-6)
(circuit (relative_length on))
```

Design Language Syntax

```
(fromto U6-5 U10-2)
  (circuit (relative_length on (delta 100) (tolerance 50)))
  (fromto U7-9 U8-10)
  (circuit (relative_length on (ratio_tolerance .05)))
)

<reorder_descriptor>
  <reorder_descriptor>::=
  (reorder <order type>)
```

The **reorder** rule controls what method of ordering fromtos in nets is used. The <*order\_type>* specifies either starburst routing or simple, mid-driven, or balanced daisy chain routing.

```
<reserved_layer_name>
<reserved_layer_name>::=
[pcb | signal | power]
```

The **pcb** reserved layer name means the pcb layer can be used only to define the PCB boundary, **signal** implies all signal layers, and **power** implies all power layers.

When **pcb** is the layer name in a <a href="mailto:solute-bounding-box">boundary descriptor></a>, the bounding box of this bounding box of the design. No shapes outside this bounding box are recognized. Do not use these reserved names for layer names.

The symbols kohm and mohm mean kilo-ohm and milli-ohm, respectively. The default resistance unit is **mohm** with a positive integer of 1000.

```
<resolution_descriptor>
  <resolution_descriptor>::=
  (resolution < dimension unit> < positive_integer>)
```

Design Language Syntax

The < resolution\_descriptor > is used to map units for translation between the layout system and the tool, and has different meanings in the design file and the session file.

When a < resolution\_descriptor > is not included in the design file, the default dimension unit is inch and the default resolution value is 2540000.

A < resolution\_descriptor > should be included before the structure section in a design file. The < dimension\_unit > value defines the dimensional units of the design and determines the internal representation of all dimensional numbers.

The implications of the <resolution\_descriptor> are listed in the following example.

```
(pcb
    (resolution mil 10)
    (structure
        (boundary (rect pcb 0 0 9000 4000))
        . . .
)
```

The keyword **mil** within the resolution descriptor specifies the units for all dimensions in the design. It is the default unit unless overridden by a <u r > unit descriptor > elsewhere in the design file, such as within a library section.

In the previous example, the PCB boundary is 9000 mil by 4000 mil. The tool stores this as 90000 database units by 40000 database units. Notice that value 10 in the <resolution\_descriptor> defines the internal resolution as 0.1 mil. This value (10) does not affect the unit of the dimensions supplied in the design.

If the smallest dimension in a design has four digits to the right of the decimal point (such as 0.0001), the <resolution\_descriptor> must have at least five zeros as the least significant digits (such as 100000). Otherwise, a roundoff error can occur in representing the smallest dimension. For example, a circle with a diameter of 4.2221 has a radius of 2.11105 and requires a fifth decimal place to avoid roundoff.

The combination of resolution and maximum PCB size must not exceed the value for an integer (2<sup>31</sup> or 2,147,483,648). For example, a resolution specification of **resolution mm 100000** limits the maximum dimension to 21474 mm, or 21 meters. If the resolution used is **resolution mm 1000000**, the maximum design size is only 214 mm, which is not large enough for most printed circuit boards.

When a <resolution\_descriptor> is included in the session file, it describes how physical dimensions in real numbers are mapped to database units. If the previous example is in a session file rather than a design file, the <resolution\_descriptor> maps database units to the

Design Language Syntax

units used in the host layout system. In this example, the translator writes a boundary of 900 mil by 400 mil into the layout system database.

```
<restricted_layer_length_factor_descriptor>
    <restricted_layer_length_factor_descriptor>::=
    (restricted_layer_length_factor [1 | 0 | -1])
```

The **restricted\_layer\_length\_factor** adjusts calculated wire lengths to account for restricted layer characteristics. A **restricted\_layer\_length\_factor**, in conjunction with the <max\_restricted\_layer\_length\_descriptor>, is usually used to control EMI by imposing length constraints on external layers. The default **restricted\_layer\_length\_factor** value is **0**. See also <max\_restricted\_layer\_length\_descriptor>.

```
<room_descriptor>
  <room_descriptor>::=
  (room <room_id>
      [<shape_descriptor>]
      [{<room_rule_descriptor>}]
      [<room_place_rule_descriptor>]
    )
```

The <*room\_id*> must be unique. Component placement rules specified by <*room\_place\_rule\_descriptor*> apply to components within the room.

Only polygonal and rectangular shapes are valid for rooms.

See also <floor plan descriptor>.

Design Language Syntax

```
<permit_side_descriptor> |
      <opposite side descriptor>]
    )
<room_place_rule_object>
    <room_place_rule_object>::=
    (object_type
      [room |
      room_image_set [large | small | discrete | capacitor]
      [(image_type [smd | pin])]]
    )
The default object type is room.
<room_rule_descriptor>
    <room_rule_descriptor>::=
    [(height < max_height> [< min_height>]) |
    (power {< net_id>}) |
    (power_dissipation [-1 | < real > ]) |
    {<include_descriptor>}| {<exclude_descriptor>}|
```

The <max\_height> value must be specified before the <min\_height> value. A value of -1 means the height is undefined. If you do not want to control maximum height, specify -1. If you do not want to control minimum height, either specify -1 or omit the value. If the <max\_height> value is less than the <min\_height> value, the <max\_height> value is ignored. If the height option is not used, the default heights are -1.

The unit of power you use to set a room's power dissipation rule must be consistent with the unit used to set component or image power dissipation properties. A value of **-1** means the power dissipation property is undefined. The default power dissipation is **-1**.

```
<rotation>
<rotation>::= <real>
```

Rotation is expressed in degrees. The rotation value can contain up to two digits after the decimal point. Rotation direction is counterclockwise from the positive X axis.

Design Language Syntax

```
<route_descriptor>
    <route_descriptor>::=
    (routes
      <resolution_descriptor>
      <parser_descriptor>
      <structure out descriptor>
      library out descriptor>
      <network_out_descriptor>
      <test points descriptor>
<route_file_descriptor>
    <route_file_descriptor>::=
    <route_descriptor>
<route_to_fanout_only_descriptor>
    <route_to_fanout_only_descriptor>::=
    (route_to_fanout_only [on | off])
If route_to_fanout_only is on, the autorouter routes to the fanout via, or if a fanout via is
not present, to the SMD pad. If route_to_fanout_only is off, the autorouter can connect to
either the SMD pad or its fanout via. The route_to_fanout_only control is on by default.
<row>
    <row>::= <positive_integer>
```

<rule\_descriptor>

<rule\_descriptor>::=

(rule {< rule descriptors>})

Design Language Syntax

#### <rule\_descriptors>

```
<rule_descriptors>::=
[<clearance descriptor> |
<diffpair group level descriptor> |
<diffpair_line_width_descriptor> |
<edge coupled tolerance minus descriptor>|
<edge coupled tolerance plus descriptor> |
<edge_primary_gap_descriptor> |
<effective via length descriptor> |
<ignore gather length descriptor> |
<interlayer_clearance_descriptor> |
<junction type descriptor> |
<length amplitude descriptor> |
<length_factor_descriptor> |
<length gap descriptor> |
descriptor> |
crossing_descriptor> |
limit vias descriptor> |
descriptor> |
<max_noise_descriptor> |
<max stagger descriptor> |
<max stub descriptor> |
<max total vias descriptor> |
<max uncoupled length descriptor>
<neck down gap descriptor> |
<neck_down_width_descriptor> |
{<<pre>
{<<pre>
<phase tolerance delay descriptor> |
<phase tolerance length descriptor>|
<pin width taper descriptor> |
<power_fanout_descriptor> |
<redundant wiring descriptor> |
<reorder descriptor> |
<restricted_layer_length_factor_descriptor> |
<saturation length descriptor> |
<shield gap descriptor> |
<shield_loop_descriptor> |
<shield tie down interval descriptor> |
<shield width descriptor>
<source_seg_ratio_descriptor>
{<stack via descriptor>} |
{<stack via depth descriptor>} |
```

Design Language Syntax

```
{<tandem_noise_descriptor>} |
    {<tandem segment descriptor>} |
    <tandem shield overhang descriptor> |
    <testpoint_rule_descriptor> |
    <time length factor descriptor> |
    <ti>unction descriptor> |
    <track_id_descriptor> |
    <via at smd descriptor>
    <via pattern descriptor> |
    <width_descriptor>]
<same_net_checking_descriptor>
    <same_net_checking_descriptor>::=
    (same_net_checking [on | off])
When same_net_checking is not set, it defaults to off.
<sample window descriptor>
    <sample window descriptor>::=
    (sample_window [-1 [<integer>] |
    {<positive_integer> <positive_integer>}])
```

Use this descriptor in the crosstalk (standard parallel and tandem noise routing rules) model. The descriptor is part of a circuit descriptor used with nets or classes. A value of **-1** means the sample window is undefined. One or more sample windows can be specified.

Noise transmission and reception in nets occurs during switching and sampling time intervals, respectively. These time intervals are described by switch and sample windows, which are based on the master clock cycle. The switch window represents a time interval during which a net can broadcast noise, and the sample window represents a time interval during which a net can receive noise. A receiving net picks up transmitted noise only during the overlap time of the two windows. If overlap occurs, the transmitting net is known as an unfriendly net, and the receiving net is known as a victim net.

Each sample (and switch) window is specified by a pair of non-negative integers that represent beginning and ending times and define the interval. Noise coupling occurs only if sample and switch integer intervals overlap, either partially or completely.

See also the following descriptors:

Design Language Syntax

```
<switch window descriptor>
<parallel noise descriptor>
<tandem noise descriptor>
<saturation_length_descriptor>
<saturation_length_descriptor>::=
  (saturation_length <positive_dimension>)
```

The **saturation\_length** rule is applicable at the pcb, class, and net levels of the rule hierarchy. Use this rule to include the effect of noise saturation in parallel and tandem noise rules.

When the total length that a victim and aggressor net are parallel to each other is greater than the **saturation\_length** value, the tool scales the total accumulated noise by the ratio of saturation length to total length.

See also **noise\_calculation**, **noise\_accumulation**, and **crosstalk\_model** parameters in the *<control descriptor>*.

```
<self_descriptor>
<self_descriptor>::=
(self (created_time <time_stamp>)
{(comment <comment_string>)})
```

The self descriptor is included in a session file to document the time and date that the session file was created.

Design Language Syntax

```
<swap history descriptor>]
[<route descriptor>]
```

A session file is created by issuing the **write session** command (see the online help for information about the **write** command). The following is an example of a session file.

```
(session ed_session3
      (base design gpcb/am13/ed.dsn)
      (history
         (ancestor gpcb/am13/ed_session1.ses
           (created_time Jul 10 11:36:48 1993)
         (comment initial placement)
         (ancestor gpcb/am13/ed_session2.ses
           (created_time Jul 19 5:36:48 1993)
           (comment pin/gate swapping)
         )
         (self
           (created_time Jul 21 15:36:48 1993)
           (comment routed 25 passes by Ed)
         )
      (placement
         (component PART1
           (place IC22 142.2400 83.8200 FRONT 0)
           (place IC23 142.2400 63.5000 FRONT 0)
         )
      (was_is
         (pins U1-1 U2-1)
      (routes
<session id>
    <session_id>::= <id>
```

Design Language Syntax

The tool adds a < keepout\_descriptor> to the session file for each keepout you define during the session. You can change the definitions of keepouts defined in the structure section of the design file, but not the definitions of keepouts defined in an < image\_descriptor>.

The tool adds a *<place\_boundary\_descriptor>* to the session file if you define or change the placement boundary during the session.

Use **deleted\_keepout** to delete a keepout from the session file if you delete the keepout during the session. The <*keepout\_sequence\_number>* identifies the keepout to be deleted.

Shapes are the only objects the tool recognizes. The tool also generates shapes. Polygons and circles are closed, filled shapes. Rectangles are also closed, filled shapes except boundaries, which are closed, unfilled shapes.

```
<shield_descriptor>
<shield_descriptor>::=
(shield [off | on [<shield type descriptor>]
(use_net <net_id>)])
```

Design Language Syntax

When **shield** is **on**, the **use\_net** keyword identifies the net that is used as the shield. If you don't specify a shield type, the default is parallel shielding. The **shield** default is **off**.

```
<shield_gap_descriptor>
  <shield_gap_descriptor>::=
  (shield_gap <positive_dimension>)
```

The **shield\_gap** value defines the edge-to-edge distance between the wire being shielded and the shield wire. If **shield\_gap** is not supplied, the value defaults to the wire\_wire clearance for the connection being shielded.

```
<shield_loop_descriptor>
     <shield_loop_descriptor>::=
     (shield_loop [open | closed])
```

The **shield\_loop** value defines whether open or closed end loops are generated around pins, pads, or vias. The default is **closed**. With the **open** option, no attempt is made to close the shield loop, and two stub wires, as well as two vias, might be added to connect the shield wires to the shield net.

```
<shield_tie_down_interval_descriptor>
  <shield_tie_down_interval_descriptor>::=
   (shield_tie_down_interval <positive_dimension>)
```

This rule controls the distance between vias, or vias with stub wires, when multiple connections from the shield wire to the power layer are needed. The **shield\_tie\_down\_interval** value is determined by the frequency of the signal on the shielded net.

```
<shield_type_descriptor>
    <shield_type_descriptor>::=
    (type [parallel | tandem | coax])
```

You can specify parallel or tandem shielding rules. For both parallel and tandem shielding, use the **coax** keyword. The default **type** is **parallel**.

Design Language Syntax

```
<shield_width_descriptor>
  <shield_width_descriptor>::=
  (shield_width <positive_dimension>)
```

The **shield\_width** value defines the width of the shield, including the wire segment that connects to a pin or via. If **shield\_width** is not used, the value defaults to the same width as the connection being shielded.

```
<source_seg_ratio_descriptor>
     <source_seg_ratio_descriptor>::=
     (source_seg_ratio <positive_integer>)
```

The **source\_seg\_ratio** value sets the ratio between source-to-virtual pin and virtual pin-to-load. The ratio must be a percentage between 1 and 99. The default is 80.

**Note:** Since this is merely an autoroute *guideline*, it is not DRC-checked.

The **front** side is the first layer defined in the layer stackup in the structure data and **back** is the last layer defined in the stackup.

```
<sign>
<sign>::= [+ | -]

<site_array_descriptor>
<site_array_descriptor>::=
(site <positive_integer> <x0> <y0> <xstep> <ystep>)
```

The *<site\_array\_descriptor>* defines an array of bond sites for wirebond applications. The *<positive\_integer>* value defines the total number of bond sites in the array, *<x0>* and *<y0>* determine the coordinate location of the first site in the array, and *<xstep>* and *<ystep>* define the step increment for the array.

Design Language Syntax

```
<spacing_descriptor>
    <spacing_descriptor>::=
    (spacing [-1 | <positive_dimension>]
      [(type <spacing type>)] [(side <place side>)]
A value of -1 sets the spacing rule to unspecified.
See also the <<u>place rule descriptor</u>>.
<spacing_type>
    <spacing_type>::=
    <place object> <place object>
<special_character>
    <special_character>::=
Any ASCII special character except a blank space, left or right parenthesis, semicolon, single
quote ('), and newline.
<stack_via_descriptor>
    <stack_via_descriptor>::=
    (stack_via [on | off])
When on, the stack_via rule allows vias to stack center on center. See also the
<stack via depth descriptor>.
<stack_via_depth_descriptor>
    <stack via depth descriptor>::=
    (stack_via_depth <positive_dimension>)
```

This rule is only applicable at the pcb level of the rule hierarchy. The **stack\_via\_depth** rule controls the number of vias over which the **stack\_via** rule applies. Vias that fall outside the specified range are generally connected in a staggered via pattern. See also the <stack\_via\_descriptor>.

Design Language Syntax

```
<start_pass>
    <start_pass>::= <positive_integer>
<step>
    <step>::= <positive_integer>
<string>
    <string>::=
    [<character> | <character> <string>]
<string_compare_operator>
    <string_compare_operator>::=
    [== | != | < | > | <= | >=]
<string_expression>
    <string_expression>::=
    [<string_expression> + <string_expression> | (<string_expression>) |
    <one_word_string> | <<u>variable_name></u>]
<structure descriptor>
    <structure_descriptor>::=
    (structure
      [<unit_descriptor> | <resolution_descriptor> | null]
      {< layer descriptor>}
      [<layer noise weight descriptor>]
      {<box|
<br/>
descriptor>}
      [<place boundary descriptor>]
      [{<plane descriptor>}]
      [{<region_descriptor>}]
      [{<keepout descriptor>}]
      <via descriptor>
      [<control_descriptor>]
      <rul><rule descriptor>
```

Design Language Syntax

```
[<structure_place_rule_descriptor>]
      {<grid descriptor>}
<structure_out_descriptor>
    <structure_out_descriptor>::=
    (structure_out
      {< layer descriptor>}
      [<rule descriptor>]
   )
<structure_place_rule_descriptor>
    <structure_place_rule_descriptor>::=
    (place_rule [<structure place rule object>]
      {[<spacing descriptor>|
      <permit orient descriptor> |
      <permit side descriptor> |
      <opposite side descriptor>]}
<structure place rule object>
    <structure_place_rule_object>::=
    (object_type
      [pcb |
      image_set [large | small | discrete | capacitor | resistor]
      [(image_type [smd | pin])]]
The default object_type is pcb.
<subgate_id>
    <subgate_id>::= <id>
See also <part pin descriptor>.
```

Design Language Syntax

Subgates within the same gate that have the same subgate swap code can be swapped. A <subgate\_swap\_code> value of 0 identifies a subgate that cannot be swapped.

The <super\_place\_reference> descriptor is used with the <<u>cluster\_descriptor></u>. The <*vertex*> values are relative to the origin of the super component. The <*rotation*> values are relative to the origin of the image in the <<u>cimage\_descriptor></u>.

```
<supply_pin_descriptor>
<supply_pin_descriptor>::=
(supply_pin {<pin_reference>} [(net < net_id>)])
```

Use the *<supply\_pin\_descriptor>* to define supply pins that you identify with *<pin\_reference>*. You identify pins of a net as supply pins with *<net\_id>*.

Nets with pins designated as **supply\_pin** are ordered so that the pin is the source terminal for other pins on the net.

Design Language Syntax

#### See also

This descriptor is used in the crosstalk (standard parallel and tandem noise routing rules) model. The descriptor is part of a circuit descriptor used with nets or classes. A value of **-1** means the switch window is undefined. One or more switch windows can be specified.

Noise transmission and reception in nets occurs during switching and sampling time intervals, respectively. These time intervals are described by switch and sample windows, which are based on the full clock cycle. The switch window represents a time interval during which a net can broadcast noise, and the sample window represents a time interval during which a net can receive noise. A receiving net picks up transmitted noise only during the overlap time of the two windows. If overlap occurs, the transmitting net is known as an unfriendly net, and the receiving net is known as a victim net.

Each switch (and sample) window is specified by a pair of non-negative integers that represent beginning and ending times and define the interval. Noise coupling occurs only if switch and sample integer intervals overlap, either partially or completely.

#### See also

```
<sample window descriptor>
<parallel noise descriptor>
<tandem noise descriptor>
```

Design Language Syntax

#### <system\_variable>

<system\_variable>::=

[bottom\_layer\_sel | complete\_wire | conflict\_clearance | conflict\_crossing | conflict\_length | conflict\_wire | conflict\_xtalk | connections | current\_wire | locked\_comp | partial\_selection | power\_layers | reduction\_ratio | reroute\_wire | route\_pass | sel\_signal\_layers | selectedcomp | signal\_layers | smd\_pins | thru\_pins | top\_layer\_sel | total\_pass | total\_pins | totalcomp | unconnect\_wire | units | unplaced\_comp | unplaced\_large | unplaced\_small]

The following table shows system variable definitions.

Variable Name	Definition
bottom_layer_sel	1 if bottom layer is selected, 0 if not selected.
complete_wire	Completion ratio expressed as a percentage.
conflict_clearance	Number of clearance conflicts.
conflict_crossing	Number of crossing conflicts.
conflict_length	Number of length rule violations.
conflict_wire	Number of crossing and clearance conflicts.
conflict_xtalk	Number of crosstalk rule violations.
connections	Total number of connections to be routed.
current_wire	Current wire being routed or rerouted.
locked_comp	Number of locked components.
partial_selection	Value equals 0 if no nets or all nets are selected; value equals 1 when one or more nets but fewer than all nets are selected.
power_layers	Number of power layers.
reduction_ratio	Conflicts reduction ratio from last completed routing pass.
reroute_wire	Number of wires and wire segments to be rerouted in the current pass.

Design Language Syntax

Variable Name	Definition
route_pass	Current routing pass or last pass.
sel_signal_layers	Number of selected signal layers.
selectedcomp	Number of selected components.
signal_layers	Number of signal layers.
smd_pins	Number of smd pads.
thru_pins	Number of through-hole pins.
top_layer_sel	1 if top layer is selected, 0 if not selected.
total_pass	Total passes for the current command.
total_pins	Total number of pins and pads.
totalcomp	Total number of components on the PCB.
unconnect_wire	Unconnected wires (unconnects).
units	Unit of measure set by user.
unplaced_comp	Number of components outside the placement boundary.
unplaced_large	Number of large components outside the placement boundary.
unplaced_small	Number of small components outside the placement boundary.

```
<tandem_noise_descriptor>
```

Noise coupling between nets is controlled by computing the total noise that impinges on receiving nets from transmitting nets on adjacent layers. Each net in a design can have a different noise weight or transmitting characteristic. A net's noise weight determines how

Design Language Syntax

much noise it transmits. Each net can also have a different maximum noise specification or receiving characteristic. The maximum noise specification determines how much noise a net can accumulate or pick up from other nets before a **tandem\_noise** violation occurs. See also <a href="max\_noise\_descriptor">max\_noise\_descriptor</a>>.

The following table describes < tandem\_noise\_descriptor > keywords.

Keyword	Description	
off	Resets a rule to unspecified. To change an existing tandem noise rule, always use tandem_noise off before setting the new rule.	
gap	Is measured edge-to-edge between tandem wires. Coupled noise is calculated for tandem wires when the edge-to-edge distance is equal to or less than the specified <b>gap</b> value and the wires are parallel for a distance that exceeds the <b>threshold</b> value. If a wire does not have a <b>max_noise</b> value, no noise is computed for that wire.	
	A negative <b>gap</b> value determines the amount of coupling if wires overlap. If wires of different width completely overlap, the negative <b>gap</b> value between those wires equals the width of the smaller wire.	
threshold	Is the minimum tandem length that is considered when tandem noise violations are computed. When <b>threshold</b> is unspecified, its value defaults to the <b>gap</b> value.	

June 2007 137 Product Version 16.0

Design Language Syntax

# Weight Represents to


Represents units of noise per unit of length, where the unit of noise is typically volts or millivolts and the unit of length is the current dimensional unit. The **weight** value corresponds to the noise transmitted over a unit length of wire to surrounding wires. The tool computes the noise coupled from a tandem transmitting wire by multiplying the transmitting wire's tandem length by its **weight** value. All coupled noise sources are accumulated for each receiving net, and the sum is compared against that net's maximum noise specification to determine if a violation exists.

A coupled noise weight versus gap curve can be approximated for a net by entering two or more weight versus gap pairs. For example:

```
unit inch
rule net clk1 (tandem_noise (gap .010) (threshold .050)
  (weight .015))
(tandem_noise (gap .020) (threshold .100)
  (weight .010))
(tandem_noise (gap .036) (threshold .100)
  (weight .005))
```

Design Language Syntax

#### **Coupled Noise Weight Versus Gap**

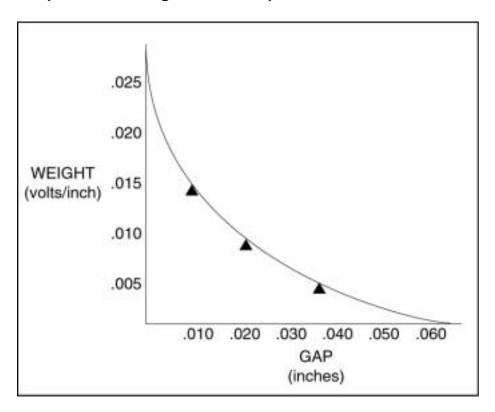

If multiple **tandem\_noise** rules are applied to a net at different precedence levels, violations are checked only at the highest level.

Tandem is defined as parallelism of wires on adjacent layers. This form of parallelism is controlled by setting a tandem length limit and a minimum wire-to-wire gap.

Design Language Syntax

The following table describes < tandem\_segment\_descriptor > keywords.

Keyword	Description
off	Resets a rule to the unspecified state. To change an existing tandem segment rule, always use <b>tandem_segment off</b> before setting the new rule.
gap	Is measured edge-to-edge between tandem wires. A tandem segment violation does not occur when <b>gap</b> is greater than the specified value.
	A negative <b>gap</b> value allows receiving and transmitting nets to overlap by the specified value. If overlap is such that an entire net width is within the other net width, specify a negative <b>gap</b> value which is the width of the smaller net.
limit	Is the maximum tandem length that is allowed before a <b>tandem_segment</b> violation occurs. When <b>limit</b> is unspecified or is less than the <b>gap</b> value, the <b>limit</b> value defaults to the <b>gap</b> value.

Power nets are not included in tandem segment rule checking.

The following example illustrates how a table of rules can be created by supplying multiple tandem\_segment rules.

```
(Net clk1 (pins...) (rule (tandem_segment (gap 11) (limit 500)) (tandem_segment (gap 14) (limit 1200)) (tandem_segment (gap 16) (limit 1800)) )
```

#### Violations occur when

- **gap** is less than or equal to 11 and the tandem length is greater than 500.
- gap is less than or equal to 14 and the tandem length is greater than 1200.
- gap is less than or equal to 16 and the tandem length is greater than 1800.

Design Language Syntax

If multiple **tandem\_segment** rules are applied at different precedence levels, violations are checked only at the highest level. For the order of routing rule precedence, see the Routing and Placement Rule Hierarchies section at the beginning of this manual.

```
<tandem_shield_overhang_descriptor>
<tandem_shield_overhang_descriptor>::=
(tandem_shield_overhang <positive_dimension>)
```

Use this descriptor to specify the extra amount added to each side of the tandem shield wire. The tandem shield width is two times the **tandem\_shield\_overhang** value plus the width of the wire being shielded. The **tandem\_shield\_overhang** value defaults to the width of the shield wire.

Design Language Syntax

```
<testpoint_rule_descriptor>
    <testpoint_rule_descriptor>::=
    (testpoint
      {[(allow_antenna [off | on])] |
         [(max_len <positive_dimension>)] |
         [(center_center < positive_dimension>)] |
         [(comp edge center < positive dimension>)] |
         [(grid <positive_dimension>) [(direction [x | y])]
           [(offset <positive dimension>)])] |
         [(image outline clearance <positive dimension>)] |
         [(insert [off | on])] |
         [(pin allow [off | on [(comp {<component_id>})]])] |
         [(side [front] | back | both])] |
         [(use_via {< via_id>})]
      }
    )
```

The **allow\_antenna** control defaults to **on**. The **max\_len** option restricts the length of antennas created during test point routing.

The **center\_center** and **comp\_edge\_center** controls are not checked if values are not specified for these fields.

The **grid** setting defaults to the pcb via grid in effect at the time of test point identification. If a **direction** option is not specified, the grid spacing value and **offset** value (if given) apply equally in the x and y directions. If a **direction** option is specified, the **grid** spacing value and **offset** value (if given) only apply to the specified direction. To specify nonuniform grids or offsets in the x and y directions, you must use two **grid** option expressions.

The **image\_outline\_clearance** control defaults to area test point clearance, **pin\_allow** defaults to **off**, and **side** defaults to **back**. If the **use\_via** value is not specified, the narrowest diameter via is used.

```
<test_points_descriptor>
<test_points_descriptor>::=
(test_points {<test_point_descriptor>})
```

Design Language Syntax

```
<test_type_descriptor>
<test_type_descriptor>::=
(type [route | protect | normal])
```

A **route** type test point cannot be altered, although the router can complete a connection to this type. A **protect** type cannot be altered unless the user first unprotects the test point. A **normal** type test point can be deleted, ripped up, or moved to a different location.

#### <thickness descriptor>

The thickness value used in conjunction with **copper\_thickness** specifies the copper thickness of a conductive layer. When used with **thickness**, the value specifies the layer to layer thickness between conductive layers.

```
<time_length_factor_descriptor>
<time_length_factor_descriptor>::=
(time_length_factor < real>)
```

The **time\_length\_factor** sets a constant for time delay per unit of wire length, which is used to calculate wire length limits when a **circuit** delay rule applies. The constant converts internally to delay per database unit. See also <<u>circuit descriptors</u>>.

```
<time_resolution_descriptor>
<time_resolution_descriptor>::=
    (time_resolution [sec | msec | usec | nsec | psec]
    cpositive_integer>)
```

Symbol	Time Unit
sec	second
msec	millisecond
usec	microsecond
nsec	nanosecond
psec	picosecond

The default time unit is **nsec** with a positive integer of 1000.

Design Language Syntax

```
<time_stamp>::=
    <month> <date> <hour> : <minute> : <second> <year>
```

The <month> is a string that has three alpha characters; <date>, <hour>, <minute>, and <second> are strings that each have two numeric characters; <year> is a string that has four numeric characters.

```
<true><tjunction_descriptor></tjunction_descriptor>::=
(tjunction [on | off])
```

The <tjunction\_descriptor> controls whether tjunctions are permitted on starburst ordered nets. When tjunction on is set, tjunctions can occur at the locations controlled by junction\_type. When tjunction off is set, tjunctions are not permitted.

The also < junction type descriptor >.

The **tjunction** default is **on** for starburst nets and **off** for daisy-chained nets.

```
<topology_descriptor>
<topology_descriptor>::=
(topology {[<fromto_descriptor>|
<component_order_descriptor>]})
```

The <topology\_descriptor> defines the preferred topology for each net in a class. The tool ignores components that are included in <topology\_descriptor> but are not connected to any net in the class.

See < component\_order\_descriptor > for details about ordering nets using component reference designators.

Design Language Syntax

```
<total_delay_descriptor>
<total_delay_descriptor>::=
([max_total_delay | min_total_delay] <delay value>)
```

The max\_total\_delay and min\_total\_delay rules apply only to groups. The rules are checked against the sum of all fromto delays in a group. The sum of the routed delays of the fromtos in the group must be in the max\_total\_delay and min\_total\_delay range.

```
<total_length_descriptor>
<total_length_descriptor>::=
([max_total_length | min_total_length]
<positive_dimension>)
```

The max\_total\_length and min\_total\_length rules apply only to groups. The rules are checked against the sum of all fromto lengths in a group. The sum of the routed lengths of the fromtos in the group must be in the max\_total\_length and min\_total\_length range.

```
<track_id_descriptor>
<track_id_descriptor>::=
(track_id <integer>)
```

The **track\_id** establishes a numbering base in the routes file, which is used when the routing information in the file is translated back to the layout system.

The <turret#> descriptor indicates translated wires. The layout system can use <turret#> to tag wires read by the tool. This number is not used internally, but passes through the system and into the wires file. The acceptable range of values for <turret#> is from 1 to 127.

```
<unit_descriptor>
<unit_descriptor>::=
(unit <dimension_unit>)
```

Design Language Syntax

The dimensional units for information in a design file are set by the <a href="resolution\_descriptor">resolution\_descriptor</a> in the structure section. You can override the resolution units within a particular section by using a <a href="mailto:current-color: blue, color: blu

For example, suppose the <resolution\_descriptor> sets the PCB dimensional units to millimeters, but all the component images in the library section are defined in inches. You can identify the image dimensions as inches by using a <unit\_descriptor> at the beginning of the library section. This <unit\_descriptor> tells the tool to interpret the library information in inches. If a <unit\_descriptor> is not used at the beginning of the next section, the tool interprets the information in this section in millimeters.

The <unit\_descriptor> affects only the section in which it resides. For example:

```
(unit inch)
```

User variable names must start with an alphabetic character. The remaining characters can consist of any combination of upper and lower case letters, the digits 0 through 9, and the underscore character (\_). System variable names are reserved and cannot be used.

```
<variable_name>::=
[<system variable>| <user variable>]
```

Design Language Syntax

```
<vertex>
    <vertex>::=
        <x coordinate> <y coordinate>
<via#>
        <via#>::= <positive_integer>
```

The <*via#*> descriptor indicates translated vias. The layout system can use <*via#*> to tag vias read by the tool. This number is not used internally, but passes it through the system and into the wires file. The acceptable range of values for <*via#*> is from 1 to 127.

```
<via_array_template_descriptor>
    <via_array_template_descriptor>::=
    (via_array_template < via_array_template_id>
        {<microvia_descriptor>}
    )
```

You must specify the minimum dimensions of a via in the *<microvia\_descriptor>*. (This requires **microvia on** in the *<control\_descriptor>*.)

You can use Change Via mode to change row, column, via width, and via height at the same time.

The <*via\_at\_smd\_descriptor*> controls whether vias are permitted under SMD pads. When **via\_at\_smd** is **on**, the router can place vias under SMD pads. The default is **off**. You can also allow vias under SMD pads by using the **via\_at\_smd** rule.

Design Language Syntax

When **via\_at\_smd** is **on** and the **grid** setting is **off**, the via is permitted at the origin of an SMD pad. If the pad origin is off grid, you can turn the **grid** setting **on** to position the via at a grid point nearest the pad origin within the pad boundary. The **grid** default is **off**.

Turn the **fit** setting **on** to ensure that any via placed under an SMD pad fits entirely within the boundary of the pad. If the via shape on the pad layer extends beyond a pad's boundary, the via is not located under the pad. The **fit** default is **off**.

Three conditions must be met before vias can be placed under SMDs:

- There must be at least one via available with a shape on the SMD mounting layer.
- The attach parameter for the SMD padstack must be set to on in the design file. The attach rule is usually set to on in the layout system.
- The via\_at\_smd on rule must be applied.

During routing, any via in the via {<padstack\_id>} list is available for use. Vias listed as spares are used only if they are associated with a net by a use\_via rule, specified with the testpoint or testpoint rule commands, or selected by the user with the select command. Otherwise, spare vias are not used.

The < via\_id> identifies a pad defined as a via in the < via\_descriptor>.

Design Language Syntax

The spiral, staggered, and staired via patterns default to **off**. When a via pattern is turned **on** without specifying **min\_gap**, the minimum gap between vias in the pattern defaults to the largest via\_via clearance rule in effect.

The **position** rule specifies the X and Y coordinates for a virtual pin. If using the *<vertex>* location would cause a rule violation, use the **radius** option to set the virtual pin location at a certain distance from the vertex. The autorouter can move the pin to avoid the violation. The default radius is 0.5 inches.

The <*virtual\_pin\_descriptor*> describes a pseudo pin or via that can be used to specify a tree or other wiring topology. Use virtual pins to control delays (for example to minimize clock skew) by matching wire lengths without adding excessive wiring on each branch of a net.

#### For example:

```
(net CLK1 (fromto U1-1 (virtual_pin FP1)
  (circuit (length 350 300)))
(fromto (virtual_pin FP1) U2-1)
(fromto (virtual_pin FP1) U3-1))
```

You can also use virtual pins to control impedance by creating a common path or trunk with a width rule that is different from the rule used for the branches. You can use multiple levels of virtual pins to construct big tree topologies that include tjunctions.

Design Language Syntax

Virtual pins are seeded in a way that satisfies routing length constraints. Use **junction\_type** to control whether both vias and wire tjunctions or only vias are allowed as virtual pins. See also <<u>junction\_type\_descriptor</u>>.

You can disband virtual pin assignments by using the forget net command.

```
<virtual_pin_name>
<virtual_pin_name>::= <id>
```

A <*virtual\_pin\_name*> must be unique within a net; however, the same <*virtual\_pin\_name*> can be used in more than one net.

```
<voltage_resolution_descriptor>
  <voltage_resolution_descriptor>::=
  (voltage_resolution [volt | mvolt] <positive_integer>)
```

The symbol **mvolt** means millivolt. The default voltage unit is **volt** with a *<positive\_integer>* equal to 1000.

```
<was_is_descriptor>
  <was_is_descriptor>::=
  (was_is {(pins <pin_reference> <pin_reference>)})
```

The <was\_is\_descriptor> is included in a session file when gate, subgate, or pin swaps occur during a placement session.

The <was\_is\_descriptor> contains only information about the original pins and the new pins, no matter how the swaps are executed. You cannot determine the swapping history from the <was is descriptor>.

For example, if pin U8-3 swaps with U9-3, the result is recorded as

```
(was_is
(pins U8-3 U9-3)
(pins U9-3 U8-3)
)
```

Only one swap operation is performed, but the session file includes two entries because two pins change as a result of the swap.

Design Language Syntax

In the following example, pin U8-3 swaps with U9-3 and pin U9-3 swaps with U10-3. The result is recorded as


Windows cut out or subtract from the shapes they overlap. Therefore, windows are not physical shapes; they are used only to subtract from other shapes. Only rectangle and polygons shapes can be used for the <window\_descriptor>. In the following examples, windows have been specified for each of the keepout areas shown in the illustration. The design file constructs are

```
(keepout (rect s2 0.060 0.494 1.240 0.818) (window (rect s2 0.110 0.580 1.165 0.750))) (keepout (rect s1 0.490 0.090 0.770 1.210) (window (rect s1 0.505 0.105 0.755 1.195)))
```

The interior of each keepout is reached by routing on a different layer and by using a via to access the enclosed routing area.

Design Language Syntax

#### Keepout Areas Defined by Window\_descriptors

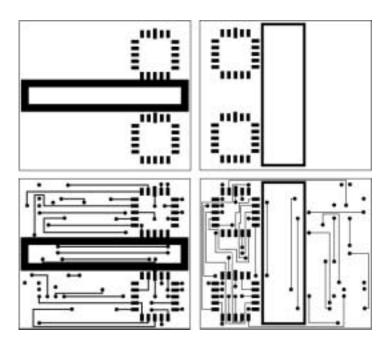

#### <wire\_descriptor>

```
<wire_descriptor>::=
[<wire shape descriptor> |
<wire via descriptor> |
<bond shape descriptor>]
```

```
<wire_guide_descriptor>
```

```
<wire_guide_descriptor>::=
(guide (connect
   (terminal <object type> [<pin reference>] <vertex>)
   (terminal <object type> [<pin reference>] <vertex>)
))
```

The vertex indicates the terminal point of the guide. The vertex should match a pin, via, or wire tjunction coordinate in the layout system.

Design Language Syntax

Use wires to identify the pin-to-pin connections you want included in a pair.

Use **gap** to control the minimum distance (<positive\_dimension>) allowed between the two routed wires in a pair. If **gap** is not included in a <wire\_pair\_descriptor>, the wire-to-wire clearance rule is used. To reset a specified **gap** to the default wire-to-wire clearance, use **-1** for the **gap** value.

You can use the **layer** keyword to apply the **gap** value to only the layer identified in <*layer\_id>*.

Design Language Syntax

```
)]
[(supply)]
)
```

Note that a wire shape can be any type of shape. See also <<u>shape descriptor></u>. When <<u>polygon descriptor></u> and <<u>rectangle descriptor></u> are applied in the wiring section of the design file, they become a wiring polygon.

A **fix** type wire cannot be altered in any way, and the router cannot route to this type. A **route** type wire cannot be altered, although the router can complete a connection to this wire type. A **normal** type wire can be deleted, ripped up, and rerouted. A **protect** type cannot be altered unless the user first unprotects the wire.

The **type** constructs also apply to wiring polygons. By default, wiring polygons are **route** type.

The **connect** constructs are used only in a routes file.

In the **shield** option, <*net\_id*> is the name of the net being shielded.

The tool attaches the **jumper** attribute to wires that are added to the jumper layer.

The **supply** keyword designates wires as source terminals. For example, in a routes or session file, shapes assigned as supply are identified with the **supply** keyword. See also

```
<net out descriptor>
    <supply pin descriptor>
    <wiring_descriptor>
    <wire via descriptor>
<wire via descriptor>
    <wire_via_descriptor>::=
    (via
      <padstack_id> {<vertex>}
      [(net < net_id>)]
      [(via number < via#>)]
      [(type [fix | route | normal | protect])]
      [(attr [test | fanout | jumper |
         virtual_pin <virtual_pin name>])]
      [(contact {</ayer_id>})]
      [(supply)]
   )
```

Design Language Syntax

A **fix** type via cannot be altered in any way, and the router cannot route to this type. A **route** type via cannot be altered, although the router can complete a connection to this via type. A **normal** type via can be deleted, ripped up, and rerouted. A **protect** type cannot be altered unless the user first unprotects the via.

The tool attaches the **jumper** attribute to vias that are used for jumpers on the jumper layer.

The **virtual\_pin** attribute marks vias used as virtual pins and the **virtual\_pin** parameter identifies virtual pins on a wire path. Virtual pin positions are saved in the routes or session file.

The **supply** keyword designates vias as source terminals. For example, in a routes or session file, shapes assigned as supply, are identified with the **supply** keyword. See also

A wires file is created by an autosave, bestsave or write wire command.

The <resolution descriptor> defines the unit and resolution used in the wires file.

Design Language Syntax

The <supply\_pin\_descriptor> identifies wire shapes in routes and session files that are used as source terminals. Other shapes assigned to the same net are routed directly to the source terminal. See <supply pin descriptor> for more details.

```
< x0 >
   < x0> := < dimension>
<xstep>
   <xstep>::= <dimension>
<x_clearance>
   <x_clearance>::= <positive_dimension>
<x coordinate>
   <x coordinate>::= <dimension>
<x_overlap>
   <x_overlap>::= <positive_dimension>
<v0>
   <y0>::= <dimension>
<ystep>
   <ystep>::= <dimension>
<y_clearance>
   <y_clearance>::= <positive_dimension>
<y_coordinate>
   <y_coordinate>::= <dimension>
```

# SPECCTRA® Design Language Reference Design Language Syntax

<y\_overlap>

<y\_overlap>::= <positive\_dimension>

2

# **Sample Files**

#### In this chapter...

- "Sample Design File" on page 160
- "Sample Design File with High Speed Rules" on page 182

#### **Overview**

This chapter provides two samples of PCB Router design files. The second design file includes high speed rules.

The PCB Router design file consists of four basic data types:

- Design data, which includes board boundaries, layer definitions, design rules, and keepout definitions
- Placement data, which includes X,Y locations of components and mounting holes on the PCB
- Library data, which includes images (footprint patterns) for all placed components, and pin and via padstack definitions
- Network data, which includes net names, component reference designators, and pin numbers

### Sample Design File

The following design file sample shows design, placement, library, network, and prerouted wiring types of data.

#### **Design Data**

```
(PCB test_brd_20
#The PCB statement is used for documentation purposes.
#The name is used only to identify the listing. The design
#filename can be different.
 (resolution MIL 10)
 (structure
#The structure contains the PCB definition.
  (boundary
(rect pcb 5956.00000 345.90000 11202.00000
 3888.00000)
#The PCB outline is defined by a pcb boundary statement.
#This is the outermost perimeter that is displayed on the
  (boundary
(rect signal 6180 400 11000 3850)
#The signal boundary is identified by this statement. No
#routing is permitted outside this boundary.
 (via VIA)
 (grid via 1)
 (grid wire 1)
 (rule
(width 8)
(clear 8)
(clear 16 (type wire area))
(clear 12 (type via_smd via_pin))
 (layer L1 (type signal) (direction vert))
 (layer L2 (type signal) (direction hori) (rule (width 6)))
 (layer L3 (type power) (use_net GND))
 (layer L4 (type power) (use_net VDD VCC))
 (layer L5 (type signal) (direction vert) (rule (width 6)))
 (layer L6 (type signal) (direction hori))
```

```
(keepout (rect signal 6192 942 8011 402))
(keepout (rect L1 7980 625 10991 402))
(keepout (rect L6 6186 3847 6391 905))
(via_keepout (rect signal 8129 2537 9277 2407))
(plane VDD
    (polygon L4 0 6180 400 6180 3850 7100 3850 7100 400 6180 400)
)
(plane VCC
    (polygon L4 0 7150 400 7150 3850 11000 3850 11000 400 7150 400)
)
(plane GND
    (polygon L3 0 6180 400 6180 3850 11000 3850 11000 400 6180 400)
)
```

#### **Placement Data**

```
#The following are component instances for the PCB.
(placement
 (unit MIL)
 (component cap.01uf
  (place c1 9273.0000 1514.0000 front 90)
  (place c2 8334.0000 1508.0000 front 0)
  (place c3 8439.0000 729.0000 front 0)
  (place c4 10443.0000 720.0000 front 0)
  (place c5 10452.0000 2103.0000 front 0)
  (place c6 8334.0000 2077.0000 front 0)
  (place c7 7284.0000 1263.0000 front 0)
  (place c8 6794.0000 1893.0000 front
  (place c9 10443.0000 2707.0000 front 0)
  (place c10 9805.0000 3468.0000 front 0)
  (place c11 7494.0000 2742.0000 front 0)
  (place c12 6978.0000 3442.0000 front 0)
 (component plcc20
  (place U17 10500.0000 725.0000 front 0)
  (place U37 9100.0000 725.0000 front 0)
  (place U42 9800.0000 1325.0000 front 0)
  (place U89 9800.0000 725.0000 front 0)
  (place U94 9100.0000 1325.0000 front 0)
```

```
(place U97 8400.0000 1325.0000 front 0)
  (place U100 10500.0000 1925.0000 front
  (place U101 8400.0000 1925.0000 front
  (place U102 9100.0000 1925.0000 front
  (place U114 10500.0000 1325.0000 front 0)
  (place U115 9800.0000 1925.0000 front 0)
 (component qfp68
  (place U74 8650.0000 2733.0000 front 0)
 (component qfp84
  (place U75 10733.0000 3086.0000 front 0)
  (place U76 7817.0000 3100.0000 front 0)
 (component qfp100
  (place U71 7638.0000 1197.0000 front 0)
 (component so24
  (place U30 8600.0000 1075.0000 front 0)
 )
# End of placement data
```

#### **Library Data**

#The following library statement defines an image named <math>#qfp100. The first pin statement defines a pin that uses #padstack 868. The pin name is 1. The pin is located at #coordinates X=0, Y=0.

#All pin locations defined in this section are offset from the #location defined by the place statement found earlier in the #file. The padstack definitions are included in the library #section. The second pin statement also uses padstack 868, #names the pin 2, and specifies a location offset.

```
(library
(image qfp100
(pin 868 1 0 0)
(pin 868 2 0 31)
(pin 868 3 0 63)
(pin 868 4 0 94)
(pin 868 5 0 126)
(pin 868 6 0 157)
```

(pin	868	7	0				9			
(pin	868	8	0				0			
(pin		9	0		2	5	2	)		
(pin	868	1(		0			8			
(pin	868	11	L	0		3	1	5	)	
(pin	868	12	2	0		3	4	6	)	
(pin	868	13	3	0		3	7	8	)	
(pin	868	14	1	0		4	0	9	)	
(pin	868	15	5	0		4	4	1	)	
(pin	868	16	5	0		4	7	2	)	
(pin	868	1	7	0		5	0	4	)	
(pin	868	18	3	0		5	3	5	)	
(pin	868	19	9	0		5	6	7	)	
(pin	868	20	)	0		5	9	8	)	
(pin	868	21	L	0		6	3	0	)	
(pin	868	22	2	0		6	6	1	)	
(pin	868	23	3	0		6	9	3	)	
(pin	868	24	1	0		7	2	4	)	
(pin	868	25	5	0		7	5	6	)	
(pin	847	26	5	-	1	6	0		916	)
(pin	847	2	7	-	1	9	1		916	)
(pin	847	28	3	-	2	2	3		916	)
(pin	847	29	9	-	2	5	4		916	)
(pin	847	3(	)	-	2	8	6		916	)
(pin	847	31	L	-	3	1	7		916	)
(pin	847	32	2	-	3	4	9		916	)
(pin	847	33	3	-	3	8	0		916	)
(pin	847	34	1	-	4	1	2		916	)
(pin	847	35	5	-	4	4	3		916	)
(pin	847	36	5	-	4	7	5		916	)
(pin	847	3	7	-	5	0	6		916	)
(pin	847	38	3	-	5	3	8		916	)
(pin	847	39	9	-	5	6	9		916	)
(pin	847	4(	)	-	6	0	1		916	)
(pin	847	41	L	-	6	3	2		916	)
(pin	847	42	2	-	6	6	4		916	)
(pin	847	43	3	-	6	9	5		916	)
(pin	847	44	1	-	7	2	7		916	)
(pin	847	45	5	-	7	5	8		916	)
(pin	847	46	5	-	7	9	0		916	)
(pin	847	4	7	-	8	2	1		916	)

June 2007 163 Product Version 16.0

(pin	847	48	-853 916)
(pin	847	49	-884 916)
(pin	847	50	-916 916)
(pin	868	51	-1076 756)
(pin	868	52	-1076 724)
(pin	868	53	-1076 693)
(pin	868	54	-1076 661)
(pin	868	55	-1076 630)
(pin	868	56	-1076 598)
(pin	868	57	-1076 567)
(pin	868	58	-1076 535)
(pin	868	59	-1076 504)
(pin	868	60	-1076 472)
(pin	868	61	-1076 441)
(pin	868	62	-1076 409)
(pin	868	63	-1076 378)
(pin	868	64	-1076 346)
(pin	868	65	-1076 315)
(pin	868	66	-1076 283)
(pin	868	67	-1076 252)
(pin	868	68	-1076 220)
(pin	868	69	-1076 189)
(pin	868	70	-1076 157)
(pin	868	71	-1076 126)
(pin	868	72	-1076 94)
(pin	868	73	-1076 63)
(pin	868	74	-1076 31)
(pin	868	75	-1076 0)
(pin	847	76	-916 -160)
(pin	847	77	-884 -160)
(pin	847	78	-853 -160)
(pin	847	79	-821 -160)
(pin	847	80	-790 -160)
(pin	847	81	-758 -160)
(pin	847	82	-727 -160)
(pin	847	83	-695 -160)
(pin	847	84	-664 -160)
(pin	847	85	-632 -160)
(pin	847	86	-601 -160)
(pin	847	87	-569 -160)
(pin	847	88	-538 -160)

June 2007 164 Product Version 16.0

```
(pin 847 89 -506 -160)
 (pin 847 90 -475 -160)
 (pin 847 91 -443 -160)
 (pin 847 92 -412 -160)
 (pin 847 93 -380 -160)
 (pin 847 94 -349 -160)
 (pin 847 95 -317 -160)
 (pin 847 96 -286 -160)
 (pin 847 97 -254 -160)
 (pin 847 98 -223 -160)
 (pin 847 99 -191 -160)
 (pin 847 100 -160 -160)
(image plcc20
 (pin 763 1 0 0)
 (pin 763 2 50 0)
 (pin 763 3 100 0)
 (pin 784 4 175 75)
 (pin 784 5 175 125)
 (pin 784 6 175 175)
 (pin 784 7 175 225)
 (pin 784 8 175 275)
 (pin 763 9 100 350)
 (pin 763 10 50 350)
 (pin 763 11 0 350)
 (pin 763 12 -50 350)
 (pin 763 13 -100 350)
 (pin 784 14 -175 275)
 (pin 784 15 -175 225)
 (pin 784 16 -175 175)
 (pin 784 17 -175 125)
 (pin 784 18 -175 75)
 (pin 763 19 -100 0)
 (pin 763 20 -50 0)
(image qfp84
(pin 724 1 0 0)
 (pin 724 2 0 50)
 (pin 724 3 0 100)
 (pin 724 4 0 150)
 (pin 724 5 0 200)
```

(pin	724	6	0		2	5	0	)						
(pin	724	7	0		3	0	0	)						
(pin	724	8	0		3	5	0	)						
(pin	724	9	0		4	0	0	)						
(pin	724	10	)	0		4	5	0	)					
(pin	724	11	-	0		5	0	0	)					
(pin	703	12	2	-	6	7		5	6	7	)			
(pin	703	13	3	-	1	1	7		5	6	7	)		
(pin	703	14	Į	-	1	6	7		5	6	7	)		
(pin	703	15	5	-	2	1	7		5	6	7	)		
(pin	703	16	5	-	2	6	7		5	6	7	)		
(pin	703	17	7	-	3	1	7		5	6	7	)		
(pin	703	18	3	-	3	6	7		5	6	7	)		
(pin	703	19	)	-	4	1	7		5	6	7	)		
(pin	703	20	)	-	4	6	7		5	6	7	)		
(pin	703	21	-	-	5	1	7		5	6	7	)		
(pin	703	22	2	-	5	6	7		5	6	7	)		
(pin	703	23	3	-	6	1	7		5	6	7	)		
(pin	703	24	Į	-	6	6	7		5	6	7	)		
(pin	703	25	5	-	7	1	7		5	6	7	)		
(pin	703	26	5	-	7	6	7		5	6	7	)		
(pin	703	27	7	-	8	1	7		5	6	7	)		
(pin	703	28	3	-	8	6	7		5	6	7	)		
(pin	703	29	)		9				5	6	7	)		
(pin	703	30	)	-						6	7	)		
(pin	703	31	-		1							7		
(pin	703	32	2	-	1	0	6	7		5	6	7	)	
(pin	724	33	3	-	1	1	3	4		5	0	0	)	
(pin			Ŀ	-	1	1	3	4		4	5	0	)	
(pin	724	35	5	-	1	1	3	4		4	0	0	)	
(pin				-	1	1	3	4				0		
(pin	724	37	7	-	1	1	3	4		3	0	0	)	
(pin			3	-	1	1	3	4		2	5	0	)	
(pin	724	39	)	-	1	1	3	4		2	0	0	)	
(pin	724	40	)	-	1	1	3	4		1	5	0	)	
(pin	724	41			1							0	)	
(pin		42			1						0	)		
(pin					1					0				
(pin												0		
	724	45	5	-	1	1	3	4					0	
(pin	724	46	5	-	1	1	3	4		-	1	5	0	)

June 2007 166 Product Version 16.0

```
(pin 724 47 -1134 -200)
 (pin 724 48 -1134 -250)
 (pin 724 49 -1134 -300)
 (pin 724 50 -1134 -350)
 (pin 724 51 -1134 -400)
 (pin 724 52 -1134 -450)
 (pin 724 53 -1134 -500)
 (pin 703 54 -1067 -567)
 (pin 703 55 -1017 -567)
 (pin 703 56 -967 -567)
 (pin 703 57 -917 -567)
 (pin 703 58 -867 -567)
 (pin 703 59 -817 -567)
 (pin 703 60 -767 -567)
 (pin 703 61 -717 -567)
 (pin 703 62 -667 -567)
 (pin 703 63 -617 -567)
 (pin 703 64 -567 -567)
 (pin 703 65 -517 -567)
 (pin 703 66 -467 -567)
 (pin 703 67 -417 -567)
 (pin 703 68 -367 -567)
 (pin 703 69 -317 -567)
 (pin 703 70 -267 -567)
 (pin 703 71 -217 -567)
 (pin 703 72 -167 -567)
 (pin 703 73 -117 -567)
 (pin 703 74 -67 -567)
 (pin 724 75 0 -500)
 (pin 724 76 0 -450)
 (pin 724 77 0 -400)
 (pin 724 78 0 -350)
 (pin 724 79 0 -300)
 (pin 724 80 0 -250)
 (pin 724 81 0 -200)
 (pin 724 82 0 -150)
 (pin 724 83 0 -100)
 (pin 724 84 0 -50)
)
(image cap.01uf
```

June 2007 167 Product Version 16.0

```
(pin 1030 1 0 0)
 (pin 1030 2 110 0)
(image qfp68
 (pin 703 1 0 0)
 (pin 703 2 50 0)
 (pin 703 3 100 0)
 (pin 703 4 150 0)
 (pin 703 5 200 0)
 (pin 703 6 250 0)
 (pin 703 7 300 0)
 (pin 703 8 350 0)
 (pin 703 9 400 0)
 (pin 724 10 467 67)
 (pin 724 11 467 117)
 (pin 724 12 467 167)
 (pin 724 13 467 217)
 (pin 724 14 467 267)
 (pin 724 15 467 317)
 (pin 724 16 467 367)
 (pin 724 17 467 417)
 (pin 724 18 467 467)
 (pin 724 19 467 517)
 (pin 724 20 467 567)
 (pin 724 21 467 617)
 (pin 724 22 467 667)
 (pin 724 23 467 717)
 (pin 724 24 467 767)
 (pin 724 25 467 817)
 (pin 724 26 467 867)
 (pin 703 27 400 934)
 (pin 703 28 350 934)
 (pin 703 29 300 934)
 (pin 703 30 250 934)
 (pin 703 31 200 934)
 (pin 703 32 150 934)
 (pin 703 33 100 934)
 (pin 703 34 50 934)
 (pin 703 35 0 934)
 (pin 703 36 -50 934)
 (pin 703 37 -100 934)
```

June 2007 168 Product Version 16.0

```
(pin 703 38 -150 934)
 (pin 703 39 -200 934)
 (pin 703 40 -250 934)
 (pin 703 41 -300 934)
 (pin 703 42 -350 934)
 (pin 703 43 -400 934)
 (pin 724 44 -467 867)
 (pin 724 45 -467 817)
 (pin 724 46 -467 767)
 (pin 724 47 -467 717)
 (pin 724 48 -467 667)
 (pin 724 49 -467 617)
 (pin 724 50 -467 567)
 (pin 724 51 -467 517)
 (pin 724 52 -467 467)
 (pin 724 53 -467 417)
 (pin 724 54 -467 367)
 (pin 724 55 -467 317)
 (pin 724 56 -467 267)
 (pin 724 57 -467 217)
 (pin 724 58 -467 167)
 (pin 724 59 -467 117)
 (pin 724 60 -467 67)
 (pin 703 61 -400 0)
 (pin 703 62 -350 0)
 (pin 703 63 -300 0)
 (pin 703 64 -250 0)
 (pin 703 65 -200 0)
 (pin 703 66 -150 0)
 (pin 703 67 -100 0)
 (pin 703 68 -50 0)
 (via_keepout (rect signal -400 100 400 850))
(image so24
 (pin 1052 1 0 0)
 (pin 1052 2 -50 0)
 (pin 1052 3 -100 0)
 (pin 1052 4 -150 0)
 (pin 1052 5 -200 0)
 (pin 1052 6 -250 0)
 (pin 1052 7 -300 0)
```

```
(pin 1052 8 -350 0)
 (pin 1052 9 -400 0)
 (pin 1052 10 -450 0)
 (pin 1052 11 -500 0)
 (pin 1052 12 -550 0)
 (pin 1052 13 -550 -350)
 (pin 1052 14 -500 -350)
 (pin 1052 15 -450 -350)
 (pin 1052 16 -400 -350)
 (pin 1052 17 -350 -350)
 (pin 1052 18 -300 -350)
 (pin 1052 19 -250 -350)
 (pin 1052 20 -200 -350)
 (pin 1052 21 -150 -350)
 (pin 1052 22 -100 -350)
 (pin 1052 23 -50 -350)
 (pin 1052 24 0 -350)
(padstack 402
(shape (circ signal 30))
(padstack 868
(shape (rect L1 -62 -8 62 8))
(padstack 847
(shape (rect L1 -8 -62 8 62))
(padstack 763
 (shape (rect L1 -12 -40 12 40))
(padstack 784
 (shape (rect L1 -40 -12 40 12))
(padstack 703
(shape (rect L1 -15 -35 15 35))
(padstack 724
(shape (rect L1 -35 -15 35 15))
(padstack 1083
```

```
(shape (rect L1 -30 -40 30 40))
)
(padstack 805
  (shape (rect L1 -40 -30 40 30))
)
(padstack 1030
  (shape (rect L6 -40 -30 40 30))
)
(padstack 1104
  (shape (rect L6 -40 -30 40 30))
)
(padstack 1052
  (shape (rect L1 -13 -40 13 40))
)
(padstack VIA
  (shape (circ signal 30))
)
# End of library data
```

#### **Network Data**

```
# Network data for Sample PCB
 (network
  (net GND
   (pins U75-7 U75-6 U75-5 U75-4 U75-3 U75-2 U115-16
         U115-15 U115-14 U115-13 U115-12 U37-5 U30-24
          U30-23 U30-22 U76-71 U76-70 U76-68 U76-67 U76-66
          U76-63 U30-20 U89-10 U89-9 U89-8 U89-4 U76-84
          U76-83 U76-82 U76-80 U71-51 U71-50 U71-46 U71-44
         U71-43 U71-41 U71-40 U71-39 U71-38)
   (rule (width 16))
  (net VDD
   (pins U101-11 U101-10 U101-8 U101-6 U101-3 U100-20
          U100-13 U71-95 U71-94 U71-93 U71-92 U71-91 U71-90
          U71-89 U71-88 U17-19 U17-16 U17-15 U17-14 U17-13
          U17-11 U17-10 U97-16 U97-14 U97-13 U97-11 U97-10
         U97-4 U97-3 U42-7 U42-4 U42-1 U37-20 U37-18 U37-15
         U37-14 U37-13 U42-20 U42-19 U42-18 U42-17 U42-16
         U42-15 U42-14)
   (rule (width 16))
  (net VCC
```

```
(pins U71-16 U71-14 U71-13 U71-6 U71-4 U71-2 U71-1
       U42-13 U42-12 )
(rule (width 16))
)
(net CPU-D/C#
(pins U71-11 U89-2 U102-8)
(net CPU-M/IO#
(pins U71-15 U89-1 U102-7)
(net MC-BD2
(pins U76-39 U74-18 U30-2 U114-9)
(net MC-BD3
(pins U76-38 U74-19 U30-1 U97-5)
(net MC-BD5
(pins U76-36 U74-22 U30-5 U17-7)
(net MC-BD7
 (pins U76-34 U74-24 U30-8 U75-71)
(net CPU-W/R#
(pins U71-12 U89-3 U102-9)
(net CLK2B
(pins U115-1 U100-1)
(net MC-BD0
(pins U76-42 U74-16 U30-10 U37-19)
(net MC-BD1
(pins U76-41 U74-17 U30-14 U75-35)
(net MC-BD4
(pins U76-37 U74-20 U30-18 U75-38)
(net MC-BD6
(pins U76-35 U74-23 U30-16 U75-41)
(net CPU-RESET
```

```
(pins U89-6 U17-6)
(net CPU-HLDA
(pins U89-5 U17-12 U75-22)
(net LCL-CMD#
(pins U102-17 U100-2)
(net MC-CMD#
(pins U74-6 U100-5)
(net DCD-INT-ACK#
(pins U94-3 U89-19)
(net SA0
(pins U76-52 U75-52)
(net SA1
(pins U76-53 U75-53)
(net SA2
(pins U71-3 U75-54)
(net MC-TO-MEMB#
(pins U42-9 U100-3)
(net LBC-TO-MEM#
(pins U42-5 U100-4)
(net SBUS3
(pins U42-8 U100-15)
(net MEM-CMD#
(pins U71-21 U100-12)
(net MEM-M/IO#
(pins U71-9 U100-14)
(net MEM-ALE#
(pins U71-20 U100-16)
```

```
(net MEM-S0#
 (pins U71-7 U100-17)
(net MEM-S1#
 (pins U71-8 U100-18)
(net Q9
 (pins U97-18 U102-10)
(net Q8
 (pins U94-18 U97-8 U100-8)
(net CLKA#
 (pins U17-18 U102-12 U101-9)
(net LEPB-ADS#
 (pins U102-6 U101-2)
(net SYS-RESET#
 (pins U76-29 U101-4)
 (net CONVERT#
 (pins U102-5 U101-12)
 (net Q2
 (pins U102-4 U97-12 U71-76 U114-20)
 (fromto U102-4 U71-76 (rule (width 5)))
 (fromto U71-76 U97-12 (rule (width 6)))
 (fromto U97-12 U114-20 (rule (width 7)))
 (net Q1
 (pins U102-18 U101-14 U76-33 U17-9)
 (net Q0
 (pins U102-2 U101-15 U76-40 U114-2)
 (net LCL-CH-RDY#
 (pins U17-2 U101-18)
 (net CLKB
  (pins U89-7 U17-17 U94-5)
```

```
)
(net POS-CARD-EN
 (pins U74-43 U37-4)
(net GEN-CH-CHK#
(pins U74-34 U75-14)
(net LCLL-S1#
 (pins U76-69 U42-3 U114-7 U75-58)
 (source U76-69)
 (load U75-58 U114-7)
 (terminator U42-3)
(rule (reorder daisy))
(net SD7
(pins U71-5 U76-51 U75-73)
(net SD6
(pins U71-53 U76-50 U114-17 U75-61)
(net SD5
(pins U71-62 U76-49 U75-79)
(net SD4
(order U71-87 U76-48 U114-11 U75-1)
(net SD2
 (pins U71-98 U76-45 U75-9)
(net SD1
(pins U71-85 U76-44 U75-18)
(net SD0
(pins U71-45 U76-43 U75-43)
(net MC-BA0
(pins U76-32 U74-26 U75-32)
(net MCL-RD#
(pins U76-27 U75-24)
```

```
(net SD3
 (pins U71-75 U76-47 U114-15 U75-47)
 (rule (reorder daisy))
 )
 (net WATCH
 (pins U76-13 U75-77)
(net XA15
 (pins U71-24 U74-56)
(net XA14
 (pins U71-73 U74-57)
(net XA13
 (pins U71-55 U74-58)
(net XA12
 (pins U71-42 U74-59)
(net MC-M/IO#
 (pins U74-3 U37-1)
(net MC-S0#
 (pins U74-1 U37-2)
 (layer_rule L1 (rule (width 10)))
 (layer_rule L6 (rule (width 10)))
 (net MC-S1#
 (pins U74-2 U37-3)
 (net BLITZ-RDY
 (pins U71-68 U17-4)
 (net LCL-LEPB#
 (pins U97-17 U17-8)
 (layer_rule L1 (rule (width 10)))
 (layer_rule L6 (rule (width 10)))
 (net UPGD-PASS-A2
 (pins U75-70)
```

```
(net LCL-MCB#
(pins U76-79 U42-6 U115-3)
(net MC-CMDA#
(pins U76-28 U115-8 U75-27)
(net LCL-REFRESH#
(pins U71-52 U76-11 U100-9)
(net POS-IO0
(pins U76-20 U74-39)
(net POS-IO1
(pins U76-21 U74-37)
(net POS-IO3
(pins U76-23 U74-35)
(net CPUL-W/R#
(pins U42-2 U115-4)
(net CLK2A
(pins U71-17 U97-1 U17-1)
(net LCL-CMDB#
(pins U76-65 U75-57)
(net SA3
(pins U76-55 U75-55)
(net MC-BA1
 (pins U76-31 U74-27 U75-31)
(net MC-BA2
 (pins U76-30 U74-28 U75-30)
(net MC-BA3
(pins U76-22 U74-33 U75-29)
(net SYS-RESET
 (pins U71-71 U75-69)
```

```
)
(net DCD-P94#
 (pins U71-28 U76-74)
(net DCD-MEM#
(pins U71-33 U94-8)
(net CAS/RAS#
(pins U71-57 U89-11)
(net SBUS1
 (pins U94-2 U74-9 U75-63)
     (net BUS-REQ#
 (pins U97-15 U74-10 U75-13)
(net BUS-GNT#
 (pins U97-19 U74-11)
(net POS-CONF-SEC
 (pins U76-73 U74-40 U75-15)
(net MC-CH-RST
 (pins U74-44 U75-16)
(net CLKC
 (pins U76-64 U75-64)
(net SBUS2
(pins U94-6 U75-37)
(net ASSIST-NEEDE
(pins U76-81 U75-80)
(net DCD-HLT-SHUT
(pins U94-4 U89-18)
(net CLK2C
(pins U102-1 U101-1)
(rule (width 15))
```

```
(net CPU-IO#
(pins U94-1 U89-12)
(net DCD-CO-PROC#
(pins U94-7 U89-17)
(net LCL-MC-DCD#
(pins U97-9 U94-12)
(net LCL-SMP-DCD#
(pins U97-7 U94-19)
(net LCL-MEM-DCD#
(pins U97-6 U94-15)
(net DEL-LCL-MC-W
(pins U42-11 U115-17)
(net LCL-SREG-DCD
(pins U94-11 U75-59)
(net MC-SREG-DCD1
(pins U76-24 U74-29 U37-16)
 (net_number 691)
(net MC-SREG-DCD#
(pins U37-17 U75-23)
(net $20N98
(pins U71-49 U71-48 U71-47)
(net TEMP154
(pins U71-70 U71-66 U71-61 U71-59)
(net MEM-ADS#
(pins U71-22 U71-10)
(net SPEC/NORM#
(pins U89-16 U76-78)
(net CTRLA-UPGD-P
```

#### **Prerouted Wiring Data**

```
(wiring
 (resolution MIL 10)
# Net SD2
 (wire (path L1 80 74150 10370 74150 15280 74460 15280
    74460 18550 73910 18550)
   (net SD2 )
   (type protect)
   (attr fanout))
 (wire (path L6 80 73910 18550 73910 19730 66510 19730)
   (net SD2 )
    (type protect))
 (wire (path L1 80 66510 19730 65910 19730 65910 30000)
   (net SD2 )
    (type protect))
 (wire (path L1 80 65910 30000 66830 30000)
   (net SD2 )
   (type protect)
   (attr fanout))
 (wire (path L6 80 65910 30000 106280 30000)
   (net SD2 )
    (type protect))
```

```
(wire (path L1 80 106280 30000 106110 30000 106110
           34860 107330 34860)
    (net SD2)
    (type protect)
    (attr fanout))
 (via VIA 73910 18550 (net SD2)
    (type protect)
    (attr fanout) )
 (via VIA 66510 19730 (net SD2)
    (type protect) )
 (via VIA 65910 30000 (net SD2)
    (type protect)
    (attr fanout))
 (via VIA 106280 30000 (net SD2)
    (type protect)
    (attr fanout) )
)
```

## Sample Design File with High Speed Rules

The following design file sample includes high speed rules and shows design, placement, library, network, and prerouted wiring types of data.

#### **Design Data**

```
(PCB test_brd_20
 (resolution MIL 10)
 (structure
  (boundary
   (rect pcb 5956.00000 345.90000 11202.00000
          3888.00000)
  )
  (boundary
   (rect signal 6180 400 11000 3850)
  (via VIA)
  (grid via 1)
  (grid wire 1)
# Global, pcb rules
  (rule
    (width 8)
   (clear 8)
    (clear 16 (type wire_area ))
    (clear 12 (type via_smd via_pin))
  (layer L1 (type signal) (direction vert))
  (layer L2 (type signal) (direction hori) (rule (width 6)))
  (layer L3 (type power) (use_net GND))
  (layer L4 (type power) (use_net VDD VCC))
  (layer L5 (type signal) (direction vert) (rule (width 6)))
  (layer L6 (type signal) (direction hori))
  (keepout (rect signal 6192 942 8011 402))
  (keepout (rect L1 7980 625 10991 402))
  (keepout (rect L6 6186 3847 6391 905))
  (via_keepout (rect signal 8129 2537 9277 2407))
  (plane VDD
```

#### **Placement Data**

```
# The following are component instances for the PCB.
(placement
 (unit MIL)
 (component cap.01uf
  (place c1 9273.0000 1514.0000 front 90)
  (place c2 8334.0000 1508.0000 front
  (place c3 8439.0000 729.0000 front 0)
  (place c4 10443.0000 720.0000 front 0)
  (place c5 10452.0000 2103.0000 front 0)
  (place c6 8334.0000 2077.0000 front 0)
  (place c7 7284.0000 1263.0000 front 0)
  (place c8 6794.0000 1893.0000 front 0)
  (place c9 10443.0000 2707.0000 front 0)
  (place c10 9805.0000 3468.0000 front 0)
  (place c11 7494.0000 2742.0000 front 0)
  (place c12 6978.0000 3442.0000 front 0)
 (component plcc20
  (place U17 10500.0000 725.0000 front 0)
  (place U37 9100.0000 725.0000 front 0)
  (place U42 9800.0000 1325.0000 front 0)
  (place U89 9800.0000 725.0000 front 0)
  (place U94 9100.0000 1325.0000 front 0)
  (place U97 8400.0000 1325.0000 front 0)
```

```
(place U100 10500.0000 1925.0000 front 0)
(place U101 8400.0000 1925.0000 front 0)
(place U102 9100.0000 1925.0000 front 0)
(place U114 10500.0000 1325.0000 front 0)
(place U115 9800.0000 1925.0000 front 0)
)
(component qfp68
  (place U74 8650.0000 2733.0000 front 0)
)
(component qfp84
  (place U75 10733.0000 3086.0000 front 0)
  (place U76 7817.0000 3100.0000 front 0)
)
(component qfp100
  (place U71 7638.0000 1197.0000 front 0)
)
(component so24
  (place U30 8600.0000 1075.0000 front 0)
)
# End of placement data
```

### **Library Data**

#The following library statement defines an image named <math>#qfp100. The first pin statement defines a pin that uses #padstack 868. The pin name is 1. The pin is located at #coordinates X=0, Y=0.

#All pin locations defined in this section are offset from the #location defined by the place statement found earlier in the #file. The padstack definitions are included in the library #section. The second pin statement also uses padstack 868, #names the pin 2, and specifies a location offset.

```
(library
(image qfp100
(pin 868 1 0 0)
(pin 868 2 0 31)
(pin 868 3 0 63)
(pin 868 4 0 94)
(pin 868 5 0 126)
(pin 868 6 0 157)
(pin 868 7 0 189)
```

(pin	868	8	0	2	2	0)		
(pin	868	9	0	2	5	2)		
(pin	868	10	)	0	2	83	)	
(pin	868	11	-	0	3	15	)	
(pin	868	12	2	0	3	46	)	
(pin	868	13	3	0	3	78	)	
(pin	868	14	Į	0	4	09	)	
(pin	868	15	5	0	4	41	)	
(pin	868	16	5	0	4	72	)	
(pin	868	17	7	0	5	04	)	
(pin	868	18	3	0	5	35	)	
(pin	868	19	)	0	5	67	)	
(pin	868	20	)	0	5	98	)	
(pin	868	21	-	0	6	30	)	
(pin	868	22	2	0	6	61	)	
(pin	868	23	3	0	6	93	)	
(pin	868	24	ŀ	0	7	24	)	
(pin	868	25	5	0	7	56	)	
(pin	847	26	5	-1	6	0	916	)
(pin	847	27	7	-1	9	1	916	)
(pin	847	28	3	-2	2	3	916	)
(pin	847	29	)	-2	5	4	916	)
(pin	847	30	)	-2	8	6	916	)
(pin	847	31	-	- 3	1	7	916	)
(pin	847	32	2	- 3	4	9	916	)
(pin	847	33	3	- 3	8	0	916	)
(pin	847	34	Į	-4	1	2	916	)
(pin	847	35	5	-4	4	3	916	)
(pin	847	36	5	- 4	7	5	916	)
(pin	847	37	7	-5	0	6	916	)
(pin	847	38	3	-5	3	8	916	)
(pin	847	39	)	-5	6	9	916	)
(pin	847	40	)	-6	0	1	916	)
(pin	847	41	-	-6	3	2	916	)
(pin	847	42	2	-6	6	4	916	)
(pin	847	43	3	-6	9	5	916	)
(pin	847	44	Ŀ	-7	2	7	916	)
(pin	847	45	5	-7	5	8	916	)
(pin	847	46	5	-7	9	0	916	)
(pin	847	47	7	- 8	2	1	916	)
(pin	847	48	3	- 8	5	3	916	)

June 2007 185 Product Version 16.0

(pin	847	49	-884 916)
(pin	847	50	-916 916)
(pin	868	51	-1076 756)
(pin	868	52	-1076 724)
(pin	868	53	-1076 693)
(pin	868	54	-1076 661)
(pin	868	55	-1076 630)
(pin	868	56	-1076 598)
(pin	868	57	-1076 567)
(pin	868	58	-1076 535)
(pin	868	59	-1076 504)
(pin	868	60	-1076 472)
(pin	868	61	-1076 441)
(pin	868	62	-1076 409)
(pin	868	63	-1076 378)
(pin	868	64	-1076 346)
(pin	868	65	-1076 315)
(pin	868	66	-1076 283)
(pin	868	67	-1076 252)
(pin	868	68	-1076 220)
(pin	868	69	-1076 189)
(pin	868	70	-1076 157)
(pin	868	71	-1076 126)
(pin	868	72	-1076 94)
(pin	868	73	-1076 63)
(pin	868	74	-1076 31)
(pin	868	75	-1076 0)
(pin	847	76	-916 -160)
(pin	847	77	-884 -160)
(pin	847	78	-853 -160)
(pin	847	79	-821 -160)
(pin	847	80	-790 -160)
(pin	847	81	-758 -160)
(pin	847	82	-727 -160)
(pin	847	83	-695 -160)
(pin	847	84	-664 -160)
(pin	847	85	-632 -160)
(pin	847	86	-601 -160)
(pin	847	87	-569 -160)
(pin	847	88	-538 -160)
(pin	847	89	-506 -160)

June 2007 186 Product Version 16.0

```
(pin 847 90 -475 -160)
 (pin 847 91 -443 -160)
 (pin 847 92 -412 -160)
 (pin 847 93 -380 -160)
 (pin 847 94 -349 -160)
 (pin 847 95 -317 -160)
 (pin 847 96 -286 -160)
 (pin 847 97 -254 -160)
 (pin 847 98 -223 -160)
 (pin 847 99 -191 -160)
 (pin 847 100 -160 -160)
(image plcc20
 (pin 763 1 0 0)
 (pin 763 2 50 0)
 (pin 763 3 100 0)
 (pin 784 4 175 75)
 (pin 784 5 175 125)
 (pin 784 6 175 175)
 (pin 784 7 175 225)
 (pin 784 8 175 275)
 (pin 763 9 100 350)
 (pin 763 10 50 350)
 (pin 763 11 0 350)
 (pin 763 12 -50 350)
 (pin 763 13 -100 350)
 (pin 784 14 -175 275)
 (pin 784 15 -175 225)
 (pin 784 16 -175 175)
 (pin 784 17 -175 125)
 (pin 784 18 -175 75)
 (pin 763 19 -100 0)
 (pin 763 20 -50 0)
(image qfp84
(pin 724 1 0 0)
 (pin 724 2 0 50)
 (pin 724 3 0 100)
 (pin 724 4 0 150)
 (pin 724 5 0 200)
 (pin 724 6 0 250)
```

(nin	724	7 (	` `	2 0	Λ	١			
(pin	724			30					
(pin (pin	724 724			35 40					
(pin			0		5		١		
(pin	724	11	0		0				
(pin	703			5 57				١	
	703			11				, 7)	
(pin				16				7)	
	703	15		21				7)	
(pin	703			26 26				7)	
	703			31				7)	
(pin				36				7)	
	703	19		41				7)	
(pin	703	20		 16				7)	
	703			51				7)	
(pin				56				7)	
	703	23		51				7)	
(pin	703			56				7)	
	703	25	_'	71	7			7)	
(pin	703	26	_'	76	7	Ę	56	7)	
(pin	703	27	- 8	31	7	Ę	56	7)	
(pin	703	28	- 8	36	7		56	7)	
(pin	703	29	_9	91	7	Ç	56	7)	
(pin	703	30	_9	96	7	Ç	56	7)	
(pin	703	31	-:	10	1'	7	5	67	')
(pin	703	32	-1	10	6'	7	5	67	)
(pin	724	33	- 3	11	3	4	5	00	)
(pin	724	34	-:	11	3	4	4	50	)
(pin	724	35	-:	11	3	4	4	00	)
(pin	724	36	- 2	11	3	4	3	50	)
(pin	724	37	- :	11	3	4	3	00	)
(pin	724	38	-:	11	3	4	2	50	)
(pin	724	39	-:	11	3	4	2	00	)
(pin	724	40	- 3	11	3	4	1	50	)
(pin	724	41	- 3	11	3	4		00	
(pin		42		11				0)	
(pin				11					
(pin								50	
(pin									0)
(pin				11					0)
(pin	724	47	-:	11	3	4	-	20	0)

June 2007 188 Product Version 16.0

```
(pin 724 48 -1134 -250)
 (pin 724 49 -1134 -300)
 (pin 724 50 -1134 -350)
 (pin 724 51 -1134 -400)
 (pin 724 52 -1134 -450)
 (pin 724 53 -1134 -500)
 (pin 703 54 -1067 -567)
 (pin 703 55 -1017 -567)
 (pin 703 56 -967 -567)
 (pin 703 57 -917 -567)
 (pin 703 58 -867 -567)
 (pin 703 59 -817 -567)
 (pin 703 60 -767 -567)
 (pin 703 61 -717 -567)
 (pin 703 62 -667 -567)
 (pin 703 63 -617 -567)
 (pin 703 64 -567 -567)
 (pin 703 65 -517 -567)
 (pin 703 66 -467 -567)
 (pin 703 67 -417 -567)
 (pin 703 68 -367 -567)
 (pin 703 69 -317 -567)
 (pin 703 70 -267 -567)
 (pin 703 71 -217 -567)
 (pin 703 72 -167 -567)
 (pin 703 73 -117 -567)
 (pin 703 74 -67 -567)
 (pin 724 75 0 -500)
 (pin 724 76 0 -450)
 (pin 724 77 0 -400)
 (pin 724 78 0 -350)
 (pin 724 79 0 -300)
 (pin 724 80 0 -250)
 (pin 724 81 0 -200)
 (pin 724 82 0 -150)
 (pin 724 83 0 -100)
 (pin 724 84 0 -50)
(image cap.01uf
 (pin 1030 1 0 0)
 (pin 1030 2 110 0)
```

```
)
(image qfp68
 (pin 703 1 0 0)
 (pin 703 2 50 0)
 (pin 703 3 100 0)
 (pin 703 4 150 0)
 (pin 703 5 200 0)
 (pin 703 6 250 0)
 (pin 703 7 300 0)
 (pin 703 8 350 0)
 (pin 703 9 400 0)
 (pin 724 10 467 67)
 (pin 724 11 467 117)
 (pin 724 12 467 167)
 (pin 724 13 467 217)
 (pin 724 14 467 267)
 (pin 724 15 467 317)
 (pin 724 16 467 367)
 (pin 724 17 467 417)
 (pin 724 18 467 467)
 (pin 724 19 467 517)
 (pin 724 20 467 567)
 (pin 724 21 467 617)
 (pin 724 22 467 667)
 (pin 724 23 467 717)
 (pin 724 24 467 767)
 (pin 724 25 467 817)
 (pin 724 26 467 867)
 (pin 703 27 400 934)
 (pin 703 28 350 934)
 (pin 703 29 300 934)
 (pin 703 30 250 934)
 (pin 703 31 200 934)
 (pin 703 32 150 934)
 (pin 703 33 100 934)
 (pin 703 34 50 934)
 (pin 703 35 0 934)
 (pin 703 36 -50 934)
 (pin 703 37 -100 934)
 (pin 703 38 -150 934)
 (pin 703 39 -200 934)
```

```
(pin 703 40 -250 934)
 (pin 703 41 -300 934)
 (pin 703 42 -350 934)
 (pin 703 43 -400 934)
 (pin 724 44 -467 867)
 (pin 724 45 -467 817)
 (pin 724 46 -467 767)
 (pin 724 47 -467 717)
 (pin 724 48 -467 667)
 (pin 724 49 -467 617)
 (pin 724 50 -467 567)
 (pin 724 51 -467 517)
 (pin 724 52 -467 467)
 (pin 724 53 -467 417)
 (pin 724 54 -467 367)
 (pin 724 55 -467 317)
 (pin 724 56 -467 267)
 (pin 724 57 -467 217)
 (pin 724 58 -467 167)
 (pin 724 59 -467 117)
 (pin 724 60 -467 67)
 (pin 703 61 -400 0)
 (pin 703 62 -350 0)
 (pin 703 63 -300 0)
 (pin 703 64 -250 0)
 (pin 703 65 -200 0)
 (pin 703 66 -150 0)
 (pin 703 67 -100 0)
 (pin 703 68 -50 0)
 (via_keepout (rect signal -400 100 400 850))
(image so24
 (pin 1052 1 0 0)
 (pin 1052 2 -50 0)
 (pin 1052 3 -100 0)
 (pin 1052 4 -150 0)
 (pin 1052 5 -200 0)
 (pin 1052 6 -250 0)
 (pin 1052 7 -300 0)
 (pin 1052 8 -350 0)
 (pin 1052 9 -400 0)
```

```
(pin 1052 10 -450 0)
 (pin 1052 11 -500 0)
 (pin 1052 12 -550 0)
 (pin 1052 13 -550 -350)
 (pin 1052 14 -500 -350)
 (pin 1052 15 -450 -350)
 (pin 1052 16 -400 -350)
 (pin 1052 17 -350 -350)
 (pin 1052 18 -300 -350)
 (pin 1052 19 -250 -350)
 (pin 1052 20 -200 -350)
 (pin 1052 21 -150 -350)
 (pin 1052 22 -100 -350)
 (pin 1052 23 -50 -350)
 (pin 1052 24 0 -350)
(padstack 402
(shape (circ signal 30))
(padstack 868
 (shape (rect L1 -62 -8 62 8))
(padstack 847
(shape (rect L1 -8 -62 8 62))
(padstack 763
(shape (rect L1 -12 -40 12 40))
(padstack 784
(shape (rect L1 -40 -12 40 12))
(padstack 703
(shape (rect L1 -15 -35 15 35))
(padstack 724
(shape (rect L1 -35 -15 35 15))
(padstack 1083
(shape (rect L1 -30 -40 30 40))
(padstack 805
```

```
(shape (rect L1 -40 -30 40 30))
)
(padstack 1030
  (shape (rect L6 -40 -30 40 30))
)
(padstack 1104
  (shape (rect L6 -40 -30 40 30))
)
(padstack 1052
  (shape (rect L1 -13 -40 13 40))
)
(padstack VIA
  (shape (circ signal 30))
)
)
#
# End of library data
#
```

#### **Network data**

```
(network
 (net GND
  (pins U75-7 U75-6 U75-5 U75-4 U75-3 U75-2 U115-16
        U115-15 U115-14 U115-13 U115-12 U37-5 U30-24
        U30-23 U30-22 U76-71 U76-70 U76-68 U76-67 U76-66
        U76-63 U30-20 U89-10 U89-9 U89-8 U89-4 U76-84
        U76-83 U76-82 U76-80 U71-51 U71-50 U71-46 U71-44
        U71-43 U71-41 U71-40 U71-39 U71-38)
  (rule (width 16))
 (net VDD
  (pins U101-11 U101-10 U101-8 U101-6 U101-3 U100-20
        U100-13 U71-95 U71-94 U71-93 U71-92 U71-91 U71-90
         U71-89 U71-88 U17-19 U17-16 U17-15 U17-14 U17-13
        U17-11 U17-10 U97-16 U97-14 U97-13 U97-11 U97-10
        U97-4 U97-3 U42-7 U42-4 U42-1 U37-20 U37-18 U37-15
        U37-14 U37-13 U42-20 U42-19 U42-18 U42-17 U42-16
        U42-15 U42-14)
  (rule (width 16))
  )
 (net VCC
  (pins U71-16 U71-14 U71-13 U71-6 U71-4 U71-2 U71-1
        U42-13 U42-12)
  (rule (width 16))
```

```
)
(net CPU-D/C#
 (pins U71-11 U89-2 U102-8)
(net CPU-M/IO#
(pins U71-15 U89-1 U102-7)
(net MC-BD2
 (pins U76-39 U74-18 U30-2 U114-9)
(net MC-BD3
 (pins U76-38 U74-19 U30-1 U97-5)
(net MC-BD5
(pins U76-36 U74-22 U30-5 U17-7)
(net MC-BD7
(pins U76-34 U74-24 U30-8 U75-71)
(net CPU-W/R#
 (pins U71-12 U89-3 U102-9)
(net CLK2B
(pins U115-1 U100-1)
(net MC-BD0
 (pins U76-42 U74-16 U30-10 U37-19)
(net MC-BD1
(pins U76-41 U74-17 U30-14 U75-35)
(net MC-BD4
(pins U76-37 U74-20 U30-18 U75-38)
(net MC-BD6
(pins U76-35 U74-23 U30-16 U75-41)
(net CPU-RESET
(pins U89-6 U17-6)
```

```
(net CPU-HLDA
(pins U89-5 U17-12 U75-22)
(net LCL-CMD#
(pins U102-17 U100-2)
(net MC-CMD#
 (pins U74-6 U100-5)
(net DCD-INT-ACK#
(pins U94-3 U89-19)
(net SA0
(pins U76-52 U75-52)
(net SA1
(pins U76-53 U75-53)
(net SA2
(pins U71-3 U75-54)
(net MC-TO-MEMB#
(pins U42-9 U100-3) (circuit (shield on (use_net GND)))
(net LBC-TO-MEM#
(pins U42-5 U100-4)
(net SBUS3
(pins U42-8 U100-15)
(net MEM-CMD#
(pins U71-21 U100-12)
(net MEM-M/IO#
(pins U71-9 U100-14)
(net MEM-ALE#
(pins U71-20 U100-16)
```

```
(net MEM-S0#
 (pins U71-7 U100-17)
(net MEM-S1#
 (pins U71-8 U100-18)
(net Q9
 (pins U97-18 U102-10)
(net Q8
 (pins U94-18 U97-8 U100-8)
(net CLKA#
 (pins U17-18 U102-12 U101-9)
(net LEPB-ADS#
 (pins U102-6 U101-2)
 (net SYS-RESET#
 (pins U76-29 U101-4)
(net CONVERT#
 (pins U102-5 U101-12)
 (net Q2
 (pins U102-4 U97-12 U71-76 U114-20)
 (fromto U102-4 U71-76 (rule (width 5)))
 (fromto U71-76 U97-12 (rule (width 6)))
 (fromto U97-12 U114-20 (rule (width 7)))
 (net Q1
 (pins U102-18 U101-14 U76-33 U17-9)
 (net Q0
 (pins U102-2 U101-15 U76-40 U114-2)
 (net LCL-CH-RDY#
 (pins U17-2 U101-18)
```

```
(net CLKB
(pins U89-7 U17-17 U94-5)
(net POS-CARD-EN
(pins U74-43 U37-4)
(net GEN-CH-CHK#
 (pins U74-34 U75-14)
(net LCLL-S1#
 (pins U76-69 U42-3 U114-7 U75-58)
 (source U76-69)
 (load U75-58 U114-7)
 (terminator U42-3)
 (rule (reorder daisy))
(net SD7
(pins U71-5 U76-51 U75-73)
(net SD6
(pins U71-53 U76-50 U114-17 U75-61)
(net SD5
(pins U71-62 U76-49 U75-79)
(net SD4
(order U71-87 U76-48 U114-11 U75-1)
(net SD2
 (pins U71-98 U76-45 U75-9)
(net SD1
 (pins U71-85 U76-44 U75-18)
(net SD0
(pins U71-45 U76-43 U75-43)
(net MC-BA0
 (pins U76-32 U74-26 U75-32)
```

```
)
(net MCL-RD#
(pins U76-27 U75-24)
(net SD3
(pins U71-75 U76-47 U114-15 U75-47)
(rule (reorder daisy))
(net WATCH
(pins U76-13 U75-77)
(net XA15
(pins U71-24 U74-56)
(circuit (shield on (use_net GND)))
(net XA14
(pins U71-73 U74-57)
(net XA13
(pins U71-55 U74-58)
(net XA12
(pins U71-42 U74-59)
(net MC-M/IO#
(pins U74-3 U37-1)
(net MC-S0#
 (pins U74-1 U37-2)
(layer_rule L1 (rule (width 10)))
(layer_rule L6 (rule (width 10)))
(circuit (use_layer L1 L6))
(net MC-S1#
(pins U74-2 U37-3)
(net BLITZ-RDY
(pins U71-68 U17-4)
(net LCL-LEPB#
 (pins U97-17 U17-8)
```

```
(layer_rule L1 (rule (width 10)))
 (layer_rule L6 (rule (width 10)))
 (circuit (use_layer L1 L6))
)
(net UPGD-PASS-A2
(pins U75-70)
(net LCL-MCB#
 (pins U76-79 U42-6 U115-3)
(net MC-CMDA#
(pins U76-28 U115-8 U75-27)
(net LCL-REFRESH#
(pins U71-52 U76-11 U100-9)
(net POS-IO0
(pins U76-20 U74-39)
(net POS-IO1
(pins U76-21 U74-37)
(net POS-IO3
(pins U76-23 U74-35)
(net CPUL-W/R#
(pins U42-2 U115-4)
(net CLK2A
(pins U71-17 U97-1 U17-1)
(net LCL-CMDB#
(pins U76-65 U75-57)
(net SA3
(pins U76-55 U75-55)
(net MC-BA1
(pins U76-31 U74-27 U75-31)
```

```
(net MC-BA2
(pins U76-30 U74-28 U75-30)
(net MC-BA3
(pins U76-22 U74-33 U75-29)
(net SYS-RESET
 (pins U71-71 U75-69)
(net DCD-P94#
(pins U71-28 U76-74)
(net DCD-MEM#
(pins U71-33 U94-8)
(net CAS/RAS#
(pins U71-57 U89-11)
(net SBUS1
 (pins U94-2 U74-9 U75-63)
(net BUS-REQ#
(pins U97-15 U74-10 U75-13)
(net BUS-GNT#
 (pins U97-19 U74-11)
(net POS-CONF-SEC
(pins U76-73 U74-40 U75-15)
(net MC-CH-RST
 (pins U74-44 U75-16)
(net CLKC
(pins U76-64 U75-64)
(net SBUS2
(pins U94-6 U75-37)
```

```
(net ASSIST-NEEDE
 (pins U76-81 U75-80)
(net DCD-HLT-SHUT
(pins U94-4 U89-18)
(net CLK2C
(pins U102-1 U101-1)
(rule (width 15))
(net CPU-IO#
(pins U94-1 U89-12)
(net DCD-CO-PROC#
(pins U94-7 U89-17)
(net LCL-MC-DCD#
(pins U97-9 U94-12)
(net LCL-SMP-DCD#
(pins U97-7 U94-19)
(net LCL-MEM-DCD#
(pins U97-6 U94-15)
(net DEL-LCL-MC-W
(pins U42-11 U115-17)
(circuit (shield on (use_net GND)))
(net LCL-SREG-DCD
(pins U94-11 U75-59)
(net MC-SREG-DCD1
(pins U76-24 U74-29 U37-16)
(net_number 691)
(net MC-SREG-DCD#
 (pins U37-17 U75-23)
```

```
(net $20N98
   (pins U71-49 U71-48 U71-47)
  (net TEMP154
   (pins U71-70 U71-66 U71-61 U71-59)
  (net MEM-ADS#
   (pins U71-22 U71-10)
  (net SPEC/NORM#
   (pins U89-16 U76-78)
# The following nets have fast circuit (length, pair,
# parallel_segment, parallel_noise) rules.
  (net CTRLA-UPGD-P
   (pins U76-75 U74-8 U75-83)
   (circuit (length -1 5000))
  (net DEL-MC-TO-ME
  (pins U94-14 U101-19 U100-19)
  (circuit (length -1 5000))
  (net XDATA-0 (pins U101-7 U71-23))
  (net XDATA-3 (pins U71-18 U101-5))
  (pair (nets MEM-S1# MEM-S0#))
  (pair (nets CPU-M/IO# CPU-D/C#))
  (class C1 SD6 XA13 CAS/RAS# TEMP154
         SD5 BLITZ-RDY SYS-RESET
   (rule (width 5)(reorder daisy))
  (class C2 LCL-MC-DCD# LCL-SMP-DCD#
         LCL-MEM-DCD#
   (layer_rule L2 (rule (width 15)))
   (layer_rule L5 (rule (width 15)))
   (circuit (use_layer L2 L5))
```

### **Prerouted Wiring Data**

```
(wiring
 (resolution MIL 10)
# Net SD2
 (wire (path L1 80 74150 10370 74150 15280 74460 15280
          74460 18550 73910 18550)
    (net SD2 )
   (type protect)
    (attr fanout))
 (wire (path L6 80 73910 18550 73910 19730 66510 19730)
    (net SD2 )
    (type protect))
 (wire (path L1 80 66510 19730 65910 19730 65910 30000)
    (net SD2 )
    (type protect))
 (wire (path L1 80 65910 30000 66830 30000)
    (net SD2 )
   (type protect)
    (attr fanout))
 (wire (path L6 80 65910 30000 106280 30000)
    (net SD2 )
    (type protect))
 (wire (path L1 80 106280 30000 106110 30000 106110
          34860 107330 34860)
    (net SD2 )
    (type protect)
    (attr fanout))
 (via VIA 73910 18550 (net SD2 )
    (type protect)
```

```
(attr fanout) )
(via VIA 66510 19730 (net SD2 )
    (type protect) )
(via VIA 65910 30000 (net SD2 )
    (type protect)
    (attr fanout) )

(via VIA 106280 30000 (net SD2 )
    (type protect)
    (attr fanout) )
```

## Index

A	attach descriptor padstack descriptor <u>82</u>
absolute	syntax <u>16</u>
padstack descriptor <u>82</u>	attr
actual	wire shape descriptor 153
length descriptor 63	wire via descriptor <u>154</u>
total delay descriptor <u>145</u>	attr fanout
add_pins	conductor shape descriptor 33
net pin changes descriptor 77	conductor via descriptor 33
added	average_pair_length
component status descriptor 32	control descriptor 34
all	
junction type descriptor <u>55</u>	D
allow_antenna	В
testpoint rule descriptor 142	
allow_redundant_wiring	back
redundant wiring descriptor 112	bond shape descriptor <u>17</u>
amp	definition <u>129</u>
current resolution descriptor <u>37</u>	family family spacing descriptor 43
ancestor	image descriptor <u>50</u>
ancestor file descriptor 16	image image spacing descriptor <u>52</u>
ancestor file descriptor	place side descriptor 105
history descriptor 49	side descriptor 129
syntax 16	test point descriptor 141
antipad	testpoint rule descriptor 142
color object descriptor <u>27</u>	back_only
antipad_gap	prefer place side descriptor 109
clearance type descriptor 23	background
definition 25	color object descriptor 27
aperture width descriptor	balanced
path descriptor 97	daisy type descriptor 37
polygon descriptor 107	definition <u>37</u>
qarc descriptor 110	base_design
syntax <u>16</u>	session file descriptor <u>125</u>
aperture_type	bbv_ctr2ctr
path descriptor 97	control descriptor 34
polygon descriptor 107	begin index descriptor
area	composite name list descriptor 32
object type descriptor <u>80</u>	pin array descriptor 101
place object descriptor 104	syntax <u>16</u>
array	bend_keepout
pin array descriptor 101	keepout descriptor <u>56</u>
ASCII	bit map filename descriptor
special character descriptor 130	pattern name descriptor <u>98</u>
attach	syntax <u>98</u>
attach descriptor 16	body_body
attaon accomptor <u>ro</u>	

family family spacing descriptor 43 image image spacing descriptor 52	capacitor physical property descriptor 101
bond	room place rule object descriptor 121
bond shape descriptor 16	structure place rule object
bond shape descriptor	descriptor 132
net out descriptor 76	case_sensitive
syntax 16	parser descriptor 89
wire descriptor 152	cct1
bond shape rotation descriptor	control descriptor 34
bond shape descriptor 17	cct1a
syntax 17	control descriptor 34
both	cctpat
family family spacing descriptor 43	pattern name descriptor 98
image descriptor <u>50</u>	center_center
image image spacing descriptor 52	testpoint rule descriptor 142
place side descriptor 105	character descriptor
prefer place side descriptor 109	id descriptor 49
testpoint rule descriptor 142	parser descriptor 89
bottom_layer_sel	string descriptor 131
system variable descriptor 135	syntax <u>19</u>
boundary	checking trim descriptor
boundary descriptor 17	control descriptor 34
object type descriptor 80	syntax <u>19</u>
boundary descriptor	checking_trim_by_pin
reserved layer name descriptor 118	checking trim descriptor 19
structure descriptor 131	checkpat
syntax <u>17</u>	pattern name descriptor <u>98</u>
brickpat	circle
pattern name descriptor <u>98</u>	circle descriptor <u>19</u>
bundle	circle descriptor
bundle descriptor <u>18</u>	shape descriptor <u>127</u>
bundle descriptor	syntax <u>19</u>
network descriptor <u>77</u>	circuit
syntax <u>18</u>	circuit descriptor <u>19</u>
bundle id descriptor	circuit descriptor
bundle descriptor <u>18</u>	class descriptor 21
syntax <u>18</u>	fromto descriptor 46
buried_via_gap	group descriptor 48
clearance type descriptor 23	group set descriptor 49
definition <u>24</u>	net descriptor <u>74</u>
bus	syntax <u>19</u>
wire shape descriptor 153	circuit descriptors
	circuit descriptor 19
C	syntax <u>19</u>
C	class
capacitance resolution descriptor	class descriptor <u>21</u> class class descriptor
design descriptor 38	network descriptor <u>77</u>
syntax <u>18</u>	syntax <u>21</u>
capacitance_resolution	class descriptor
capacitance_resolution descriptor 18	network descriptor 77

syntax <u>21</u>	syntax <u>27</u>
class id descriptor	color number descriptor
class class descriptor 21	color descriptor <u>27</u>
class descriptor 21	syntax <u>27</u>
classes descriptor 22	color object descriptor
region descriptor 112	color descriptor <u>27</u>
syntax <u>22</u>	syntax <u>27</u>
class_class	colors
class class descriptor 21	color descriptor <u>27</u>
classes	design file prototype 13
class class descriptor 21	column descriptor
classes descriptor 222	circuit descriptors 20
region descriptor <u>112</u>	syntax <u>30</u>
classes descriptor	command descriptor
syntax <u>22</u>	command group descriptor <u>30</u>
clear	syntax 30
microvia descriptor 71	command group descriptor
clearance	syntax <u>30</u>
clearance descriptor 23	comment
clearance descriptor	comment file descriptor 16
keepout descriptor 56	self descriptor 125
padstack descriptor 82	comment string descriptor
region descriptor 112	ancestor file descriptor 16
rule descriptors 123	self descriptor 125
	_ •.
syntax <u>23</u>	syntax <u>31</u>
clearance type descriptor	comp
clearance descriptor <u>23</u>	cluster descriptor <u>26</u>
syntax <u>23</u>	testpoint rule descriptor <u>142</u>
closed	comp_edge_center
shield loop descriptor 128	testpoint rule descriptor 142
cluster	comp_order
cluster descriptor 26	component order descriptor 31
cluster descriptor	complete_wire
floor plan descriptor <u>45</u>	system variable descriptor <u>135</u>
syntax <u>26</u>	component
cluster id descriptor	component instance descriptor 31
cluster descriptor 26	logical part mapping descriptor 66
exclude descriptor 42	physical part mapping descriptor 101
include descriptor <u>53</u>	component back
syntax <u>26</u> '	color object descriptor 27
cm	pattern object descriptor 98
dimension unit descriptor 40	component front
coax	color object descriptor 27
shield type descriptor 128	pattern object descriptor 98
color	component id descriptor
color descriptor <u>27</u>	cluster descriptor 26
	· —
color descriptor	exclude descriptor <u>42</u> fromto descriptor 46
design descriptor 38	· —
syntax <u>27</u>	include descriptor <u>53</u>
color name descriptor	logical part mapping descriptor 66
color descriptor 27	physical part mapping descriptor 101

pin reference <u>102</u> placement reference descriptor <u>105</u>	conflict_xtalk system variable descriptor 135
super place reference descriptor 133	connect
swap history descriptor <u>134</u>	padstack descriptor 82
syntax <u>31</u>	wire guide descriptor 152
testpoint rule descriptor 142	wire shape descriptor 153
component instance descriptor	connections
placement descriptor 105	system variable descriptor 135
syntax <u>31</u>	constant
component order descriptor	parser descriptor 89
net descriptor <u>74</u>	contact
syntax <u>31</u>	wire via descriptor <u>154</u>
topology descriptor 144	continuation character descriptor
component property descriptor	command group descriptor 30
placement reference descriptor <u>106</u>	syntax <u>34</u>
syntax <u>31</u>	control
component status descriptor	control descriptor 34
placement reference descriptor 105	control descriptor
syntax <u>32</u>	structure descriptor <u>131</u>
composite	syntax <u>34</u>
composite name list descriptor 32	corner
composite name list descriptor	corner descriptor 36
class descriptor 21	corner descriptor
group set descriptor 49	corner file 36
syntax <u>32</u>	syntax <u>36</u>
conductance resolution descriptor	corner file descriptor
design descriptor 38	syntax <u>36</u>
syntax <u>32</u>	corners
conductance_resolution	corner file descriptor 36
conductance resolution descriptor 32	cost
conductor shape descriptor	layer descriptor <u>58</u>
image descriptor <u>50</u>	cost descriptor
syntax <u>33</u>	layer descriptor <u>58</u>
conductor via descriptor	syntax <u>36</u>
image descriptor <u>50</u>	cost type descriptor
syntax <u>33</u> conflict	syntax <u>36</u> created time
	<u> </u>
conflict file descriptor 34 conflict descriptor	ancestor file descriptor <u>16</u> self descriptor <u>125</u>
	• —
conflict file descriptor <u>34</u> syntax 34	cross conflict descriptor 34
conflict file descriptor	· —
syntax <u>34</u>	cost type descriptor <u>36</u> crosstalk_model
conflict_clearance	control descriptor 34
system variable descriptor 135	current resolution descriptor
conflict_crossing	design descriptor 38
system variable descriptor 135	syntax <u>37</u>
conflict_length	current_resolution
system variable descriptor 135	current resolution descriptor <u>37</u>
conflict_wire	current_wire
system variable descriptor 135	system variable descriptor 135

D	positive integer descriptor <u>108</u> syntax <u>39</u>
daisy	user variable descriptor 146
order type descriptor <u>81</u>	dimension descriptor
daisy type descriptor	syntax <u>39</u>
	tandem noise descriptor 136
order type descriptor <u>81</u>	tandem segment descriptor 139
syntax <u>37</u>	x coordinate descriptor 156
date descriptor	x0 descriptor 156
time stamp descriptor 144	xstep descriptor 156
degree descriptor	y coordinate descriptor 156
syntax <u>38</u>	y0 descriptor <u>156</u>
delay descriptor	ystep descriptor 156
circuit descriptors 19	dimension unit descriptor
syntax 38	resolution descriptor 118
delay value	syntax 40
total delay descriptor 145	unit descriptor 145
delay value descriptor	direction
delay descriptor 38	grid descriptor 47
match fromto delay descriptor 66	layer descriptor <u>58</u>
match group delay descriptor 67	testpoint rule descriptor 142
match net delay descriptor <u>68</u>	direction type descriptor
syntax <u>38</u>	layer descriptor <u>58</u>
delete_pins	syntax <u>40</u>
net pin changes descriptor 77	directory
deleted	directory descriptor 40
component status descriptor 32	directory descriptor 40
deleted_keepout	library descriptor 65
session structure descriptor 127	
design descriptor	part library descriptor <u>92</u> syntax 40
design file prototype 11	
syntax <u>38</u>	directory path name descriptor directory descriptor 40
design file prototype	
syntax <u>11</u>	9, , , , —
diaghatchpat	syntax <u>41</u> discrete
pattern name descriptor <u>98</u>	
diagonal	physical property descriptor 101
direction type descriptor 40	room place rule object descriptor 121
diameter descriptor	structure place rule object descriptor 132
circle descriptor <u>19</u>	· —
syntax <u>39</u>	dotpat
diffpair group level descriptor	pattern name descriptor <u>98</u> down
syntax <u>39</u>	
diffpair line width descriptor	pin width taper descriptor 103
syntax <u>39</u>	
diffpair_group_level	E
diffpair group level descriptor 39	<b>L</b>
diffpair_line_width	adao acumbad talawan sa mainus da saniatan
diffpair line width descriptor 39	edge coupled tolerance minus descriptor
digit descriptor	syntax 41
character descriptor 19	edge coupled tolerance plus descriptor syntax 41

edge primary gap descriptor	extra image directory descriptor 43
syntax 41	
edge_coupled_tolerance_minus edge coupled tolerance minus	F
descriptor 41	fame the
edge_coupled_tolerance_plus	family
edge coupled tolerance plus	family family descriptor 43
descriptor <u>41</u>	family property descriptor 44
edge_primary_gap	family family descriptor_
edge primary gap descriptor 41	library descriptor <u>65</u>
effective via length descriptor	syntax 43
rule descriptors 123	family family spacing descriptor
syntax <u>42</u>	family family descriptor 43
effective_via_length	syntax <u>43</u>
effective via length descriptor 42	family id descriptor
electrical value descriptor	family family descriptor 43
component property descriptor 31	family property descriptor 44
syntax 42	syntax <u>44</u>
elongate_keepout	family property descriptor
keepout descriptor <u>56</u>	image property descriptor <u>53</u>
empty	syntax 44
pattern name descriptor <u>98</u>	family_family
end index descriptor	family family descriptor 43
composite name list descriptor 32	family_family_spacing
pin array descriptor <u>102</u>	family family spacing descriptor 43
syntax <u>42</u>	fanout
error balance	wire shape descriptor <u>153</u>
color object descriptor 27	wire via descriptor <u>154</u>
error clearance	farad
color object descriptor 27	capacitance resolution descriptor <u>18</u>
error crosstalk	ffarad
color object descriptor <u>27</u>	capacitance resolution descriptor 18
error length	file
color object descriptor <u>27</u>	file descriptor <u>44</u>
error placement	file descriptor
color object descriptor <u>27</u>	design descriptor 38
exclude	syntax 44
exclude descriptor 42	file path name descriptor
exclude descriptor	ancestor file descriptor 16
room rule descriptor 121	file descriptor <u>44</u>
syntax <u>42</u>	syntax <u>44</u>
exit_direction	file prefix descriptor
definition 110	syntax <u>44</u>
expose	filename descriptor
net descriptor 74	syntax <u>44</u>
expression descriptor	fit
syntax <u>42</u>	via at smd descriptor <u>147</u> fix
extra image directory descriptor	
library descriptor <u>65</u>	fromto descriptor 46
syntax <u>43</u>	net descriptor <u>74</u>
extra_image_directory	wire shape descriptor <u>153</u>

wire via descriptor 154	front_only
fix component color object descriptor <u>27</u>	prefer place side descriptor 109
flip style descriptor	
place control descriptor 104	G
syntax 45	
flip_style	g
flip style descriptor 45	conductance resolution descriptor <u>32</u>
float descriptor	gap ' —
numeric expression descriptor 79	bundle descriptor <u>18</u>
syntax <u>45</u>	net pair descriptor 76
floor plan descriptor	parallel noise descriptor <u>85</u>
design descriptor 38	parallel segment descriptor 87
session file descriptor 125	tandem noise descriptor 136
syntax <u>45</u>	tandem segment descriptor 139
floor_plan	wire pair descriptor <u>153</u>
design file prototype <u>13</u> floor plan descriptor <u>45</u>	gate placement reference descriptor 106
forbidden	gate id descriptor
cost descriptor 36	part pin descriptor 97
force to terminal point descriptor	swap history descriptor 134
control descriptor 34	syntax 46
syntax <u>45</u>	gate pin id descriptor
force_to_terminal_point	part pin descriptor <u>97</u>
definition 110	syntax <u>47</u>
force to terminal point descriptor <u>45</u>	gate pin swap code descriptor
fraction descriptor	part pin descriptor <u>97</u>
number descriptor 78	syntax <u>47</u>
positive dimension descriptor 108	gate swap code descriptor
syntax <u>46</u> free	part pin descriptor <u>97</u> syntax <u>47</u>
cost descriptor 36	gates
fromto	swap history descriptor 134
fromto descriptor 46, 113, 114, 115,	grid
117	testpoint rule descriptor 142
fromto descriptor	via at smd descriptor 147
group descriptor <u>48</u>	grid descriptor
net descriptor <u>74</u>	structure descriptor 132
syntax <u>46</u>	syntax <u>47</u>
topology descriptor 144	grid major
wire pair descriptor 153	color object descriptor <u>27</u>
front bond shape descriptor 17	grid major place color object descriptor 27
definition 129	color object descriptor <u>27</u> grid major route
family family spacing descriptor 43	color object descriptor <u>27</u>
image descriptor <u>50</u>	grid place
image image spacing descriptor 52	color object descriptor 27
place side descriptor 105	grid descriptor 47
side descriptor 129	grid via
test point descriptor 141	color object descriptor 27
testpoint rule descriptor 142	grid descriptor 47

grid via_keepout	histogram peak
grid descriptor <u>47</u>	color object descriptor 27
grid wire	histogram segment
grid descriptor <u>47</u>	color object descriptor <u>27</u>
grid wiring	history
color object descriptor <u>27</u>	history descriptor 49
grid_snap	history descriptor
grid descriptor 47	session file descriptor 125
gridpat	syntax <u>49</u>
pattern name descriptor <u>98</u> ground	horizdashpat pattern name descriptor 98
net descriptor <u>75</u>	pattern name descriptor <u>98</u> horizontal
group	direction type descriptor 40
group descriptor 48	permit orient descriptor 98
group descriptor	horizpat
network descriptor 77	pattern name descriptor 98
syntax <u>48</u>	horizwavepat
group id descriptor	pattern name descriptor 98
group descriptor 48	host_cad
group set descriptor 49	parser descriptor 89
syntax <u>48</u>	host_version
group set descriptor	parser descriptor <u>89</u>
network descriptor <u>77</u>	hour descriptor
syntax <u>49</u>	time stamp descriptor 144
group set id descriptor	
group set descriptor 49	1
syntax <u>49</u>	I .
group_set	id descriptor
group set descriptor <u>49</u>	id descriptor bundle id descriptor <u>18</u>
guide color object descriptor <u>27</u>	class id descriptor <u>10</u>
wire guide descriptor 152	cluster id descriptor <u>26</u>
guides	color name descriptor <u>27</u>
parser descriptor 89	component id descriptor 31
	directory descriptor 41
	family id descriptor 44
H	file path name descriptor 44
	file prefix descriptor 44
hard	filename descriptor 44
exclude descriptor <u>42</u>	gate id descriptor 46
include descriptor <u>53</u>	gate pin id descriptor 47
height	group id descriptor 48
jumper descriptor <u>55</u>	group set id descriptor 49
physical property descriptor 101	id descriptor <u>49</u>
room rule descriptor 121	image id descriptor <u>52</u>
high	keepout descriptor <u>56</u>
cost descriptor <u>36</u>	layer name descriptor <u>58</u>
highlight	logical part id descriptor 66
color object descriptor <u>27</u>	net id descriptor 76
histogram grid	padstack id descriptor <u>84</u>
color object descriptor <u>27</u>	parser descriptor <u>89</u>

part number descriptor 97 pcb id descriptor 98 physical part id descriptor 100 pin id descriptor 102 pin prefix id descriptor 102 pin suffix descriptor 102 placement id descriptor 105 prefix descriptor 109 region id descriptor 113, 114, 115, 117 room id descriptor 120 session id descriptor 126 subgate id descriptor 132 subgate pin id descriptor 133 suffix descriptor 133 syntax 49	syntax 53 image type descriptor syntax 53 image_conductor parser descriptor 89 image_image image image descriptor 52 image_image_spacing image image spacing descriptor 52 image_outline_clearance testpoint rule descriptor 142 image_set structure place rule object descriptor 132 image_type
via array template id descriptor 147	grid descriptor 47
via id descriptor <u>148</u> virtual pin name descriptor <u>150</u>	image type descriptor <u>53</u> room place rule object descriptor <u>121</u>
ignore gather length descriptor	structure place rule object
syntax <u>49</u>	descriptor <u>132</u>
ignore_gather_length	inch
ignore gather length descriptor <u>49</u> image	dimension unit descriptor 40 include
image descriptor <u>50</u>	include descriptor 53
image image descriptor 52	include descriptor
logical part mapping descriptor 66	room rule descriptor 121
physical part mapping descriptor> 101	syntax <u>53</u>
image descriptor	include_pins_in_crosstalk
library descriptor <u>64</u>	control descriptor 34
syntax <u>50</u>	index step descriptor
image id descriptor	pin array descriptor 102
component instance descriptor 31	syntax <u>54</u>
image descriptor <u>50</u> image image descriptor <u>52</u>	inductance resolution descriptor design descriptor 38
logical part mapping descriptor 66	syntax <u>54</u>
physical part mapping descriptor 101	inductance_resolution
syntax <u>52</u>	inductance resolution descriptor <u>54</u>
image image descriptor	insert
library descriptor <u>65</u>	testpoint rule descriptor 142
syntax <u>52</u>	integer descriptor
image image place rule descriptor	gate pin swap code descriptor 47
image image descriptor <u>52</u>	gate swap code descriptor 47
syntax <u>52</u>	interlayer clearance descriptor <u>54</u>
image image spacing descriptor	net descriptor 74
image image place rule descriptor <u>52</u>	net out descriptor 76
syntax <u>52</u>	numeric expression descriptor <u>79</u>
image property descriptor family property descriptor 53	pin type descriptor <u>102</u> sample window descriptor <u>124</u>
image descriptor 50	subgate swap code descriptor 133
physical property descriptor <u>53</u>	switch window descriptor 134
property value descriptor 53	syntax <u>54</u>

track id descriptor <u>145</u> value descriptor <u>146</u>	L
inter_layer_clearance interlayer clearance descriptor <u>54</u> interlayer clearance descriptor rule descriptors <u>123</u> syntax <u>54</u> iroute target	large physical property descriptor 101 room place rule object descriptor 121 structure place rule object descriptor 132
color object descriptor 27	large_large opposite side descriptor <u>81</u> large_small
J	opposite side descriptor <u>81</u> layer
jumper jumper descriptor <u>55</u> layer type descriptor <u>60</u> wire shape descriptor <u>153</u>	bundle descriptor <u>18</u> layer descriptor <u>58</u> net pair descriptor <u>76</u> wire pair descriptor <u>153</u> layer descriptor
wire via descriptor <u>154</u> jumper descriptor library descriptor <u>64</u> syntax <u>55</u>	structure descriptor <u>131</u> structure out descriptor <u>132</u> syntax <u>58</u>
jumper layer  definition 61	layer id descriptor bundle descriptor <u>18</u> circle descriptor <u>19</u>
junction type descriptor rule descriptors <u>123</u> syntax <u>55</u>	conflict descriptor <u>34</u> corner descriptor <u>36</u> interlayer clearance descriptor <u>54</u>
junction_type junction type descriptor <u>55</u>	layer pair descriptor <u>60</u> layer rule descriptor <u>60</u> microvia descriptor <u>71</u>
K	net pair descriptor <u>76</u> path descriptor <u>97</u> polygon descriptor <u>107</u>
keepout keepout descriptor <u>56</u>	qarc descriptor <u>110</u> rectangle descriptor <u>111</u>
keepout descriptor image descriptor <u>50</u> session structure descriptor <u>127</u> structure descriptor <u>131</u>	syntax <u>58</u> wire pair descriptor <u>153</u> wire via descriptor <u>154</u>
syntax <u>56</u> keepout sequence number descriptor keepout descriptor <u>56</u>	layer name descriptor circuit descriptors <u>20</u> grid descriptor <u>47</u>
session structure descriptor <u>127</u> syntax <u>57</u>	layer descriptor <u>58</u> layer id descriptor <u>58</u> syntax <u>58</u>
keepouts pattern object descriptor 98 kg	layer noise weight descriptor structure descriptor 131
conductance resolution descriptor 32 kohm resistance resolution descriptor 118	syntax <u>58</u> layer number descriptor color object descriptor <u>27</u> pattern object descriptor <u>98</u> syntax <u>60</u>

layer pair descriptor	character descriptor <u>19</u>
layer noise weight descriptor <u>58</u>	syntax <u>64</u>
syntax <u>60</u>	user variable descriptor <u>146</u>
layer rule descriptor	library
class class descriptor <u>21</u>	design file prototype 12
class descriptor 21	library descriptor <u>64</u>
fromto descriptor <u>46</u> , <u>150</u>	library descriptor
group descriptor <u>48</u>	design descriptor 38
group set descriptor 49	syntax <u>64</u>
net descriptor <u>74</u>	library out descriptor
syntax <u>60</u>	route descriptor 122
layer type descriptor	syntax <u>65</u>
layer descriptor <u>58</u>	library_out
syntax <u>60</u>	library out descriptor <u>65</u>
layer weight descriptor	limit
layer pair descriptor <u>60</u>	parallel segment descriptor <u>87</u>
length factor descriptor 64	tandem segment descriptor 139
syntax <u>63</u>	limit bends descriptor
layer_depth	rule descriptors 123
clearance type descriptor 23	syntax <u>65</u>
interlayer clearance descriptor <u>54</u>	limit crossing descriptor
layer_noise_weight	rule descriptors 123
layer noise weight descriptor <u>58</u>	syntax <u>65</u>
layer_pair	limit vias descriptor
interlayer clearance descriptor <u>54</u>	rule descriptors 123
layer pair descriptor <u>60</u>	syntax <u>65</u>
layer_rule	limit way descriptor
layer rule descriptor 60	rule descriptors 123
length	syntax <u>66</u>
jumper descriptor <u>55</u>	limit_bends
layer descriptor <u>58</u> length descriptor <u>63</u>	limit bends descriptor 65 limit_crossing
length amplitude descriptor	limit crossing descriptor 65
rule descriptors 123	limit vias
syntax <u>63</u>	limit vias descriptor 65
length descriptor	limit_way
circuit descriptors 19	limit way descriptor 66
syntax <u>63</u>	linear
length factor descriptor	noise accumulation descriptor 78
rule descriptors 123	linear_interpolation
syntax <u>64</u>	noise calculation descriptor 78
length gap descriptor	load
rule descriptors <u>123</u>	net descriptor <u>75</u>
syntax <u>64</u>	lock_type
length_amplitude	placement reference descriptor 106
length amplitude descriptor 63	locked_comp
length_factor	system variable descriptor 135
length factor descriptor 64	logical part descriptor
length_gap	part library descriptor <u>92</u>
length gap descriptor 64	syntax <u>66</u>
letter descriptor	logical part id descriptor

logical part descriptor <u>66</u> logical part mapping descriptor <u>66</u> placement reference descriptor <u>105</u> syntax <u>66</u>	length amplitude descriptor <u>63</u> syntax <u>69</u> max height descriptor jumper descriptor <u>55</u>
logical part mapping descriptor part library descriptor 92 syntax 66	physical property descriptor 101 room rule descriptor 121 syntax 69
logical_part logical part descriptor 66	max length descriptor length descriptor 63
placement reference descriptor 105 logical_part_mapping logical part mapping descriptor 66	syntax <u>69</u> max noise descriptor rule descriptors <u>123</u>
low cost descriptor <u>36</u>	syntax <u>69</u> max restricted layer length descriptor circuit descriptors <u>20</u>
M	syntax <u>69</u> max stagger descriptor rule descriptors <u>123</u>
mamp	syntax <u>70</u>
current resolution descriptor 37	max stub descriptor
match fromto delay descriptor	rule descriptors 123
circuit descriptors <u>19</u>	syntax <u>71</u>
syntax <u>66</u>	max total vias descriptor
match fromto length descriptor	rule descriptors <u>123</u>
circuit descriptors 19	syntax <u>71</u>
syntax <u>67</u>	max uncoupled length descriptor
match group delay descriptor	syntax <u>71</u>
circuit descriptors 19	max_delay
syntax 67	delay descriptor 38
match group length descriptor	max_len —
circuit descriptors <u>19</u>	testpoint rule descriptor 142
syntax <u>67</u>	max_length
match net delay descriptor	pin width taper descriptor 103
circuit descriptors ' <u>19</u>	max_noise -
syntax <u>68</u>	max noise descriptor 69
match net length descriptor	max_restricted_layer_length
circuit descriptors 19	max restricted layer length
syntax <u>68</u>	descriptor 69
match_fromto_delay	max_stagger
match fromto delay descriptor 66	max stagger descriptor 70
match_fromto_length	max_stub
match fromto length descriptor 67	max stub descriptor 71
match_group_delay	max_total_delay
match group delay descriptor 67	total delay descriptor 145
match_group_length	max_total_length
match group length descriptor 67	total length descriptor 145
match_net_delay	max_total_vias
match net delay descriptor 68	max total vias descriptor 71
match_net_length	max_uncoupled_length
match net length descriptor 68	max uncoupled length descriptor 71
max amp descriptor	medium
max amp ucomplui	HIGUIUIII

cost descriptor 36	mohm
mfarad	resistance resolution descriptor 118
capacitance resolution descriptor 18 mg	month descriptor time stamp descriptor 144
conductance resolution descriptor <u>32</u>	msec
mhenry	time resolution descriptor 143
inductance resolution descriptor 54	mvolt · · · · · · · · · · · · · · · · · · ·
microvia	voltage resolution descriptor 150
control descriptor 34	
microvia descriptor	N
syntax <u>71</u> via array template descriptor <u>147</u>	14
mid driven	name descriptor
daisy type descriptor <u>37</u>	property value descriptor 109
definition 37	syntax 73
mil	near
dimension unit descriptor 40	conflict descriptor 34
min amp descriptor	neck down gap descriptor
length amplitude descriptor 63	syntax <u>73</u>
syntax <u>72</u> min height descriptor	neck down width descriptor syntax 74
room rule descriptor 121	neck_down_gap
syntax 73	neck down gap descriptor 73
min length descriptor	neck_down_width
length descriptor 63	neck down width descriptor 74
syntax <u>73</u>	negative_diagonal
min_delay	direction type descriptor 40
delay descriptor 38	net fromto descriptor 46
min_gap via pattern descriptor 149	fromto descriptor <u>46</u> net descriptor <u>74</u>
min_total_delay	net descriptor <u>74</u>
total delay descriptor 145	net pin changes descriptor 77
min_total_length	supply pin descriptor 133
total length descriptor 145	test net descriptor 141
minus (-)	wire shape descriptor <u>153</u>
sign descriptor <u>129</u>	wire via descriptor 154, 155
minute descriptor	net descriptor
time stamp descriptor <u>144</u> mirror	network descriptor <u>77</u> syntax <u>74</u>
mirror descriptor 73	net id descriptor
mirror descriptor	bundle descriptor <u>18</u>
placement reference descriptor 105	class descriptor 21
syntax <u>73</u>	fromto descriptor 46
mirror_first	layer descriptor <u>58</u>
flip style descriptor 45	net descriptor 74
mixed	net out descriptor 76
layer type descriptor <u>60</u> mixed layer	net pair descriptor <u>76</u> net pin changes descriptor <u>77</u>
definition 61	plane descriptor 106
mm	region descriptor 112
dimension unit descriptor 40	room rule descriptor 121

shield descriptor 127	noise calculation descriptor 78
supply pin descriptor 133	none
syntax <u>76</u>	power fanout descriptor 108
test net descriptor 141	normal
wire shape descriptor <u>153</u>	fromto descriptor <u>46</u>
wire via descriptor 154, 155	net descriptor 74
net out descriptor	test type descriptor 143
network out descriptor 78	wire shape descriptor <u>153</u>
syntax <u>76</u>	wire via descriptor <u>154</u>
net pair descriptor	nsec
pair descriptor <u>85</u>	time resolution descriptor 143
syntax <u>76</u>	number descriptor
net pin changes descriptor	dimension descriptor 39
session file descriptor 125	syntax <u>78</u>
syntax <u>77</u>	numeric binary operator descriptor
net_number	numeric expression descriptor <u>79</u>
net descriptor 74	syntax <u>78</u>
net out descriptor <u>76</u>	numeric expression descriptor
net_pin_changes net pin changes descriptor 77	expression descriptor <u>42</u>
nets	numeric expression descriptor <u>79</u> syntax <u>79</u>
bundle descriptor 18	numeric unary operator descriptor
net pair descriptor 76	numeric expression descriptor 79
network	syntax <u>80</u>
design file prototype 13	Symax <u>oo</u>
network descriptor 77	
network descriptor	0
design descriptor 38	
syntax <u>77</u>	object type descriptor
network out descriptor	clearance type descriptor 23
route descriptor 122	interlayer clearance descriptor 54
syntax 78	syntax <u>80</u>
network_out	wire guide descriptor 152
network out descriptor 78	wire shape descriptor 153
nfarad ' —	object_type
capacitance resolution descriptor 18	room place rule object descriptor 121
nhenry	structure place rule object
inductance resolution descriptor <u>54</u>	descriptor <u>132</u>
no of large components descriptor	off
syntax <u>78</u>	direction type descriptor 40
noexpose	off grid descriptor
net descriptor 74	control descriptor 34
noise accumulation descriptor	syntax <u>80</u>
control descriptor 34	off_center
syntax <u>78</u>	cost type descriptor 36
noise calculation descriptor	off_grid
control descriptor 34	cost type descriptor 36
syntax <u>78</u>	off grid descriptor <u>80</u>
noise_accumulation	- 11 1
	offset
noise accumulation descriptor <u>78</u> noise_calculation	offset grid descriptor <u>47</u> testpoint rule descriptor <u>142</u>

ohm	padstack descriptor
resistance resolution descriptor 118	bibrary descriptor 65
one word string descriptor	library out descriptor 65
string expression description 131	syntax <u>82</u>
open	padstack id descriptor
shield loop descriptor 128	bond shape descriptor 16
opposite side descriptor	circuit descriptors 20
place rule descriptor 105	conductor via descriptor 33
room place rule descriptor 121	image descriptor <u>50</u>
structure place rule descriptor 132	jumper descriptor <u>55</u>
syntax <u>81</u>	padstack descriptor <u>82</u>
opposite_side	syntax <u>84</u>
opposite side descriptor <u>81</u>	via descriptor <u>148</u>
order	wire via descriptor <u>154</u>
net descriptor <u>74</u>	pair
power fanout descriptor 108	pair descriptor <u>85</u>
order type descriptor	pair descriptor
reorder descriptor 118	network descriptor <u>77</u>
syntax <u>81</u>	syntax <u>85</u>
orientation descriptor	parallel
permit orient descriptor <u>98</u>	shield type descriptor 128
syntax <u>81</u>	parallel noise descriptor
orthogonal	rule descriptors 123
direction type descriptor 40	syntax <u>85</u>
orthohatchpat	parallel segment descriptor
pattern name descriptor 98	rule descriptors 123
outline	syntax <u>87</u>
outline descriptor <u>81</u> outline descriptor	parallel_noise parallel noise descriptor <u>85</u>
image descriptor <u>50</u>	parallel noise descriptor <u>85</u> parallel_segment
syntax <u>81</u>	parallel segment descriptor 87
overlap	parser
microvia descriptor 71	design file prototype 12
	parser descriptor 89
	parser descriptor
P	design descriptor 38
	route descriptor 122
pad via site descriptor	syntax <u>89</u>
padstack descriptor <u>82</u>	part Íibrary descriptor
syntax <u>85</u>	design descriptor 38
pad_body	syntax <u>92</u>
family family spacing descriptor 43	part number descriptor
image image spacing descriptor <u>52</u>	placement reference 106
pad_pad	syntax <u>97</u>
family family spacing descriptor 43	part pin descriptor
image image spacing descriptor <u>52</u>	logical part descriptor <u>66</u>
pad_to_turn_gap	syntax <u>97</u>
clearance type descriptor 23	part_library
definition <u>25</u>	design file prototype 13
padstack	part library descriptor <u>92</u>
padstack descriptor <u>82</u>	partial_selection

system variable descriptor 135	logical part mapping descriptor 66
passes descriptor	physical part mapping descriptor 101
syntax <u>97</u>	syntax <u>100</u>
path	physical part mapping descriptor
path descriptor <u>97</u>	part library descriptor <u>92</u>
path descriptor	syntax 101
boundary descriptor <u>17</u>	physical property descriptor
place boundary descriptor 104	component property descriptor 31
shape descriptor 127	image property descriptor 53
syntax 97	syntax <u>101</u>
path/filename descriptor	physical_part_mapping
session file descriptor 125	physical part mapping descriptor 101
pattern name descriptor	piggyback
color descriptor <u>27</u>	cluster descriptor <u>26</u>
syntax <u>98</u>	pin
pattern object descriptor	color object descriptor 27
color descriptor <u>27</u>	definition 80
syntax <u>98</u>	grid descriptor 47
pcb	image descriptor <u>50</u>
design descriptor 38	image descriptor <u>50</u>
design file prototype 11, 12	object type descriptor 80
reserved layer name descriptor 118	part pin descriptor 97
structure place rule object	pattern object descriptor 98
descriptor 132	place object descriptor <u>50</u>
pcb id descriptor	placement reference descriptor 106
design descriptor 38	room place rule object descriptor 121
	structure place rule object
design file prototype <u>11</u>	
syntax <u>98</u>	descriptor 132
peakpat	pin array descriptor
patternname descriptor 98	image descriptor <u>50</u>
permit orient descriptor	syntax 101
place rule descriptor 105	pin id descriptor
room place rule descriptor 120	part pin descriptor <u>97</u>
structure place rule descriptor 132	pin reference descriptor 102
syntax <u>98</u>	reference descriptor <u>112</u>
permit side descriptor	syntax <u>102</u>
place rule descriptor 105	pin prefix id descriptor
room place rule descriptor 121	pin array descriptor 102
structure place rule descriptor 132	syntax <u>102</u>
syntax <u>99</u>	pin reference descriptor
permit_orient	bond shape descriptor 16
permit orient descriptor 98	fromto descriptor 46, 113, 114, 115,
permit_side	117
permit side descriptor 99	net descriptor 74, 75
pfarad	net pin changes descriptor 77
capacitance resolution descriptor <u>18</u>	supply pin descriptor 133
phase_tolerance_delay	swap history descriptor 134
phase tolerance descriptor 99	syntax 102
phase_tolerance_length	was is descriptor 150
phase tolerance descriptor 100	wire guide descriptor 152
physical part id descriptor	wire shape descriptor <u>153</u>

pin suffix id descriptor pin array descriptor syntax 102	family family descriptor 43 image image place rule descriptor 52
syntax <u>102</u>	keepout descriptor <u>56</u>
pin type descriptor part pin descriptor 97	place rule descriptor <u>105</u> room place rule descriptor <u>120</u>
syntax 102	structure place rule descriptor 132
pin width taper descriptor	placement
rule descriptors 123	design file prototype 12
syntax 103	placement descriptor 105
pin_allow	placement descriptor
testpoint rule descriptor <u>142</u>	design descriptor 38
pin_cap_via	session file descriptor 125
power fanout descriptor 108	syntax <u>105</u>
pin_via_cap	placement id descriptor
power fanout descriptor 108	component order descriptor 31
pin_width_taper	syntax 105
pin width taper descriptor 103	placement reference descriptor
pins net descriptor 74	component instance descriptor 31 syntax 105
swap history descriptor 134	syntax <u>105</u> plaidpat
was is descriptor 150	pattern name descriptor 98
place	plan
placement reference descriptor 105	cluster descriptor 26
super place reference descriptor 133	plane
place boundary descriptor	plane descriptor <u>106</u>
session structure descriptor 127	plane descriptor
structure descriptor <u>131</u>	structure descriptor 131
syntax <u>104</u>	syntax <u>106</u>
place control descriptor	plus (+)
placement descriptor 105	sign descriptor <u>129</u>
syntax 104	pluspat
place object descriptor	pattern name <u>98</u> PN
spacing type descriptor <u>130</u> syntax <u>104</u>	placement reference descriptor 106
place rule descriptor	point point
cluster descriptor <u>26</u>	test point descriptor 141
image descriptor 50	poly_wire
placement reference 106	pattern object descriptor 98
syntax <u>105</u>	polygon · · · · · · · · · · · · · · · · · · ·
place side descriptor	polygon descriptor <u>107</u>
permit orient descriptor <u>98</u>	polygon descriptor
permit side descriptor 99	region descriptor 112
spacing descriptor 130	shape descriptor <u>127</u>
syntax 105	syntax <u>107</u>
place_boundary	position
place boundary descriptor 104	placement reference descriptor 106
place_control place control descriptor 104	virtual pin descriptor <u>149</u> positive dimension descriptor
place_keepout	aperture width descriptor 16
keepout descriptor <u>56</u>	bundle descriptor 18
place_rule	clearance descriptor 23

effective via length descriptor <u>42</u> family family spacing descriptor <u>43</u> grid descriptor <u>47</u> image image spacing descriptor <u>52</u> interlayer clearance descriptor <u>54</u>	clearance type descriptor 23 color number descriptor 27 column descriptor 30 conductance resolution descriptor 32 cost descriptor 36
jumper descriptor <u>55</u>	current resolution descriptor 37
length gap descriptor 64	degree descriptor 38
limit way descriptor 66	end index descriptor 42
match fromto length descriptor 67	fraction descriptor 46
match group length descriptor 67	index step descriptor <u>54</u>
match net length descriptor 68	inductance resolution descriptor <u>54</u>
max amp descriptor 69	integer descriptor <u>54</u>
max height descriptor 69	keepout sequence number
max length descriptor 69	descriptor <u>57</u>
max stagger descripto <u>r</u> 70	layer number descriptor 60
max stub descriptor <u>71</u>	limit bends descriptor 65
min amp descriptor 72	limit crossing descriptor 65
min height descriptor 73	limit vias descriptor <u>65</u>
min length descriptor 73	max total vias descriptor 71
net pair descriptor 76	no of large components descriptor 78
parallel noise descriptor 85	number descriptor <u>78</u> parser descriptor <u>89</u>
parallel segment descriptor <u>87</u> pin width taper descriptor <u>103</u>	passes descriptor <u>97</u>
saturation length descriptor 125	positive dimension descriptor 108
setback descriptor 127	positive differsion descriptor 108
shield gap descriptor 128	real descriptor 111
shield tie down interval descriptor 128	resistance resolution descriptor 118
shield width descriptor 128, 129	resolution descriptor 118
spacing descriptor 130	row descriptor 122
stack via depth descriptor <u>130</u>	sample window descriptor 124
syntax <u>108</u>	site array descriptor 129
tandem noise descriptor <u>136</u>	start pass descriptor <u>131</u>
tandem segment descriptor 139	step descriptor 131
tandem shield overhang descriptor 141	switch window descriptor 134
testpoint rule descriptor 142	syntax 108
total length descriptor 145	time resolution descriptor 143
via height descriptor 148	turret# descriptor 145
via pattern descriptor 149	via# descriptor 147
via width descriptor <u>149</u> virtual pin descriptor <u>149</u>	voltage resolution descriptor <u>150</u> positive_diagonal
width descriptor 151	direction type descriptor 40
wire pair descriptor 153	power
x clearance descriptor 156	color object descriptor 27
x overhang descriptor 156	layer type descriptor 60
y clearance descriptor 156	net descriptor 75
y overhang descriptor 157	pattern object descriptor 98
positive integer descriptor	reserved layer name descriptor 118
begin index descriptor 16	room rule descriptor 121
bond shape rotation descriptor <u>17</u>	power fanout descriptor
capacitance resolution descriptor 18	rule descriptors <u>123</u>
circuit descriptors 20	syntax <u>108</u>

power layer definition 61	R
power_dissipation physical property descriptor 101 room rule descriptor 121	radius virtual pin descriptor 149 ratio
power_fanout	length descriptor 63
power_layers system variable descriptor 135	total delay descriptor 145 ratio_tolerance
prefer place side descriptor syntax 109	definition <u>67, 68</u> match fromto length descriptor <u>67</u> match group length descriptor <u>67</u>
prefer_back prefer place side descriptor 109	match net length descriptor 68
prefer_front prefer place side descriptor 109	real descriptor delay value descriptor 38
prefix pin prefix id descriptor 102	diffpair line width descriptor 39 edge coupled tolerance minus
prefix descriptor composite name list descriptor 32	descriptor <u>41</u> edge coupled tolerance plus
syntax <u>109</u> priority	descriptor <u>41</u> edge primary gap descriptor <u>41</u> ignore gather length descriptor <u>49</u>
circuit descriptors <u>20</u> property	ignore gather length descriptor <u>49</u> layer weight descriptor <u>63</u> match fromto length descriptor <u>67</u>
component property descriptor 31 image property descriptor 53 user property descriptor 146	match group length descriptor 67 match net length descriptor 68
property value descriptor component property descriptor 31	max noise descriptor 69 max restricted layer length
image property descriptor <u>53</u> syntax <u>109</u>	descriptor <u>69</u> max uncoupled length descriptor <u>71</u> neck down gap descriptor <u>73</u>
user property descriptor <u>146</u> protect	neck down width descriptor 74 number descriptor 78
color object descriptor <u>27</u> test type descriptor <u>143</u> wire shape descriptor <u>153</u>	parallel noise descriptor <u>85</u> phase tolerance descriptor <u>99, 100</u> physical property descriptor <u>101</u>
wire via descriptor <u>154</u> psec time resolution descriptor <u>143</u>	positive dimension descriptor 108 room rule descriptor 121
	rotation descriptor 121 syntax 111 tandom poise descriptor 136
Q	tandem noise descriptor <u>136</u> time length factor descriptor <u>143</u> value descriptor <u>146</u>
qarc descriptor 110	rect rectangle descriptor 111
qarc descriptor shape descriptor 127	rectangle descriptor boundary descriptor 17
syntax <u>110</u> quote char descriptor parser descriptor <u>89</u>	place boundary descriptor 104 region descriptor 112 shape descriptor 127 syntax 111

reduced	descriptor <u>132</u>
reduced shape descriptor <u>111</u>	resolution
reduced shape descriptor	design file prototype <u>12</u>
padstack descriptor <u>82</u>	resolution descriptor 118
syntax <u>111</u>	resolution descriptor
reduction_ratio	conflict file descriptor 34
system variable descriptor 135	corner file descriptor 36
redundant wiring descriptor	design descriptor 38
rule descriptors 123	floor plan descriptor 45
syntax 112	placement descriptor 105
reference descriptor	route descriptor 122
image descriptor <u>50</u>	structure descriptor 131
syntax <u>112</u>	syntax <u>118</u> '
region	wiring descriptor 155
region descriptor 112	restricted layer length factor descriptor
region descriptor	rule descriptors 123
placement reference descriptor 106	syntax 120
structure descriptor 131	restricted_layer_length_factor
syntax <u>112</u>	restricted layer length factor
region id descriptor	descriptor 120
region descriptor 112	room
syntax <u>113, 114, <del>115</del>, 117</u>	room descriptor 120
region_class	room place rule object descriptor 121
region descriptor 112	room descriptor
region_class_class	floor plan descriptor 45
region descriptor 112	syntax <u>120</u>
region_net	room id descriptor
region descriptor 112	room descriptor 120
remain	syntax 120
exclude descriptor 42	room place rule descriptor
include descriptor 53	room descriptor 120
reorder	syntax 120
reorder descriptor 118	room place rule object descriptor
reorder descriptor	room place rule descriptor 120
rule descriptors 123	syntax 121
syntax <u>118</u>	room rule descriptor
reroute order viols	room descriptor <u>120</u>
control descriptor 34	syntax <u>121</u>
reroute_wire '	room_image_set
system variable descriptor 135	room place rule object descriptor 121
reserved layer name descriptor	rotate
layer id descriptor <u>58</u>	image descriptor <u>50</u>
syntax <u>118</u>	padstack descriptor 82
resistance resolution descriptor	rotate_first
design descriptor 38 ·	flip style descriptor 45
syntax <u>118</u>	rotation descriptor
resistance_resolution	image descriptor 50
resistance resolution descriptor 118	placement reference 105
resistor	super place reference descriptor 133
physical property descriptor 101	syntax 121
structure place rule object	round

path descriptor 97 polygon descriptor 107 roundoff_rotation control descriptor 34 routability max color object descriptor 27 routability min color object descriptor 27 route test type descriptor 143	placement reference descriptor 106 structure descriptor 131 structure out descriptor 132 syntax 122 rule descriptors rule descriptor 122 syntax 123 ruler color object descriptor 27
wire shape descriptor 153 wire via descriptor 154 route descriptor	S
route file descriptor 122 session file descriptor 126 syntax 122 route file descriptor	same net checking descriptor control descriptor <u>34</u> syntax <u>124</u> same_net_checking
syntax <u>122</u> route to fanout only descriptor control descriptor <u>34</u>	same net checking descriptor <u>124</u> sample window descriptor circuit descriptors <u>19</u>
syntax 122 route_pass system variable descriptor 135	syntax <u>124</u> sample_window sample window descriptor <u>124</u>
route_to_fanout_only route to fanout only descriptor 122 routes	saturation length descriptor rule descriptors <u>123</u> syntax <u>125</u>
route descriptor 122 routes_include	saturation_length saturation length descriptor <u>125</u>
parser descriptor <u>89</u> row descriptor circuit descriptors <u>20</u>	sec time resolution descriptor <u>143</u> second descriptor
syntax 122 RSS	time stamp descriptor <u>144</u> sel_signal_layers
noise accumulation descriptor <u>78</u> rule	system variable descriptor <u>135</u> select
keepout descriptor <u>56</u> padstack descriptor <u>82</u> region descriptor <u>112</u> rule descriptor <u>122</u>	color object descriptor <u>27</u> selectedcomp system variable descriptor <u>135</u> self
rule descriptor boundary descriptor 17 class class descriptor 21 class descriptor 21 fromto descriptor 46	self descriptor <u>125</u> self descriptor self descriptor <u>49</u> syntax <u>125</u> sequence_number
group descriptor <u>48</u> group set descriptor <u>49</u> image descriptor <u>50</u> layer descriptor <u>58</u>	keepout descriptor <u>56</u> session session file descriptor <u>125</u> session file descriptor
layer rule descriptor <u>60</u> net descriptor <u>74</u> net out descriptor <u>76</u>	syntax <u>125</u> session id descriptor session file descriptor <u>125</u>

augstaur 400	abiald width descriptor 100
syntax <u>126</u>	shield width descriptor 129
session structure descriptor	side
session file descriptor 125	family family spacing descriptor 43
syntax <u>127</u>	image descriptor 50
set_color	image image spacing descriptor <u>52</u>
color descriptor <u>27</u>	permit orient descriptor <u>98</u>
set_pattern	spacing descriptor 130
color descriptor <u>27</u>	testpoint rule descriptor 142
setback descriptor	side descriptor
syntax <u>127</u>	placement reference descriptor 105
shape	super place reference descriptor 133
padstack descriptor <u>82</u>	syntax <u>129</u>
shape descriptor	side_exit
conductor shape descriptor 33	cost type descriptor 36
keepout descriptor <u>56</u>	sign descriptor
outline descriptor <u>81</u>	integer descriptor <u>54</u>
padstack descriptor <u>82</u>	number descriptor 78
plane descriptor <u>106</u>	syntax <u>129</u>
reduced shape descriptor <u>111</u>	signal
room descriptor <u>120</u>	color object descriptor <u>27</u>
syntax <u>127</u>	layer type descriptor 60
window descriptor <u>151</u>	pattern object descriptor <u>98</u>
wire shape descriptor <u>153</u>	reserved layer name descriptor <u>118</u>
shield	signal layer
shield descriptor <u>127</u>	definition <u>61</u>
wire shape descriptor <u>153</u>	signal_layers
shield descriptor	system variable descriptor 135
circuit descriptors <u>20</u>	site
syntax <u>127</u>	color object descriptor <u>27</u>
shield gap descriptor	site array descriptor <u>129</u>
rule descriptors <u>123</u>	site array descriptor
syntax <u>128</u>	syntax <u>129</u>
shield loop descriptor	slantleftpat
rule descriptors <u>123</u>	pattern name descriptor <u>98</u>
syntax <u>128</u>	slantrightpat
shield tie down interval descriptor	pattern name descriptor <u>98</u>
rule descriptors <u>123</u>	small
syntax <u>128</u>	physical property descriptor 101
shield type descriptor	room place rule object descriptor 121
shield descriptor <u>127</u>	structure place rule object
syntax <u>128</u>	descriptor <u>132</u>
shield width descriptor	small_small
rule descriptors 123	opposite side descriptor <u>81</u>
syntax <u>129</u>	smd
shield_gap	definition 80
shield gap descriptor 128	grid descriptor 47
shield_loop	image type descriptor 53
shield loop descriptor 128	object type descriptor <u>80</u>
shield_tie_down_interval	
	place object descriptor 104
shield tie down interval descriptor 128 shield_width	

descriptor <u>132</u>	via pattern descriptor 149
smd_pins	staired_via
system variable descriptor 135	via pattern descriptor <u>149</u>
smd_to_turn_gap	stairstep
clearance type descriptor 23	noise calculation descriptor 78
definition <u>26</u>	starburst
smd_via_same_net	order type descriptor <u>81</u>
clearance type descriptor 23	start pass descriptor
definition <u>23</u>	syntax <u>131</u>
soft	status
exclude descriptor 42	component status descriptor 32
fromto descriptor 46	step descriptor
include descriptor <u>53</u>	composite name list descriptor 32
Source	syntax 131
net descriptor 74	string compare operator descriptor
space_in_quoted_tokens	numeric expression descriptor <u>79</u>
parser descriptor <u>89</u>	syntax <u>131</u>
spacing spacing descriptor 130	string descriptor
spacing descriptor <u>130</u> spacing descriptor	comment string descriptor <u>31</u> electrical value descriptor <u>42</u>
keepout descriptor <u>56</u>	name descriptor 73
place rule descriptor 105	string descriptor 131
room place rule descriptor 120	syntax 131
structure place rule descriptor 132	value descriptor 146
syntax 130	string expression descriptor
spacing type descriptor	expression descriptor 42
spacing descriptor 130	numeric expression descriptor 79
syntax <u>130</u>	syntax <u>131</u>
spare	string_quote
via descriptor <u>148</u>	parser descriptor <u>89</u>
special character descriptor	structure . —
character descriptor 19	design file prototype <u>12</u>
syntax <u>130</u>	session structure descriptor 127
spiral_via	structure descriptor <u>131</u>
via pattern descriptor <u>149</u>	structure descriptor
square	design descriptor 38
path descriptor <u>97</u>	syntax <u>131</u>
polygon descriptor <u>107</u>	structure out descriptor
squeeze	route descriptor 122
cost type descriptor 36	syntax <u>132</u>
stack via depth descriptor	structure place rule descriptor
rule descriptors 123	structure descriptor <u>132</u>
syntax <u>130</u>	syntax <u>132</u>
stack via descriptor	structure place rule object descriptor
rule descriptors 123	structure place rule descriptor 132
syntax 130	syntax 132
stack_via	structure_out
stack via descriptor 130	structure out descriptor 132
stack_via_depth stack via depth descriptor 130	subgate placement reference descriptor 106
stack via depth descriptor <u>130</u> staggered_via	subgate id descriptor

part pin descriptor <u>97</u>	Т
swap history descriptor 134	
syntax 132	tandem
subgate pin id descriptor_	shield type descriptor <u>128</u>
part pin descriptor <u>97</u>	tandem noise descriptor
syntax <u>133</u>	rule descriptors <u>124</u>
subgate swap code descriptor	syntax <u>136</u>
part pin descriptor <u>97</u>	tandem segment descriptor
syntax <u>133</u>	rule descriptors 124
subgates	syntax <u>139</u>
swap history descriptor 134	tandem shield overhang descriptor
substituted	rule descriptors 124
component status descriptor 32	syntax <u>141</u>
suffix	tandem_noise
pin suffix id descriptor <u>102</u>	tandem noise descriptor 136
suffix descriptor	tandem_segment
composite name list descriptor 32	tandem segment descriptor 139
syntax <u>133</u>	tandem_shield_overhang
super	tandem shield overhang descriptor 141
cluster descriptor <u>26</u>	term_only
super place reference descriptor	junction type descriptor <u>55</u>
cluster descriptor 26	terminal
syntax <u>133</u>	wire guide descriptor <u>152</u>
super_placement	wire shape descriptor 153
cluster descriptor <u>26</u>	terminator
supply . —	net descriptor 75
net descriptor <u>75</u>	test
wire shape descriptor 154	wire shape descriptor 153
supply pin descriptor	wire via descriptor 154
net out descriptor 76	test net descriptor
syntax <u>133</u>	syntax 141
wiring descriptor <u>155</u>	test point descriptor 141
supply_only	test point descriptor
junction type descriptor <u>55</u>	syntax 141
supply_pin	test points descriptor 142
supply pin descriptor <u>133</u>	test points descriptor
swap history descriptor	route descriptor 122
session file descriptor 126	syntax 142
syntax <u>134</u>	wiring descriptor 155
swapping	
śwap history descriptor 134	test type descriptor
switch window descriptor	syntax 143
circuit descriptors 20	test point descriptor 141
syntax 134	test_points
switch_window	test points descriptor 142
switch window descriptor 134	testpoint
system variable descriptor	color object descriptor 27
syntax 135	definition 80
variable name descriptor 146	object type descriptor 80
<u></u>	parser descriptor 89
	testpoint rule descriptor 142

testpoint rule descriptor rule descriptors 124 syntax 142 threshold parallel noise descriptor 85 tandem noise descriptor 136 thru_pins system variable descriptor 135 tilepat pattern name descriptor 98 time length factor descriptor rule descriptors 124 syntax 143 time resolution descriptor design descriptor 38 syntax 143 time stamp descriptor ancestor file descriptor ancestor file descriptor 16 self descriptor 125 syntax 144 time_length_factor time length factor descriptor 143 time_resolution time resolution descriptor 144 time_length factor descriptor 144 tipunction descriptor rule descriptors 124 syntax 144 tolerance match fromto delay descriptor 66 match fromto length descriptor 67 match group delay descriptor 67	syntax 145 total_pass system variable descriptor 135 total_pins system variable descriptor 135 totalcomp system variable descriptor 135 track id descriptor rule descriptors 124 syntax 145 track_id track id descriptor 145 turret wire shape descriptor 153 turret# descriptor syntax 145 wire shape descriptor 153 type clearance descriptor 23 cluster descriptor 26 daisy type descriptor 37 exclude descriptor 42 family family spacing descriptor 43 fromto descriptor 46 image image spacing descriptor 52 include descriptor 53 interlayer clearance descriptor 54 layer descriptor 58 length descriptor 63 net descriptor 74 opposite side descriptor 81 physical property descriptor 101 shield type descriptor 128
tolerance match fromto delay descriptor 66 match fromto length descriptor 67	net descriptor <u>74</u> opposite side descriptor <u>81</u> physical property descriptor <u>101</u>
top_layer_sel system variable descriptor 135 topology topology descriptor 144 topology descriptor	wire via descriptor 154  type route     conductor shape descriptor 33     conductor via descriptor 33
class descriptor 21 syntax 144	U
total max restricted layer length descriptor 69 total delay descriptor circuit descriptors 19 syntax 145 total length descriptor circuit descriptor	ufarad capacitance resolution descriptor 18 uhenry inductance resolution descriptor 54 um dimension unit descriptor 40 unassigned

net descriptor 74	V
unconnect_wire	V
system variable descriptor 135	
	value
underscore descriptor	electrical value descriptor <u>42</u>
user variable descriptor 146	value descriptor
unit	property value descriptor 109
design file prototype 12	syntax 146
unit descriptor <u>145</u>	variable name descriptor
unit descriptor	numeric expression descriptor 79
design descriptor 38	string expression descriptor 131
floor plan descriptor 45	syntax 146
image descriptor 50	vertdashpat
library descriptor 64	
padstack descriptor 82	pattern name descriptor <u>98</u>
placement descriptor 105	vertex descriptor
structure descriptor 131	bond shape descriptor <u>17</u>
syntax 145	circle descriptor 19
wiring descriptor 155	conductor via descriptor 33
units	conflict descriptor 34
	corner descriptor <u>36</u>
system variable descriptor 135	pad via site descriptor <u>85</u>
unplaced_comp	path descriptor <u>97</u>
system variable descriptor 135	placement reference descriptor 105
unplaced_large	polygon descriptor 107
system variable descriptor 135	qarc descriptor 110
unplaced_small	rectangle descriptor 111
system variable descriptor <u>135</u>	reference descriptor 112
up_down	super place reference descriptor 133
pin width taper descriptor <u>103</u>	syntax 147
use_array	test point descriptor 141
circuit descriptors 20	virtual pin descriptor 149
use_layer	wire guide descriptor 152
circuit descriptors 20	wire guide descriptor 152 wire via descriptor 154, 155
use_net	vertical
layer descriptor <u>58</u>	
shield descriptor 127	direction type descriptor 40
use_via	permit orient descriptor 98
attach descriptor <u>16</u>	vertpat
circuit descriptors 20	pattern name descriptor <u>98</u>
jumper descriptor 55	vertwavepat
testpoint rule descriptor 142	pattern name descriptor <u>98</u>
usec	via
time resolution descriptor 143	conductor via descriptor 33
	cost type descriptor 36
user property descriptor	definition <u>80</u>
image descriptor <u>50</u>	microvia descriptor 71
layer descriptor 58	object type descriptor <u>80</u>
net descriptor <u>74</u>	via descriptor <u>148</u>
syntax 146	wire via descriptor <u>154</u>
user variable descriptor	via array template descriptor
syntax <u>146</u>	library descriptor 65
variable name descriptor 146	syntax <u>147</u>

via array template id descriptor	color object descriptor 27
circuit descriptors 20	pattern object descriptor 98
syntax <u>147</u>	virtual pin descriptor
via array template descriptor 147	fromto descriptor 46, 113, 114, 115,
via at smd descriptor	117
control descriptor 34	library out descriptor 65
rule descriptors 124	syntax <u>149</u>
syntax 147	wire descriptor 152
via descriptor	virtual pin name descriptor
structure descriptor 131	syntax 150
syntax 148	virtual pin descriptor 149
via height descriptor	wire via descriptor 154, 155
microvia descriptor 71	virtual_pin
syntax <u>148</u>	virtual pin descriptor 149
via id descriptor	wire via descriptor 154, 155
attach descriptor 16	volt
grid descriptor <u>47</u>	
syntax <u>148</u>	voltage resolution descriptor 150
	voltage resolution descriptor
testpoint rule descriptor 142	design descriptor 38
via pattern descriptor	syntax 150
rule descriptors 124	voltage_resolution
syntax 149	voltage resolution descriptor 150
via width descriptor	
microvia descriptor 71	W
syntax 149	VV
via# descriptor	in december
syntax 147	was is descriptor
wire via descriptor <u>154</u>	session file descriptor 125
via_array_template	syntax <u>150</u>
via array template descriptor 147	was_is
via_at_smd	was is descriptor <u>150</u>
via at smd descriptor 147	way
via_keepout	cost type descriptor 36
keepout descriptor <u>56</u>	layer descriptor <u>58</u>
via_number	weight
wire via descriptor 154	parallel noise descriptor 85
via_pop	tandem noise descriptor 136
polygon descriptor <u>107</u>	width
via_rotate_first	width descriptor <u>151</u>
parser descriptor <u>89</u>	width descriptor
via_site	region descriptor <u>112</u>
pad via site descriptor <u>85</u>	rule descriptors 124
via_size	syntax <u>151</u>
microvia descriptor <u>71</u>	window
via_via_same_net	window descriptor <u>151</u>
clearance type descriptor 23	window descriptor
definition 23	padstack descriptor <u>82</u>
viakeepouts	plane descriptor <u>106</u>
color object descriptor 27	syntax <u>151</u>
pattern object descriptor <u>98</u>	wire shape descriptor <u>153</u>
vias	wire

definition 80 object type descriptor 80 wire shape descriptor 153 wire descriptor syntax 152 wiring descriptor 155 wire guide descriptor net out descriptor 76 syntax 152 wire pair descriptor	syntax 156 x0 descriptor pin array descriptor 102 site array descriptor syntax 156 xstep descriptor pin array descriptor pin array descriptor site array descriptor syntax 156
pair descriptor <u>85</u>	V
syntax 153	Y
wire shape descriptor net out descriptor <u>76</u> syntax <u>153</u> wire descriptor <u>152</u> wire via descriptor	y clearance descriptor microvia descriptor <u>71</u> syntax <u>156</u> y coordinate descriptor
net out descriptor 76	syntax <u>156</u>
syntax <u>154</u> wire descriptor 152	vertex descriptor
wire descriptor 152 wire_keepout keepout descriptor 56 wireplow polygon descriptor 107 wires wire pair descriptor 153 wires file descriptor syntax 155 wires_include testpoint parser descriptor 89 wiring design file prototype 13 wiring descriptor 155 wiring descriptor design descriptor 38 syntax 155 wires file descriptor 155 wires file descriptor 155 wires file descriptor 155 write_resolution parser descriptor 89	y overlap descriptor microvia descriptor syntax 157 y0 descriptor pin array descriptor 102 site array descriptor 129 syntax 156 year descriptor time stamp descriptor 144 ystep descriptor pin array descriptor 102 site array descriptor 102 site array descriptor 129 syntax 156
Y	



x clearance descriptor microvia descriptor 71 syntax 156
x coordinate descriptor
syntax 156
vertex descriptor 147 x overlap descriptor microvia descriptor 71