


## MARCH, 2013

## TRAVEL'R EMERGENCY OVERRIDE

## Service

Starting in 2013, the Travel'r Series of awnings has an improved and simplified procedure for the emergency override. It is not necessary to remove the motor head covers. Spade connectors are located in the arm channel for easy access.

To determine the correct override procedure, look at the back of the motor head. If the rear cover has the emergency terminals, use the previous override procedure. If there are no emergency terminals, use the new procedure below.




Below is an excerpt from the owner's manual that describes the new override procedure.

This procedure does not apply if Direct Response is installed.

- Locate and separate the spade connectors located in the motor arm channel. Position the wires from the motor on the outside of the channel.
- 2. Attach jumper wires to the motor wires.
- 3. Connect the other ends of the jumper leads to a 12-14V source. If the awning moves in the wrong direction, reverse the leads.
- 4. Maintain contact throughout the retraction process. Hold the wires from the motor on the outside of the channel while closing the awning. This provides access to open the awning.
- 5. When power is restored, use the jumper wires and extend the awning to access the spade connectors. Reattach the awning connectors and secure in the arm channel.

This procedure uses a new jumper cable with 1/4" spade connectors that match the wires from the motor.

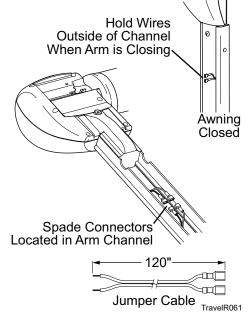

<u>Please Note:</u> Some OEMs may elect not to include the jumper cable with the awning. Jumper cables may be ordered using part number R019404-003.