
HARDWARE & ACCESSORIES

TITLE	SECTION PAGE
HARDWARE	2
ROLLER TUBES	
AWNING RAILS	2
HARDWARE	3
KNOBS	3
AWNING PULL STRAPS	4
Tools	5
PARTS ORDER FORM	6
Accessories	7
RAFTER VI	8
RAFTER VII	9
SIDE BLOCKER	
Sun Blocker	10
SUNSHADE - REAR WINDOW RETRACTABLE SHADE	11
CUSTOM SUNSHADE ORDER FORM	11
SUNSHADE ILLUSTRATED PARTS LIST	12
VACATION'R	13
VACATION'R ROOM ORDER FORM	
VACATION'R ILLUSTRATED PARTS LIST	14
BUENA VISTA	
BUENA VISTA ROOM ORDER FORM	
BUENA VISTA ILLUSTRATED PARTS LIST	16
VISORS	
VISOR ORDERING INFORMATION	18
INTERIOR VISOR ORDER FORM	

HARDWARE

ROLLER TUBES

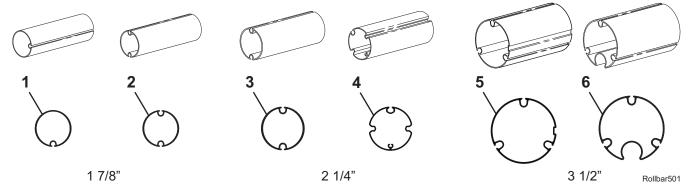


Item	Part Number	Description		Used On	Notes
1	R001076-xxx.xx	Roller Tube, Single Slot	1 7/8" Dia	Box awnings	1
2	610300-xxx.xx	Roller Tube, 2-Slot	1 7/8" Dia	Window awnings & Sunshade	1
3	610400-xxx.xx	Roller Tube, 2-Slot	2.25" Dia	SOKII, SOKIII, Summit & Marquee (prior to 07-2010)	1
4	610900-xxx.xx	Roller Tube, Single Slot	2.25" Dia	Slideout Cover, Ascent, Freedom WM, Freedom RM & Marquee (after 07-2010)	1
5	19xx00	Roller Tube, 4-Slot	3 1/2" Dia	Patio awnings	2,3
6	15xx00A	Roller Tube, w/ Utility Slot	3 1/2" Dia	3-	2

Notes: 1. xxx.xx = Length in inches.

2. xx = Length in feet.

3. The 4-slot roller tube (item 5) supersedes and replaces the previous 3-slot roller tube. The new tube is form fit and functionally interchangeable with the older style 3-slot tube.

AWNING RAILS

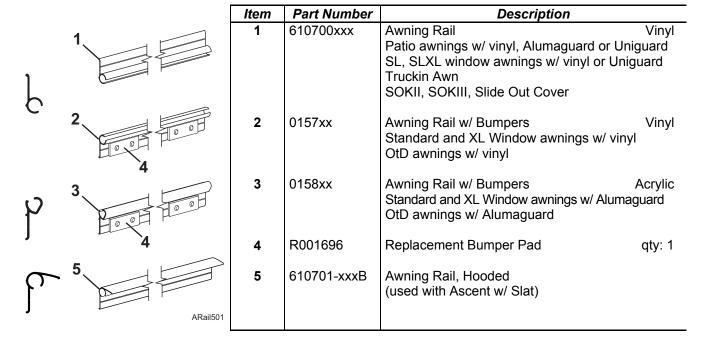

7 - 2 070000-007r1

HARDWARE

	Item	Part Number	r Description	
	1	041006	Polycord, 5/32"	(per foot)
	2	041046	Polycord, 3/16"	(per foot)
1 2 3 4	3	041200	Polycord, 7/32"	(per foot)
5/32" 3/16" 7/32" 1/4" Polyrod501	4 5	040886-001 R001577	Polycord, 1/4" Polycord Kit Contains 2 - Ø 3/16", 1 - Ø 1/4 in 25' lengths	(per foot)
1 2	1 2	901032 040033-001	Door Corner Protector Kit contains items 1 & 2 Door Roller (not available separately Corner Protector)
		901044	Pull Strap Catch – Black	pkg of 2
0		901044W	Pull Strap Catch – White	pkg of 2
		R00928	Tractioner Kit Used w/ Alumaguard/Unigua	
		R001008	O-Ring, Tractioner Retainer	pkg of 2
		R030307-001-MP	Moly Rivet	pkg of 50
The following Items are not illustrate	ed			
4 001016 Handle Din			Fite Chirit & Figete Aumings prior to	4000

1	901016	Handle Pins		Fits Spirit & Fiesta Awnings prior to 1996
2	901045	Sliding Arm Locks	(qty: 2)	Fits Carefree OtD awnings
3	901030	Add-A-Room Top Brackets	(qty: 2)	Fits all Add-A-Room & Breezeway Side Panels

Knobs
















Knob501

Discontinued use item 2


Discontinued use item 3

ri+

Please refer to description to determine correct Knob replacement kit.

1	901010	Locking Knob	(qty: 2)	Fits Carefree Rafter III & V
2	R00486	Brace Knob (includes T-Sert)	(qty: 1)	Fits Truckin' Awn, OtD, Rafter VI
3	R00708	Locking Knob (+T-Sert & Washer)	(qty: 1)	Fits Carefree Rafter VII
				Fits Carefree Rafter VII Ground Support
				Rafter VI Ground Support
				(not available for Canopy Clamps)
	901022	Locking Knob (includes Clamp)	(qty: 2)	Fits Spirit, Fiesta, Simplicity & Pioneer 1997 and newer
	R001674	Brace Knob (includes weld nut)	(qty: 1)	Fits Pioneer Lite and Fiesta Lite
4	901040	Locking Knob	(qty: 2)	Fits Carefree Patio Awnings Prior to 1996

AWNING PULL STRAPS

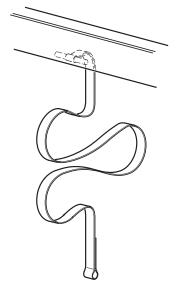

PART NUMBER	LENGTH	APPLICATION
R022406-070	70"	Guardiawn
R022406-075	75"	HILO SPIRIT/ FIESTA 6.5' EXT
R022406-113	113"	LEGACY
R022406-030	30"	OMEGA I SIDE PULL STRAPS
R022406-036	36"	OMEGA I CENTER STRAP
R022406-032	32"	OMEGA II SIDE PULL STRAPS
R022428-XXX		OMEGA II CENTER STRAP
		XXX = FINISHED LENGTH - CUSTOM
R022416-001	31"-36"	OMEGA ADJUSTABLE
R022406-036	36"	OTD
R022420-001	96"	Quick N EZ
R022406-030	30"	SIDE OUT AWNING
R022406-012FX	87"	SPIRIT FX 7.5' EXT
901011	93"	SPIRIT/ FIESTA/ SIMPLICITY
R022406-081	81"	SUPER SPORT
R022406-036	36"	Truckin' Awn
R022406-049	49"	TRUCKIN' AWN AUTO RAFTER
901012	27"	WINDOW AWNING
R022406-030	30"	WINDOW AWNING
901049	28"-33"	WINDOW AWNING ADJUSTABLE W/ BUCKLE
R026201	31.5"	WINDOW AWNING SAFARI
R022406-044	44"	XL WINDOW AWNING
R022406-028	28"	SL WINDOW AWNING
R022406-043	43"	XL SL WINDOW AWNING
R022406-xxx	ANY SIZE	CUSTOM PULL STRAP
xxx = Length in In	ches	

Tools		_
Tool501	CRANK HANDLE ASSY Ball Hook	R001645
Tool507	CRANK HANDLE ASSY Curved Hook	R001546-RP
	CRANK HANDLE ASSY T Style	R001606
	PULL WAND 43" 61"	
Tool510	TELESCOPING PULL WAND	901079
CH501	CRANK HANDLE CLIP Pkg of 2	901072
Tool509	KEY – MANUAL OVERRIDE 3/8" Used with Freedom WM, Freedom RM, Marquee & Freestyle Awnings	901075
•	HEX KEY – MANUAL OVERRIDE 7mm Used with Apex, Mirage	R030796-001
Tool508	FABRIC THREADER	R00737
DR041	DR SENSOR TESTER Works with 12V and 110V Dire Does not work with Travel'r Di	

PARTS ORDER FORM

Use this form anytime you wish to order replacement parts or product components.

- If ordering complete product (Example: Eclipse) use the custom order form for that product.
- If ordering a replacement fabric, use the CANOPY ONLY order forms.

STEP 1: PROVIDE	DESCRIPTION OF PART	OR COMPONENT	
CTTO O	Dan- # / avan a		
STEP 2: PROVIDE CAREFREE PART NUMBER:	THE PART # (IF AVAILA	QUANTITY	
OAKLI KLET AKT NOMBLIK.		QUANTIT	
		-	
	_		
STEP 3: PROVIDE	ANY ADDITIONAL INFO	RMATION REQUIRED:	
_			
STEP 4 DEALER	SHIP INFORMATION		MANDATORY!!
DISTRIBUTOR TO BE BILLED	THROUGH:		Order Cannot Be Processed Without Distributor Name
DIOTRIDOTOR TO DE DIELEE			Distributor Name
CAREFREE PRESIDENTS C	LUB#:	PO#:	
DEALER NAME:			
Address:			
CITY:		STATE:	ZIP CODE
PHONE:		FAX:	
	•		
CONTACT NAME: (IMPORTA	NT!) G INFORMATION	EMAIL:	
STEP 5: SHIPPING	G INFORMATION ☐ NEXT DAY	☐ SECOND DAY	
= STANDARD SHIFFING	_	ND DAY AIR FEES ARE PAID BY D	FALER)

Carefree

IS THE ORDER INFORMATION ACCURATE AND COMPLETE?

- → Incomplete orders may delay processing & delivery!
- → All orders are custom manufactured and cannot be returned!

Orders can be placed via

Your Carefree Distributor or FAX: 1-303-460-8329 or on-line at www.e-carefree.com

7 - 6 070000-007r1


901002

Accessories -MIMMANGE THIN-LITE 908801 1 Receptacle R00715 2 Thin-Lite Hanger (ea) 040275 ACC501 **AWNING AUTO SUPPORT** Black 902800 White 902800W For Auto Support used with center rafters, refer to page 8 and 9 ACC503 **CANOPY CLAMP** Set of 2 Black 902801 White 902801W ACC504 AWNING HANGER 5 per pkg 901200 (for use w/ Carefree roll bars with utility slot) ACC506 CENTER RAFTER 902410-RP (for use w/ Freedom WM and RM Awnings) CR501 The following Items are not illustrated ANCHOR TIE DOWN KIT ("built in" – fits roll bars w/ Utility slot) 901000 includes: 2 - Corkscrew Anchors 2 - Straps 2 - Springs 2 - Clear Storage Tubes **CORKSCREW ANCHORS** 901001

070000-007r1 7 - 7

ANCHOR SPRINGS


RAFTER VI

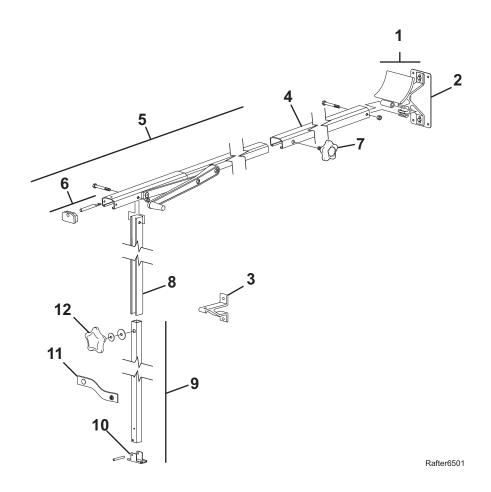

Item	Part Number	Description		Notes
1	R00483WHT	Cradle w/ Bracket	White	
2	R00132W	Backing Plate	White	
3	R00711WHT	Bottom Bracket	White	
4	R00123	Rafter Outer Arm, 50"	Satin	
	R00123W	Rafter Outer Arm, 50"	White	
5	R00718	Rafter Inner Arm, 57", w/ Linkage	Satin	
	R00720	Rafter Inner Arm, 57", w/ Linkage	White	
6	R00457	Roller Pin End		
7	R00486	Knob, Black w/ Nutsert		
8	R00702	Ground Support Outer Arm, 49 1/2"	Satin	
	R00704	Ground Support Outer Arm, 49 1/2"	White	
9	R00705	Ground Support Inner Arm, 58"	Satin	
	R00707	Ground Support Inner Arm, 58"	White	
10	R00394	Carport Foot		
11	R00721	Strap Assembly w/ snaps		
12	R00708	Knob, Black w/ washers		
13	R019557XXX	Hardware Pack (does not include stakes or bottom brackets)		


7 - 8 070000-007r1

RAFTER VII

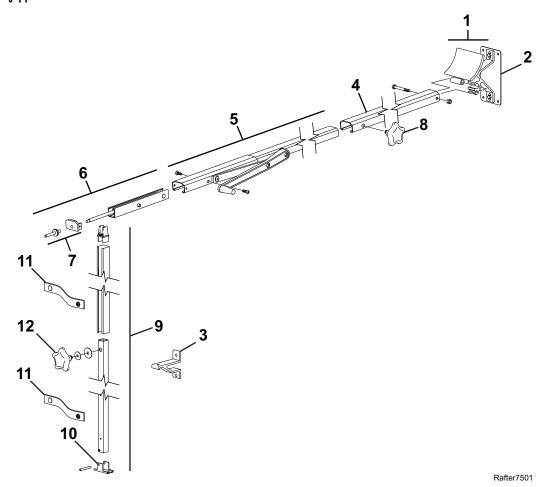

Item	Part Number	Description		Notes
1	R00483	Cradle w/ Bracket	Black	
	R00483WHT	Cradle w/ Bracket	White	
2	R00132W	Backing Plate	White	
3	R00711	Bottom Bracket	Black	
	R00711WHT	Bottom Bracket	White	
4	R00871	Rafter Outer Arm	Satin	
	R00871WHT	Rafter Outer Arm	White	
5	R00872	Rafter Inner Arm, w/ Linkage	Satin	
	R00872WHT	Rafter Inner Arm, w/ Linkage	White	
6	R00869	Front End Mounting Assy	Satin	
	R00869WHT	Front End Mounting Assy	White	
7	R001574	Tip, Front End Mounting Assy		
8	R00708	Knob, Black		
9	902310	Ground Support Assy	Satin/Black	
	902315	Ground Support Assy White		
10	R00394	Carport Foot		
11	R00721	Strap Assy w/ snaps		
12	R00708	Knob, Black		
13	R001086XXX	Hardware Pack (does not include stakes or bottom brackets))	

SIDE BLOCKER

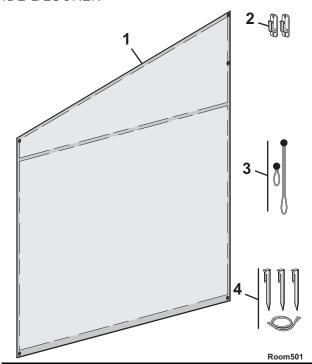


Item	Part Number	Description
1	8800XX02	SideBlocker
2	901044W	Hook Bracket
3	R001363	Bungee Set
		(includes 1-2" and 1-12" bungee)
4	R001354	Rope and Stake Kit
	R012734-001	Hardware Pack
		(includes items 2, 3 & 4)
5	R051189-001	Storage Bag not shown

Notes 1. XX = Color

- 2. Hook Bracket (item 2) is good for all spares.
- 3. Item 3 (Bungee Set) replaces the hook, rope and cord lock. For how-to-use instructions, refer to instruction sheet available at www.carefreeofcolorado.com



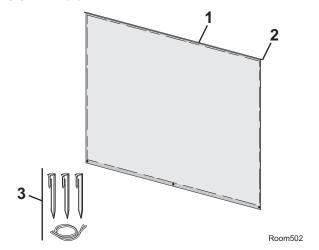

Item	Part Number	Descriptio	n
1		SunBlocker	
	8210XX02		10 ft
	8215XX02		15 ft
	8217XX02		17 ft
2	041046	Gray Polyrod	3/16"
3	R012733-001	Hardware Pack	
4	R051189-001	Storage Bag	not shown

Notes 1. XX = Color

7 - 10 070000-007r1

SUNSHADE - REAR WINDOW RETRACTABLE SHADE.

- Blocks the heat from the back window and helps protect interior furniture and curtains from the damaging ultraviolet sunrays.
- Made with colorful FullView fabric for a clear view.
- All orders are custom and Non-Returnable.

The Sunshade is NOT intended for use on the side of the vehicle, over an emergency exit or for indoor use!

Mounting on an angled surface may result in improper operation of the Sunshade.

CUSTOM SUNSHADE ORDER FORM

STEP 1: MEASURE WINDOW WIDTH					
MINIMUM WIDTH = 30"; MAXIMUM WIDTH = 72"	3"				
WIDTH A =	m e				
Note: The Sunshade requires a minimum 3" flat mountin space above the window frame.	g A 4"				
STEP 2: MEASURE WINDOW HEIGHT	2 1/2"				
MINIMUM HEIGHT = N/A; MAXIMUM HEIGHT = 60"					
HEIGHT B =	End Plug				
Measure the height of the window including the frame (B This is the minimum fabric height required.). PC5004				
STEP 3: SELECT HARDWARE COLOR					
CASTING COLOR: ☐ WHITE ☐ BLACK					
STEP 4: SELECT FABRIC COLOR					
FULLVIEW FABRIC ☐ SIERRA BROWN ☐ BORDEAUX ☐ OC	EAN BLUE □ BLACK				
STEP 5: DEALERSHIP INFORMATION	MANDATORY!!				
DISTRIBUTOR & BRANCH TO BE BILLED THROUGH:	Order Cannot Be Processed Without				
CAREFREE PRESIDENTS CLUB#:	PO#:				
Dealer Name:					
Address:					
CITY: ST	ATE: ZIP CODE:				
PHONE: FA	X:				
CONTACT NAME: (IMPORTANT!) EMAIL:					
STEP 6: SHIPPING INFORMATION					
☐ STANDARD SHIPPING ☐ NEXT DAY ☐ SECOND DAY (SOM (ALL NEXT DAY AND SECOND DAY AIR FE	E LOCATION RESTRICTIONS MAY APPLY) EES ARE PAID BY DEALER)				




IS THE ORDER INFORMATION ACCURATE AND COMPLETE?

- → Incomplete orders may delay processing & delivery!
- → All orders are custom manufactured and cannot be returned!

Orders can be placed via

Your Carefree Distributor or FAX: 1-303-460-8329 or on-line at www.e-carefree.com

SUNSHADE ILLUSTRATED PARTS LIST

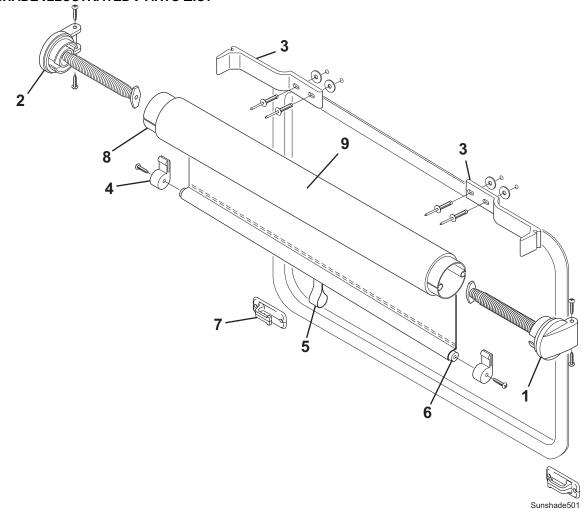


Item	Part Number		Description		Notes
1	R00451XXX	Springs-Right		3'-3'11"	2
	R00452XXX	Springs-Right		4'-4'11"	2
	R00453XXX	Springs-Right		5'-17'	2
2	R00448XXX	Springs-Left		3'-3'11"	2
	R00449XXX	Springs-Left		4'-4'11"	2
	R00450XXX	Springs-Left		5'-17'	2
3	R00474XXX	Top Mounting Bracket			2
4	R00476	Lead Rail Hook			
5	R00475	Pull Loop			
6	R00477-xxx	Lead Rail Assembly			1
7	901044	Bottom Catch	Black	2 per pkg	
	901044W	Bottom Catch	White	2 per pkg	
8		Roller Tube	See Hardware	e and Accessories	
9	M51	Canopy Only			
	The following items	are not shown			
	R016215-005	Hardware Pack		White	
	R016215-006	Hardware Pack		Black	

Notes: 1. xxx = Length in inches 2. XXX = Color

7 - 12 070000-007r1

VACATION'R

- Fits traditional and 12V vinyl awnings with vertical arms. Available in sizes 10' to 21'.
- Will fit most competitive brands w/ 8 foot extension. (Does not include Zip Dee awnings.)
- Made of durable, lightweight polyester material - the same material used for tents.
- No rafters to install.
- Allows awnings with an auto-dump feature to function correctly. When the awning folds to release water, the room folds with the awning. When the water is released, the room and awning returns to the extended position.
- Room includes tie-down privacy panels on the outside of the room







VACATION'R ROOM ORDER FORM						
STEP 1:	SELECT SIZE					
SIZE:	□ 10'-11'	□ 12'-13'	□ 14'-15'	□ 16'-17'	□ 18'-19'	□ 20'-21'
AWNING LENGTH	HIS MEASURED FRO	OM CENTER OF ARM	TO CENTER OF AR	RM.		
STEP 2:	DEALERSHIP	INFORMATION				MANDATORY!!
DISTRIBUTOR 8	BRANCH TO BE I	BILLED THROUGH:				Order Cannot Be Processed Without
CAREFREE PRE	SIDENTS CLUB#:			PO#:		Distributor Name
DEALER NAME:						
ADDRESS:						
CITY:			S	STATE:	ZIP COI	DE:
PHONE: FAX:						
CONTACT NAME: (IMPORTANT!) EMAIL:						
STEP 3: SHIPPING INFORMATION						
☐ STANDARD SHIPPING ☐ NEXT DAY ☐ SECOND DAY (SOME LOCATION RESTRICTIONS MAY APPLY) (ALL NEXT DAY AND SECOND DAY AIR FEES ARE PAID BY DEALER)						



IS THE ORDER INFORMATION ACCURATE AND COMPLETE?

- → Incomplete orders may delay processing & delivery!
- → All orders are custom manufactured and cannot be returned!

Orders can be placed via

Your Carefree Distributor or FAX: 1-303-460-8329 or on-line at www.e-carefree.com

VACATION'R ILLUSTRATED PARTS LIST 10 14 12 BV501

Item	Part Number	Description		Notes
1	R062792-001	Side Panel, LH		
2	R062792-001	Side Panel, RH		
3	R062789-001	Door Panel		2
4	R062790-001	Panel Insert, 12"		2
5	R062793-010	Front Panel	10' Room	2
	R062793-012	Front Panel	12' Room	2
	R062793-014	Front Panel	14' Room	2
	R062793-016	Front Panel	16' Room	2
	R062793-018	Front Panel	18' Room	2
	R062793-020	Front Panel	20' Room	2
6	R001742	Bag, Vacation'r		
7	R001776	Wall Seal, complete	pkg of 2	
8	R062785-003	Skirt, 6.5meter		
9	901076	Skirt Clip	pkg of 2	
10	901078	Ball Bungee, 12"	pkg of 2	
11	901077	Rail Clamp Kit		
12	R001706	Strap Hook, used with 1" web strap		
13	R001707	Canopy Clamp, used with 1 1/2" web strap		
14	901082	Stakes	pkg of 6 with bag	

Notes: 1. Components shown are for rooms manufactured in 2012 & ON. 2. Panels come complete with zipper insert.

7 - 14 070000-007r1

BUENA VISTA

- Fits vertical arm awnings: Eclipse, Adjustable Pitch Travel'r, Pioneer. Pioneer Lite, Spirit/Fiesta as well as most competitive brand awnings w/ 8 foot extension. (Does not include Zip Dee awnings.). Available in sizes 10' to 21'.
- Fits the metric Freedom Wall Mount, Freedom Roof Mount and metric Campout. Available in sizes 3 meter to 5 meter.
- Made of durable, lightweight polyester & vinyl material - the same material used for tents.
- No tools required for installation and setup.



- Room features zippered clear mylar windows on the outside and zippered privacy panels on the inside.
- Room package includes storage bag, hardware and 40" one-piece vinyl skirt.
- Fits awning rail heights: 86" (218cm) 120" (305cm)

BUENA VISTA ROOM ORDER FORM						
STEP 1: SELECT SIZE						
FOR VERTICAL ARM AWNINGS						
□ 10'-11' □ 12'-13' □ 14'-15'	□ 16'-17'	□ 18'-19'	□ 20'-21'			
Awning Length is measured from center of arm to center	of arm.					
FOR FREEDOM WM, FREEDOM RM AND THE METRIC CAM	MPOUT					
□ 3 METER (9'-10") □ 3.5 METER (11'-6") □ 4 METI	ER (13')	☐ 4.5 METER (14'-9")	□ 5 METER (16'-5")			
For Freedoms, awning length is measured from end cap	to end cap. Fo	or Campout, length is the	length of the bag.			
STEP 2: DEALERSHIP INFORMATION			MANDATORY!!			
DISTRIBUTOR & BRANCH TO BE BILLED THROUGH:			Order Cannot Be Processed Without Distributor Name			
CAREFREE PRESIDENTS CLUB#:	PO#:		Distributor Name			
DEALER NAME:						
Address:						
CITY:	STATE:	ZIP C	ODE:			
PHONE:	FAX:					
CONTACT NAME: (IMPORTANT!) EMAIL:						
STEP 3: SHIPPING INFORMATION						
☐ STANDARD SHIPPING ☐ NEXT DAY ☐ SECOND DAY (SOME LOCATION RESTRICTIONS MAY APPLY) (ALL NEXT DAY AND SECOND DAY AIR FEES ARE PAID BY DEALER)						



070000-007r1


IS THE ORDER INFORMATION ACCURATE AND COMPLETE?

7 - 15

- → Incomplete orders may delay processing & delivery!
- → All orders are custom manufactured and cannot be returned!

Orders can be placed via

Your Carefree Distributor or FAX: 1-303-460-8329 or on-line at www.e-carefree.com

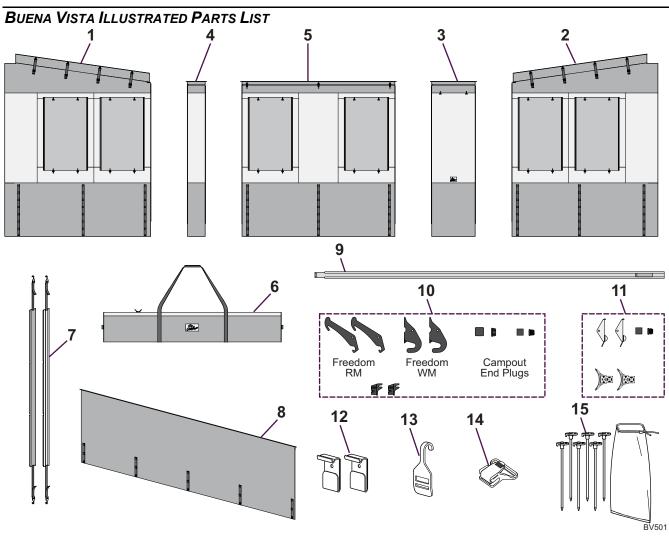

Item	Part Number	Description	Notes			
1	R062787-001	Side Panel, LH				
2	R062787-002	Side Panel, RH				
3	R062789-001	Door Panel	2			
4	R062790-001	Panel Insert, 12"	2			
	R062790-002	Panel insert, .5 meter (19")	2			
5	R062788-010	Front Panel 10', 3m & 3.5m Roon	1 2			
	R062788-012	Front Panel 12' & 4m Roon	1 2			
	R062788-014	Front Panel 14', 4.5m & 5m Roon	1 2			
	R062788-016	Front Panel 16' Roon	1 2			
	R062788-018	Front Panel 18' Roon	1 2			
	R062788-020	Front Panel 20' Roon	1 2			
6	R001741	Bag, Buena Vista				
7	R001776	Wall Seal, complete pkg of 2	2			
8	R062785-003	Skirt, 6.5meter				
9	R012566-005	Rafter Base Unit				
10	R019568-001	Rafter End Kit Freedom Box Awning & Campou	t			
11	R019572-001	Rafter End Kit Vertical Arm Awning	3			
12	901076	Skirt Clip pkg of 2	2			
13	R001706	Strap Hook, used with 1" web strap				
14	R001707	Canopy Clamp, used with 1 1/2" web strap				
15	901082	Stakes pkg of 6 with bag	3			

Notes: 1. Components shown are for rooms manufactured in 2012 & ON. 2. Panels come complete with zipper insert.

7 - 16 070000-007r1

VISORS

MAXI SIDEVISOR

Manual interior shade for motorhome cab side windows.

- Sun protection for the side windows of a Class A cab. Cuts heat and glare.
- Beautiful finished pull down shade housed in a black aluminum case
- > 36" fabric drop for maximum sun protection.
- Split fabric design: Top 18" is solid black vinyl backed fabric; the bottom 18" is a black solar see through mesh that gives sun block while keeping the side view.
- Pull down adjustable drop.
- Pull cord spring retraction.

POWER SIDEVISOR

Powered interior shade for motorhome cab side windows.

- Push Button operation, 12 volt motor.
- All the same benefits as the Maxi SideVisor (See above).

MAXI SMARTVISOR

Manual interior shade for motorhome windshields.

- Provides additional sun block you don't get from the Visors that came with the coach. Cuts heat & glare.
- Housed in a black aluminum case.
- 36" drop gives maximum protection
- Solid black vinyl backed fabric completely blocks the sun.
- Pull down lead rail to desired height; push up lead rail to retract.
- Doubles as a privacy shade while parked by ordering two overlapping visors. 36" drops to the dash.

POWER SMARTVISOR

Powered interior shade for motorhomes.

- Push button operation, 12 volt motor.
- All the same benefits as the Maxi SmartVisor (See above).

NOTE: To order replacement switches for power visors, use part number R00001.

SOFT ASCENT VISOR

Manual interior shade for motorhomes.

Simply pull the shade down to the desired extension (up to 36"). When ready to retract, pull the lead rail down slightly and the visor retracts slowly into the black aluminum case.

VISOR ORDERING INFORMATION

SOFT ASCENT, MAXI SMARTVISOR & POWER SMART VISOR

	SIZES AVAILABLE:						DROP AVA	ILABLE:
INTERIOR SIDEVISORS:			,	\downarrow			↓	
Soft Ascent Sidevisor:	24"	30"	36"	40"	43"		36"	
Maxi Sidevisor:	24"	30"	36"	40"	43"		36"	
Power Sidevisor:	26"	30"	36"	40"	43"		36"	(30" width has a 34" drop)
WINDSHIELD VISORS								
Maxi Smartvisor:		30"	36"	40"	43"		36"	
Power Smartvisor:		30"	36"	40"	43"	54"	36"	(30" width has a 34" drop)

VISORS:

- All SideVisors have solid black fabric on the top half, and black mesh fabric on the bottom half.
- All windshield visors are solid black fabric.
- All visors are housed in a black case, with black end caps and mounting hardware.
- Fabric will measure approximately 2" less then the stated shade size.
- All PowerVisors include a switch and wire harness.

OPTIONS:

- Maxi SideVisor is available with left or right pull cord.
- PowerVisors are available with left or right motor.

MEASURING TIPS:

- All Visor measurements are end of case to end of case, including the mounting brackets.
- Allow the following measurements for installation:

Soft Ascent Sidevisor: 2" High x 2" Deep x +1" Wider than specified size.

Maxi Sidevisor: 2" High x 2" Deep

Power Sidevisor: 2" High x 3" Deep x +1" Wider than specified size.

Maxi Smartvisor: 2" High x 2" Deep

Power SmartVisor: 2" High x 3" Deep x +1" Wider than specified size.

ORDERING:

- Length of visor.
- Right or Left pull cord if applicable.
- · Right or Left motor if applicable.

SHIPPING:

• All Visors are UPSable. Applicable freight charges apply.

7 - 18 070000-007r1

INTERIOR VISOR ORDER FORM						
STEP 1: SELECT SIZE & STYLE						
INTERIOR SIDEVISORS:						
□ SOFT ASCENT VISOR						
□ 24" □ 30" □ 36" □ 40" □ 43"						
☐ MAXI-SIDEVISOR						
□ 24" □ 30" □ 36" □ 40" □ 43"						
LOCATION OF PULL CORD	☐ RIGHT					
□ Power Sidevisor						
□ 26" □ 30" □ 36" □ 40" □ 43"						
LOCATION OF MOTOR LEFT RIGH	iT					
NOTE: 30" VISOR HAS A DROP OF 34"						
INTERIOR WINDSHIELD VISORS:						
☐ Maxi-Smartvisor						
□ 30" □ 36" □ 40" □ 43"						
□ Power Smartvisor						
□ 30" □ 36" □ 40" □ 43"	□ 54"					
LOCATION OF MOTOR LEFT RIGH	I T					
NOTE: 30" VISOR HAS A DROP OF 34"						
STEP 2: DEALERSHIP INFORMATION						
DISTRIBUTOR & BRANCH TO BE BILLED THROUGH: MANDATORY!! Order Cannot Be Processed Without						
CAREFREE PRESIDENTS CLUB#: PO#:						
DEALER NAME:						
Address:						
City:	STATE: ZIP CODE:					
PHONE:	FAX:					
CONTACT NAME: (IMPORTANT!)						
STEP 3: SHIPPING INFORMATION						
□ STANDARD SHIPPING □ NEXT DAY □ SECOND DAY (SOME LOCATION RESTRICTIONS MAY APPLY) (ALL NEXT DAY AND SECOND DAY AIR FEES ARE PAID BY DEALER) Orders can also be placed on-line at www.e-Carefree.com						



Is the order information ACCURATE and COMPLETE? → Incomplete orders may delay processing & delivery!

- → All orders are custom manufactured and cannot be returned!

Orders can be placed via

Your Carefree Distributor or FAX: 1-303-460-8329 or on-line at www.e-carefree.com