





Place acrylic feet under each of the 6 mounting holes. Make sure they do not overlap the edge of the board.

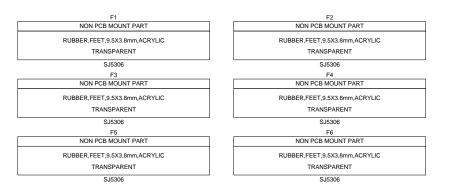

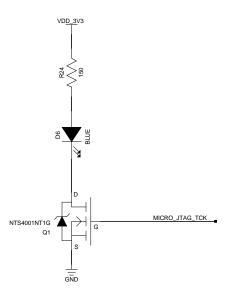


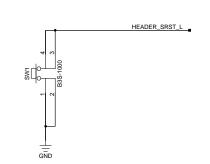

Breakout Header

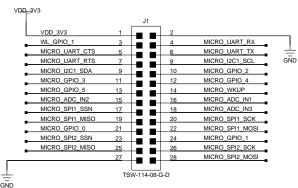

JLINK Header

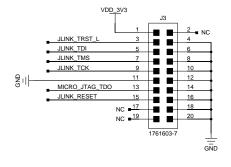

Broadcom Company Confidential									
	B BCM9WCD9EVAL1_1								
	DATE	03/03/2015:09:52	SHEET	3	OF	1			

3