PLINKY//12

■ 4 VOICES ■ 6 MODES ■ 1/16 GRID

A PERPLEX ON PLINKY 12 PANEL

LEFT HAND

GRID COLUMNS 0–3

	0	1	2	3
00	**VIBRATO** PRESSURE 2 × 2		**TREMOLO** PRESSURE 2 × 2	
01				
02	**FILTER** PRESSURE · LP 2 × 2		**ACCENT** PRESSURE 2 × 2	
03				
04	**DELAY** PRESSURE · SEND 2 × 2		**RANDOM** PRESSURE · VARY 2 × 2	
05				
06	**m.PENT** MODE	**HARM.m** MODE	**MAJ9** MODE	**DIATON** MODE
07	**PENTA** MODE	**QUARTAL** MODE	**PARALL** MOTION	**CONTRA** MOTION
08	**CHORD** TREAT	**ARP** TREAT	**LINE** TREAT	**IMPROV** TREAT
09	**STACC** ARTIC	**HALF L** ARTIC	**LEGATO** ARTIC	**LATCH** TOGGLE
10	**PAT OFF** PATTERN	**PAT 1** PATTERN	**PAT 2** PATTERN	**PAT 3** PATTERN
11	**PAT 4** PATTERN	**PAT 5** PATTERN	**PAT 6** PATTERN	**PAT 7** PATTERN
12	**PAT 8** PATTERN	**PAT 9** PATTERN	**PAT 10** PATTERN	**QUANT** OFF ⇄ 1/16
13	**INT −** 1 … 7	**INT +** 1 … 7	**TRN −** ± 12 ST	**TRN +** ± 12 ST
14	**X OCT −** ± 2	**X OCT +** ± 2	**Y OCT −** ± 2	**Y OCT +** ± 2
15	**SOUND 1** PRESET	**SOUND 2** PRESET	**SOUND 3** PRESET	**EDIT** SOUND PAGE


COLOUR BAR = REAL PAD COLOUR · FILLED = ACTIVE IN SNAPSHOT

TEMPO

BPM ▲ ▼ · LEFT HW BUTTONS

Y: HI

16 × 16 // SPIEGEL 12

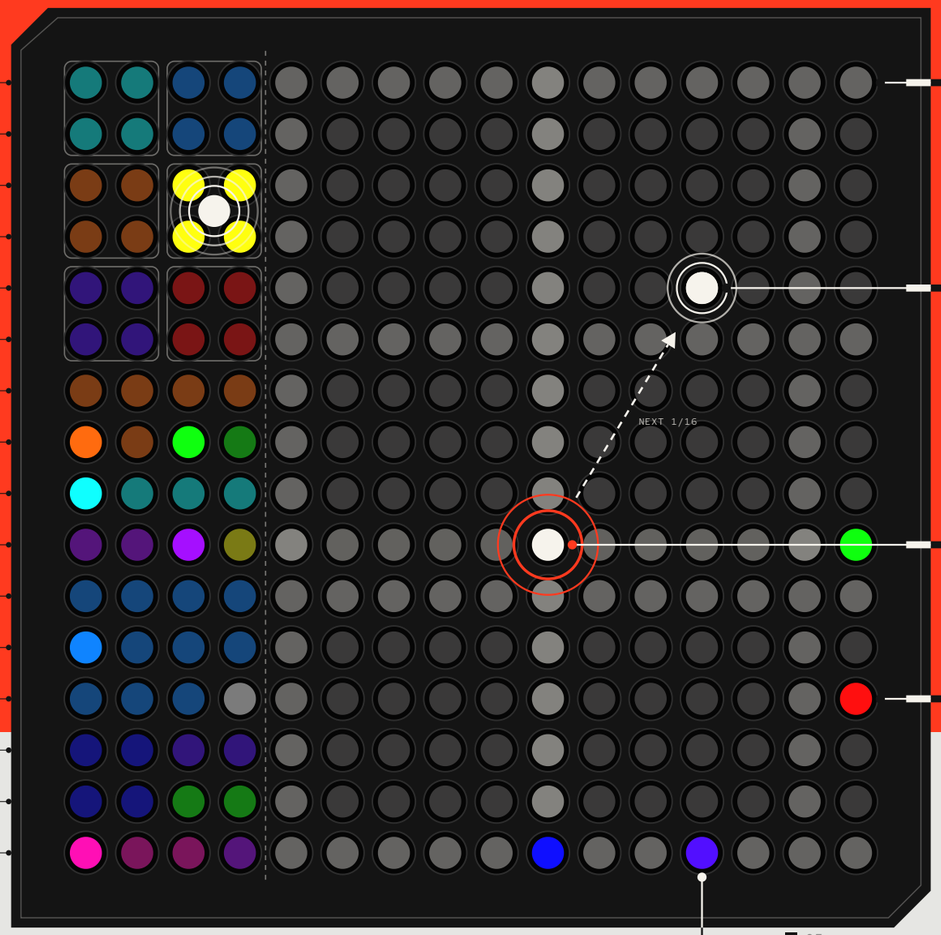

Y: LO

X: LO → HI

■ 01

ROOT LINES

GREY = ROOT OF THE MODE

■ 02

LIVE TOUCH

WHITE · NOT YET PLAYED

■ 03

CURSOR

PLAYS ON NEXT 1/16

■ 04

Y PAIR

RIGHT EDGE · Y1/Y2

■ 05

X PAIR

BOTTOM EDGE · X1 / X2

UP

DOWN

PAGE

AUTHOR	**PERPLEX ON**
PANEL ID	**perplex_on/spiegel_12**
BUILD	**SEE PANEL PAGE**
PREFERRED	**BLOCKS**

01 PLAY

TOUCH THE FIELD	SETS THE CURSOR
COLUMN	X PAIR · BASS VOICES
ROW	Y PAIR · UPPER VOICES
LIFT FINGER	STOPS · LATCH HOLDS

02 SETTINGS

▲ CLICK RIGHT HARDWARE BUTTON UP

PANEL SETTINGS	NONE · ALL ON THE GRID
CLOCK	FREE-RUNNING · SYNCS
SENS	SCALES PAD PRESSURE
├ **DEAD ZONE**	A LIGHT TOUCH DOES NOTHING
└ **CURVE**	SLOW START · FULL ONLY WHEN FIRM



DEFAULTS: PENTA · PARALLEL · CHORD · LEGATO · PAT 4 · 1/16

03 PAGES

▼ CLICK RIGHT HARDWARE BUTTON DOWN

0 PLAY	GRID · EDIT / LOAD SOUND
1 SAVE/LOAD	SONGS

■ **THE WHOLE GRID STATE SAVES WITH THE SONG.**
3 SOUNDS + MIX PRESET TRAVEL WITH IT.

SCALES

MODE PADS · LEFT HAND ROWS 06–07

MINOR PENTA	HARMONIC MINOR	MAJOR 9
DIATONIC	PENTATONIC	QUARTAL

PATTERNS 1–10 WALK THE Y PAIR THROUGH THE MODE.

ONE FINGER. FOUR VOICES.
THE LEFT HAND SHAPES.
AFTER L. SPIEGEL'S MUSIC MOUSE.

VOICE PAIRS

DETAIL OF 04 Y PAIR · 05 X PAIR · RIGHT: TREATMENT

X1	COLUMN	**CHORD**	ALL 4 · EVERY 1/8
X2	X1 + INTERVAL · CONTRARY: MIRRORED	**ARP**	X1 Y1 X2 Y2
Y1	ROW	**LINE**	Y1 + X1 ON BEATS
Y2	Y1 − INTERVAL · CONTRARY: MIRRORED	**IMPROV**	RANDOM VOICE

SPIEGEL 12

P PERPLEX_ON/SPIEGEL_12 · BLOCKS

//:S12 PLINKY 12

//:S12