
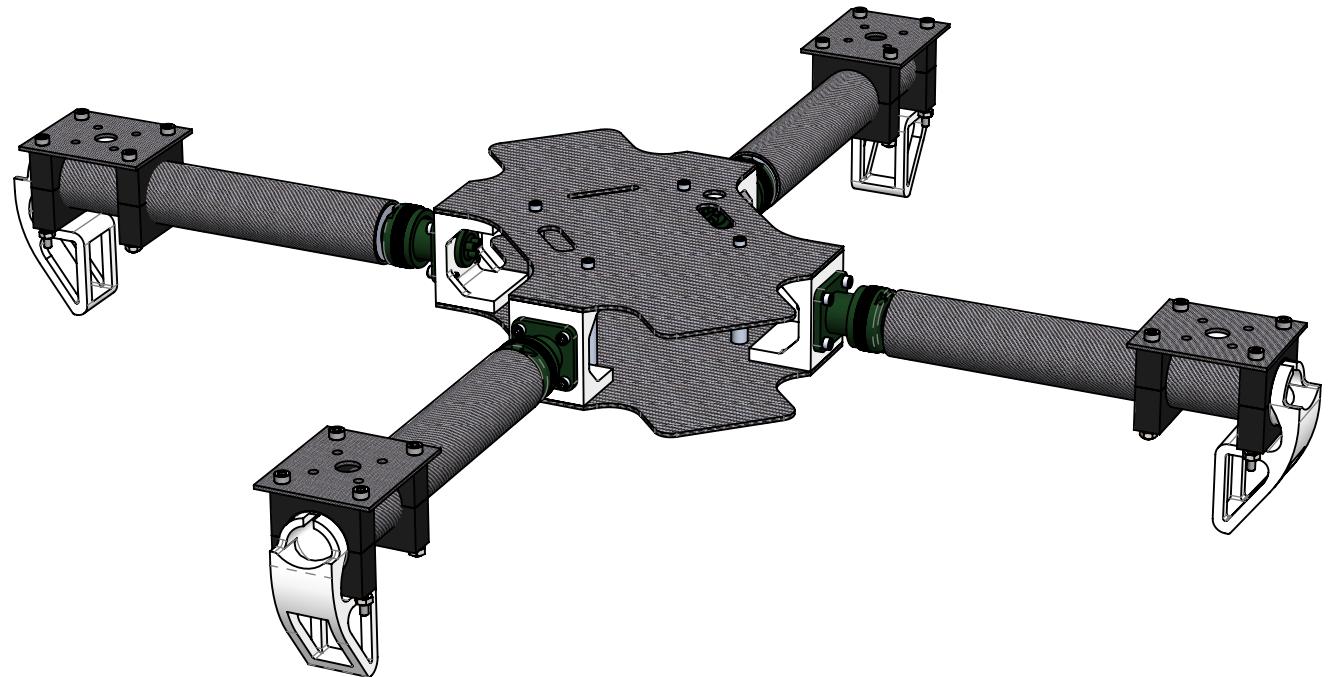


PROPRIETARY AND CONFIDENTIAL  
THE INFORMATION CONTAINED IN THIS  
DRAWING IS THE SOLE PROPERTY OF  
FALPIX. ANY REPRODUCTION IN  
PART OR AS A WHOLE WITHOUT THE  
WRITTEN PERMISSION OF FALPIX IS  
PROHIBITED.

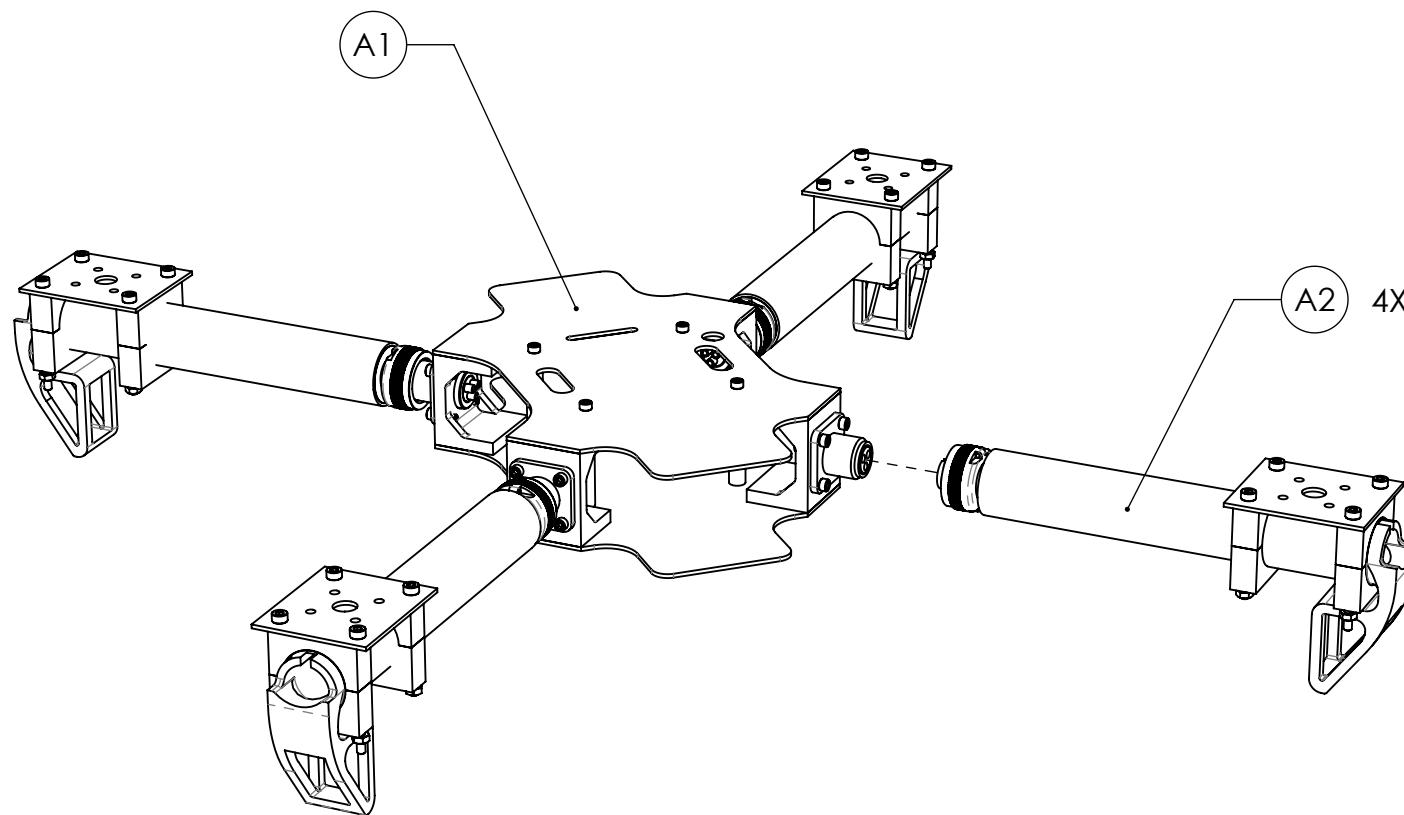

DRAWING NOTES: UNLESS OTHERWISE SPECIFIED

1. TO ATTACH ASSEMBLY A2 (ARM) TO ASSEMBLY A1 (FRAME), PUSH AMP CONNECTORS TOGETHER AND THEN FASTEN THREADED COLLET.

	NAME	DATE
DRAWN	P. Maroli	3/9/17
CHECKED	Jake K.	3/9/17
CALL (925)-963-2273 WITH ANY QUESTIONS REGARDING THIS DWG.		
INTERPRET GEOMETRIC TOLERANCING PER: ANSI Y14.5		
UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES:		
ANGULAR $\pm 20'$ TWO PLACE DECIMAL $\pm 0.01$ THREE PLACE DECIMAL $\pm 0.003$		
MATERIAL		
FINISH		
DO NOT SCALE DRAWING		
SIZE	DWG. NO.	REV
<b>B</b>	A1000	<b>B</b>
SCALE: 2:5	WEIGHT:	SHEET 1 OF 2

DRAWN BY: P. Maroli  
DATE: 3/9/17  
REV: B



# ENGINEERING PARTS LIST

## A1000, UAV ASSEMBLY

ITEM NO.	Default/Qty.	NUMBER	DESCRIPTION
A1	1	A1002	FRAME ASSEMBLY
A2	4	A1001	ARM ASSEMBLY