

PHASOR TECHNOLOGY

Overview

Phasor Technology 101 **Advanced Concepts**

Advanced Concepts: FAO

What is a Phasor?

What is Phasor technology?

Why are phase angle differences important?

What is unique about phasor technology? What makes it superior to other technologies?

Why is time synchronization important?

What are the elements of a phasor network?

What is a Phasor Monitoring Unit (PMU)?

What is involved in a PMU installation and connection?

What is a Phasor Data Concentrator (PDC)?

What is a Super Phasor Data Concentrator (SuperPDC)?

Will the SuperPDC be expected to archive the data or just concentrate it and forward to the several destinations?

What are some of the standard protocols used for phasor data transfer?


What kind of delays can be expected in the real time stream?

What type of data quality problems does one typically encounter with such a system?

Answers

Question: What is a Phasor?

Phasor is a quantity with magnitude and phase (with respect to a reference) that is used to represent a sinusoidal signal (figure below). Here the phase or phase angle is the distance between the signal's sinusoidal peak and a specified reference and is expressed using an angular measure. Here, the reference is a fixed point in time (such as time = 0). The phasor magnitude is related to the amplitude of the sinusoidal signal.

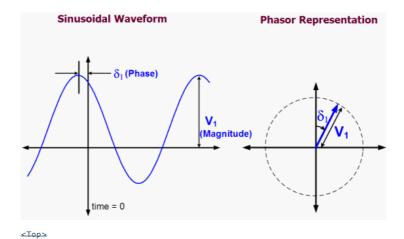


Question:What is Phasor technology?

Phasor technology is considered to be one of the most important measurement technologies in the future of power systems due to its unique ability to sample analog voltage and current waveform data in synchronism with a GPS-clock and compute the corresponding 60 Hz phasor component (i.e. complex numbers representing the magnitude and phase angle of a 60 Hz sinusoidal waveform) from widely dispersed locations (see figure). This synchronized sampling process of the different waveforms provides a common reference for the phasor calculations at all the different locations

Phasor Representation






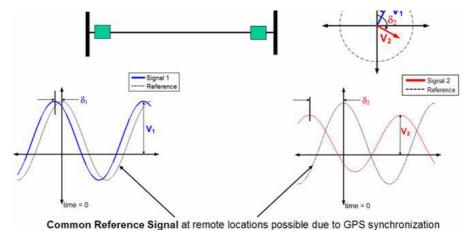

Note: The phase angle differences between two sets of phasor measurements (i.e. d_1-d_2) is independent of the reference.

Typically, one of the phasor measurements is chosen as the "reference" and the difference between all the other phase angle measurements (also known as the absolute phase angle) and this common "reference" angle is computed and referred to as the relative phase angles with respect to the chosen reference (see figure below).

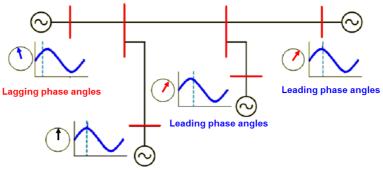

Reference phase angle (0 Degrees)


<Top>

Ouestion:

Why are phase angle differences important?

Just as in DC circuits, power flows from high voltages to low voltages, in an AC power system, power flows from a higher voltage phase angle to a lower voltage phase angle – the larger the phase angle difference between the source and the sink, the greater the power flow between those points implying larger the static stress being exerted across that interface and

The figure below shows the growing phase angle difference between Cleveland and Michigan during the August 14, 2003 blackout in the Eastern Interconnection.

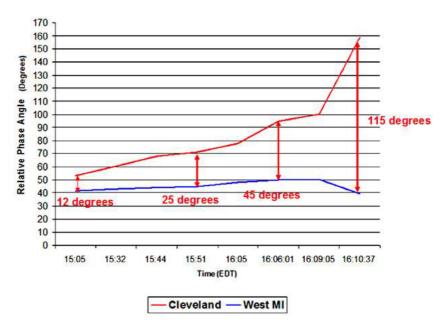

<Top>

Question:What is unique about phasor technology? What makes it superior to other technologies?

Answer:

Phasor technology provides time synchronized sub-second data (typically 20, 30 or 60 samples/second) which is
applicable for wide area monitoring; real time dynamics and stability monitoring; dynamic system ratings to operating
power system closer to the marqin to reduce congestion costs and increasing asset utilization; and improvements in

state estimation, protection, and controls.

- Traditional SCADA/EMS systems are based on steady state power flow analysis, and therefore cannot observe the dynamic characteristics of the power system phasor technology is the "MRI of the power system" industry providing the high sub-second visibility required for observing dynamic behavior and, therefore, overcoming the limitations of the old "x-ray" quality visibility that traditional SCADA-based systems offer.
- The precise timing of phasor data makes it useful beyond the local bus where the measurement was taken, i.e. the technology offers wide area visibility. This, in turn, facilitates the capability for distributed sensing and coordinated
- Phasor measurements directly provide the phase angles at the high sub-second rate. These phase angles have traditionally been obtained from state estimators which are inherently slow (typically every 5 minutes) and susceptible to errors due to outdated or inaccurate models required by the state estimation process.
- Phasor measurements improve post disturbance assessment capability using high-resolution time-synchronized data.
- The high data rates and low latency associated with phasor acquisition systems provide the desired agility to respond


<Top>

Question:

Why is time synchronization important?


Through the use of integral GPS receiver-clocks, PMUs sample synchronously at selected locations throughout the power system. This provides a system-wide snapshot of the electrical system. The GPS not only provides time tagging for all the measurements but also ensures that all phase angle measurements are synchronized to the same time as well

Figure 6 shows how time skews in the measurement and analysis process can induce errors in the phase angle difference computations. Here, the phase angle difference between two sets of measurements was approximately 10 degrees. However, when one of these two phase angle signals was skewed by 1 second and then the phase angle difference was computed, then the resulting answer incorrectly indicated a phase angle difference of approximately 5 degrees between those two data sets. Phasor calculations demand greater than 1 millisecond accuracy.

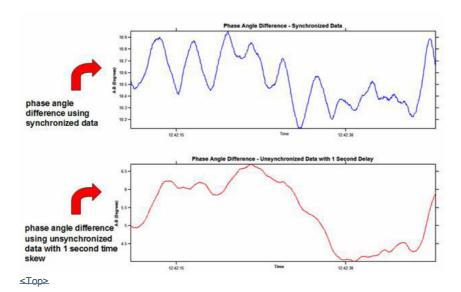

Question: What are the elements of a phasor network?

The simplest form of phasor network consists of TWO nodes; one Phasor Measurement Unit (PMU) at node 1 that communicates with one Phasor Data Concentrator (PDC) at node 2. Typically, many PMUs located at various key substations gather data in real-time and they are connected to a PDC at the utility center where the data is aggregated. A personal computer, connected to the output of the PDC provides the users with software, such as RTDMS that calculates and displays locally measured frequencies, primary voltages, currents, MWs and MVARs for system operators. Additionally, many PDCs belonging to different utilities can also be connected to a common central PDC (a.k.a., SuperPDC) to aggregate data across the utilities to provide an Interconnection-wide snapshot.

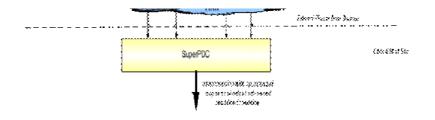


<Top>

Question:

What is a Phasor Monitoring Unit (PMU)?

A PMU is an electronic device that uses state-of-the-art digital signal processors that can measure 50/60Hz AC waveforms (voltages and currents) typically at a rate of 48 samples per cycle (2880 samples per second). The analog AC waveforms are digitized by an Analog to Digital converter for each phase. A phase-lock oscillator along with a Global Positioning System (GPS) reference source provides the needed high-speed synchronized sampling with 1 microsecond accuracy. Additionally, digital signal processing techniques are used to compute the voltage and current phasors

Line frequencies are also calculated by the PMU at each site. This method of phasor measurement yields a high degree of resolution and accuracy. The resultant time tagged phasors can be transmitted to a local or remote receiver at rates up to 60 samples per second.

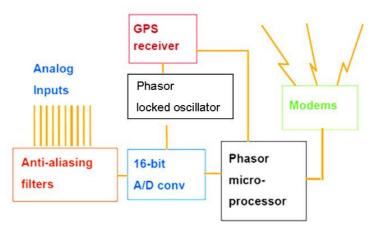

Phasor Measurement Unit Block Diagram

(R.F. Nuqui, "State Estimation and Voltage Security Monitoring Using Synchronized Phasor Measurements",
Doctorate Dissertation, Virginia Posytechnic Institute, Blacksburg, VA, July 2, 2001.)

PMUs come in different sizes. Some of the larger ones can measure up to 10 phasors plus frequency while others only measure from one to three phasors plus frequency. The approximate cost of the larger PMUs can range in the \$30 to \$40 thousand of dollars while the smaller ones cost considerably less.

<Top>

Question:What is involved in a PMU installation and connection?

Installation of a typical 10 Phasor PMU is a simple process. A phasor will be either a 3 phase voltage or a 3 phase current. Each phasor will, therefore, require 3 separate electrical connections (one for each phase). We are talking about 6 wires per phasor – 2 for each phase of either voltage or current. The PMU will also measure the line frequency from a specific voltage phasor (typically a major bus assigned by the user).

Typically an electrical engineer designs the installation and interconnection of a PMU at a substation or at a generation plant. Substation personnel will bolt equipment rack to the floor of the substation following established seismic mounting requirements. Then the PMU along with a modem and other support equipment will be mounted on the equipment rack. They will also install the Global Positioning Satellite (GPS) antenna on the roof of the substation per manufacturer instructions. The antenna signal cable will be connected to the antenna and brought directly to the PMU. Substation personnel will also install "shunts" in all Current Transformer (CT) secondary circuits that are to be measured. Potential Transformer (PT) connections will not require the installation of any additional equipment other than terminal blocks and fuses. They will have to run wires from the CT shunts and the PTs to either an interface cabinet or directly to the input connections of the PMU (Figure 10). Note: Each phasor (either Voltage or Current) will require three connections – one for each phase.


In addition to the CT and PT connections the PMU will also require the following connections:

- Power connection – typically from station batteries.

- Station ground connection.
- Global Positioning Satellite (GPS) antenna connection.
 Communication circuit connection (Modem if using 4-wire connection or Ethernet for network connection).

After all the connections are made, the PMU is configured and tested. This task is typically performed by a substation Test

The utility's IT department will play a key role will the phasor data connections phase of the PMU installation. After the entire input channel configuration and testing is completed, the PMU is connected to the utility's Phasor Data Concentrator (PDC) via 4-wire Modem or Ethernet connection depending on the bandwidth needs. They will also need to evaluate the need to install additional communication equipment in order to provide the necessary circuit connections between the PDC at the master site and the PC workstations at the client sites.

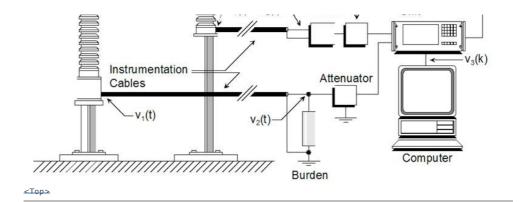

Question: What is a Phasor Data Concentrator (PDC)?

APDC forms a node in a system where phasor data from a number of PMUs or PDCs is correlated and fed out as a single stream to other applications. The PDC correlates phasor data by time-tag to create a system wide measurement set. The PDC provides additional functions as well. It performs various quality checks on the phasor data and inserts appropriate flags into the correlated data stream. It checks disturbance flags and records files of data for analysis. It also monitors the overall measurement system and provides a display and record of performance. It can provide a number of specialized outputs, such as a direct interface to a SCADA or EMS system.


<Top>

Question:

What is a Super Phasor Data Concentrator (SuperPDC)?

Answer:

Within a point-to-point phasor network architecture, the SuperPDC is simply a central PDC that collects and correlates phasor data from all remote PDCs and PMUs and makes it available to a visualization software package as described above (Figure 11). Typically, the SuperPDC is also connected to a central database for long-term archiving of the collected data

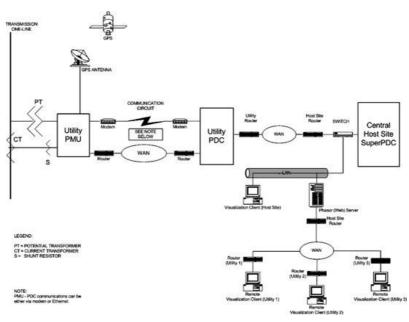

<Top>

Question:Will the SuperPDC be expected to archive the data or just concentrate it and forward to the several destinations?

A SuperPDC should have the capability to do both if it is fast enough. The obvious problem of locally storing ALL the data would be the need to employ large disk drives and have a system in place to regularly transfer full disk phasor data to DVD for permanent storage. A rate of 30 or 60 samples per second fills up a disk drive very quickly.

<Top>

Ouestion:

What are some of the standard protocols used for phasor data transfer?

The latest PMU/PDC protocol is the IEEE C37.118 that was developed in the last few years and approved late 2005. It will replace the IEEE 1344 synchrophasor protocol which has been in use as the PMU standard since its development in 1998. Before these standards were developed, the defacto standard for PMU to PDC communication has been the Macrodyne type 1 and type 2 protocols developed by Macrodyne Corporation. Some of the PDC to PDC protocols include the PDC data exchange format, the PDC stream, second level PDC using NTP time and the PDC stream, second level PDC using native time. These standards address issues like synchronization of data sampling, data to phasor conversions, and formats for timing input and phasor data output.

<Top>

Question:What kind of delays can be expected in the real time stream?

Answer:

A PDC receives data streams from PMUs and other PDCs and correlates it in real-time into a single data stream that is transmitted to a PC via an Ethernet port. They propagation delays associated with communication links from a PMU and PDC depend on the medium and the physical distance separating these components. For a typical PMU with 10-12 phasors, the associated delays for various communication mediums are summarized below.

Associated Delays with Various Communication Links

(B. Naduvathuparambil, M. C. Valenti, A. Feliachi, "Communication Delays in Wide Area Measurement Systems", Proceedings of the Thirty-Fourth Southeastern Symposium on System Theory, 18-19 March 2002, pp. 118-122.)

Communication Link	Associated Delay - one way (milliseconds)
Fiber-optic cables (50 Mbps – 1 Gbps)	≈ 100-150
Digital microwave links	≈ 100-150
Power line (PLC) (upto 4 Mbps)	≈ 150-350
Telephone lines (upto 56 kbps)	≈ 200-300
Satellite link	≈ 500-700

In addition, the fixed delay associated with processing, concentrating, multiplexing, and transducers, and is independent of

Finally, PDCs also have a maximum wait-time, typically of 1-4 seconds, to allow for all the PMU data to come in before aggregated data is outputted by the PDC. If the data from all the PMUs reach the PDC within this wait-time, it outputs the aggregated data right away. However, in the extreme case that the data from one of the PMUs is indefinitely delayed, then the PDC will wait upto its pre-defined wait-time (i.e., 1-4 seconds) before the data is outputted by the PDC. Hence, the PDC can also introduce an additional delay equal to its wait-time if one of the PMU channels stops transmitting data to the PDC. In such circumstances, if there are additional PDCs downstream in the point-to-point phasor network architecture (such as the SuperPDC), then they too will introduce a secondary delay equal to their wait-time.

Phasor applications such as Real-Time Dynamics Monitoring System $^{\text{TM}}$ (RTDMS) are designed to directly integrate with the PDCs over the utility's high speed Local Area Network (100 Mbps) and display the data and calculated individual engineering units such as MW, MVAR, etc. within 1 second of receiving the data from the PDC (Note: The Web based versions of the RTDMS Clients, such as those deployed across the Eastern Interconnection as part of the EIPP project, integrate over secure internet connections rather than Local Area Networks and can longer to display the information within its visualization

Bottom Line: The total delay from when the data is captured by the PMU to it being visualized within the RTDMS screens is typically a few seconds.

<Top>

Question:

What type of data quality problems does one typically encounter with such a system?

Answer:

Answer:
There are two main types of problems associated with data validation: First, there is a data loss problem associated with network problems such as bandwidth limitations, collisions, misrouting, maintenance outages, and equipment breakdown to name a few. There is not much one can do about this other than to report it to IT for review and repair. The other problem is measurement data validation which has to do with obtaining inaccurate information such as incorrect resistor shunts as well as incorrect CT and PT rations. This also includes larger inaccuracies, such as ±120°, due to incorrect wiring errors or labeling inconsistencies in what is called 'Phase A'. 'Phase B' and 'Phase C' across utilities. The latter type will take time to correct and may have to involve station technicians at a particular site and even sometimes the engineering department. If this data is also available through the SCADA system the two values should be compared in order to achieve some degree of validation.

Finally, each PMU vendor utilizes their own proprietary phasor computation algorithms as well as pre and post processing filters, each with their own unique design characteristics. These and other factors can result in adding constant offsets to the phase angle measurements which may be more significant at off-nominal operating frequencies. Figure 12 compares the phase angle offsets of different PMUs over a wide frequency range about the normal 60Hz operating frequency. As long as all the PMUs within the phasor network are provided by the same vendor, this is not an issue; otherwise these offset errors should be corrected.

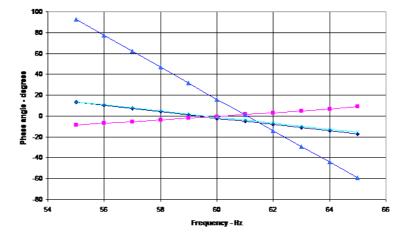


Figure courtesy of Ken Martin, Bonneville Power Administration.