



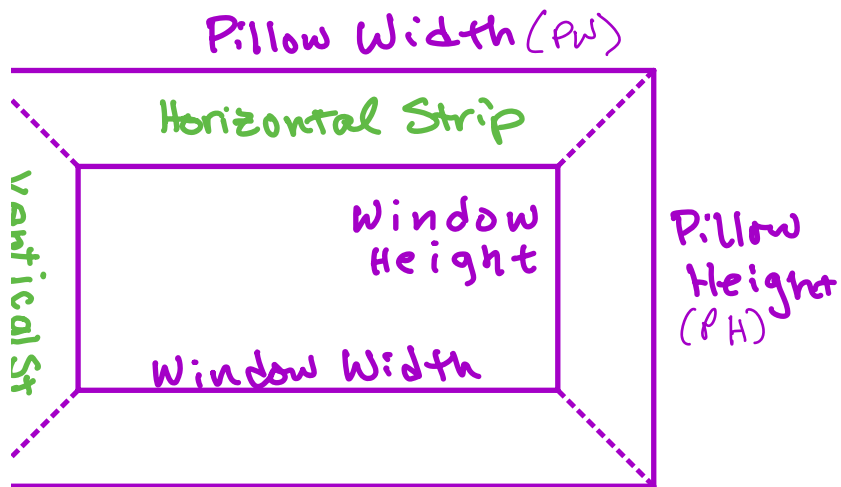

Completed Requirement

$\text{Pillow Width (PW)} =$
 $\text{Pillow Height (PH)} =$ } Variable Input
 $\text{Window Width (WW)} =$
 $\text{Window Height (WH)} =$ } Calculated ①

PW & PH are variable input
 But WW & WH need to be calculated ①

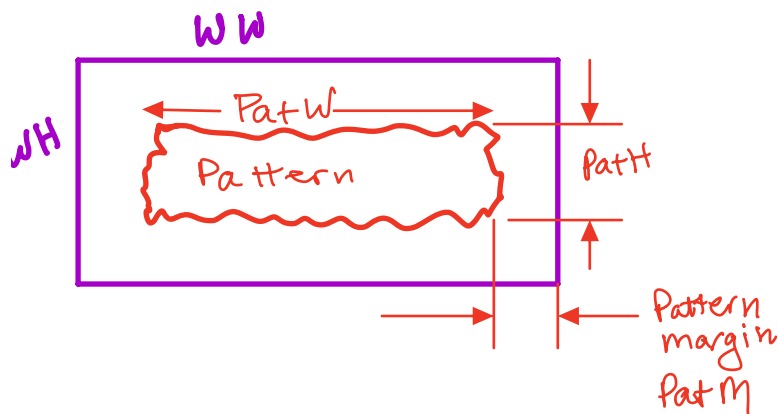

Window dimensions rely on the pattern dimensions and desired margin size

let $\text{Pattern Width} = \text{PatW}$


$\text{Pattern Height} = \text{PatH}$

$\text{Pattern Margin} = \text{PatM}$

Variable input:

$$WW = \text{PatW} + 2 \times \text{PatM}$$

$$WH = \text{PatH} + 2 \times \text{PatM}$$

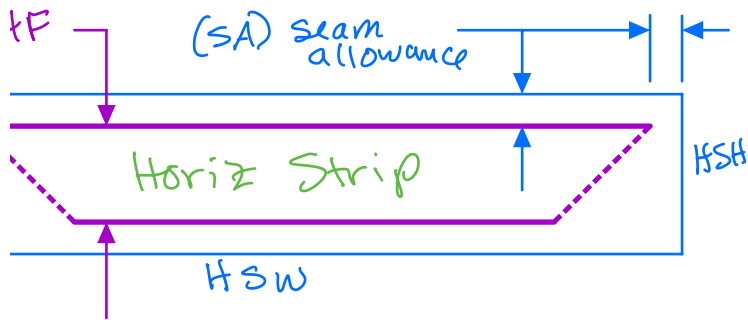

Seam Allowance = SA


Variable
Input

Each strip is a rectangle folded at the ends to a 45° mitered corner. To sew the pieces together we must add a seam allowance to both the width and height of each piece (even the Back).

The seam allowance (SA) will be consistent across the project.

Pillow Back

easy to calculate.

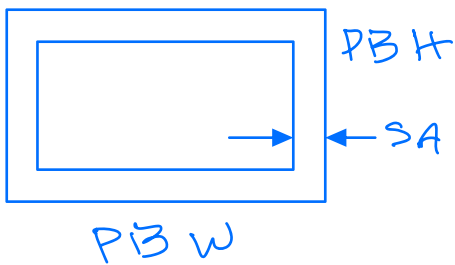

Unfinished

Pillow Back Width (PBW) = $PW + 2 \times SA$

Pillow Back Height (PBH) = $PH + 2 \times SA$

Now that we know PBW & PBH, we can calculate the Horiz & Vert Strip Dimensions

The horizontal strip width (Hsw) has to match the Pillow Back width &

Unfinished $Hsw = PBW$

Likewise: Vertical Strip Height has to match Pillow Back Height

Unfinished $VSH = PBH$

Now for the Hand ones, HSH and VSW
these calculated variables are including the SA
and are the raw fabric size.

But we first need to calculate their finished size. HSHF
and VSW

Finish horizontal ^{strip} height (HSHF) must be
(Pillow Height - Window Height) $\div$ 2 (2 strips)

$$FHS_H = (PW - WH) \div 2$$

$$FVSW = (PW - WW) \div 2 \quad (\text{same logic})$$

We need to add 2 seam allowances to get the raw
fabric size

$$HSH = FHS_H + 2 \times SA$$

$$VSW = FVSW + 2 \times SA$$