How enable adb instructions
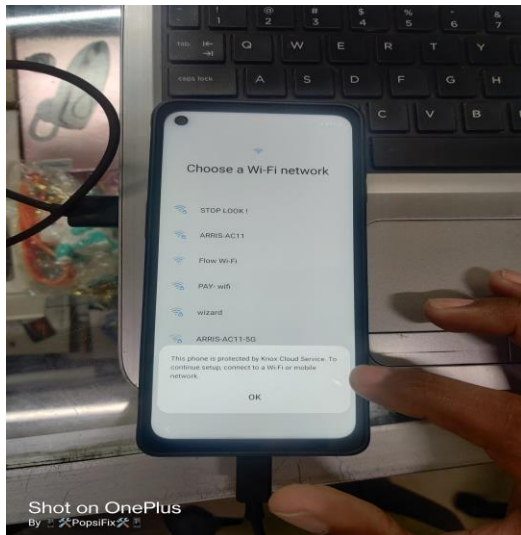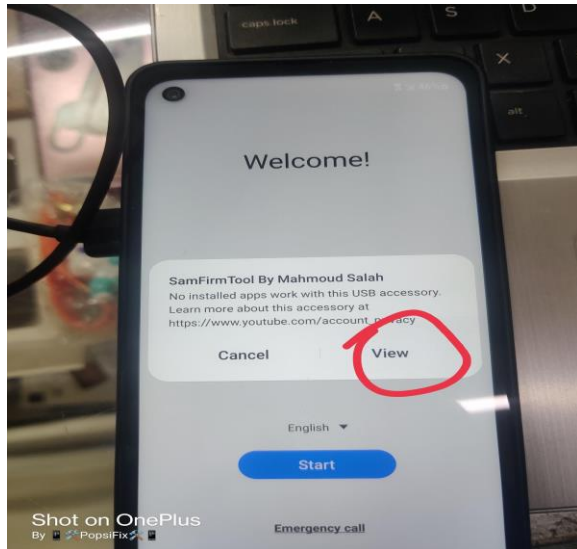
1) connect WIFI
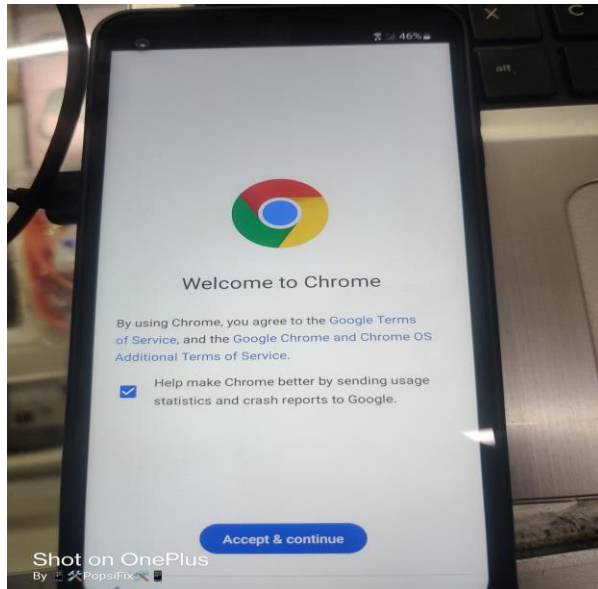

2) open Samfirm A.i.o

Contact @ PopsiFix
PopsiFix webpage
Support
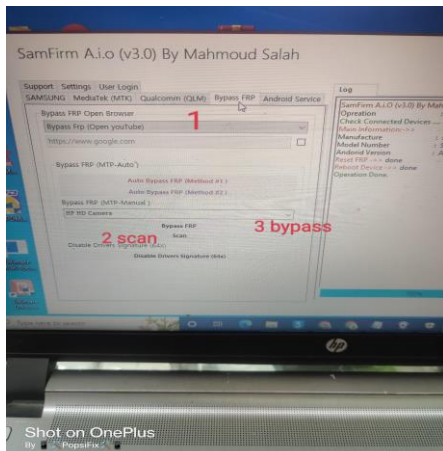
3) set it to open YouTube click scan then select device and click bypass frp

4) should open chrome

5) search for alliance shield x APK
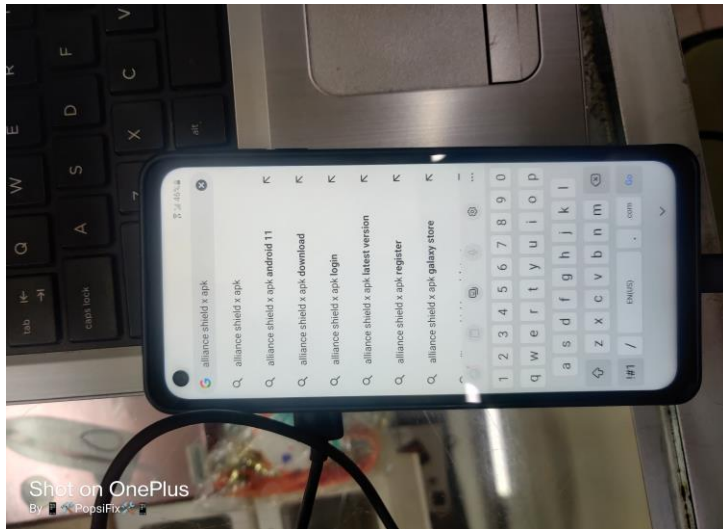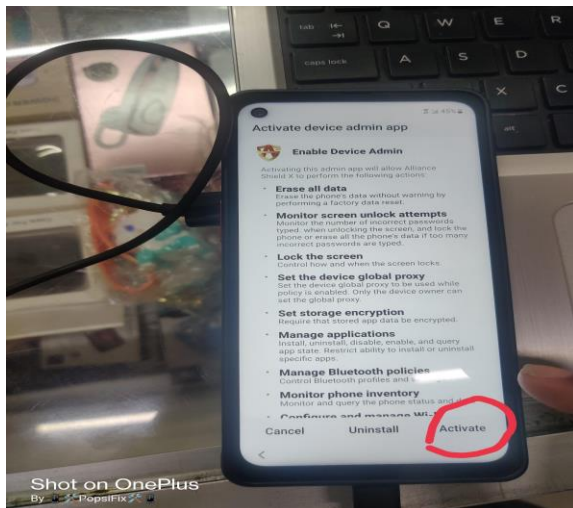

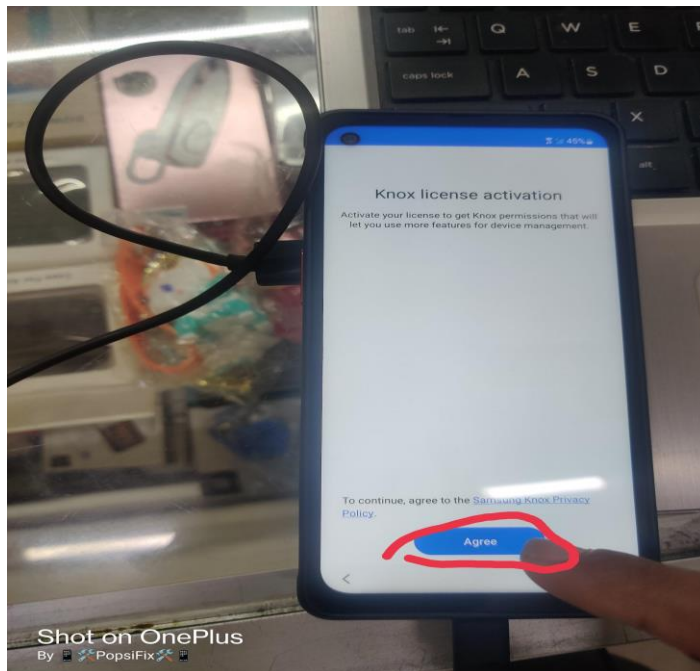# 6) download APK and install
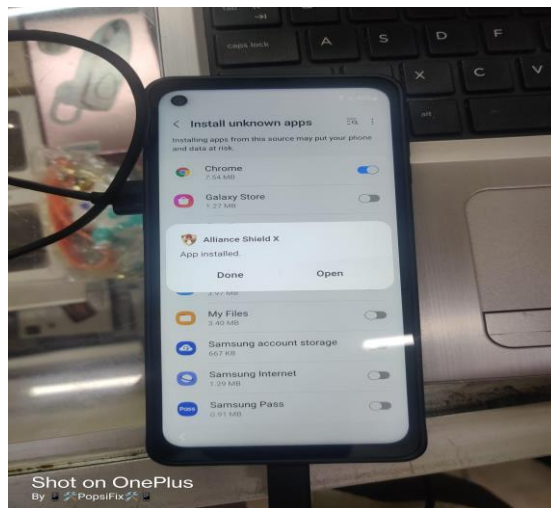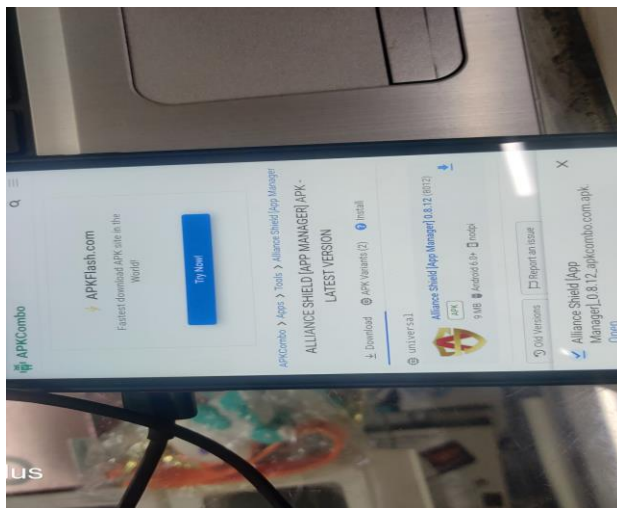
7) login or use a different device to create an account to alliance shield x then login

8) after login in allow it to be admin
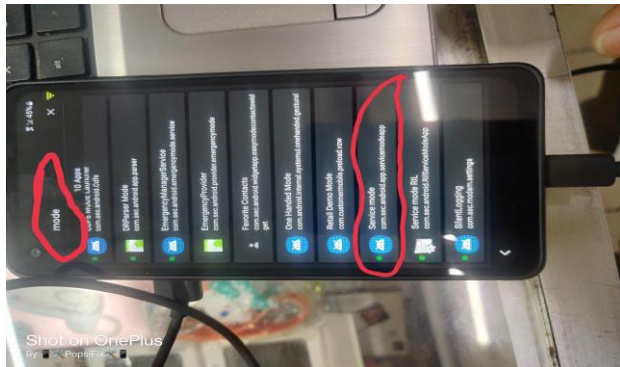
9) turn on Knox and accept agreement
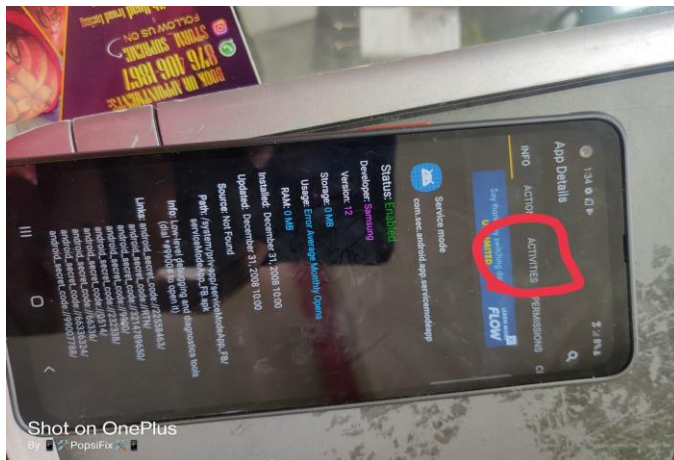

10) continue then select app manager

11) click the search icon type service mode
12) select service mode

13) go to the activities section

14) scroll down to the bottom

15) select com.--------- activities.USB settings
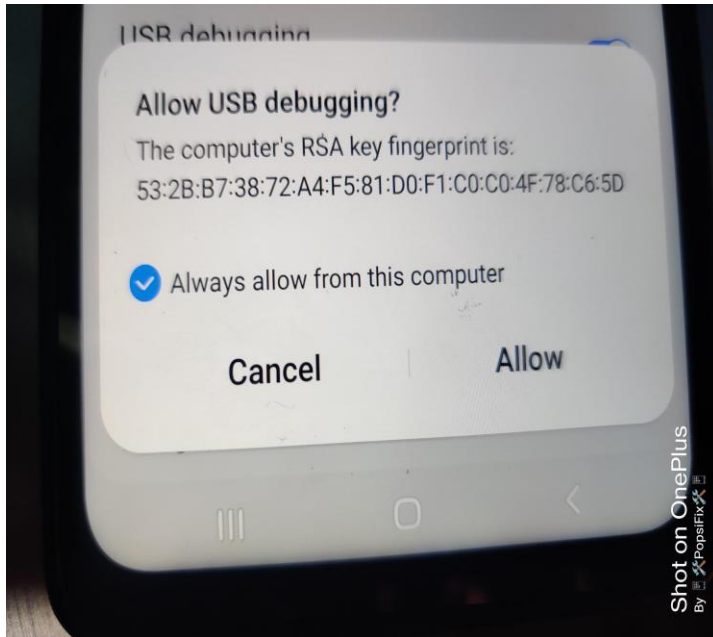

16) click open

17) select "DM + MODEM + ADB"

18) run Knox MDM Bypass tool

19) allow debugging always on device

20) then run bypass again

21) congratulations