
GSLauncher

User's Guide

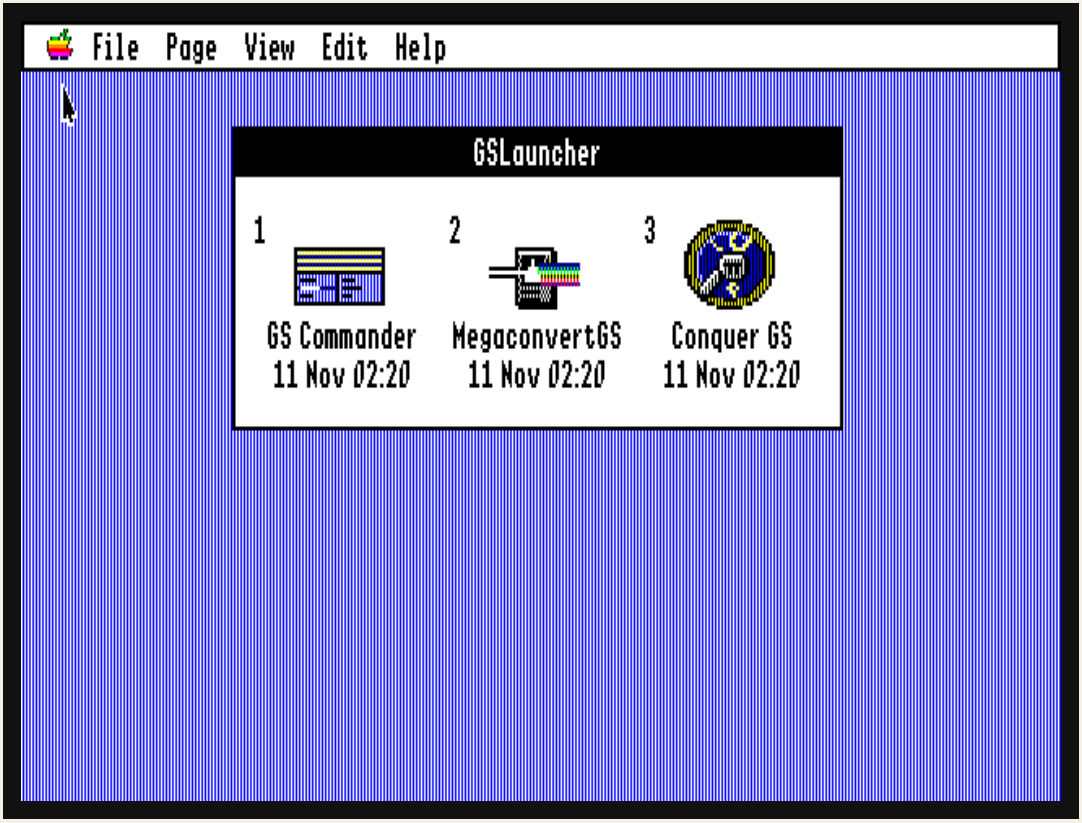

For the Apple IIgs

GSLauncher User's Guide

Version 1.1

© 2026 Walter Tengler. GSLauncher is free, open-source software. You may copy this guide and give it away, whole and unchanged.

GSLauncher is an independent program. It is not made, sold or endorsed by Apple Inc. Apple, Apple IIgs, GS/OS, ProDOS, Finder and Macintosh are trademarks of Apple Inc. Other names are trademarks of their owners.

This guide is set in Apple Garamond, as Apple's own guides of the time were. The screen pictures were taken from GSLauncher running on an Apple IIgs in the MAME emulator.

The homepage: portwally.github.io/GSLauncher

Contents

Preface	About This Guide	6
	What you should know	6
	Conventions in this guide	6
Chapter 1	Getting Started	8
	What you need	8
	Getting the program disk	8
	Putting GSLauncher on your startup disk	9
	Starting GSLauncher	9
	The first start	9
	The GSLauncher window	11
	Getting help	11
	Quitting	12
Chapter 2	Starting Programs	13
	With the mouse	13
	With the keyboard	13
	Coming back	13
	The programs GSLauncher can start	14
	When a program is not found	14
Chapter 3	Finding Your Programs	16
	Choosing the disks	16
	Choosing the programs	17
	What Find Apps leaves out	18
Chapter 4	Changing the Slots	19

Adding one program 19
Edit Slots 20
Giving a slot another program 22
Renaming a slot 22
Putting the slots in order 23
Removing a slot 23
Removing the missing ones 23

Chapter 5 **Pages** 24

Adding a page 24
Going to another page 26
Renaming a page 26
Moving a slot to another page 27
Removing a page 27

Chapter 6 **The View Menu** 28

Show File Date 29
Show Last Used 29
Show Launch Count 29

Chapter 7 **Starting With the Computer** 31

Making GSLauncher the startup program 31
Going to the Finder 32
Getting the Finder back for good 32
Restarting 32
Shutting down 32

Chapter 8 **Icons** 35

Where the icons come from 35
Programs without an icon 35
Giving a program an icon 36

Chapter 9 **The Slots File** 37

What is in it 37
Paths 38
Counts and times 38

Changing the file yourself 38
Starting over 39

Appendix A Menus and Keys 40

Appendix B Hints and Limits 45

Index 47



Preface

About This Guide

GSLauncher is a program launcher for the Apple IIgs. It shows the programs you use most in one window, each with its icon and its name. You click one and it starts. When you quit that program, you are back at GSLauncher, ready to start the next.

This guide shows you how. Chapter 1 gets GSLauncher running, and Chapter 2 covers the one thing you will do with it every day: starting programs. Read those first. The chapters after them each take one thing GSLauncher can do, so you can read them as you need them. The appendixes list every menu command and key, and what to do when something goes wrong.

What you should know

You should know how to use your Apple IIgs: how to start it with System 6, how to use the mouse, choose from a menu and click a button in a dialog box. If you don't, see the guides that came with your computer.

Conventions in this guide

Keys you press are shown like this: Return, Tab, Escape. When two keys are joined by a hyphen, as in Apple-F, hold down the first while you press the second. The Apple key is the one marked with the Apple symbol and ⌘, beside the Space bar.

Menu commands are named with their menu: “choose Find Apps from the File menu.”

By the way

Notes like this one, in the margin, tell you something useful that you can do without.

A **slot** is one place in GSLauncher’s window: an icon, a name and a line of information for one program.

This guide calls the things you start **programs**. GSLauncher’s menus call them apps, for short.

Important

Text marked like this tells you something you should know to get the result you want.

Warning

Text marked like this warns you of something that can lose your work.



Chapter 1

Getting Started

In This Chapter

What you need	8
Getting the program disk	8
Putting GSLauncher on your startup disk	9
Starting GSLauncher	9
The first start	9
The GSLauncher window	11
Getting help	11
Quitting	12

What you need

- An Apple IIgs
- System 6 (GS/OS) on a startup disk: a 3.5-inch disk or a hard disk

GSLauncher also runs in an Apple IIgs emulator such as MAME. Everything in this guide works the same there.

Getting the program disk

GSLauncher comes as *GSLauncher.po*, an image of an 800K 3.5-inch disk. Download it from the GSLauncher homepage. To use it on a real Apple IIgs, write it to a 3.5-inch disk with a disk-copying program. In an emulator, put the image in the emulator's 3.5-inch drive.

The disk holds three things: the program *GSLauncher*, a *ReadMe* file with a short summary of this guide, and an *Icons* folder, which gives the program its icon in the Finder.

Putting GSLauncher on your startup disk

GSLauncher is most useful on the disk you start your computer from.

By the way

GSLauncher keeps its list of programs in a file called *Launcher.Slots*, in its own folder. Chapter 9 tells you what is in it.

1. Start your Apple IIgs with System 6.
2. In the Finder, make a new folder on your startup disk and name it *GSLauncher*.
3. Drag the GSLauncher program and the Icons folder from the program disk into the new folder.

Important

GSLauncher must be able to write to its folder, to remember your programs. Don't run it from a locked disk.

Starting GSLauncher

1. In the Finder, open the GSLauncher folder.
2. Double-click the GSLauncher icon.

To have GSLauncher start by itself whenever you switch the computer on, see Chapter 7.

The first start

The first time you start GSLauncher it has no programs yet, so it offers to look for them. The Find Apps window opens and lists your disks.

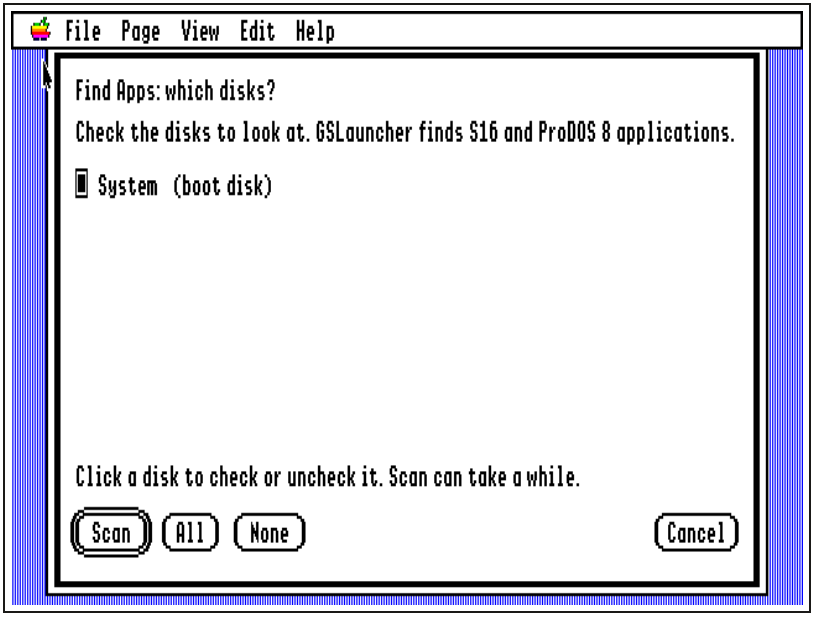


Figure 1-1 The first start: Find Apps asks which disks to look at

1. Click Scan (or press Return) to look on your startup disk.
2. When the list of programs appears, click the check box of each one you want.
3. Click Add Selected.

The programs you checked appear in GSLauncher's window. Chapter 3 tells you all about Find Apps. If you would rather add your programs one at a time, click Cancel and see Chapter 4.

The GSLauncher window

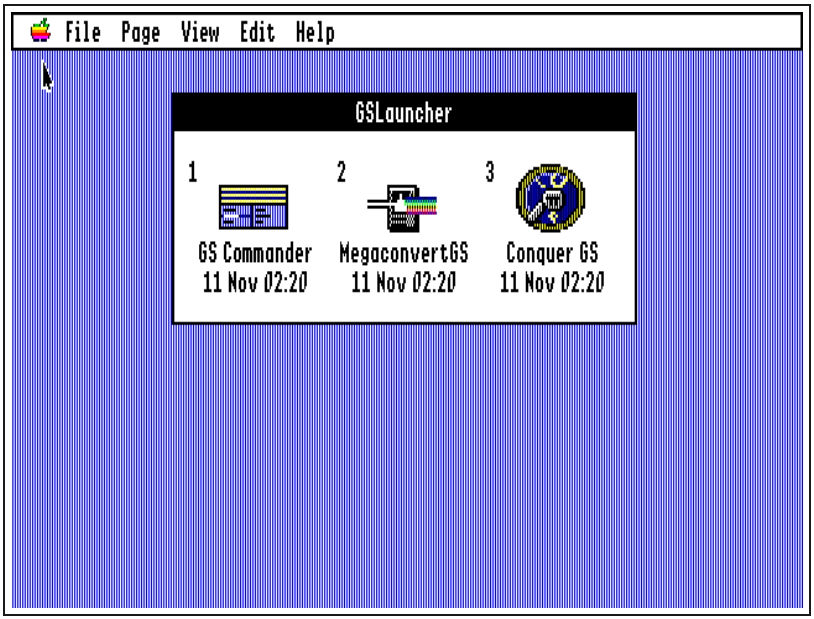


Figure 1-2 GSLauncher with three programs

Across the top of the screen is the menu bar, with the Apple, File, Page, View, Edit and Help menus. Below it is GSLauncher's window. Each program in it has a **slot**:

- The program's **icon**, the same one the Finder shows for it
- Its **name**
- A third line: the date and time the program's file was last changed. You can have it show other things instead (Chapter 6).
- A small **number** at the top left of the first nine slots: the key that starts the program

The window holds five slots in a row and grows downward as you add more. You can drag it by its title bar.

Getting help

The Help menu explains GSLauncher a page at a time: Starting Apps, Editing the Slots, The Menu Entries, The Slots File, Finding Apps, and Pages and Views. Choose

one to read it. Click the mouse or press any key to put it away.

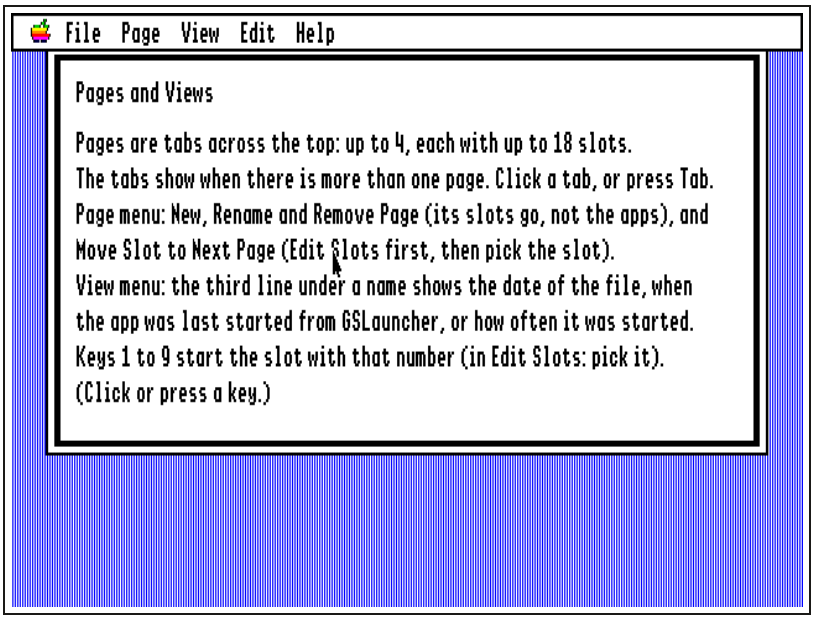


Figure 1-3 A page of help

Choose About GSLauncher from the Apple menu to see the version and the day it was built.

Quitting

Choose Quit to Finder from the File menu (Apple-Q). The Finder starts.



Chapter 2

Starting Programs

In This Chapter

With the mouse 13

With the keyboard 13

Coming back 13

The programs GSLauncher can start 14

When a program is not found 14

With the mouse

Click a slot. One click is enough. The screen clears, and the program starts.

With the keyboard

Press the number key shown at the top left of a slot: 1 starts the first program, 2 the second, and so on up to 9. Slots after the ninth have no key; start those with the mouse.

Coming back

When you quit the program, GSLauncher appears again, just as you left it. You don't pass through the Finder.

Important

A program has to quit in the usual way to bring you back. A few programs, mostly games, can only be left by restarting the computer. After those, GSLauncher comes back only if you have set it to start with the computer (Chapter 7).

The programs GSLauncher can start

GSLauncher starts two kinds of programs:

- **GS/OS applications**, the programs made for the Apple IIgs desktop. The Finder calls them applications; their file type is S16.
- **ProDOS 8 programs**, the programs made for earlier Apple II computers. Their names usually end in *.SYSTEM*; their file type is SYS.

Both kinds come back to GSLauncher when you quit them.

By the way

A ProDOS 8 program finds the files it needs in its own folder, just as if you had started it from the Finder.

When a program is not found

If a program's file has been moved, renamed or deleted, or its disk is not in a drive, its slot shows the icon dimmed and the words *not found*.

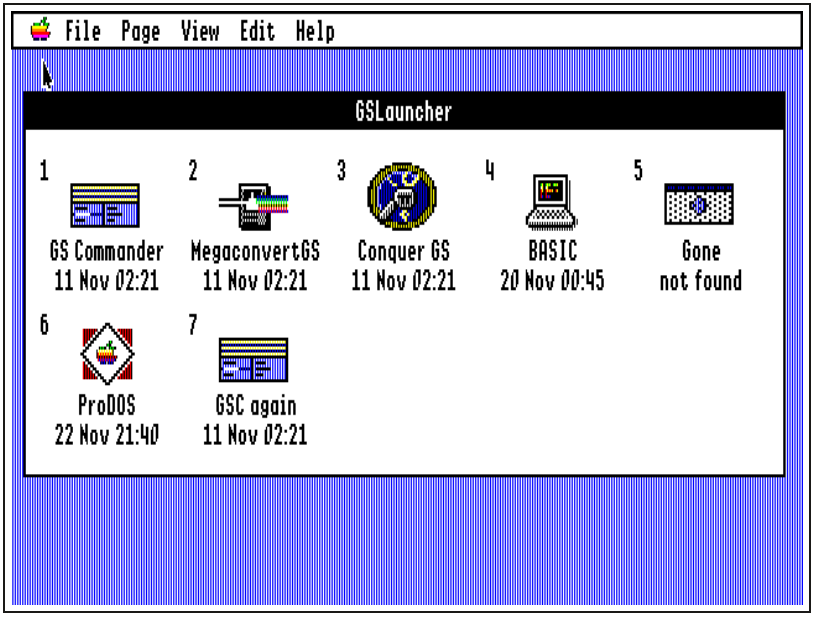


Figure 2-1 The fifth slot's program is not found

If you click such a slot, GSLauncher tells you it cannot find the program. You can then:

- Put the program's disk in a drive, and start GSLauncher again.
- Tell GSLauncher where the program is now, with Change Slot (Chapter 4).
- Remove the slot, with Remove Slot or Remove Missing Slots (Chapter 4).



Chapter 3

Finding Your Programs

In This Chapter

Choosing the disks 16

Choosing the programs 17

What Find Apps leaves out 18

Find Apps looks through your disks for programs and lists them, so you can add many at once. It opens by itself the first time you start GSLauncher. To open it at any other time, choose Find Apps from the File menu (Apple-F).

Choosing the disks

Find Apps first lists every disk in your drives. The disk you started the computer from is marked *(boot disk)*, and its box is checked.

- Click a disk to check it or uncheck it.
- Click All to check every disk, None to uncheck them all.

Then click Scan, or press Return. GSLauncher looks through every folder on the checked disks. The line under the list names the folder it is looking in.

By the way

A big hard disk takes a while. Press Escape to stop the scan; Find Apps lists what it has found so far.

Choosing the programs

When the scan is done, Find Apps lists the programs it found, each with the folders that lead to it. A star (*) at the start stands for your startup disk.

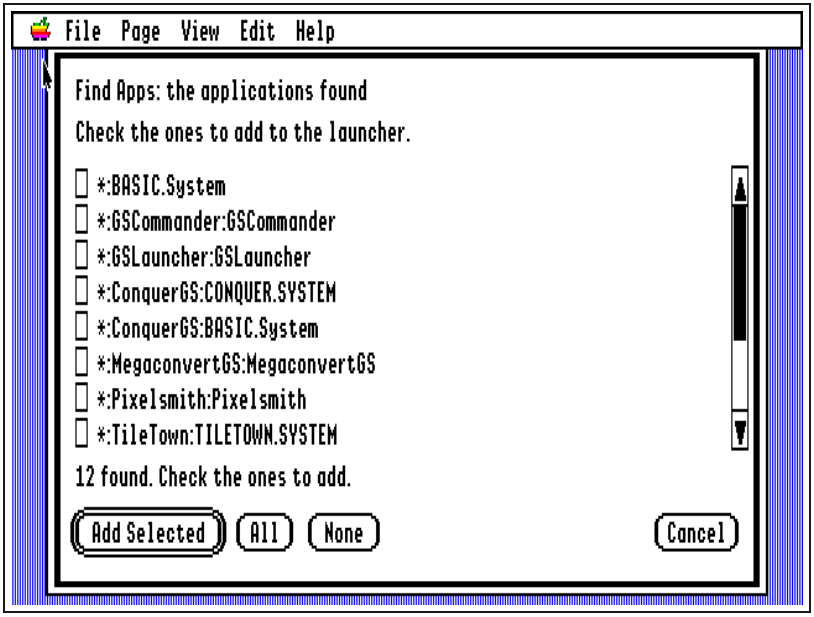


Figure 3-1 The programs Find Apps found

- Click a program to check it or uncheck it.
- Click All to check every program, None to uncheck them all.

When more programs are found than fit in the window, a **scroll bar** appears beside the list:

Click an arrow	The list moves one line
Click above or below the black box	The list moves a windowful
Drag the black box	The list follows the pointer
↑ ↓	The list moves one line
← →	The list moves a windowful

Click Add Selected, or press Return. Each checked program gets a slot on the page you are looking at, named after its file. Click Cancel, or press Escape, to add nothing.

What Find Apps leaves out

- The *System* folder at the top of a disk, and everything in it. Its programs belong to the system.
- The file *ProDOS* itself.
- Programs more than seven folders deep.

A program that already has a slot on the page is not added a second time. If the page fills up, GSLauncher tells you, and adds no more.

By the way

Find Apps lists up to 100 programs. If your disks hold more, scan them one at a time.



Chapter 4

Changing the Slots

In This Chapter

Adding one program	19
Edit Slots	20
Giving a slot another program	22
Renaming a slot	22
Putting the slots in order	23
Removing a slot	23
Removing the missing ones	23

Adding one program

1. Choose Add App from the File menu (Apple-N).

2. In the dialog box, find the program and click Open.

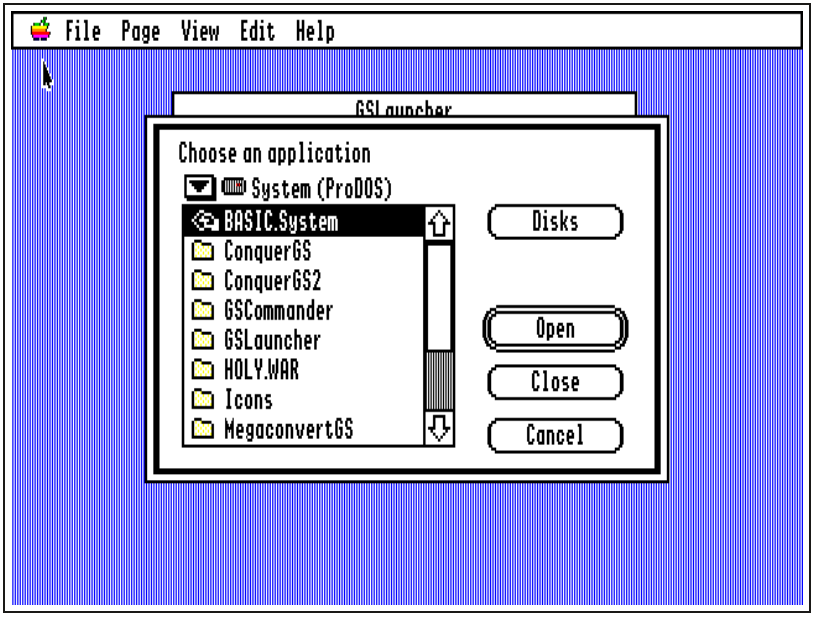


Figure 4-1 Add App: choosing a program

The program gets the next free slot, named after its file. If you choose a file that is not a program, GSLauncher tells you so and adds nothing.

Edit Slots

Normally a click starts a program. To work on the slots themselves, choose Edit Slots from the File menu (Apple-E). The command gets a check mark, and the window's title changes to *GSLauncher: Edit Slots*. Now a click **picks** a slot instead of starting its program: a frame appears round it.

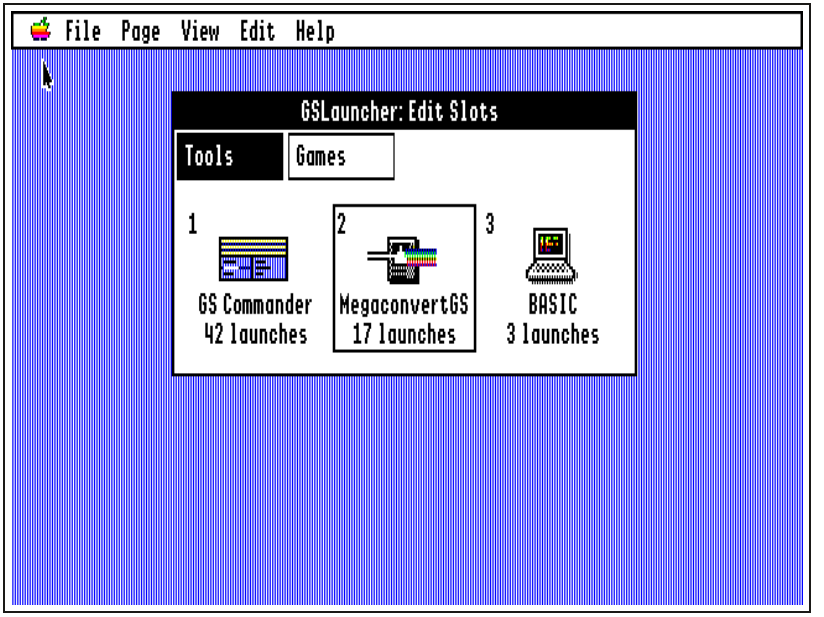


Figure 4-2 Edit Slots: the second slot is picked

Click a slot	Picks it
1 to 9	Picks the slot with that number
← →	Picks the slot before or after
Escape	Leaves Edit Slots

The commands in the rest of this chapter work on the picked slot. When you are done, choose Edit Slots again or press Escape. The check mark and the frame go away, and a click starts a program again.

By the way

If you choose one of these commands without a picked slot, GSLauncher reminds you to choose Edit Slots and click a slot first.

Giving a slot another program

Pick the slot and choose Change Slot from the File menu. Find the program in the dialog box and click Open. The slot takes the new program's icon and name.

Use this when you have moved a program to another folder or another disk and its slot says *not found*.

Renaming a slot

Pick the slot and choose Rename Slot from the File menu (Apple-R). Type the new name and press Return or click OK. Press Delete to rub out a letter. Press Escape or click Cancel to leave the name as it was.

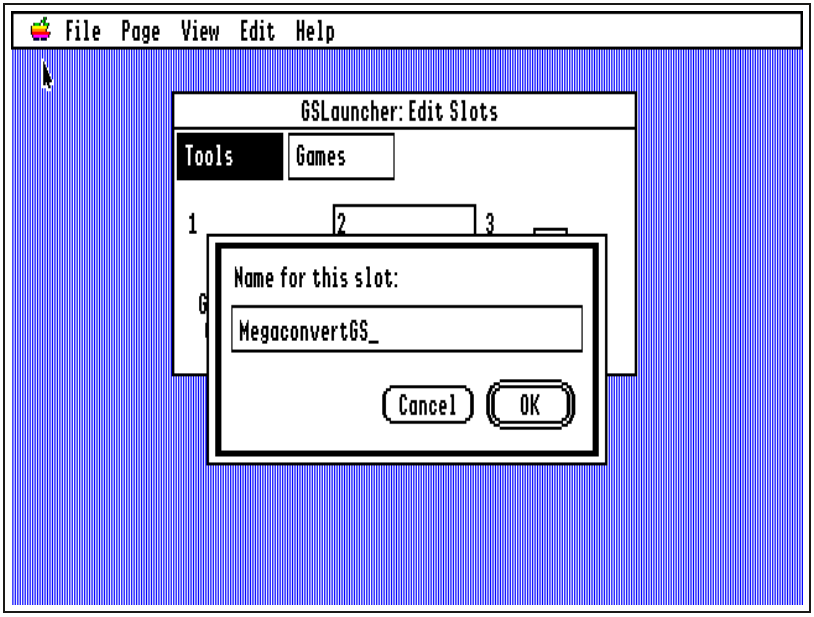


Figure 4-3 Rename Slot

The name is only what GSLauncher shows; the program's file keeps its own name. A name can be up to 31 letters long, but a long one is cut off to fit under the icon. To get the file's name back, rub out the whole name and press Return.

Putting the slots in order

Pick a slot and choose Move Left or Move Right from the File menu. The slot changes places with its neighbor and stays picked, so you can choose the command again to move it further. The numbers follow the order: the first slot is always 1.

Removing a slot

Pick the slot and choose Remove Slot from the File menu. The slot is gone, and the ones after it move up.

Removing a slot never touches the program. Its file stays on your disk, and you can add it again at any time.

Removing the missing ones

After you have tidied your disks, some slots may say *not found*. Choose Remove Missing Slots from the File menu to remove all of them on the page at once. You don't need Edit Slots for this.

! Important

A program on a disk that is not in a drive counts as missing. Put your disks in before you choose Remove Missing Slots.



Chapter 5

Pages

In This Chapter

Adding a page 24
Going to another page 26
Renaming a page 26
Moving a slot to another page 27
Removing a page 27

A page of slots holds up to 18 programs. When you have more, or want to keep your games apart from your work, add pages. GSLauncher can have four.

Adding a page

1. Choose New Page from the Page menu.
2. Type a name for the page and press Return.

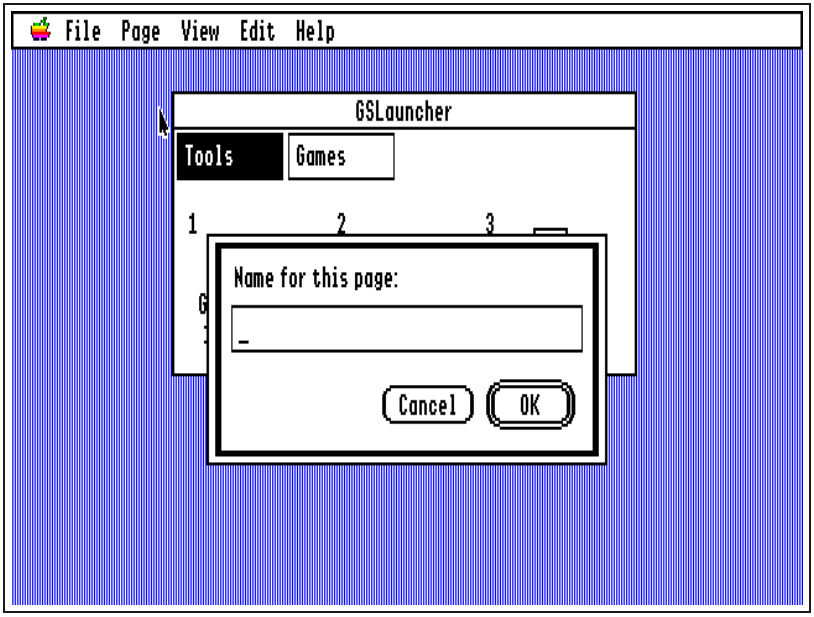


Figure 5-1 New Page

The new page appears, empty. Add programs to it with Add App or Find Apps: they always go onto the page you are looking at.

As soon as there is more than one page, **tabs** appear across the top of the window, one for each page. The tab of the page you are looking at is black. Your first page is called *Apps* until you rename it.

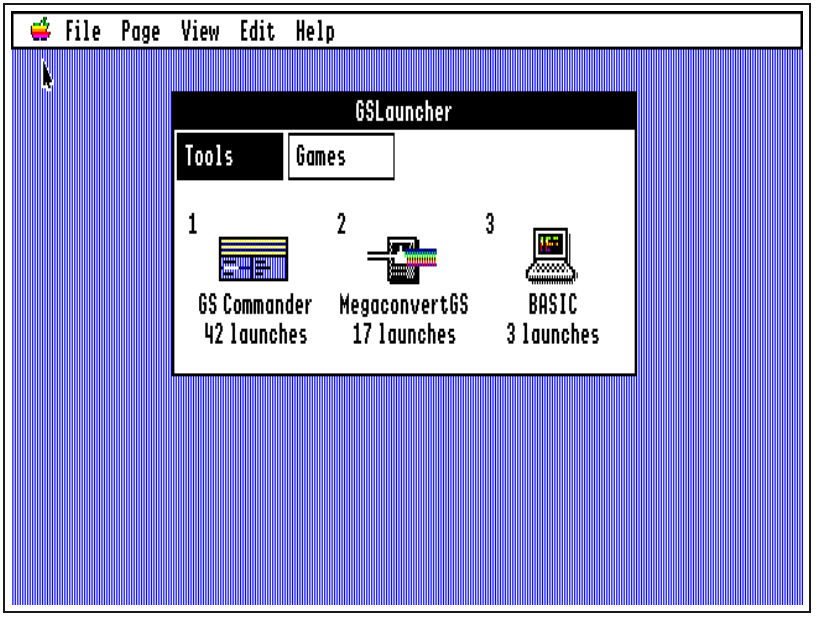


Figure 5-2 Two pages: Tools and Games

Going to another page

- Click the page's tab.
- Or press Tab to go to the next page. After the last page comes the first.
- Or choose Next Page from the Page menu (Apple-T).

The number keys start the programs of the page you are looking at.

Renaming a page

Go to the page and choose Rename Page from the Page menu. Type the new name and press Return.

By the way

A tab shows the first twelve letters of a name. Short names read best.

Moving a slot to another page

1. Choose Edit Slots from the File menu and click the slot.
2. Choose Move Slot to Next Page from the Page menu.

The slot goes to the end of the next page, with its name and its count of launches. From the last page it goes to the first. To move it two pages on, go to the next page and move it again.

Removing a page

Go to the page and choose Remove Page from the Page menu. GSLauncher asks first.

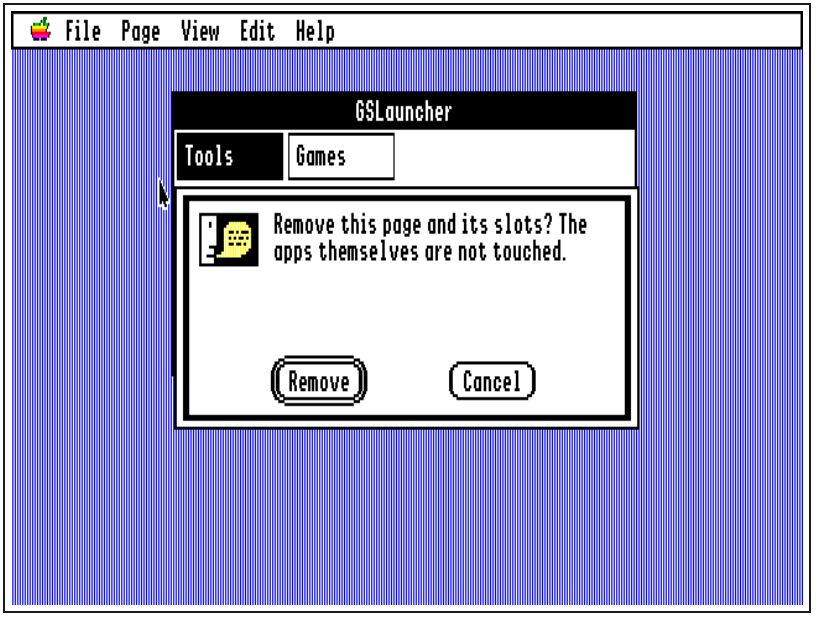


Figure 5-3 Remove Page asks first

Click Remove, and the page and its slots are gone. The programs themselves stay on your disk. You can't remove the last page.

Warning

Removing a page can't be undone. To keep some of its slots, move them to another page first.

Chapter 6

The View Menu

In This Chapter

Show File Date 29

Show Last Used 29

Show Launch Count 29

The third line of a slot, under the program's name, can show one of three things. Choose which from the View menu. The one in use has a check mark, and GSLauncher remembers your choice.

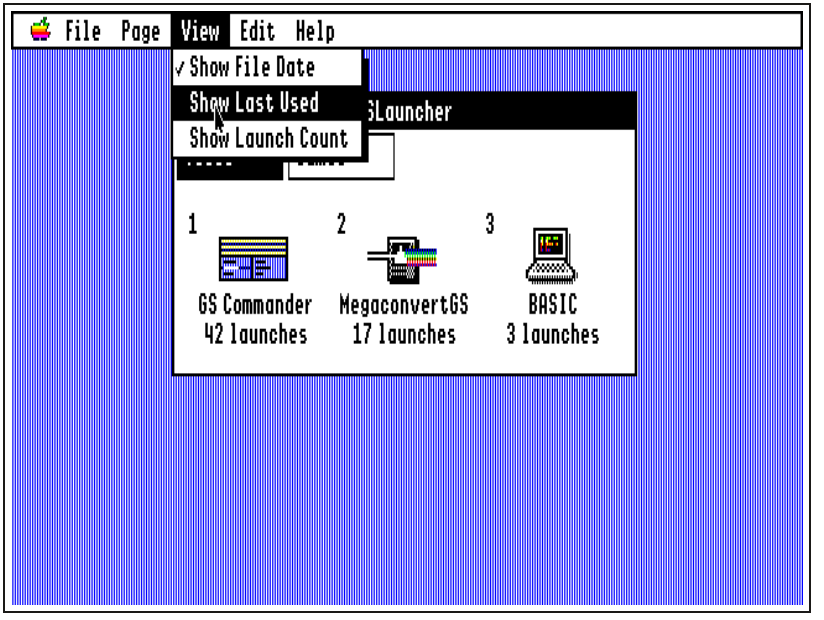


Figure 6-1 The View menu

Show File Date

The day and time the program's file was last changed, such as *11 Nov 01:58*. This is what GSLauncher shows at first.

By the way

If you write programs yourself, the date tells you at a glance that your newest version is the one on the disk.

Show Last Used

The day and time you last started the program from GSLauncher. A program you have not started yet says *not used yet*.

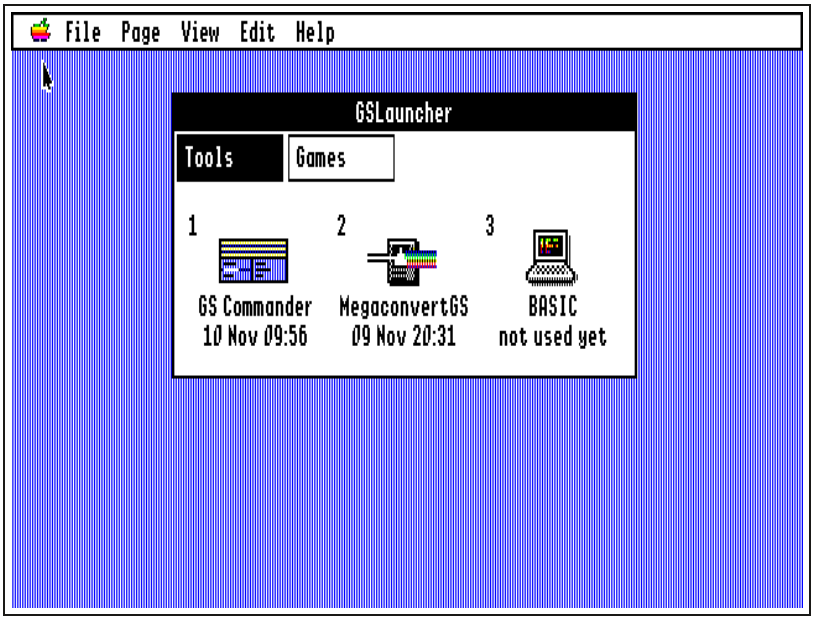


Figure 6-2 Show Last Used

Show Launch Count

How many times you have started the program from GSLauncher, such as *42 launches*. A program you have not started yet says *never used*.

GSLauncher counts every start, whichever view you use, so you can switch between the three at any time. A slot keeps its count when you rename it or move it. If you give it another program with Change Slot, the count starts again.

By the way

Only starts from GSLauncher are counted. Starting a program from the Finder doesn't change its count.



Chapter 7

Starting With the Computer

In This Chapter

Making GSLauncher the startup program 31

Going to the Finder 32

Getting the Finder back for good 32

Restarting 32

Shutting down 32

GSLauncher can be the first thing you see when you switch your Apple IIgs on, in place of the Finder.

Making GSLauncher the startup program

System 6 has a control panel for this, called Set Start.

1. Choose Control Panels from the Apple menu.
2. Open Set Start.
3. Under *Start up with*, choose Select Application.
4. In the dialog box, find GSLauncher and click Open.
5. Close the control panel and restart your computer.

From now on GS/OS starts GSLauncher instead of the Finder.

By the way

If Set Start is not among your control panels, install it from your System 6 disks with the Installer.

Going to the Finder

Choose Quit to Finder from the File menu (Apple-Q). The Finder starts, and you can copy files, format disks and do everything else it is for. To come back, open the GSLauncher folder and double-click GSLauncher, or restart.

Getting the Finder back for good

Open Set Start again and choose Finder under *Start up with.*

Restarting

Choose Restart from the File menu. GSLauncher asks first. Click Restart, and GS/OS closes everything properly and starts the computer again.

Shutting down

Choose Shut Down from the File menu. GSLauncher asks first.

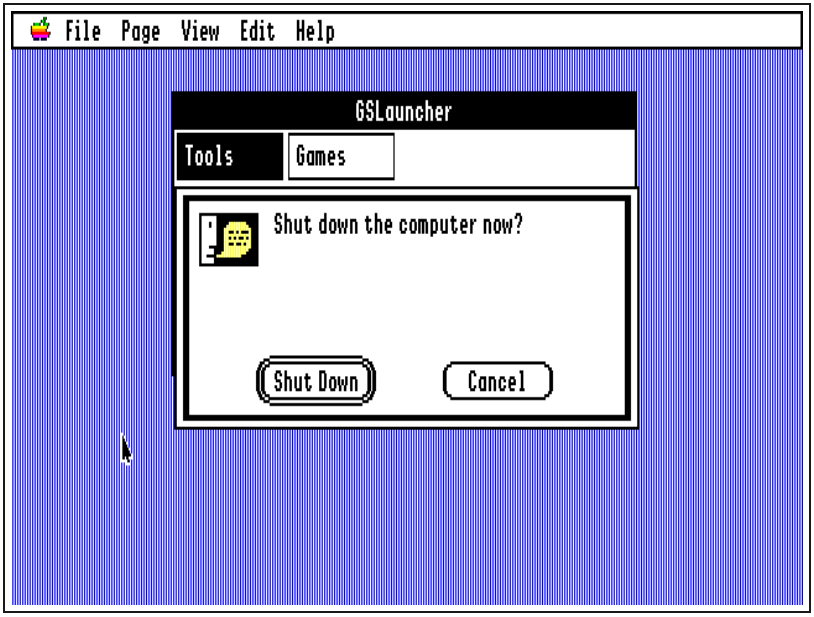


Figure 7-1 Shut Down asks first

Click Shut Down. GS/OS closes everything properly and tells you when you may switch the computer off.



Figure 7-2 Now you may switch off

If you change your mind, click Restart there.

Important

Always shut down before you switch off. It makes sure everything you saved is really on the disk.



Chapter 8

Icons

In This Chapter

Where the icons come from 35

Programs without an icon 35

Giving a program an icon 36

Where the icons come from

GSLauncher has no pictures of its own for your programs. It uses the ones the Finder uses, from the Finder's icon files. It looks for a program's icon in two places, in this order:

1. An *Icons* folder in the same folder as the program
2. The *Icons* folder at the top of the program's disk

It takes the first icon it finds that is meant for the program: one for the program's kind of file and for its name. So a program that has its own icon in the Finder nearly always has it in GSLauncher too.

Programs without an icon

A program for which no icon is found gets a plain one: a small window with a diamond in it. The program starts just the same.

Giving a program an icon

Many programs come with an icon file. Put it into an *Icons* folder next to the program, or into the Icons folder at the top of the disk, and start GSLauncher again.

You can also draw your own with an icon editor for the Apple IIgs. Save the icon for applications (or for ProDOS 8 system files) with the program's name, in one of the two Icons folders.

By the way

GSLauncher reads the icons when it starts, when you go to another page, and when you add or change a slot.



Chapter 9

The Slots File

In This Chapter

What is in it	37
Paths	38
Counts and times	38
Changing the file yourself	38
Starting over	39

Everything GSLauncher remembers is in one text file: *Launcher.Slots*, in the same folder as the program. GSLauncher writes it again whenever you change something or start a program. You never have to look at it. But because it is plain text, you can read it, change it with any text editor, and copy it to another disk.

What is in it

The file has one line for each thing GSLauncher remembers:

`@view=2`	The View menu's choice: 0 for the file date, 1 for last used, 2 for the launch count
`[Tools]`	A page and its name. The slots on the lines below belong to it.
`Name=path`	A slot: the name under the icon, an equal sign, and the path to the program

A small file looks like this:

```
@view=0
[Tools]
Writer=*:Apps:Writer:Writer
Paint=*:Apps:Paint:Paint|12|04 Nov 09:20
[Games]
Chess=:Games.Disk:Chess:Chess.System
```

Paths

A path names the disk, the folders and the file, with colons between them: *:Games.Disk:Chess:Chess.System*.

A **star** (*) in place of the disk's name stands for the disk you started the computer from. Find Apps writes the paths on your startup disk this way, so they still work if you rename the disk or copy everything to a bigger one.

Counts and times

After a path, GSLauncher adds how often you started the program and when you last did: */12/04 Nov 09:20*. A slot you have never used has neither. If you write a line yourself, leave them out.

Changing the file yourself

- Change it while GSLauncher is not running, then start GSLauncher.
- A line with only a path, without a name and an equal sign, gets the file's name.
- Lines can end with a Return or a line feed, so a file from another computer works.
- Slots before the first page line go onto a page called Apps.

Warning

GSLauncher writes the whole file again when you change a slot or start a program. Notes of your own in the file (lines that start with # or a semicolon) are not kept.

Starting over

To make GSLauncher forget everything, quit to the Finder and drag Launcher.Slots to the Trash. The next time you start GSLauncher, Find Apps opens as it did the first time.

By the way

To keep a copy of your setup, copy Launcher.Slots to another disk. Copy it back to restore it.

Appendix A

Menus and Keys

The File menu

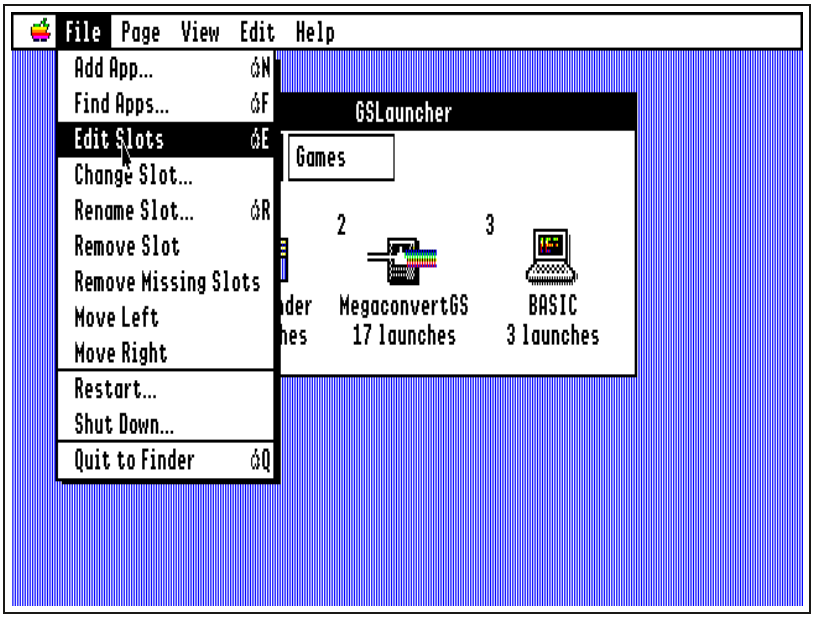


Figure 9-1 The File menu

Add App...	Apple-N	Adds a program you choose to the page
Find Apps...	Apple-F	Looks for programs on your disks and lists them

Edit Slots Apple-E	Makes a click pick a slot instead of starting it; choose it again to go back
Change Slot…	Gives the picked slot another program
Rename Slot… Apple-R	Changes the name under the picked slot's icon
Remove Slot	Removes the picked slot
Remove Missing Slots	Removes every slot on the page whose program is not found
Move Left, Move Right	Moves the picked slot one place
Restart…	Starts the computer again
Shut Down…	Gets the computer ready to be switched off
Quit to Finder Apple-Q	Starts the Finder

The Page menu

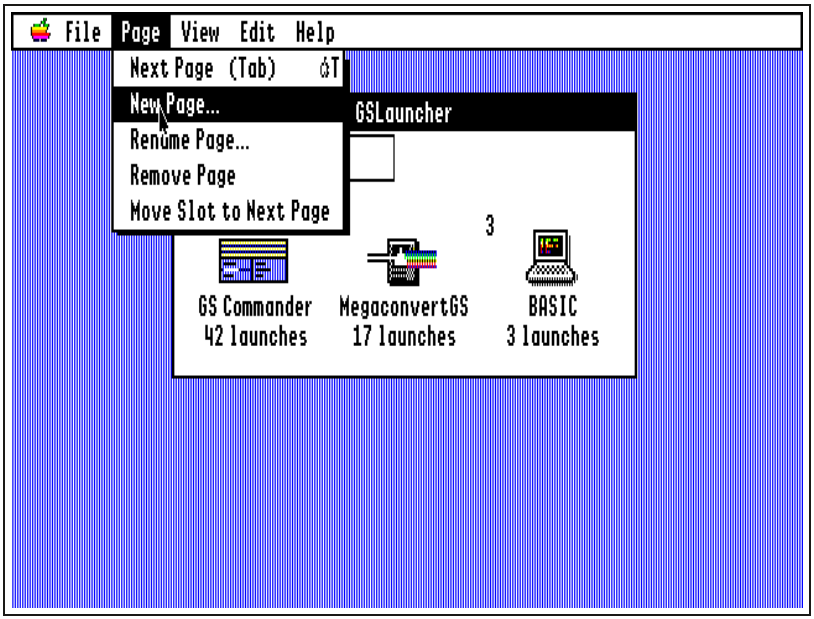


Figure 9-2 The Page menu

Next Page Apple-T	Shows the next page (also Tab)
New Page…	Adds a page
Rename Page…	Changes the name on the page's tab
Remove Page	Removes the page and its slots
Move Slot to Next Page	Moves the picked slot to the end of the next page

The View menu

Show File Date	The third line shows when the file was last changed
Show Last Used	The third line shows when you last started the program
Show Launch Count	The third line shows how many times you started it

The Edit menu

Undo, Cut, Copy, Paste and Clear are for desk accessories. GSLauncher itself does not use them.

The Help menu

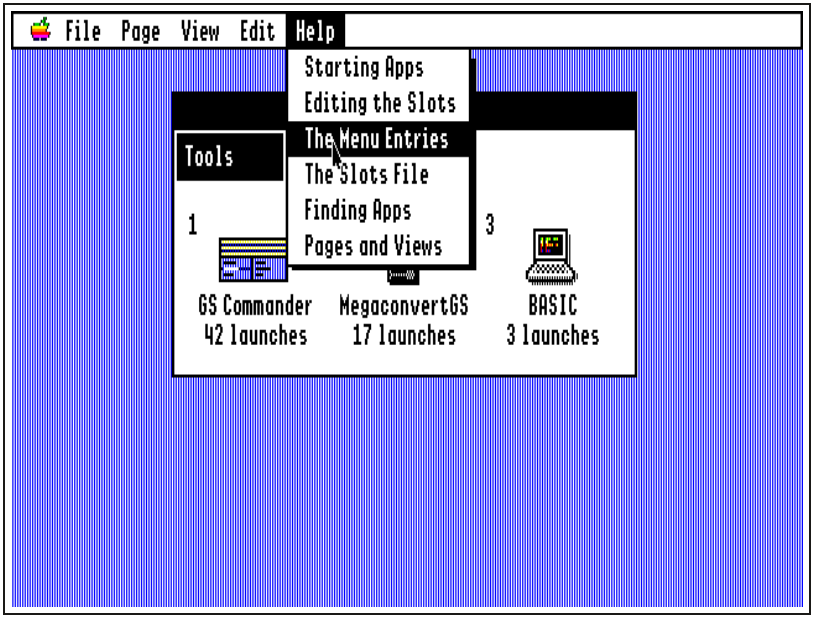


Figure 9-3 The Help menu

Six pages of help. Click or press a key to put a page away.

Keys in the GSLauncher window

1 to 9	Starts the slot with that number. In Edit Slots: picks it.
Tab	Shows the next page
← →	In Edit Slots: picks the slot before or after
Escape	Leaves Edit Slots

Keys in Find Apps

Return	Scan; then Add Selected

Escape	Cancel; during a scan, stops it
↑ ↓	Moves the list one line
← →	Moves the list a windowful

Keys when you type a name

Return	Accepts the name
Delete	Rubs out the last letter
Escape	Leaves things as they were

Appendix B

Hints and Limits

If something goes wrong

A slot says *not found*	The program was moved, renamed or deleted, or its disk is not in a drive. Put the disk in, or pick the slot and choose Change Slot.
A program has the plain icon	No Finder icon was found for it. See Chapter 8.
A program does not come back to GSLauncher	It does not quit in the usual way. Make GSLauncher the startup program (Chapter 7), and restart to come back.
Find Apps opens every time	GSLauncher cannot write its slots file. Make sure its disk is not locked and has room.
"The slots could not be saved"	The same: the disk is locked or full.
Find Apps does not list a program	It is in the System folder, more than seven folders deep, or not an application or a ProDOS 8 system file. Add it with Add App.
The number keys do nothing	There is no slot with that number on this page.
A click picks a slot but does not start it	Edit Slots is on. Press Escape.

The computer starts GSLauncher, and you want the Finder	Choose Quit to Finder. To change it for good, see Chapter 7.

Limits

- Four pages of 18 slots each: 72 programs
- A slot's name: 31 letters. A page's name: 31 letters, of which a tab shows 12.
- A program's path: 254 letters
- Find Apps: 16 disks, 100 programs, folders seven deep
- Launch counts go up to 9,999.
- Dates are shown without the year.
- GSLauncher starts applications and ProDOS 8 system files. It does not open documents.

Index

A

About GSLauncher, 12
Add App, 19, 20, 25, 40, 45
Add Selected, 10, 18, 43
Apple key, 6
applications, 14, 36, 45, 46

B

boot disk, 8, 9, 10, 16, 17, 38

C

Change Slot, 15, 22, 30, 41, 45
check boxes, 10
Control Panels, 31

D

date of the file, 28, 29, 42
disks, scanning, 10, 16, 43

E

Edit Slots, 19, 20, 21, 23, 27, 41, 43, 45
Escape key, 6, 16, 18, 21, 22, 43, 44, 45

F

Find Apps, 7, 9, 10, 16, 17, 18, 25, 38
Finder, the, 9, 11, 12, 13, 14, 30, 31, 32
frame, 20, 21

H

Help menu, 11, 43

I

icons, 6, 7, 9, 11, 14, 22, 35, 36
Icons folder, 9, 35, 36
installing, 8, 16

K

keys 1 to 9, 13, 26, 45

L

last used, 28, 29, 42
launch count, 28, 29, 42
Launcher.Slots, 9, 37, 39

M

menus, 6, 7, 11, 12, 16, 19, 20, 22
missing programs, 13, 14, 15, 22, 23, 41, 45
mouse, 6, 9, 10, 13, 15, 16, 19, 20
Move Left, Move Right, 23, 41
Move Slot to Next Page, 27, 42

N

names of slots, 22, 41
New Page, 24, 25, 42
Next Page, 26, 27, 42

P

pages, 24, 25, 42
paths, 37, 38, 46
ProDOS 8 programs, 14, 36, 45, 46

Q

Quit to Finder, 12, 32, 41, 46

R

Remove Missing Slots, 15, 23, 41
Remove Page, 27, 42
Remove Slot, 15, 23, 41
Rename Page, 26, 42
Rename Slot, 22, 41
Restart, 31, 32, 34, 41

S

scroll bar, 17
Set Start, 31, 32
Shut Down, 32, 33, 41
slots, 7, 11, 13, 14, 15, 18, 19, 20
slots file, 9, 37, 39, 45
star in a path, 6, 7, 8, 9, 10, 11, 12, 13
starting GSLauncher, 9
starting programs, 13, 21
starting with the computer, 31, 32
system requirements, 6, 8, 9, 31, 32

T

Tab key, 6, 26, 42, 43
tabs, 25, 26, 42, 46

V

View menu, 28, 37, 42