L2_1 – Instruction Set Architecture - Introduction

EECS 370 – Introduction to Computer Organization – Fall 2020

Learning Objectives

- To identify the information of an Instruction Set Architecture (ISA)

- Be able to identify trade-offs relevant to ISA design

- Identify basic, course-granularity operation of a computer

  - Fetch, Decode, Execute

Instruction Set Architecture (a.k.a. Architecture)

> Instruction Set Architecture (ISA)

- An abstract interface between the hardware and the lowest-level software that encompasses all the information necessary to write a machine language program that will run correctly, including instructions, registers, memory accesses, I/O, and so on.

> Instruction Set Architecture (ISA)
> Includes anything programmers need to know to make a binary program work correctly

> Instruction Set Architecture (ISA)
> Defines interface between hardware and software

ISAs

Application software

Compilers

Architecture – a.k.a. ISA
- Platform-specific
- A limited set of assembly language commands available by hardware
  - e.g., ADD, LOAD, STORE, RET

The software / hardware divide

Microarchitecture – hardware implementation of ISA
- Intel Core i9/i7/i5 implements x86 ISA (desktop/laptop)
- Apple A9 implements ARM v8-A ISA (iPhone)

Circuits

Devices

ISAs

Application software

Compilers

Implementation of design specification for software and hardware for – ISA

Architecture – a.k.a. ISA
- Platform-specific
- A limited set of assembly language commands available by hardware
  - e.g., ADD, LOAD, STORE, RET
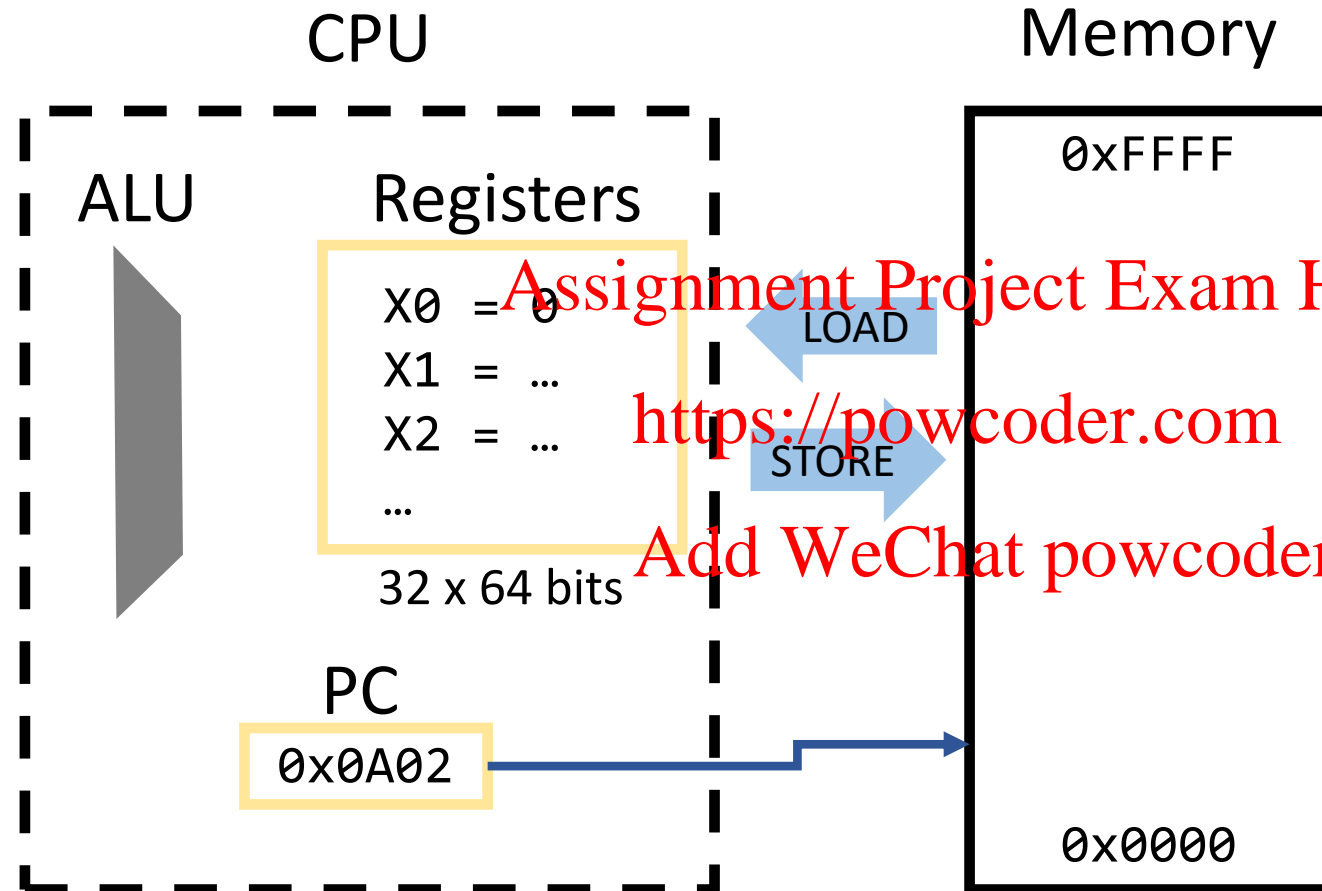
The software / hardware divide

Microarchitecture – hardware implementation of ISA
- Intel Core i9/i7/i5 implements x86 ISA (desktop/laptop)
- Apple A9 implements ARM v8-A ISA (iPhone)

Circuits

Devices

(Simplified) System Organization

CPU

Memory

ALU

Registers

X0 = 0
X1 = …
X2 = …
…

32 x 64 bits

LOAD

STORE

0xFFFF

0x0000

PC

0x0A02

CPU – Central Processing Unit

ALU – Arithmetic Logic Unit, executes instructions

PC – Program Counter, holds address (in memory) of next instruction

von Neumann Architecture

- von Neumann Architecture
  - Data and instructions are stored in the same memory
  - Programs (instructions) can be viewed as data – simplifies storage
  - Data can be viewed as instructions – complicates security

Program counter (PC)
0x0A02

Instruction register (IR)
0x0A0001

Stack

Heap data

Static data

Text

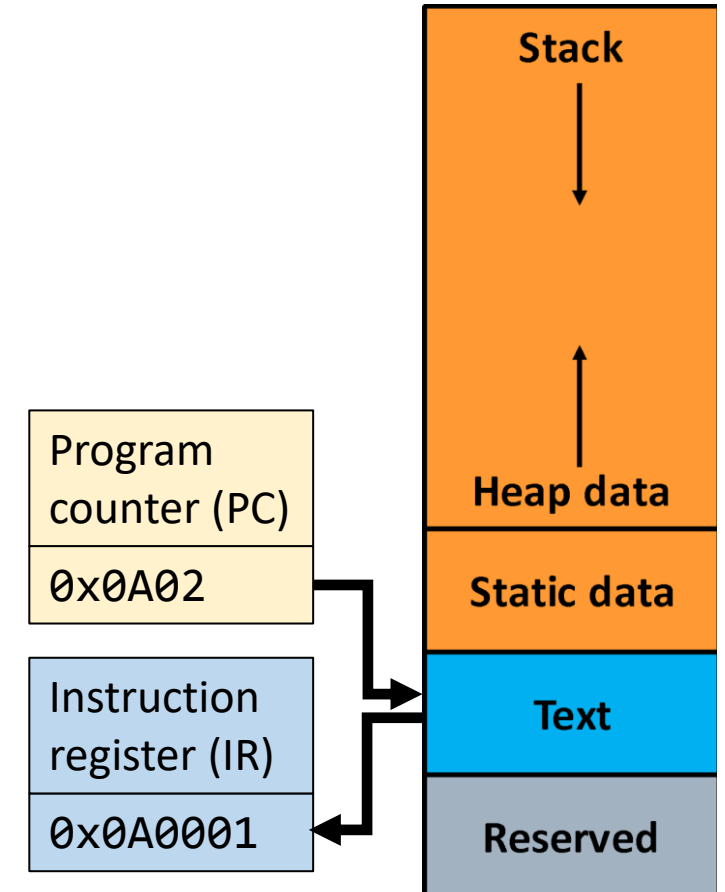Reserved

von Neumann Architecture

- von Neumann Architecture
  - Data and instructions are stored in the same memory
  - Programs (instructions) can be viewed as data – simplifies storage
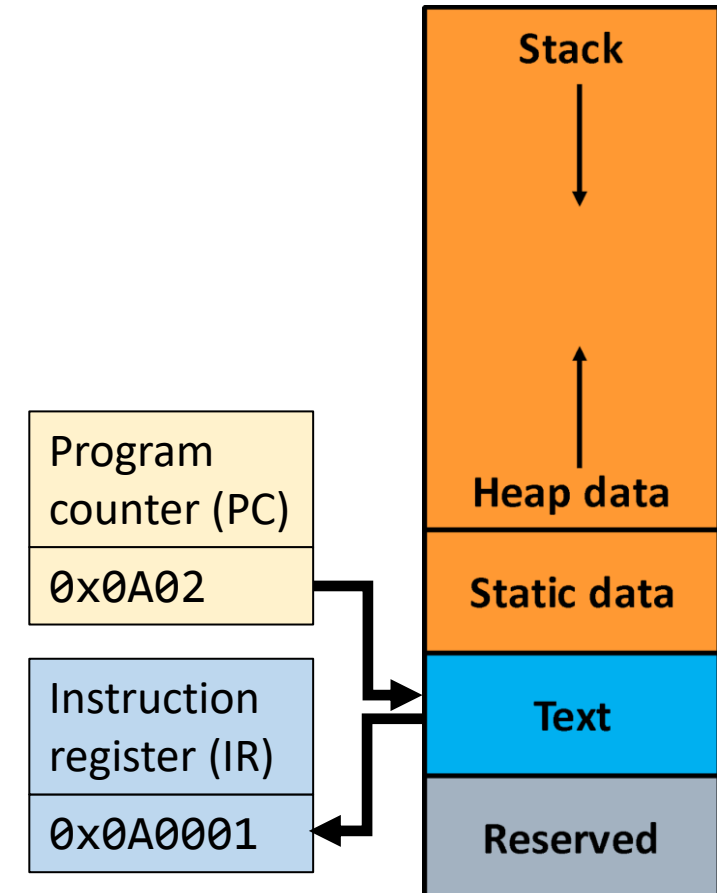 - Data can be viewed as instructions – complicates security
- Instructions are stored sequentially in memory
  - Accessed by the program counter (PC) —it contains the address/location of the instruction the hardware is executing
  - The PC is simply incremented to "point to" the next instruction
  - "jumps" / "branches" override fetching the sequential next instruction
  - Terminology: Jumps are usually unconditional, and branches are conditional on a flag being checked
    - there are conditional jumps….

	Stack
Program counter (PC)	
	Heap data
0x0A02	Static data
Instruction register (IR)	Text
0x0A0001	Reserved

von Neumann Architecture
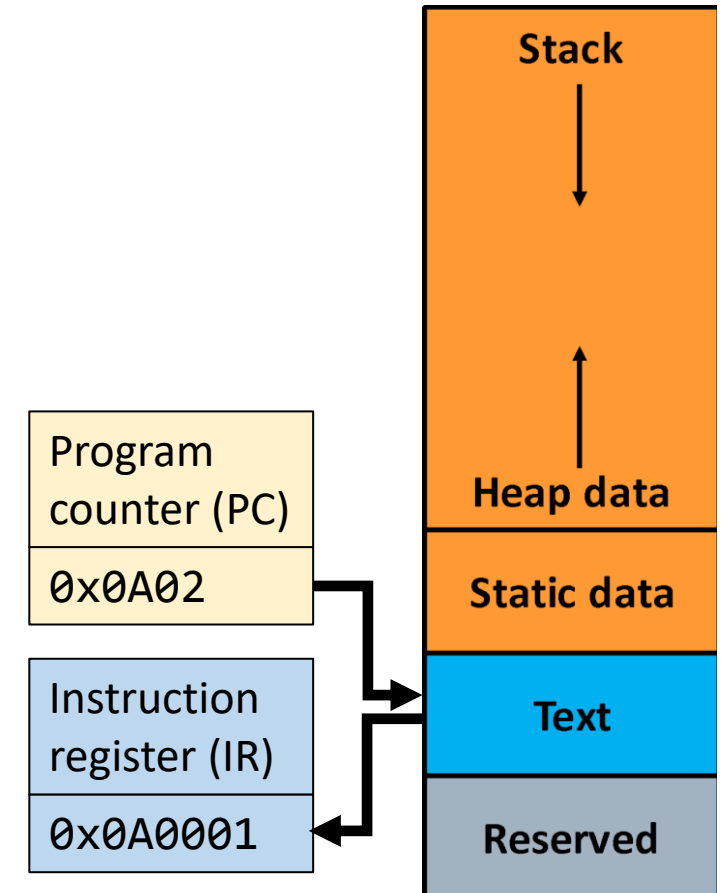
1. Fetch – get the next instruction. Use the PC to find instruction, put into instruction register (IR).

   1. The PC is changed to "point" to the next instruction in the program

   2. Assume that the next instruction is sequential and contiguous in memory

Program counter (PC)
0x0A02

Instruction register (IR)
0x0A0001

Stack

Heap data

Static data

Text

Reserved

von Neumann Architecture
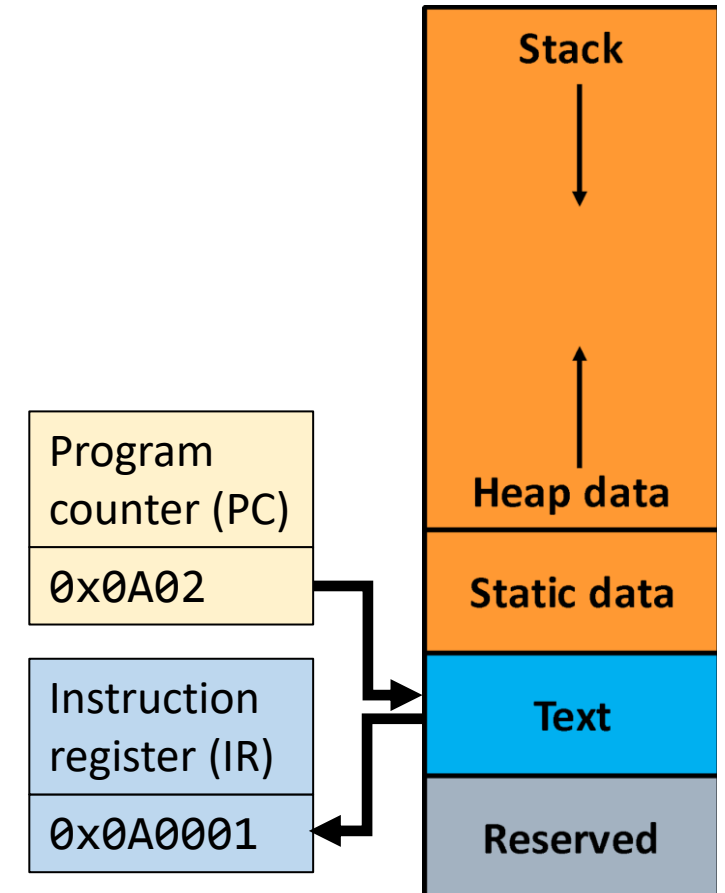
1. Fetch – get the next instruction. Use the PC to find instruction, put into instruction register (IR).
   1. The PC is changed to "point" to the next instruction in the program
   2. Assume that the next instruction is sequential and contiguous in memory
2. Decode – control logic examines the contents of the IR to decide what functionality to perform.

Program counter (PC)
0x0A02

Instruction register (IR)
0x0A0001

Stack

Heap data

Static data

Text

Reserved

von Neumann Architecture

1. Fetch – get the next instruction. Use the PC to find instruction, put into instruction register (IR).
   1. The PC is changed to "point" to the next instruction in the program
   2. Assume that the next instruction is sequential and contiguous in memory

2. Decode – control logic examines the contents of the IR to decide what functionality to perform

3. Execute – the outcome of the decoding process dictates:
   1. An arithmetic or logic operation on data
   2. The kind of access to data in the same memory as instructions
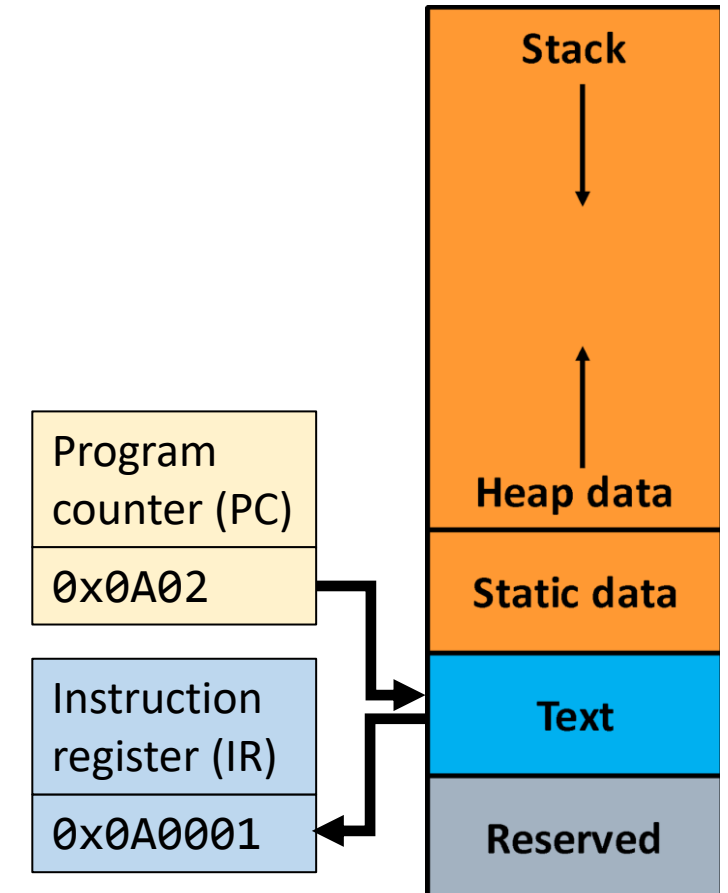   3. OR the outcome is a change of contents of the PC

	Stack
Program counter (PC)	Heap data
0x0A02	Static data
Instruction register (IR)	Text
0x0A0001	Reserved

von Neumann Architecture

1. Fetch – get the next instruction. Use the PC to find instruction, put into instruction register (IR).

    1. The PC is changed to "point" to the next instruction in the program
    2. Assume that the next instruction is sequential and contiguous in memory

2. Decode – control logic examines the contents of the IR to decide what functionality to perform.

3. Execute – the outcome of the decoding process dictates:

    1. An arithmetic or logic operation on data
    2. The kind of access to data in the same memory as instructions
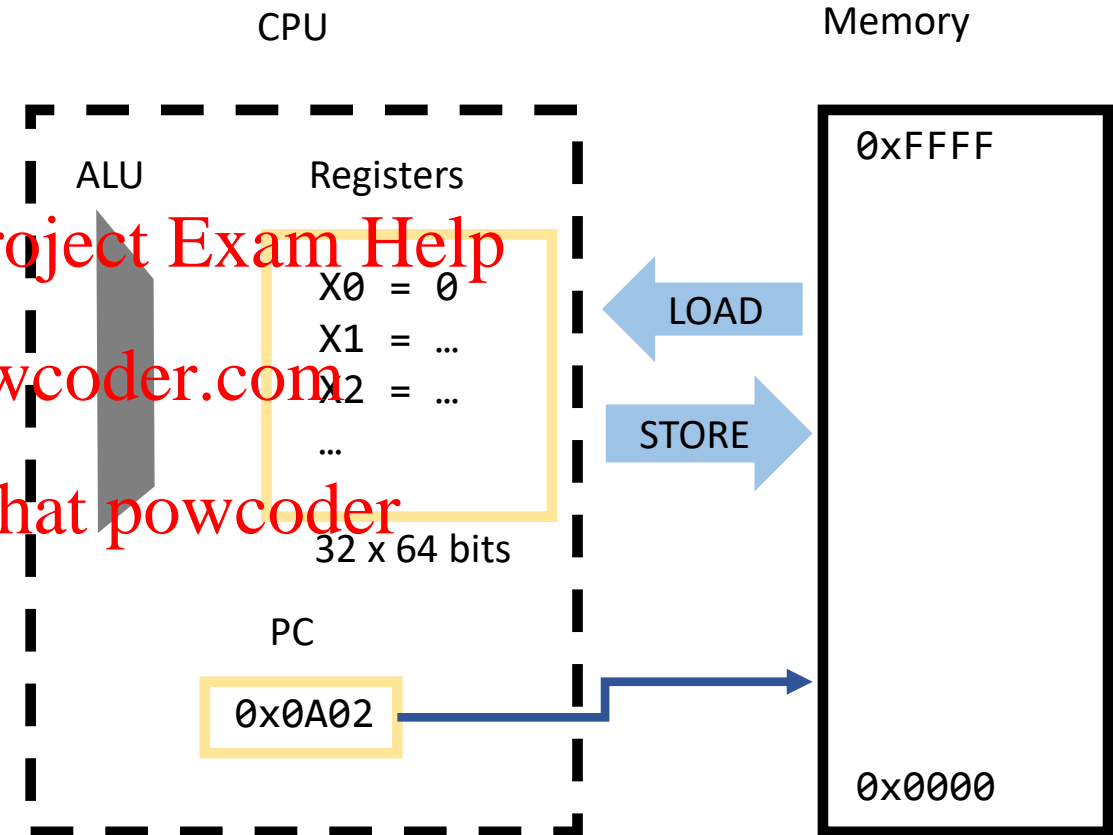   3. OR the outcome is a change of contents of the PC

4. Go to step 1

Stack
↓
↑
Heap data
Static data
Text
Reserved

Program counter (PC)
0x0A02

Instruction register (IR)
0x0A0001

Instruction Set Architecture – Design Space 1

- What instructions should be included?
  - add, multiply, divide, sqrt [functions]
  - branch [flow control]
  - load/store [storage management]
- What storage locations?
  - How many registers?
  - How much memory?
  - Any other "architected" storage?
- How should instructions be formatted?
  - 0, 1, 2 or more operands?
  - Immediate operands

CPU

Memory

0xFFFF

ALU   Registers

X0 = 0

LOAD

X1 = …

X2 = …

…

STORE

32 x 64 bits

PC

0x0A02

0x0000

Instruction Set Architecture – Design Space 2

- How to encode instructions?
  - **RISC** (Reduced Instruction Set Computer):
    all instructions are same length (e.g. ARM, LC2K)
    smaller set of simpler instructions
  - **CISC** (Complex Instruction Set Computer):
    instructions can vary in size (Digital Equipment's VAX, x86)
    large set of simple and complex instructions
- What instructions can access memory?
  - For ARM and LC2K, only loads and stores can access memory
    (called a "**load-store architecture**")
  - Intel x86 is a "**register-memory architecture**", that is, other instructions beyond load/store can access memory
  - Also Compute in Memory (currently a research topic) – simple operations performed in memory without data moving to/from the processor.

Many Choices, Many ISAs

- Why are there many ISAs?
  - Many problem domains, design constraints (e.g., power), differences of opinion

- How often are new architectures created?
  - New embedded processors are created all the time

  - Existing ISAs are extended for new problem domains
    - X86: MMX, MMX2, SSE, AVX, x87, x64
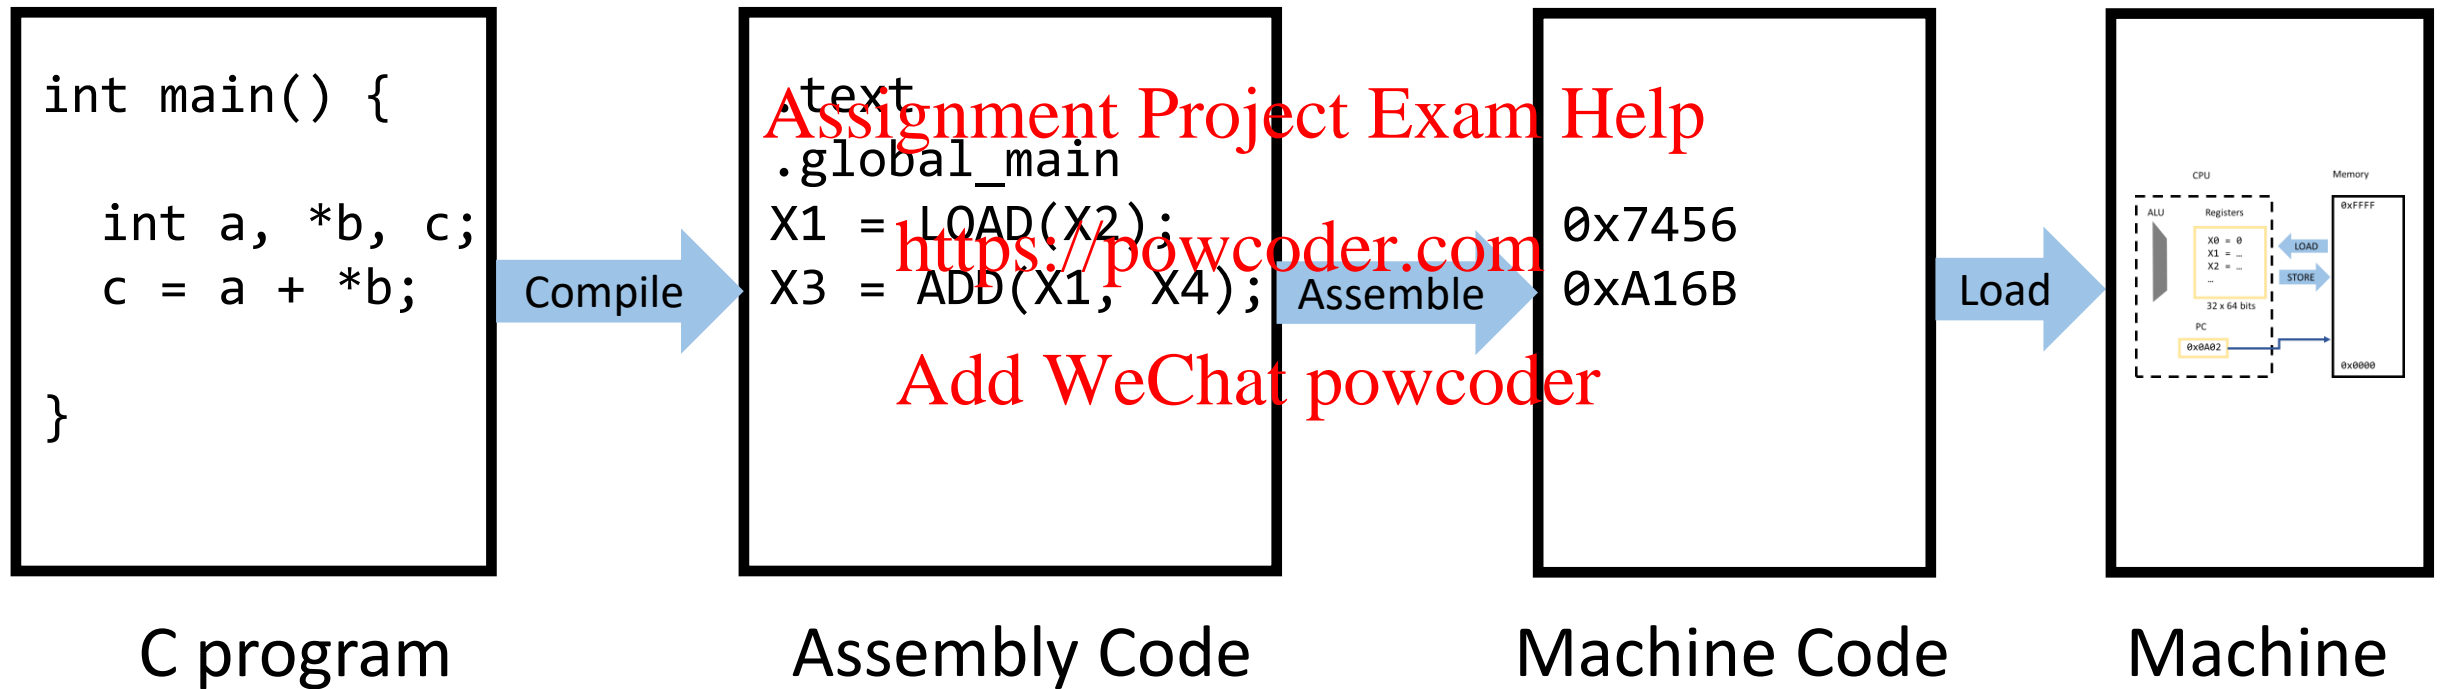
- Can you design one?
  - Yes!

High-Level to Low-Level Language to Hardware

```
int main() {

  int a, *b, c;
  c = a + *b;

}
```

```
.text

.global_main
X1 = LOAD(X2);
X3 = ADD(X1, X4);
```

```
0x7456
0xA16B
```

Compile → **Assemble** → **Load**

C program   Assembly Code   Machine Code   Machine

Logistics

- No worksheet for this video

L2_2 Assembly and Instruction Encoding

EECS 370 – Introduction to Computer Organization – Fall 2020

Learning Objectives

- To understand the process of encoding an assembly instruction

  - Converting from assembly to machine code

- After completing this video and associated worksheet:

  - You should be able to encode assembly instructions, necessary for Project 1

Assembly Code – Instruction Encoding

- Fields
  - Opcode – What instruction to perform
  - Source (input) operand specifier(s)
    - What data to perform operation on
  - Destination (output) operand specifiers(s)
    - What data to updated

opcode	dest	src1	src2
ADD	X2	X1	100

Execution: value in register X2 = contents reg. X1 + constant 100

Assembly Code - Properties

- Generally 1-1 correspondence with machine language
- Mnemonic codes facilitate programming
- Labels (symbolic names)
- Direct control of the what processor does
- May execute fast, if you're good at it, but compilers can typically generate better code
- Still hard to use and not portable to other brands of machines

Assembly – ARM Execution Example

Program

Opcode	Destination Register	Source Reg. 1	Source Reg. 2 / Immediate	Pseudocode
ADD	X3,	X1,	X2	X3 = X1 + X2
ADDI	X3,	X3,	#3	X3 = X3 + 3
SUB	X2,	X3,	X1	X2 = X3 – X1

Register	Initial	ADD X3, X1, X2	ADDI X3, X3, #3	SUB X2, X3, X1
X1	25			
X2	-4			
X3	57			

Assembly – ARM Execution Example

Program

Opcode	Destination Register	Source Reg. 1	Source Reg. 2 / Immediate	Pseudocode
ADD	X3,	X1,	X2	X3 = X1 + X2
ADDI	X3,	X3,	#3	X3 = X3 + 3
SUB	X2,	X3,	X1	X2 = X3 – X1

Register	Initial	ADD X3, X1, X2	ADDI X3, X3, #3	SUB X2, X3, X1
X1	25	25	25	25
X2	-4	-4	-4	-1
X3	57	21	24	24

Assembly – ARM Execution Example

Program

Opcode	Destination Register	Source Reg. 1	Source Reg. 2 / Immediate	Pseudocode
ADD	X3,	X1,	X2	X3 = X1 + X2
ADDI	X3,	X3,	#3	X3 = X3 + 3
SUB	X2,	X3,	X1	X2 = X3 – X1

Register	Initial	ADD X3, X1, X2	ADDI X3, X3, #3	SUB X2, X3, X1
X1	25	25	25	25
X2	-4	-4	-4	-1
X3	57	21	24	24

Assembly – Instruction Encoding

- Instructions are stored as data in memory

- Each instruction is encoded as a number

opcode	dest	src1	src2
ADD	X2	X3	X1
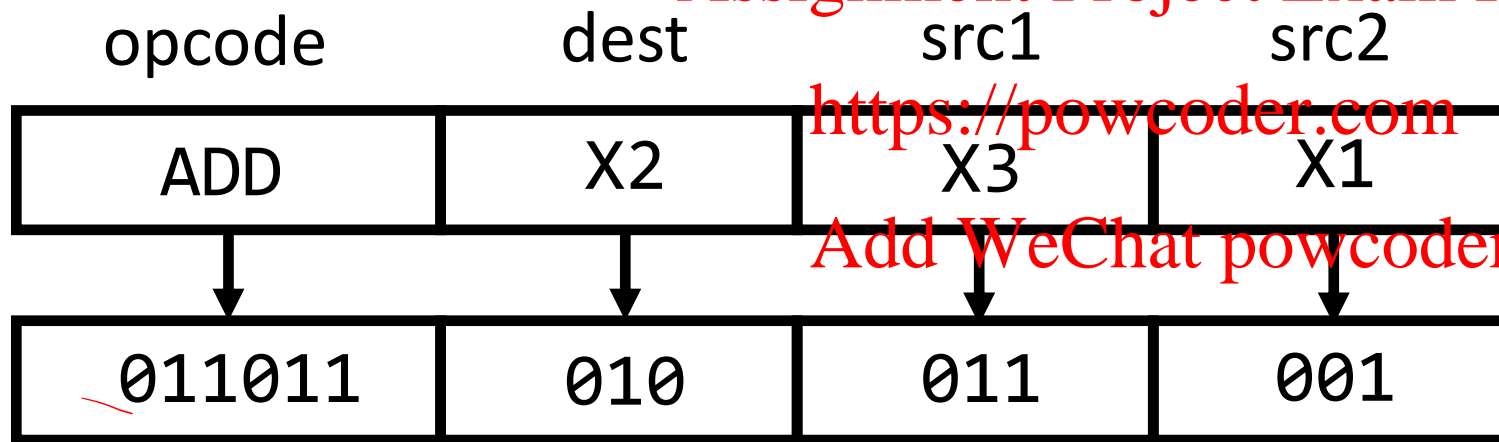
011011	010	011	001

011011010011001 = $2^0 + 2^3 + 2^4 + 2^7 + 2^9 + 2^{10} + 2^{12} + 2^{13}$ = *13977*

Assembly – Register Addressing

opcode	dest	src1	src2
ADD	X2	X3	X1
011011	010	011	001
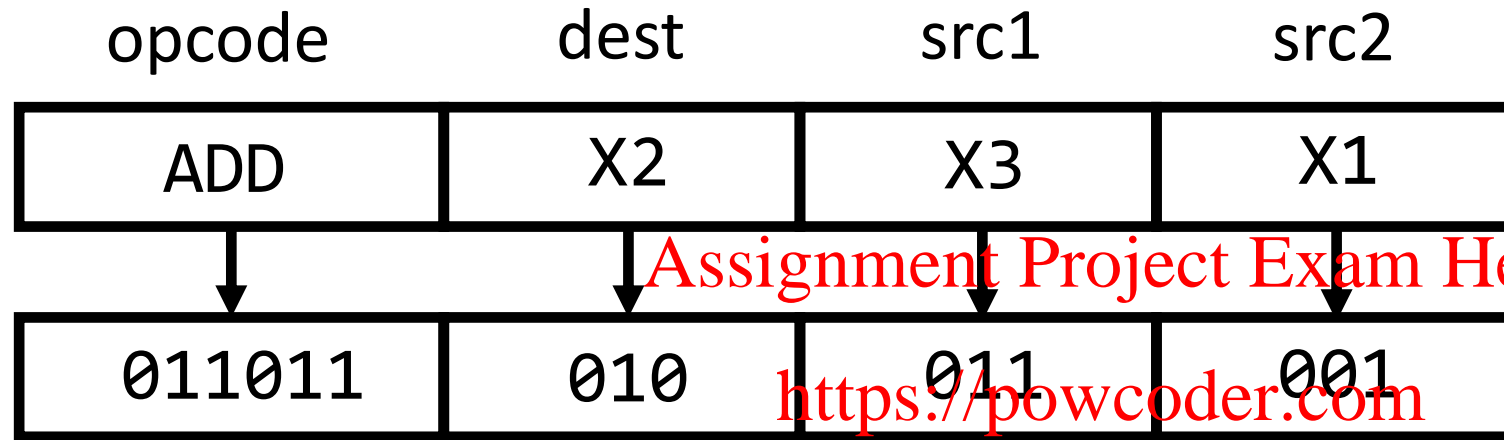
Using 6 bits, how many opcodes can this ISA implement?

Assembly – Register Addressing

Example ISA (Simplified)

opcode	dest	src1	src2
ADD	X2	X3	X1
011011	010	011	001

Using 6 bits, how many opcodes can this ISA implement?

2^n $2^6 = \boxed{64}$ $2^2 \quad {}^3 \quad {}^4 \quad {}^5 \quad {}^6$

$2^3 = 8$

X0

↓

X7

$000 \rightarrow 111$

Assembly – Register Addressing

Example ISA (Simplified)

opcode	dest	src1	src2
ADD	X2	X3	X1
011011	010	011	001
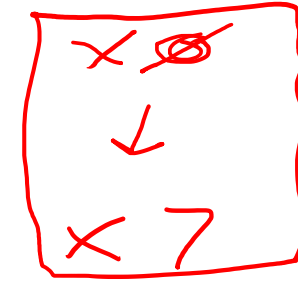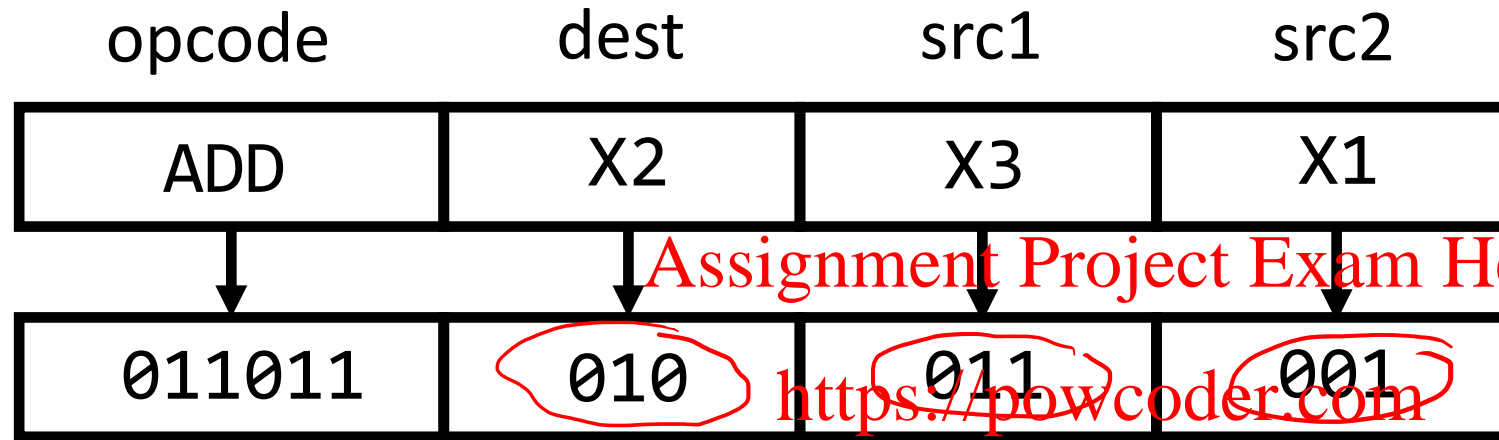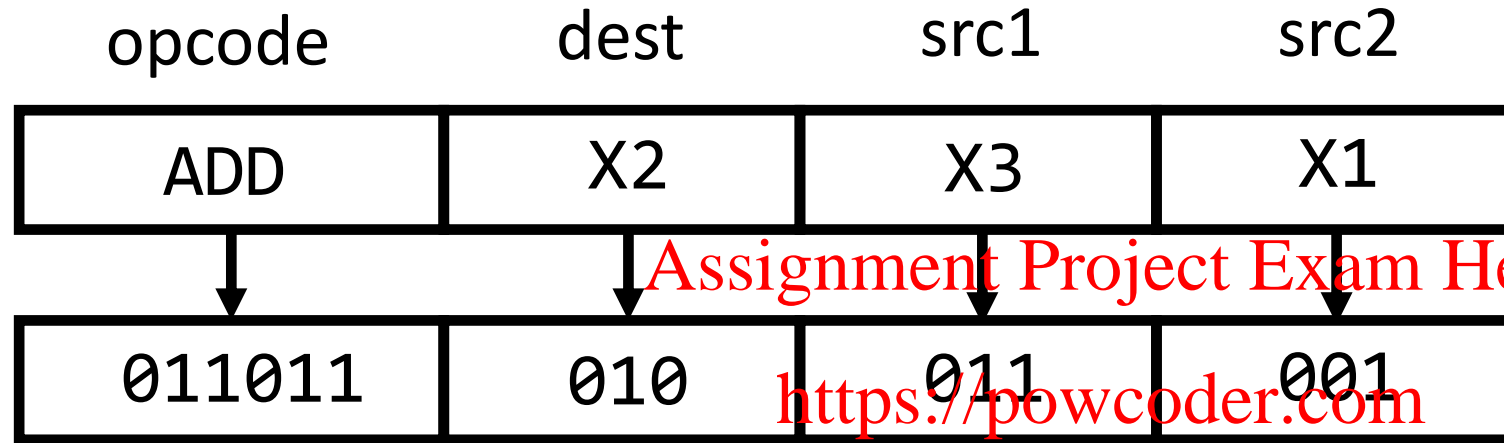
Using 6 bits, how many opcodes can this ISA implement?

- m bits can encode 2^m different values
- n values can be encoded in $\lceil \log_2(n) \rceil$ bits
- For above
  - Can encode $2^6 = 64$ opcodes
  - Can encode $2^3 = $ **8** src/destination registers

EECS 370 website has a lot of video tutorials, including binary representation
https://www.youtube.com/watch?v=KGPfymjE2z8&feature=youtu.be

11

Instruction Encoding – Example 1
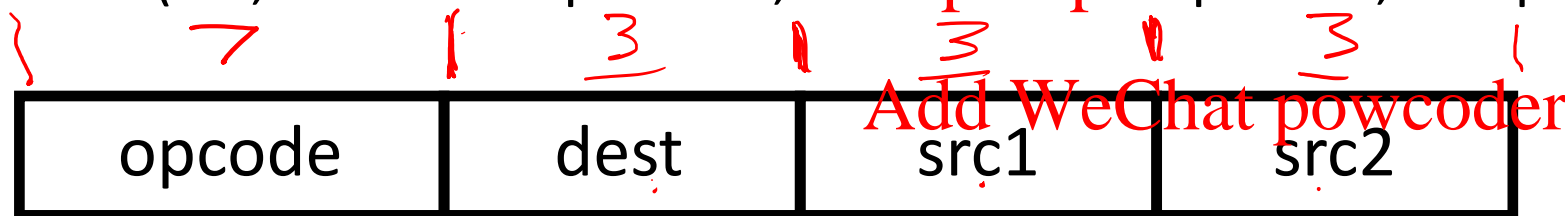
What is the max number of registers that can be designed in a machine given:

* 16-bit instructions

* Num. opcodes = 100

* All instructions are (reg, reg) → reg

(i.e., 2 source operands, 1 destination operand, all operands can access all registers)

opcode	dest	src1	src2

← 16 Bits total →

Instruction Encoding – Example 1

What is the max number of registers that can be designed in a machine given:

* 16-bit instructions

* Num. opcodes = 100

* All instructions are (reg, reg) ➔ reg

(i.e., 2 source operands, 1 destination operand, all operands can access all registers)

$9 / 3 = 3$

7	1	3	1	3	1	3	1
opcode		dest		src1		src2	
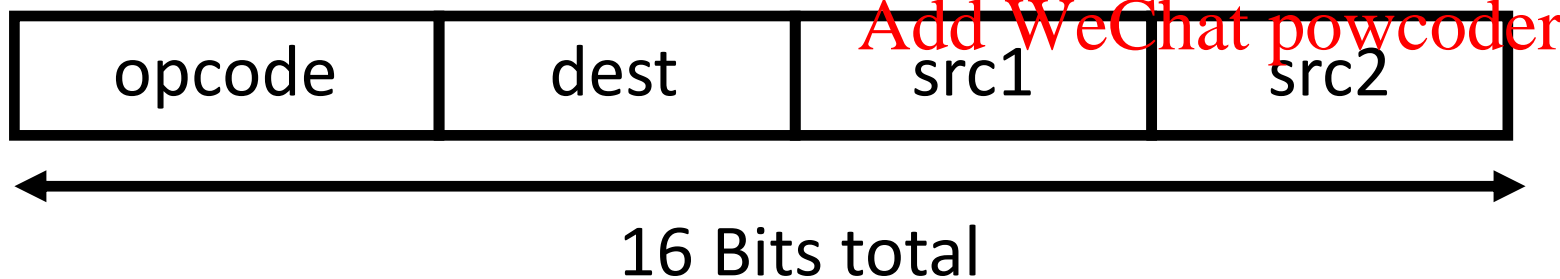
⟵———————— 16 Bits total ————————⟶

$16 - 7 = 9$

100

$2^6 = 64$

$= 2 \times 2^6 = 128$

$2^3 = 8$ Reg.

Instruction Encoding – Example 1

Example ISA (Simplified)

What is the max number of registers that can be designed in a machine given:

* 16-bit instructions

* Num. opcodes = 100

* All instructions are (reg, reg) → reg

  (i.e., 2 source operands, 1 destination operand, all operands can access all registers)

opcode	dest	src1	src2

← 16 Bits total →
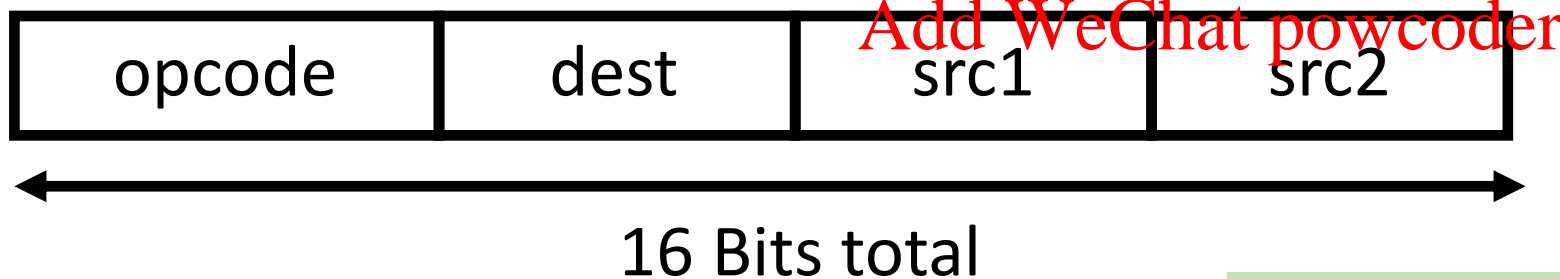
1. num opcode bits = $\lceil log2(100) \rceil$ = 7
2. num bits for operands = 16 – 7 = 9
3. num bits per operand = 9 / 3 = 3
4. maximum number of registers = 2^3 = 8

14

Instruction Encoding – Example 2

Given the following ISA instruction fields:

ADD opcode is 53

Register fields encoded with register number

What is the binary / hex / decimal encoding?

opcode	dest	src1	src2

| 7 bits | 3 bits | 3 bits | 3 bits |

	opcode	dest	src1	src2

	ADD	X2	X3	X1
binary				
hex				
decimal				

Instruction Encoding – Example 2

Given the following ISA instruction fields:

opcode	dest	src1	src2

| 7 bits | 3 bits | 3 bits | 3 bits |

53

ADD opcode is 53

Register fields encoded with register number

What is the binary / hex / decimal encoding?

opcode	dest	src1	src2
ADD	X2	X3	X1
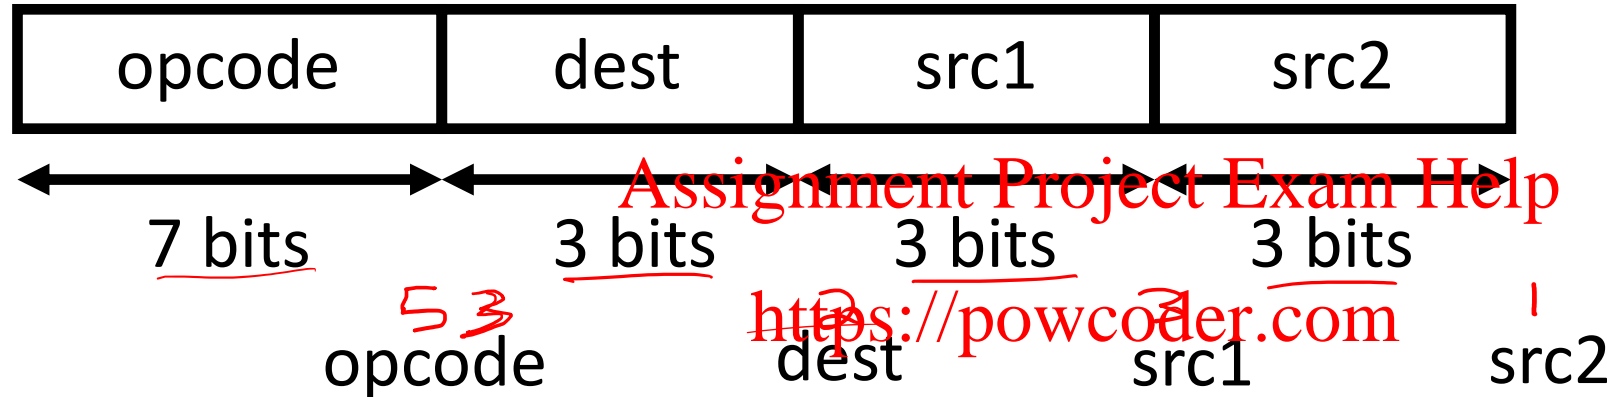
	ADD	X2	X3	X1
binary	0110 01	01 0	01 1	001
hex	6	A	9	9
decimal	27289			

Instruction Encoding – Example 2

Given the following ISA instruction fields:

opcodec	dest	src1	src2

7 bits   3 bits   3 bits   3 bits

ADD opcode is 53

Register fields encoded with register number

What is the binary / hex / decimal encoding?

	opcode	dest	src1	src2
	ADD	X2	X3	X1
binary	011 0101	010	011	001
hex	0x6A99			
decimal	27289			

Logistics

- This is the second of 3 videos for lecture 2
  - L2_1 – ISA Introduction
  - L2_2 – Assembly and Instruction Encoding
  - L2_3 – Assembly Decoding
- There is one worksheet for lecture 2
  - One exercise on encoding, one for decoding
- Move on to L2_3.

L2_3 Assembly Instruction Decoding

EECS 370 – Introduction to Computer Organization – Fall 2020

Learning Objectives

- To understand the process of decoding an assembly instruction
  - Converting from machine to assembly code

- After completing this video and associated worksheet:
  - You should be able to decode machine code instructions, necessary for Project 1

Instruction Decoding - Example

• Decoding: Given a machine instruction in decimal, convert to assembly

decimal [27292]

opcodec	dest	src1	src2
7 bits	3 bits	3 bits	3 bits
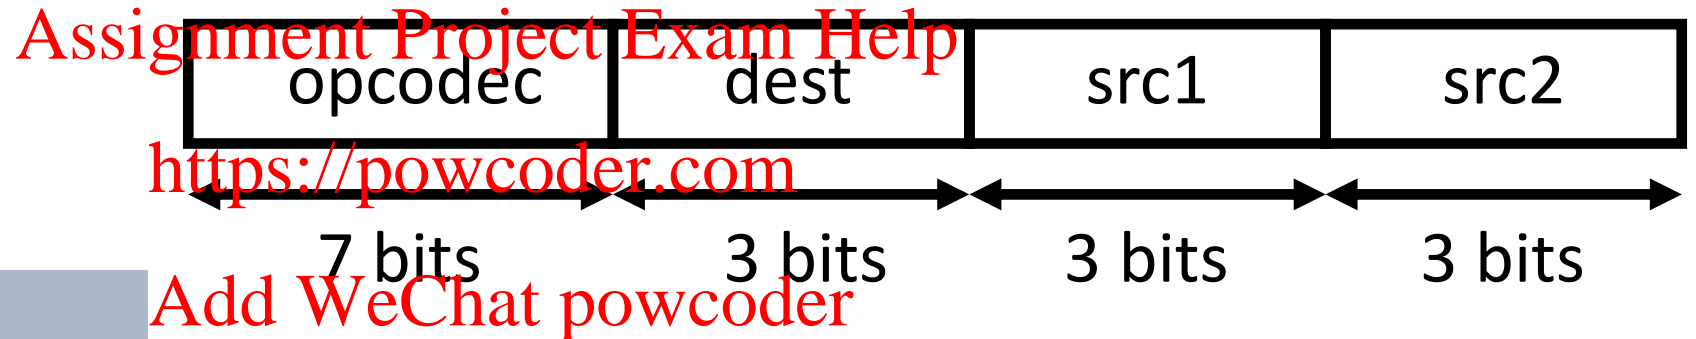
What steps are used to decode a machine code instruction?

Instruction Decoding - Example

- Decoding: Given a machine instruction in decimal, convert to assembly

decimal | 27292 |

opcodec	dest	src1	src2

7 bits   3 bits   3 bits   3 bits
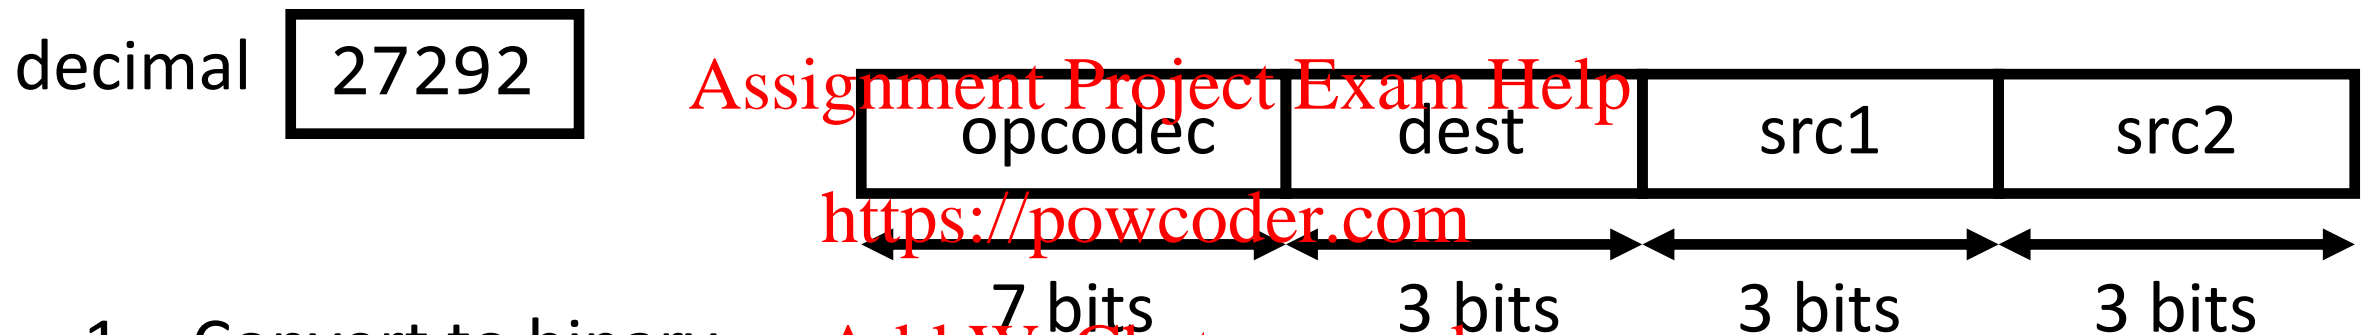
1. Convert to binary
2. Separate into fields
3. Convert to decimal
4. Convert assembly instruction fields

1. Convert to Binary

- Given a machine instruction in decimal, convert to binary

decimal | 27292

Example ISA (Simplified)
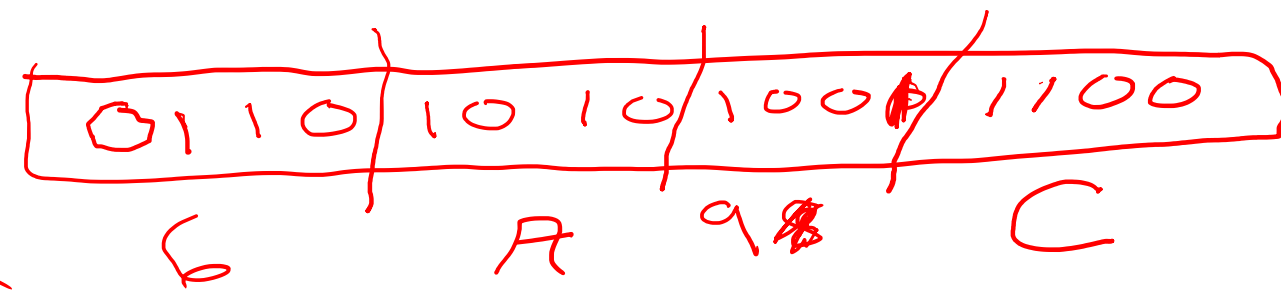
1. Convert to Binary

- Given a machine instruction in decimal, convert to binary

decimal | 27292

Convert with powers of two:

$27292 = 2^{14} (16384) + 2^{13} (8192) + 2^{11} (2048) + 2^9 (512) + 2^7 (128) + 2^4 (16) + 2^3 (8) + 2^2 (4) = $ `0110  1010  1001  1100`

2. Separate into Fields

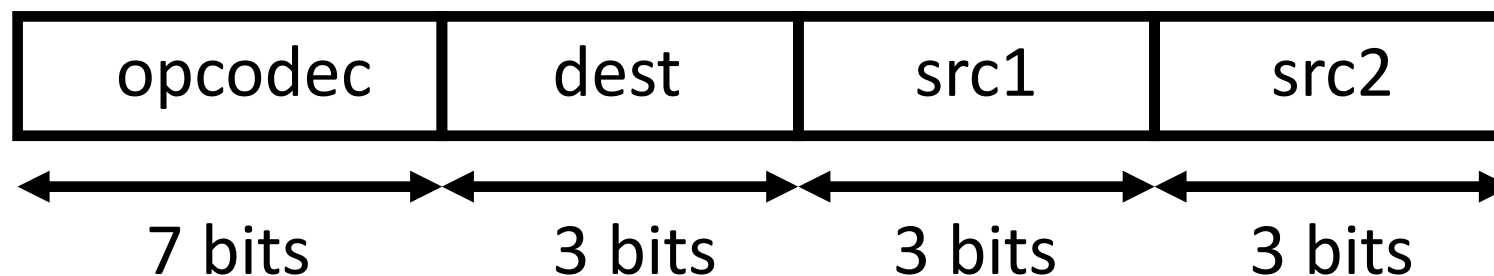• Given a machine instruction in binary, separate into fields

decimal | 27292

0110 1010 1001 1100

0110100   010   011   100

opcodec	dest	src1	src2
7 bits	3 bits	3 bits	3 bits

2. Separate into Fields

- Given a machine instruction in binary, separate into fields

decimal | 27292

0110 1010 1001 1100

0110101   **010**   **011**   **100**

opcodec	dest	src1	src2

| 7 bits | 3 bits | 3 bits | 3 bits |

3. Convert Fields to Decimal

- Given a machine instruction in binary in fields, convert to decimal

decimal | 27292

$2^5 \ 2^4 \ 2^3 \ 2^2$

0110101 **010** **011** **100**

53	2	3	4
opcodec	dest	src1	src2

3. Convert Fields to Decimal

- Given a machine instruction in binary in fields, convert to decimal

decimal

27292

0110101   010   011   100

53	2	3	4
opcode	dest	src1	src2

4. Convert to Assembly

- Given a machine instruction in fields in decimal, convert to assembly

decimal | 27292

From previous example:

ADD opcode is 53

| **0110101** | **010** | **011** | **100** |
| 53 | 2 | 3 | 4 |

| ADD | X2 | X3 | X4 |
| opcodec | dest | src1 | src2 |

4. Convert to Assembly

- Given a machine instruction in in decimal, convert to assembly

decimal	27292

From previous example:

ADD opcode is 53

0110101	**010**	**011**	**100**

53	2	3	4

ADD	X2	X3	X4
opcodec	dest	src1	src2

Decoding Example 2: LC-2K

LC-2K ISA
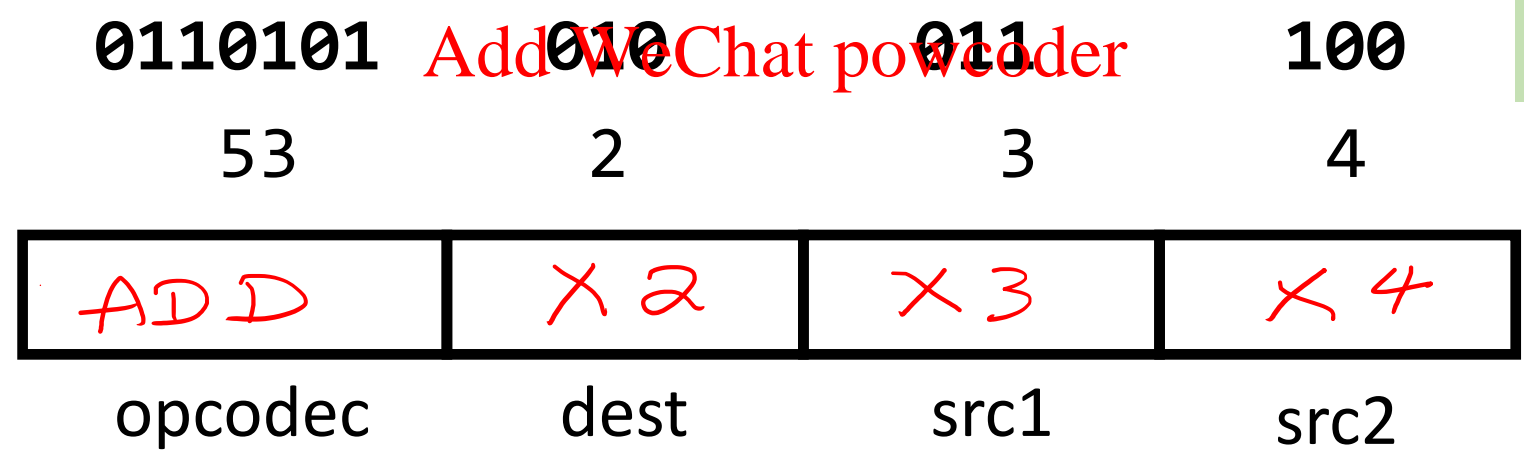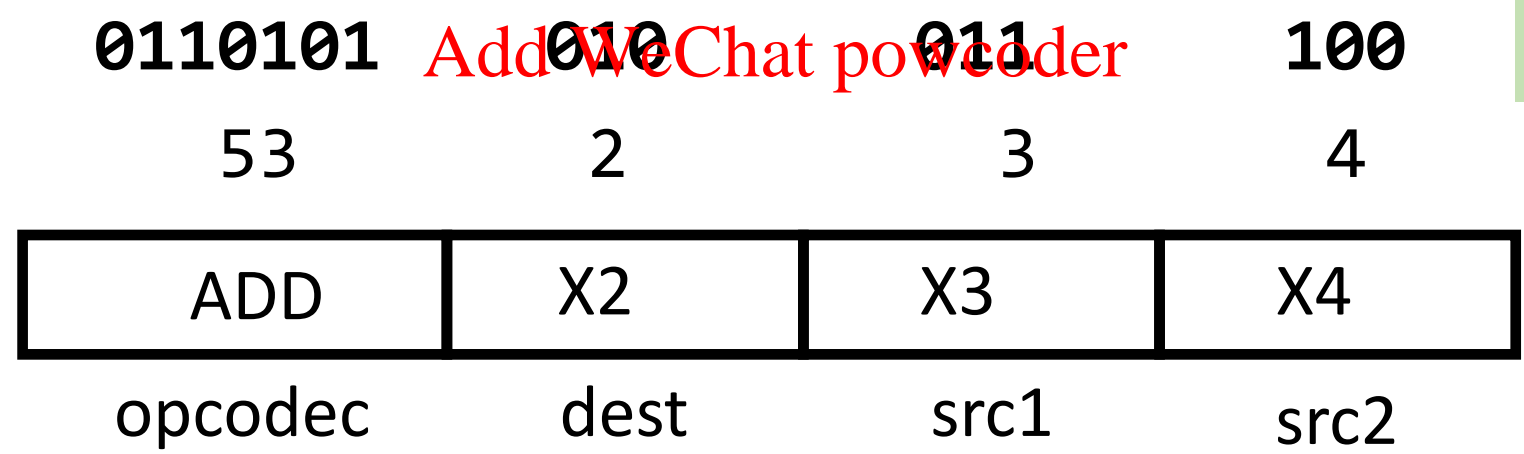
Decode LC-2K machine code to LC-2K assembly: 16842754

Logistics

- This is the final of 3 videos for lecture 2
  - L2_1 – ISA Introduction
  - L2_2 – Assembly and Instruction Encoding
  - L2_3 – Assembly Decoding
- There is one worksheet for lecture 2
  - One exercise on encoding, one for decoding
- Complete the participation quiz for lecture 2 on Canvas
  - Due by 9/6 at 11:59 pm