# Computer Architecture and Low Level **Programming**

Assi Dr. Vasilios Kelefourası

Email: V.kelefeuras@pymouth.ac.uk

Add Wellar bowcoder https://www.plymouth.ac.uk/staff/vasilios

-kelefouras


#### Outline

- Von Neumann architecture
- What is the CPU?
- □ How CPU worksignment Project Exam Help
  - Arithmetic Logic Unit (ALU) https://powcoder.com
  - Control Unit (CU)
  - Bus Add WeChat powcoder
  - Memory
  - Registers
  - Clock
- Memory Hierarchy
- Secondary Memory
- Instruction Pipeline

#### The Von Neumann Architecture

- All computers more or less based on the same basic design, the Von Neumann architecture
- It is a Model for designing and building computers, bared on the following three characteristics:
  - 1. The computer confirttpf fp province blexstemm
    - Memory
    - ALU (Arithmetic/LagdouM)eChat powcoder
    - Control Unit
    - Input/Output System (I/O)
  - 2. Program is stored in memory during execution
  - 3. Program instructions are executed sequentially
- ✓ The architecture is named after the mathematician, John Von Neumann
- ✓ A variation of this architecture is the **Harvard** architecture which separates data and instructions into two pathways

#### The Von Neumann Architecture

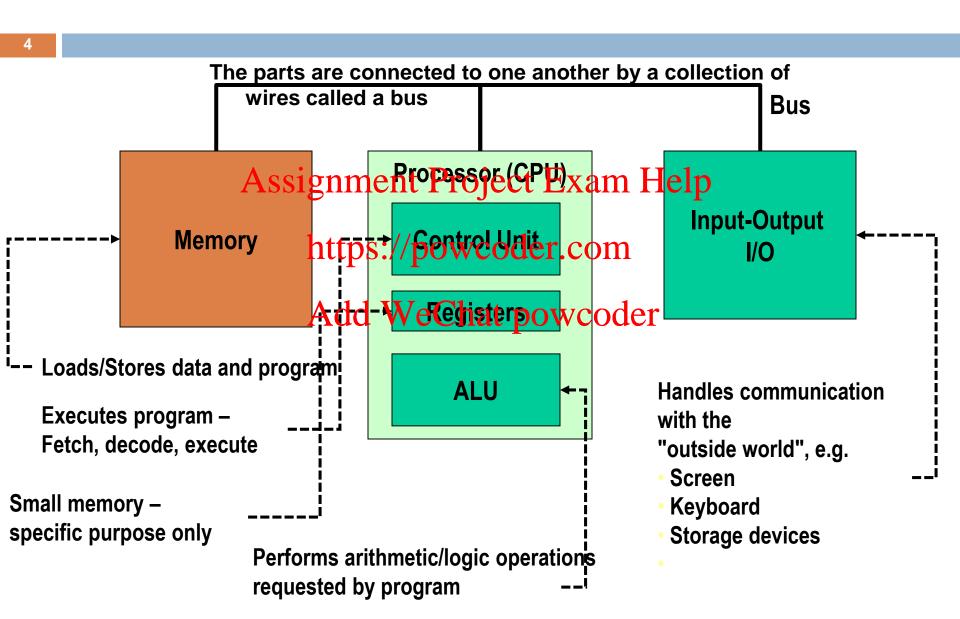

#### Central Processing Unit (CPU)

- □ Carries out the program's instructions!
- Operates on data it finds in the computer's memory
  - Includes all binary circuits that carry out arithmetic & logic operationsreduced to a single integrated Circuit
- CPU has four key parts that we will examine: Control Unit, Arithmetic & Logic Unit, Registers, Clock
- CPUs support a set of very gingle instructions that typically fall into the following categories:
  - Data movement (load, store, copy...)
  - Arithmetic/logical (add, subtract, compare..)
  - Program control (branch, jump...)
- Very primitive commands (operations) executed by the CPU
- These commands are implemented as electronic binary circuits which can transform the Os and 1s.


## Central Processing Unit (CPU)

CPU is responsible for **fetching** program instructions, **decoding** each instruction that is fetched, and **executing** the indicated sequence of operations on the correct data Project Exam Help

- The key parts of the CPU are
  - 1. Arithmetic Logichttins (Appwcoder.com
  - 2. Control Unit (CU) Add WeChat powcoder
  - 3. Registers
  - 4. Clock



- Every computer contains an internal clock that regulates the rate at which instructions are executed and synchronizes all the various computer components
- all CPU and bus Assignment Project Exam Help
- Clock speeds are expressed in megahertz (MHz) or gigahertz ((GHz))
  - the beginning of each cycle is when the clock signal goes from "0" to "1"
  - e.g. CPU frequency AGHZ Welchatcheowooder
  - In the computer, all timings are measured in terms of clock cycles, e.g., an addition needs 2 cycles

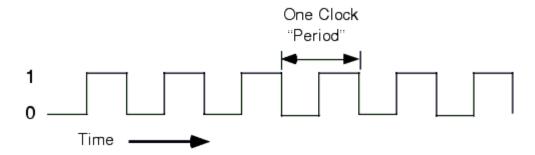

### CPU Clock (2)

- □ The faster the clock, the more instructions the CPU can execute per second
- But, to think that clock and performance is the same thing is the most common misconception about processors
   Assignment Project Exam Help
- □ CPU frequency is not nettosi! / ipoi wive dethe expcution speed; e.g. complex operations, cache misses etc
  - □ FLOPS: floating operations beckeral, powerometsure for (super)computers dedicated to extensive computations
- A typical modern PC now has either four or five different clocks, running at different (but related) speeds, e.g., system (memory) bus, L2 cache bus, PCI bus
- The entire system is tied to the speed of the system clock. This is why increasing the system clock speed is usually more important than increasing the CPU clock
  - Normally, the processor spends a significant amount of time waiting on data and signals from much slower devices, e.g., memory

#### Registers

- In a computer, a register is the fastest memory
- Registers are fast stand-alone storage locations that hold data temporarily

#### Assignment Project Exam Help

- Multiple registers are needed to facilitate the operation of the CPU
- The main registers are: <a href="https://powcoder.com">https://powcoder.com</a>
  - The Instruction Register (IR) WeChat powcoder
  - The Program Counter (PC) or Instruction Pointer (IP)
  - Data registers

## Central Processing Unit (CPU) (1)

The arithmetic logic unit (ALU) carries out the logic operations (such as comparisons) and arithmetic operations (add, shift, multiply) required during the program execution ASSIgnment Project Exam Help

The ALU knows

- 1. which operation the proportion by the proportion which operation the proportion is a second contract of the proportion of the proportio
- 2. Where are the input data
- 3. Where to store the dipuWer hat powcoder
- All the above are provided by the CU
- The ALU performs
  - 1. **Integer** arithmetic operations
    - Add, subtract, increment, decrement
  - 2. Bitwise logical operations
    - AND, OR, XOR, NOT, Arithmetic shift, logical shift, rotate

Processor (CPU)

**ALU** 


## Central Processing Unit (CPU) (2)

- ALUs often handle the multiplication of two integers, since the result is also an integer
- ALUs typically donot perform division energions, singe the result may be a fraction, or a "floating point" number
- □ **The floating-point unith(ffff)!):p/enforme or training** floating point numbers
- Modern CPUs have separate unit to perform multiplication faster
- Processors include a coprocessor hardware unit which is used to perform much more complex mathematical operations such as arcsine, cosine, floating-point division, etc

## Central Processing Unit (CPU) (3)

- The multiply-accumulate operation is a common step that computes the product of two numbers and adds that product to an accumulator
- It speeds up many computations the pt involve the accumulation of products, e.g., Matrix-matrix Multiplication
  - The hardware unit that performs the ondertion in known as a Multiplier Accumulator unit (MAC, or MAC unit)
    B
    C
  - the operation is called the what per two der
  - The MAC operation performs

$$A = A + B \times C$$

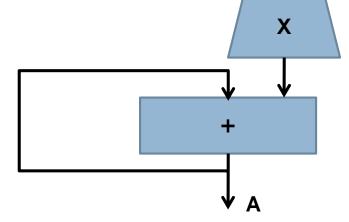

## Central Processing Unit (CPU) (4)

- Arithmetic shift: when shifting to the right, the leftmost bit (the vacant MSB) is filled with the value of the previous MSB (sign)
  - Ideal for signed two's complement binary rumbers Help
- □ Logical shift: The vacantips: a/ponecoderecom
- the logical and arithmetic left-shifts are exactly the same
   Add WeChat powcoder
- Ideal for unsigned binary numbers
- □ Circular shift or bit rotation: In this operation, the bits are "rotated" as if the left and right ends of the register were joined. The value that is shifted in on the right during a left-shift is whatever value was shifted out on the left, and vice versa

#### Think Pair Share

Apply logical and circular shift to the following register:

Assignment Project Exam Help

https://powcoder.com

Add WeChat powcoder

## Control Unit (CU) (1)

- > A Control Unit is the unit that handles the central work of the computer
- > There are two registers in the control unit
  - The instruction register (IR) contains the instruction that is being executed ASSIGNMENT Project Exam Help
     The program counter (PC) contains the address of the instruction being
  - The program counter (PC) contains the address of the instruction being executed

https://powcoder.com

- The CU is responsible of executing the right instruction and organizes the other function units appropriately
- In every clock cycle the CU:
  - Loads from memory the next instruction to be executed PC register contains that address
  - The instruction is stored into IR and is decoded
  - The CU sends the appropriate signals to the ALU, memory, I/O devices in order to execute the instruction
  - The CU increments PC to show next instrution


#### Control Unit (CU) (2)

- Program is stored in memory
  - machine language instructions are in binary format

#### Assignment Project Exam Help

- The task of the control unit is to execute programs by repeatedly:
  - Fetch from memor https://powcodencomexecuted

  - Decode it, that is, determine what is to be done Add WeChat powcoder Execute it by issuing the appropriate signals to the ALU, memory, and I/O subsystems
  - Continues until the program terminates (HALT instruction)

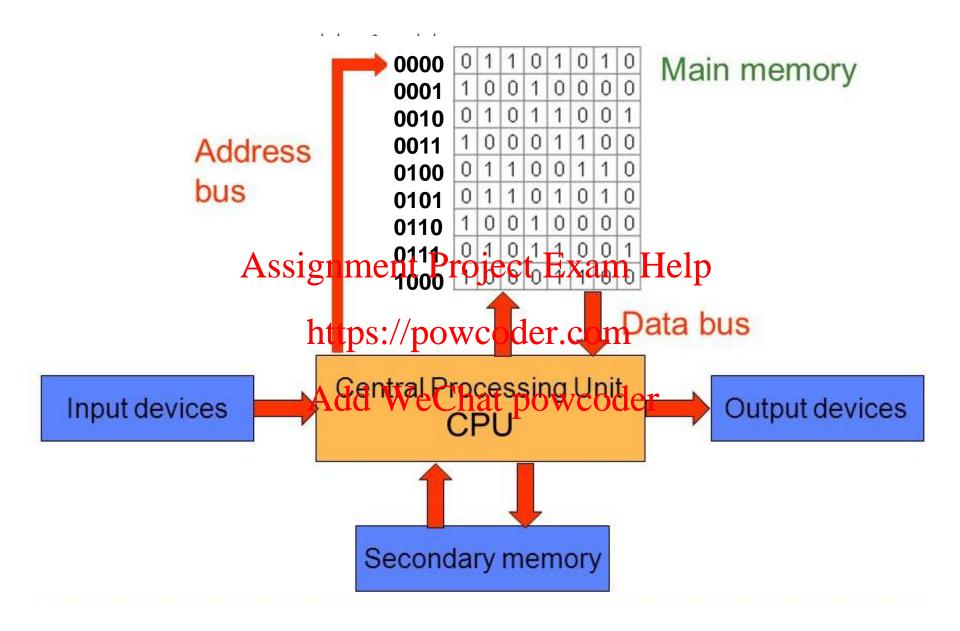

#### Main Memory

- Computer memory consists of a linear array of addressable storage cells that are similar to registers
- □ Both program and data are stored into memory
- Assignment Project Exam Help

  Load/store operations are performed on both instructions and data

#### https://powcoder.com

- Consists of many memory cells (storage units) of a fixed size
  - Each cell has an adaress assectated type wooder
- All accesses to memory are to a specified address
- The time it takes to fetch/store a word is the same for all words

### Main Memory - Address Space

- To access a word in memory requires an identifier. Although programmers use a name to identify a word (or a collection of words), at the hardware level each word is identified by an address Assignment Project Exam Help
   The total number of uniquely identifiable locations in memory is called
- The total number of uniquely identifiable locations in memory is called the address space. Fatters and a word size of 1 byte has an address space that ranges from 0 to 65,535

  Add WeChat powcoder
- If memory contains N words, then log<sub>2</sub>N bits are needed to address all words in memory
- If the memory address space needs N bits, then there are 2<sup>N</sup> words in memory

#### Think Pair Share

1. A computer has 32 MB (megabytes) of memory. How many bits are needed to address any single byte in memory?

Assignment Project Exam Help
The memory address space is 32 MB, or 2<sup>25</sup> (2<sup>5</sup> × 2<sup>20</sup>). This means that we need log<sub>2</sub> 2<sup>25</sup>, or 25 bits, to address each byte coder.com


2. If main memory is of Add by Cade Powe ade by bytes how many bits do we need to address any single word in memory?

The memory address space is 64 MB, which means  $2^{26}$ . However, each word is two ( $2^{1}$ ) bytes, which means that we have  $2^{25}$  words. Note that (Mem.size=number.words x word.size)

This means that we need  $\log_2 2^{25}$ , or 25 bits, to address each word

#### How Main Memory and CPU are connected?

- Control Bus sends appropriate signal whether store or load
- Address Bus sends the memory address

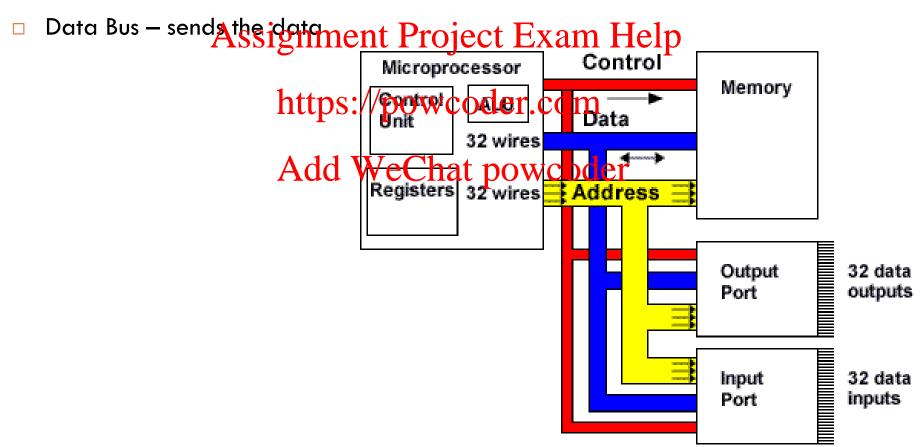

### Buses (1)

Bus: a group of wires that transfer data from one part to another (data, address, control)

#### ✓ Data bus:

Assignment Project Exam Help bi-directional (read/write)

- 8, 16, 32, 64-bit with six pow worksize om

#### ✓ Address bus:


- specifies memory location in RAMYREM When der device to be accessed; monodirectional
- address space: 16-bit wide  $-> 2^{16}$  words=  $64x2^{10} = 64KB$
- 32-bit wide  $-> 2^{32} = 4GB this$  is why in 32-bit PCs we cannot use more than 4Gbyte of RAM

#### ✓ Control bus:

carries commands from the CPU and returns status signals from the devices

## Buses (2)

- How many wires needed for the?
  - A. Data bus?

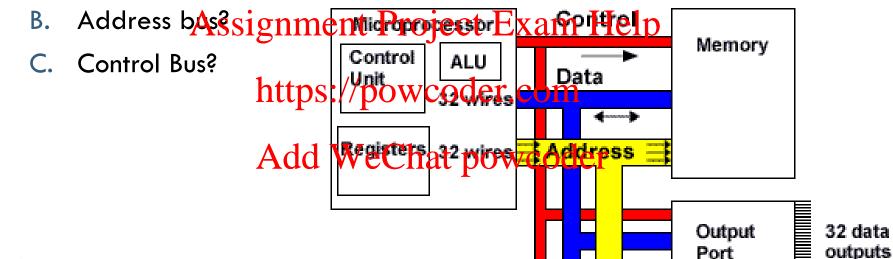

32 data

inputs

Input

Port

- A. As many bits as the memory word contains
- B. As many bits as the memory address contains
- C. 1 bit is enough


#### Think Pair Share

Q: If main memory is of 64Kbyte and every word is of 8 bytes how many wires do we need for the address bus?

Assignment Project Exam Help

https://powcoder.com

Add WeChat powcoder

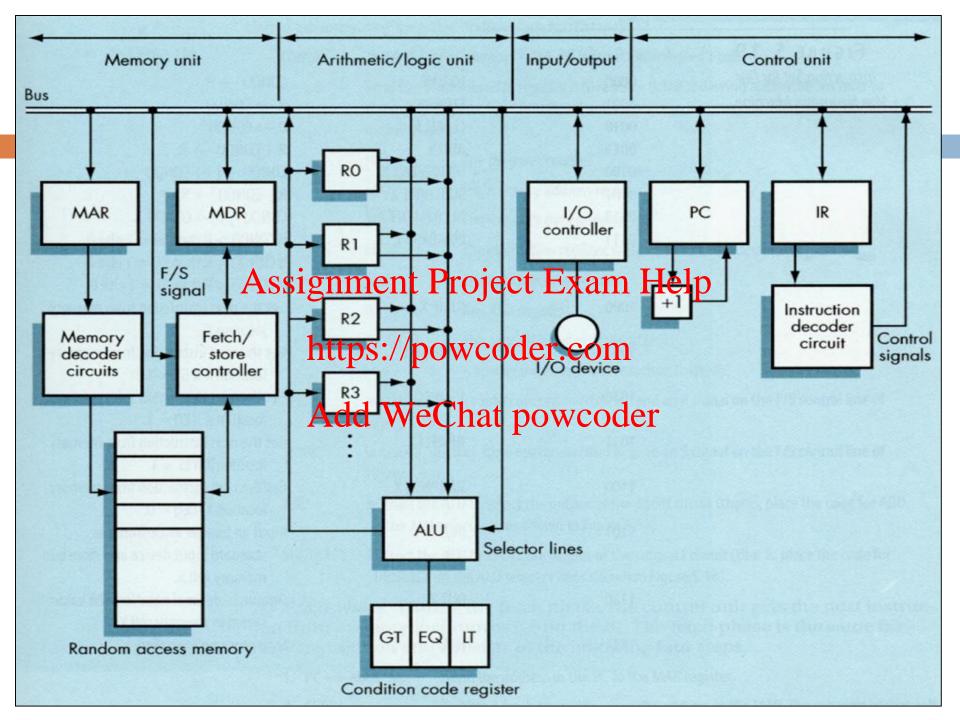

#### Machine Language or Machine Code (1)

- A <u>program</u> consists of a sequence of instructions (in binary)
- EACH instruction specifies both:
  - The operation to perform Project Exam Help
  - The address of the data

https://powcoder.com

- Instructions are stored and processed in machine language--also called microcode
- Like everything else (e.g. like ASCII characters) machine language consists solely of <u>bit patterns</u>

#### Machine Language or Machine Code (2)

- Machine languages consist entirely of binary numbers and are almost impossible for humans to read and write
- Assembly languages have the same structure and set of commands as machine languages, something tending to the same structure and set of commands as machine languages, something tending to the same structure and set of commands as machine languages have the same structure and set of commands as machine languages, something tending tending to the same structure and set of commands as machine languages, something tending tending tending to the same structure and set of commands as machine languages, something tending tend
- https://powcoder.com

  Each type of CPU has its own machine language and assembly language

  Add WeChat powcoder
  - an assembly language program written for one type of CPU won't run on another
- In the early days of programming, all programs were written in assembly language
- Now, most programs are written in a high-level language such as Java, Python, C/C++
- Programmers still use assembly language when speed is essential

#### Machine Language or Machine Code (2)

- A machine language instruction consists of:
  - Operation code, specifying which operation to perform
  - and the operation works

Opcode (8 bits)

https://powcoder.com
Address 1 (16 bits)

Address 2 (16 bits)

Address 2 (16 bits)

- □ **The above could be (ADD 99, 100)**, assuming that the opcode for ADD instruction is 9
  - Add content of memory locations 99 and 100, and store back in memory location 99)
- Instructions are given to the processor in the form of a program ... so it knows what circuits to use, in what order; and from where the data should be read or to where it should be stored

### Assembly basic instructions

Depending on the target CPU, different assembly instructions exist

#### Instr: **Meaning:** Assignment Project Exam Help Add R1 and R2 and store the result in R1 Store OxA2B, R1 ADD R1, R2 SUB R1, R2, R3 Phttps://powcoder.com MUL R1, R2 RA-del WeChat powcoder **DIV R1, R2** INC R4 R4 = R4 + 1**HALT** Stops program execution CMP R1, 10 If R1 = 10, then set the register EQ = 1, else EQ = 0JMP EQ S1 Load next instruction from memory location S1, if EQ = 1

 Assemblers translate instructions that are comprehensible to humans into the machine language that is comprehensible to computers

- Easily understandable
- Portable run on just any computer
- Debugging of the code is easy

  ASSIGNMENT Project Exam Help

  High level languages like java, C++, etc. have 
  One to one or one to a few relationship one to many relationship with assembly, i.e., one statement of java expands no many wcoder.com
  - assembly language commands
- High level language is always converted hat powcoder into assembly language
- The high level language programmer doesn't need to know the HW details


Runs only on the target CPU only


- The assembly language programmer must know about the hardware such as registers, etc.
- Assembly language can control the machine code better
- Assembly is much faster

Hard to understand

## High level language VS Assembly language



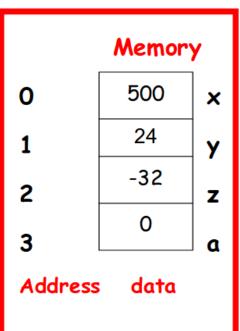

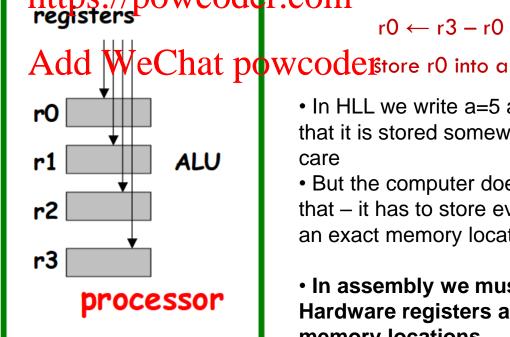

- In HLL we write a=5 and we assume that it is stored somewhere - we don't care
- But the computer does not work like that – it has to store every variable in an exact memory location
- In assembly we must specify the Hardware registers as well as the memory locations

#### **Program Execution**

1. PC is set to the address where the first program instruction is stored in memory

#### 2. Repeat until HALT instruction or fatal error

- 2a. Fetch instruction
  - · Fetches instruction (from memory) at address given by PC; copies it into storage register https://powcoder.com
- 2b. Decode instruction
  - Copies op code into IR and operands into address registers
     Interprets instruction

  - ALU is invoked

#### 2c. Execute instruction

- Execution cycles vary, depending on the op code (instruction), e.g., Load copies data from memory to ALU register, ADD adds values inside the ALU
- 2d. Increment PC by one, now contains the memory address of the next instruction that will be fetched


**Load R1, 0x2F22** 


Load R2, 0x2F24


Assignment Project Exam Help


Store 0x2F24, R3 https://powcoder.com

Add WeChat powcoder

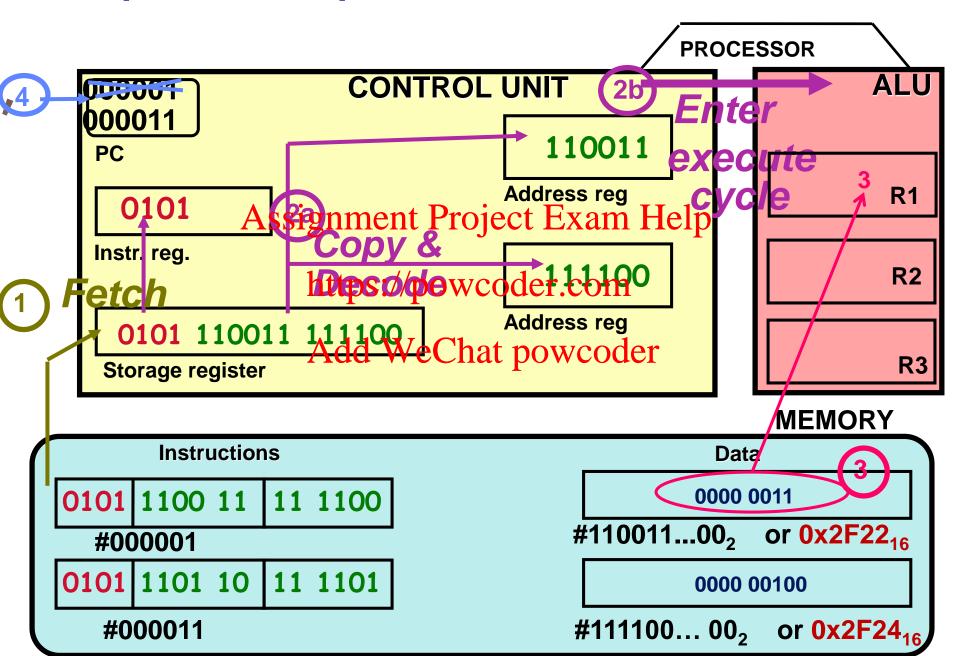

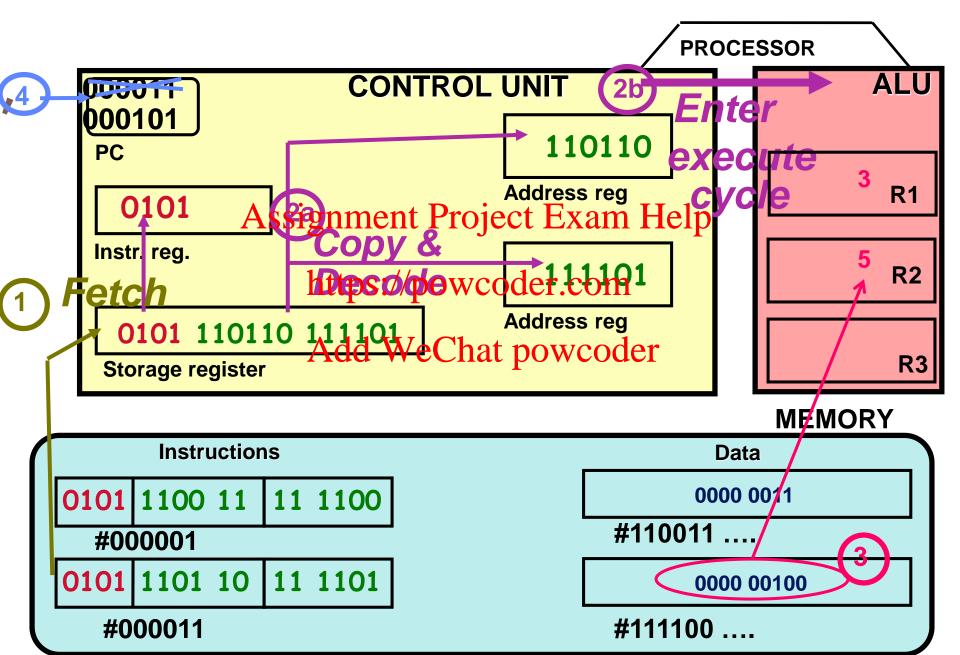

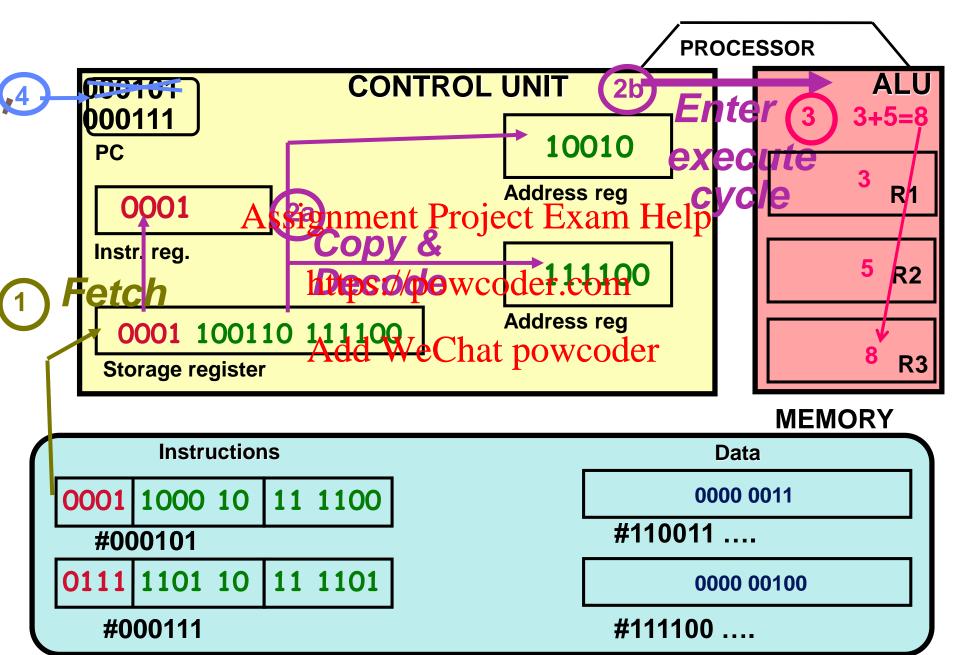

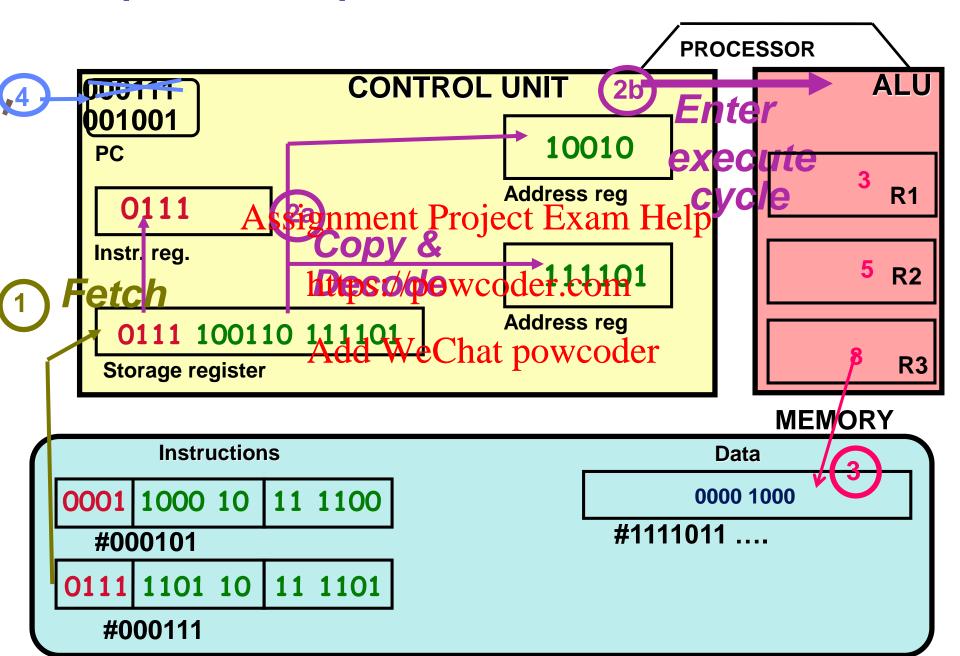


#### Think Pair Share

Given the following high level code, first translate it into assembly pseudo code and second explain the CPU steps as before. Consider that a=0, x=2, y=3, z=4. Assignment Project Exam Help

https://poweoder.com

Add WeChat powcoder

#### Think Pair Share

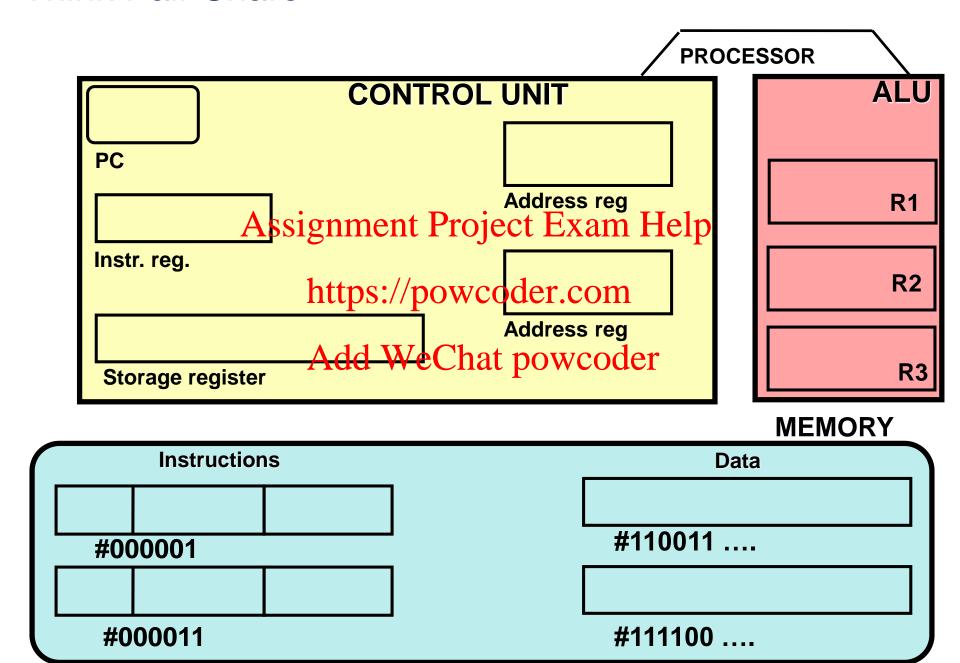

#### Memory Types (1)

- Random Access Memory (RAM) Alternatively referred to as main memory
  - Static RAM (SRAM) nment Project Exam Help
  - Dynamic RAM (DRAM)
- Read Only Memory (Rtops://powcoder.com
  - Programmable read-only memory (PROM) Powcoder
  - Erasable programmable read-only memory (EPROM)
  - Electrically erasable programmable read-only memory (EEPROM)
- RAM loses any information it is holding when the power is turned off
- ROM is meant for permanent storage, while RAM is for temporary storage


## Memory Types (2)

- A good example of ROM is the computer BIOS, a PROM chip that stores the programming needed to begin the deiticl computer start up process
- Writing data to a ROM chip is a much slower process than writing it to a
   RAM chip
   Add WeChat powcoder
- A RAM chip can store multiple gigabytes (GB) of data, ranging from 1
   GB to 256 GB per chip. A ROM chip stores several megabytes (MB) of data, typically 4 MB or 8 MB per chip

## Cache Memory

- Cache is a high-speed static random access memory (SRAM) that a CPU can access more quickly than it can access regular random access memory (RAM)
- This memory is typically integrated directly into the CPU chip
   Assignment Project Exam Help
   Cache memory is faster than main memory, but slower than the CPU and its
- Cache memory is faster than main memory, but slower than the CPU and its registers
   https://powcoder.com
- Cache memory, which is normally small in size, is placed between the CPU and main memory
   Add WeChat powcoder
- The purpose of cache memory is to store program instructions and data that are used repeatedly - The computer processor can access this information quickly from the cache rather than having to get it from computer's main memory
- Fast access to these instructions increases the overall speed of the program

#### Memory Hierarchy

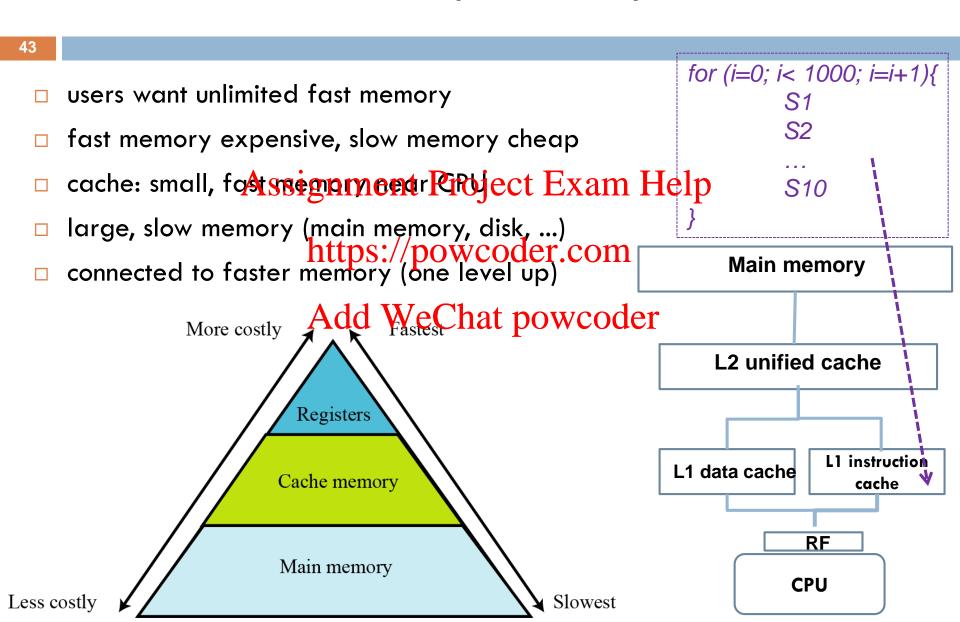

#### Secondary memory (1)

- Secondary memory is where programs and data are kept on a longterm basis
  - Common secondary storage plevices are the hard disk and optical disks
- The hard disk has enormous standered to main memory

#### Add WeChat powcoder

- The hard disk is used for long-term storage of programs and data
- Data and programs on the hard disk are organized into files
  - A file is a collection of data on the disk that has a name

#### Secondary memory (1)

- > Running programs are always located in main memory
- > When creating a new file and type something it is stored into main memory; When you "save" your document the pharacters are copied to a file on the hard disk
- > A permanent copy will pass of permanent copy will pass o

## Main Memory dd WeCh Hard Diseder

Fast Slow

Expensive Cheap

Low Capacity High Capacity

Question: Do you think that data transfer from the network is slower or faster than from main memory?

**Answer:** Data transfers from the network are much slower than from main memory

# Questions?

Assignment Project Exam Help

https://powcoder.com

Add WeChat powcoder