## S12CPUV2

## Reference Manual



## S12CPUV2

## Reference Manual

To provide the most up-to-date information, the revision of our documents on the World Wide Web will be the most current. Your printed copy may be an earlier revision. To verify you have the latest information available, refer to:

http://www.freescale.com

The following revision history table summarizes changes contained in this document.

## Revision History

Revision Number	Date	Summary of Changes	
3.0	April, 2002	Incorporated information covering HCS12 Family of 16-bit MCUs throughout the book.	
4.0	March, 2006	Reformatted to Freescale publication standards. Corrected mistake in ANDCC/TAP descriptions (Instruction Glossary). Corrected mistake in MEM description (Instruction Glossary).	

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. © Freescale Semiconductor, Inc., 2005. All rights reserved.

## Reference Manual — \$12CPUV2

## **List of Sections**

Table of Contents
Section 1. Introduction
Section 2. Overview
Section 3. Addressing Modes
Section 4. Instruction Queue
Section 5. Instruction Set Overview55
Section 6. Instruction Glossary
Section 7. Exception Processing
Section 8. Instruction Queue
Section 9. Fuzzy Logic Support
Appendix A. Instruction Reference
Appendix B. M68HC11 to CPU12 Upgrade Path
Appendix C. High-Level Language Support425
Index

## S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## Reference Manual — S12CPUV2

## **Table of Contents**

## Section 1. Introduction

1.2	Features
1.3	Symbols and Notation
1.3.1	Abbreviations for System Resources
1.3.2	Memory and Addressing
1.3.3	Operators
1.3.4	Definitions
	Section 2. Overview
2.1	Introduction
2.2	Programming Model
2.2.1	Accumulators
2.2.2	Index Registers22
2.2.3	Stack Pointer22
2.2.4	Program Counter23
2.2.5	Condition Code Register
2.2.5.	S Control Bit24
2.2.5.2	2 X Mask Bit25
2.2.5.3	B H Status Bit
2.2.5.4	
2.2.5.5	5 N Status Bit
2.2.5.6	2 010100 211111111111111111111111111111
2.2.5.7	7 V Status Bit
2.2.5.8	3 C Status Bit
2.3	Data Types
2.4	Memory Organization
2.5	Instruction Queue

## S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## S12CPUV2 Reference Manual, Rev. 4.0

Section 3. Addressing Modes 3.1 Introduction......

3.2	Mode Summary	.2
3.3	Effective Address	.2
3.4	Inherent Addressing Mode	.3
3.5	Immediate Addressing Mode	.3
3.6	Direct Addressing Mode	.3
3.7	Extended Addressing Mode	.3
3.8	Relative Addressing Mode	.3
3.9	Indexed Addressing Modes	.3
3.9.1	5-Bit Constant Offset Indexed Addressing	.3
3.9.2	9-Bit Constant Offset Indexed Addressing	.3
3.9.3	16-Bit Constant Offset Indexed Addressing	.3
3.9.4	16-Bit Constant Indirect Indexed Addressing	.3
3.9.5	Auto Pre/Post Decrement/Increment Indexed Addressing	
3.9.6	Accumulator Offset Indexed Addressing	
3.9.7	Accumulator D Indirect Indexed Addressing	.4
3.10	Instructions Using Multiple Modes	.4
3.10.1	Move Instructions	.4
3.10.2	Bit Manipulation Instructions	.4
3.11	Addressing More than 64 Kbytes	.4
	Section 4. Instruction Queue	
4.1	Introduction	
4.2	Queue Description	
4.2.1	Original M68HC12 Queue Implementation	.4
4.2.2	HCS12 Queue Implementation	.4
4.3	Data Movement in the Queue	
4.3.1	No Movement	
4.3.2	Latch Data from Bus (Applies Only to the M68HC12 Queue)	
4.3.3	Advance and Load from Data Bus	
4.3.4	Advance and Load from Buffer (Applies Only to M68HC12 Queue) .	
4.4	Changes in Execution Flow	.4
4.4.1	Exceptions	
4.4.2	Subroutines	
4.4.3	Branches	.5

4.4.3.1	
4.4.3.2 4.4.3.3	3 3 4 4 4
4.4.3.4	
4.4.4	Jumps5
	Section 5. Instruction Set Overview
5.1	Introduction
5.2	Instruction Set Description
5.3	Load and Store Instructions
	Transfer and Exchange Instructions
5.5	Move Instructions
5.6	Addition and Subtraction Instructions
5.7	Binary-Coded Decimal Instructions
5.8	Decrement and Increment Instructions
5.9	Compare and Test Instructions
5.10	Boolean Logic Instructions
5.11	Clear, Complement, and Negate Instructions6
5.12	Multiplication and Division Instructions
5.13	Bit Test and Manipulation Instructions
5.14	Shift and Rotate Instructions6
5.15	Fuzzy Logic Instructions
5.15.1	, , , , , , , , , , , , , , , , , , , ,
5.15.2 5.15.3	, , , , , , , , , , , , , , , , , , , ,
5.16	Maximum and Minimum Instructions
5.17	
	Multiply and Accumulate Instruction
	Table Interpolation Instructions
5.19 5.19.1	Branch Instructions
5.19.2	
5.19.3	
5.20	Loop Primitive Instructions
5.21	Jump and Subroutine Instructions
Freescale Semiconductor	S12CPUV2 Reference Manual, Rev. 4.0
Troopalo Componadolo	
7.8	Exception Processing Flow
7.8.1	Vector Fetch
7.8.2	Reset Exception Processing
7.8.3	Interrupt and Unimplemented Opcode Trap Exception Processing32
	Section 8. Instruction Queue
8.1	Introduction

7.6 Exception Flocessing Flow	
7.8.1 Vector Fetch	
7.8.2 Reset Exception Processing	
7.8.3 Interrupt and Unimplemented Opcode Trap Exception Processing	320
Section 8. Instruction Queue	
8.1 Introduction	323
8.2 External Reconstruction of the Queue	323
8.3 Instruction Queue Status Signals	324
8.3.1 HCS12 Timing Detail	
8.3.2 M68HC12 Timing Detail	325
8.3.3 Null (Code 0:0)	
8.3.4 LAT — Latch Data from Bus (Code 0:1)	
8.3.5 ALD — Advance and Load from Data Bus (Code 1:0)	
8.3.6 ALL — Advance and Load from Latch (Code 1:1)	
8.3.7 INT — Interrupt Sequence Start (Code 0:1)	
8.3.8 SEV — Start Instruction on Even Address (Code 1:0)	
8.3.9 SOD — Start Instruction on Odd Address (Code 1:1)	
8.4 Queue Reconstruction (for HCS12)	328
8.4.1 Queue Reconstruction Registers (for HCS12)	
8.4.1.1 fetch_add Register	
8.4.1.2 st1_add, st1_dat Registers	
8.4.1.3 st2_add, st2_dat Registers	
8.4.2 Reconstruction Algorithm (for HCS12)	
8.5 Queue Reconstruction (for M68HC12)	
8.5.1.1 in_add, in_dat Registers	
8.5.1.2 fetch add, fetch dat Registers.	
8.5.1.3 st1_add, st1_dat Registers.	
8.5.1.4 st2_add, st2_dat Registers	
8.5.2 Reconstruction Algorithm (for M68HC12)	
8.5.2.1 LAT Decoding	
8.5.2.2 ALD Decoding	333
8.5.2.3 ALL Decoding	333
8.6 Instruction Tagging	335

## Section 9. Fuzzy Logic Support

S12CPUV2 Reference Manual, Rev. 4.0

5.22	Interrupt Instructions
5.23	Index Manipulation Instructions81
5.24	Stacking Instructions82
5.25	Pointer and Index Calculation Instructions
5.26	Condition Code Instructions
5.27	Stop and Wait Instructions
5.28	Background Mode and Null Operations
	Section 6. Instruction Glossary
6.1	Introduction
6.2	Glossary Information
6.3	Condition Code Changes
6.4	Object Code Notation
6.5	Source Forms
6.6	Cycle-by-Cycle Execution94
6.7	Glossary
	Section 7. Exception Processing
7.1	Introduction
7.2	Types of Exceptions
7.3	Exception Priority
7.4	Resets
7.4.1	Power-On Reset
7.4.2	External Reset
7.4.3	COP Reset         .314           Clock Monitor Reset         .314
7.5	Interrupts
7.5.1	Non-Maskable Interrupt Request (XIRQ)
7.5.2	Maskable Interrupts
7.5.3	Interrupt Recognition
7.5.4	External Interrupts
7.5.5	Return-from-Interrupt Instruction (RTI)317
7.6	Unimplemented Opcode Trap317
7.7	Software Interrupt Instruction (SWI)

## S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

9.2       Fuzzy Logic Basics       33         9.2.1       Fuzzification (MEM)       34         9.2.2       Rule Evaluation (REV and REVW)       34         9.2.3       Defuzzification (WAV)       34         9.3       Example Inference Kernel       34         9.4       MEM Instruction Details       34         9.4.1       Membership Function Definitions       34         9.4.2       Abnormal Membership Function Case 1       35         9.4.2.1       Abnormal Membership Function Case 2       35         9.4.2.2       Abnormal Membership Function Case 3       35         9.4.2.3       Abnormal Membership Function Case 3       35         9.5       REV and REVW Instruction Details       35         9.5.1       Unweighted Rule Evaluation (REV)       35         9.5.1.1       Set Up Prior to Executing REV       35         9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV       35         9.5.2.1       Set Up Prior to Executing REVW       35         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW       36         9.6.1       Set Up Prior to Executing WAV       36		
9.2.1       Fuzzification (MEM)       .34         9.2.2       Rule Evaluation (REV and REVW)       .34         9.2.3       Defuzzification (WAV)       .34         9.3       Example Inference Kernel       .34         9.4       MEM Instruction Details       .34         9.4.1       Membership Function Definitions       .34         9.4.2       Abnormal Membership Function Case 1       .35         9.4.2.1       Abnormal Membership Function Case 2       .35         9.4.2.2       Abnormal Membership Function Case 2       .35         9.4.2.3       Abnormal Membership Function Case 3       .35         9.5       REV and REVW Instruction Details       .35         9.5.1       Unweighted Rule Evaluation (REV)       .35         9.5.1.1       Set Up Prior to Executing REV       .35         9.5.1.2       Interrupt Details       .35         9.5.2.1       Set Up Prior to Executing REVW       .35         9.5.2.2       Interrupt Details       .36         9.5.2.3       Cycle-by-Cycle Details for REVW       .36         9.6.1       Set Up Prior to Executing WAV       .36         9.6.2       WAV Instruction Details       .36         9.6.3       Cycle-by-Cycle Details for WAV	9.1	Introduction
9.2.2       Rule Evaluation (REV and REVW)       .34         9.2.3       Defuzzification (WAV)       .34         9.3       Example Inference Kernel       .34         9.4       MEM Instruction Details       .34         9.4.1       Membership Function Definitions       .34         9.4.2       Abnormal Membership Function Case 1       .35         9.4.2.1       Abnormal Membership Function Case 2       .35         9.4.2.2       Abnormal Membership Function Case 2       .35         9.4.2.3       Abnormal Membership Function Case 3       .35         9.5       REV and REVW Instruction Details       .35         9.5.1       Unweighted Rule Evaluation (REV)       .35         9.5.1.1       Set Up Prior to Executing REV       .35         9.5.1.2       Interrupt Details       .35         9.5.1.3       Cycle-by-Cycle Details for REV       .35         9.5.2.4       Weighted Rule Evaluation (REVW)       .35         9.5.2.2       Interrupt Details       .36         9.5.2.2.       Interrupt Details       .36         9.5.2.3       Cycle-by-Cycle Details for REVW       .36         9.6.1       Set Up Prior to Executing WAV       .36         9.6.2       WAV Instruction Deta	9.2	Fuzzy Logic Basics
9.2.3 Defuzzification (WAV). 34 9.3 Example Inference Kernel. 34 9.4 MEM Instruction Details 34 9.4.1 Membership Function Definitions 34 9.4.2 Abnormal Membership Function Definitions 34 9.4.2.1 Abnormal Membership Function Case 1 35 9.4.2.2 Abnormal Membership Function Case 2 35 9.4.2.3 Abnormal Membership Function Case 3 35 9.5 REV and REVW Instruction Details 35 9.5.1 Unweighted Rule Evaluation (REV) 35 9.5.1.1 Set Up Prior to Executing REV 35 9.5.1.2 Interrupt Details 35 9.5.1.3 Cycle-by-Cycle Details for REV 35 9.5.2 Weighted Rule Evaluation (REWW) 35 9.5.2.1 Set Up Prior to Executing REVW 35 9.5.2.2 Interrupt Details 36 9.5.2.3 Cycle-by-Cycle Details for REVW 36 9.5.2.1 Set Up Prior to Executing REVW 36 9.5.2.2 Interrupt Details 36 9.5.2.3 Cycle-by-Cycle Details for REVW 36 9.6.4 WAV Instruction Details 36 9.6.5 Set Up Prior to Executing WAV 36 9.6.2 WAV Interrupt Details 36 9.6.3 Cycle-by-Cycle Details for WAV and wavr 36 9.7 Custom Fuzzy Logic Programming 36 9.7.1 Fuzzification Variations 37 9.7.3 Defuzzification Variations 37  Appendix A. Instruction Reference A.1 Introduction 37		Fuzzification (MEM)
9.3       Example Inference Kernel.       34         9.4       MEM Instruction Details       34         9.4.1       Membership Function Definitions       34         9.4.2       Abnormal Membership Function Case 1       35         9.4.2.1       Abnormal Membership Function Case 2       35         9.4.2.2       Abnormal Membership Function Case 2       35         9.4.2.3       Abnormal Membership Function Case 3       35         9.5       REV and REVW Instruction Details       35         9.5.1       Unweighted Rule Evaluation (REV)       35         9.5.1.1       Set Up Prior to Executing REV       35         9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV       35         9.5.2       Weighted Rule Evaluation (REVW)       35         9.5.2.1       Set Up Prior to Executing REVW       36         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW       36         9.6       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Interrupt Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wa		
9.4       MEM Instruction Details       34         9.4.1       Membership Function Definitions       34         9.4.2       Abnormal Membership Function Case 1       35         9.4.2.1       Abnormal Membership Function Case 1       35         9.4.2.2       Abnormal Membership Function Case 2       35         9.4.2.3       Abnormal Membership Function Case 3       35         9.5       REV and REVW Instruction Details       35         9.5.1       Unweighted Rule Evaluation (REV)       35         9.5.1.1       Set Up Prior to Executing REV       35         9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV       35         9.5.2.1       Set Up Prior to Executing REVW       35         9.5.2.2       Interrupt Details       36         9.5.2.2.3       Cycle-by-Cycle Details for REVW       36         9.5.2.3       Cycle-by-Cycle Details for REVW       36         9.6       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Interrupt Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7.1       Fuzzification Var		
9.4.1       Membership Function Definitions       34         9.4.2       Abnormal Membership Function Definitions       34         9.4.2.1       Abnormal Membership Function Case 1       35         9.4.2.2       Abnormal Membership Function Case 2       35         9.4.2.3       Abnormal Membership Function Case 3       35         9.5       REV and REVW Instruction Details       35         9.5.1       Unweighted Rule Evaluation (REV)       35         9.5.1.1       Set Up Prior to Executing REV       35         9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV       35         9.5.2.1       Set Up Prior to Executing REVW       35         9.5.2.2       Interrupt Details       36         9.5.2.2.3       Cycle-by-Cycle Details for REVW       36         9.5.2.2.3       Cycle-by-Cycle Details for REVW       36         9.6.4       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Interrupt Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7.1       Fuzzification Variations       37         9.7.2       Rule		•
9.4.2. Abnormal Membership Function Definitions.       34         9.4.2.1 Abnormal Membership Function Case 1       35         9.4.2.2. Abnormal Membership Function Case 2       35         9.4.2.3 Abnormal Membership Function Case 3       35         9.5 REV and REVW Instruction Details       35         9.5.1 Unweighted Rule Evaluation (REV)       35         9.5.1.1 Set Up Prior to Executing REV       35         9.5.1.2 Interrupt Details       36         9.5.1.3 Cycle-by-Cycle Details for REV       35         9.5.2.1 Set Up Prior to Executing REVW)       35         9.5.2.2 Interrupt Details       36         9.5.2.3 Cycle-by-Cycle Details for REVW       36         9.5.2.3 Cycle-by-Cycle Details for REVW       36         9.6.1 Set Up Prior to Executing WAV       36         9.6.2 WAV Instruction Details       36         9.6.3 Cycle-by-Cycle Details for WAV and wavr       36         9.6.3 Cycle-by-Cycle Details for WAV and wavr       36         9.7.1 Fuzzification Variations       37         9.7.2 Rule Evaluation Variations       37         9.7.3 Defuzzification Variations       37         Appendix A. Instruction Reference         A.1 Introduction       37		
9.4.2.1       Abnormal Membership Function Case 1       36         9.4.2.2       Abnormal Membership Function Case 2       35         9.4.2.3       Abnormal Membership Function Case 3       35         9.5       REV and REVW Instruction Details       35         9.5.1       Unweighted Rule Evaluation (REV)       35         9.5.1.1       Set Up Prior to Executing REV       35         9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV       35         9.5.2       Weighted Rule Evaluation (REVW)       35         9.5.2.1       Set Up Prior to Executing REVW       36         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7.1       Fuzzification Variations       37         9.7.2       Rule Evaluation Variations       37         9.7.2       Rule Evaluation Variations       37         9.7.3       Defuzz		
9.4.2.2       Abnormal Membership Function Case 2       35         9.4.2.3       Abnormal Membership Function Case 3       35         9.5       REV and REVW Instruction Details       35         9.5.1       Unweighted Rule Evaluation (REV)       35         9.5.1.1       Set Up Prior to Executing REV       35         9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV       35         9.5.2.1       Set Up Prior to Executing REVW       35         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Instruction Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7       Custom Fuzzy Logic Programming       36         9.7.1       Fuzzification Variations       37         9.7.2       Rule Evaluation Variations       37         9.7.3       Defuzzification Variations       37         Appendix A. Instruction Reference          A.1       Introduction       37 <td></td> <td>•</td>		•
9.4.2.3       Abnormal Membership Function Case 3       35         9.5       REV and REVW Instruction Details       35         9.5.1       Unweighted Rule Evaluation (REV)       35         9.5.1.1       Set Up Prior to Executing REV       35         9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV       35         9.5.2       Weighted Rule Evaluation (REVW)       35         9.5.2.1       Set Up Prior to Executing REVW       36         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW       36         9.6       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Interrupt Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7.1       Fuzzification Variations       36         9.7.2       Rule Evaluation Variations       36         9.7.3       Defuzzification Variations       37         9.7.3       Defuzzification Variations       37         9.7.3       Introduction       37          Appendix A. Instruction Reference          A.1		•
9.5.1       Unweighted Rule Evaluation (REV)       35         9.5.1.1       Set Up Prior to Executing REV.       35         9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV.       35         9.5.2.1       Set Up Prior to Executing REVW.       35         9.5.2.2       Interrupt Details.       36         9.5.2.3       Cycle-by-Cycle Details for REVW.       36         9.6       WAV Instruction Details.       36         9.6.1       Set Up Prior to Executing WAV.       36         9.6.2       WAV Interrupt Details.       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr.       36         9.7       Custom Fuzzy Logic Programming.       36         9.7.1       Fuzzification Variations.       36         9.7.2       Rule Evaluation Variations.       37         9.7.3       Defuzzification Variations.       37         Appendix A. Instruction Reference         A.1       Introduction.       37	9.4.2.	Abnormal Membership Function Case 3
9.5.1.1       Set Up Prior to Executing REV.       35         9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV.       35         9.5.2       Weighted Rule Evaluation (REVW)       35         9.5.2.1       Set Up Prior to Executing REVW.       36         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW.       36         9.6       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV.       36         9.6.2       WAV Interrupt Details.       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr.       36         9.7       Custom Fuzzy Logic Programming.       36         9.7.1       Fuzzification Variations.       36         9.7.2       Rule Evaluation Variations.       37         9.7.3       Defuzzification Variations.       37         Appendix A. Instruction Reference         A.1       Introduction.       37	9.5	REV and REVW Instruction Details
9.5.1.2       Interrupt Details       35         9.5.1.3       Cycle-by-Cycle Details for REV       35         9.5.2       Weighted Rule Evaluation (REVW)       35         9.5.2.1       Set Up Prior to Executing REVW       36         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW       36         9.6       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Interrupt Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7       Custom Fuzzy Logic Programming       36         9.7.1       Fuzzification Variations       36         9.7.2       Rule Evaluation Variations       37         9.7.3       Defuzzification Variations       37         Appendix A. Instruction Reference         A.1       Introduction       37	9.5.1	Unweighted Rule Evaluation (REV)
9.5.1.3       Cycle-by-Cycle Details for REV       35         9.5.2       Weighted Rule Evaluation (REVW)       35         9.5.2.1       Set Up Prior to Executing REVW       35         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW       36         9.6       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Interrupt Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7       Custom Fuzzy Logic Programming       36         9.7.1       Fuzzification Variations       36         9.7.2       Rule Evaluation Variations       37         Appendix A. Instruction Reference         A.1       Introduction       37		
9.5.2       Weighted Rule Evaluation (REVW)       35         9.5.2.1       Set Up Prior to Executing REVW       35         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW       36         9.6       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Interrupt Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7       Custom Fuzzy Logic Programming       36         9.7.1       Fuzzification Variations       36         9.7.2       Rule Evaluation Variations       37         9.7.3       Defuzzification Variations       37         Appendix A. Instruction Reference         A.1       Introduction       37		
9.5.2.1       Set Up Prior to Executing REVW.       35         9.5.2.2       Interrupt Details       36         9.5.2.3       Cycle-by-Cycle Details for REVW.       36         9.6       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV.       36         9.6.2       WAV Interrupt Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr.       36         9.7       Custom Fuzzy Logic Programming.       36         9.7.1       Fuzzification Variations.       36         9.7.2       Rule Evaluation Variations.       37         9.7.3       Defuzzification Variations.       37         Appendix A. Instruction Reference         A.1       Introduction.       37		
9.5.2.3         Cycle-by-Cycle Details for REVW         36           9.6         WAV Instruction Details         36           9.6.1         Set Up Prior to Executing WAV         36           9.6.2         WAV Interrupt Details         36           9.6.3         Cycle-by-Cycle Details for WAV and wavr         36           9.7         Custom Fuzzy Logic Programming         36           9.7.1         Fuzzification Variations         36           9.7.2         Rule Evaluation Variations         37           9.7.3         Defuzzification Variations         37           Appendix A. Instruction Reference           A.1         Introduction         37		
9.6       WAV Instruction Details       36         9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Interrupt Details       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7       Custom Fuzzy Logic Programming       36         9.7.1       Fuzzification Variations       36         9.7.2       Rule Evaluation Variations       37         9.7.3       Defuzzification Variations       37         Appendix A. Instruction Reference         A.1       Introduction       37	9.5.2.	2 Interrupt Details
9.6.1       Set Up Prior to Executing WAV       36         9.6.2       WAV Interrupt Details.       36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       36         9.7       Custom Fuzzy Logic Programming.       36         9.7.1       Fuzzification Variations.       36         9.7.2       Rule Evaluation Variations.       37         9.7.3       Defuzzification Variations.       37         Appendix A. Instruction Reference         A.1       Introduction.       37	9.5.2.	
9.6.2       WAV Interrupt Details       .36         9.6.3       Cycle-by-Cycle Details for WAV and wavr       .36         9.7       Custom Fuzzy Logic Programming       .36         9.7.1       Fuzzification Variations       .36         9.7.2       Rule Evaluation Variations       .37         9.7.3       Defuzzification Variations       .37         Appendix A. Instruction Reference         A.1       Introduction       .37	9.6	WAV Instruction Details
9.6.3         Cycle-by-Cycle Details for WAV and wavr         .36           9.7         Custom Fuzzy Logic Programming         .36           9.7.1         Fuzzification Variations         .36           9.7.2         Rule Evaluation Variations         .37           9.7.3         Defuzzification Variations         .37           Appendix A. Instruction Reference           A.1         Introduction         .37		,
9.7         Custom Fuzzy Logic Programming.         36           9.7.1         Fuzzification Variations.         36           9.7.2         Rule Evaluation Variations.         37           9.7.3         Defuzzification Variations.         37           Appendix A. Instruction Reference           A.1         Introduction.         37		
9.7.1       Fuzzification Variations       .36         9.7.2       Rule Evaluation Variations       .37         9.7.3       Defuzzification Variations       .37         Appendix A. Instruction Reference         A.1       Introduction       .37		
9.7.2       Rule Evaluation Variations       .37         9.7.3       Defuzzification Variations       .37         Appendix A. Instruction Reference         A.1       Introduction       .37		
9.7.3         Defuzzification Variations         .37           Appendix A. Instruction Reference           A.1         Introduction         .37		
A.1 Introduction	9.7.3	Defuzzification Variations
A.1 Introduction		
		Appendix A. Instruction Reference
A C. Otable and Manager Laurent	A.1	Introduction
A.Z Stack and Memory Layout	A.2	Stack and Memory Layout
A.3 Interrupt Vector Locations	A.3	Interrupt Vector Locations
A.4 Notation Used in Instruction Set Summary	A.4	Notation Used in Instruction Set Summary
A.5 Hexadecimal to Decimal Conversion	A.5	Hexadecimal to Decimal Conversion

A.6	Decimal to Hexadecimal Conversion	.402
	Appendix B. M68HC11 to CPU12 Upgrade Path	
B.1	Introduction	.403
B.2	CPU12 Design Goals	.403
B.3	Source Code Compatibility	.404
B.4	Programmer's Model and Stacking	.407
B.5	True 16-Bit Architecture	
B.5.1	Bus Structures	.407
B.5.2	Instruction Queue	
B.5.3	Stack Function	
B.6 B.6.1	Improved Indexing	
B.6.2	Auto-Increment Indexing	
B.6.3	Accumulator Offset Indexing	
B.6.4	Indirect Indexing	
B.7	Improved Performance	
B.7.1	Reduced Cycle Counts	
B.7.2 B.7.3	Fast Math	
B.8	Additional Functions	
B.8.1	Memory-to-Memory Moves.	
B.8.2	Universal Transfer and Exchange	
B.8.3	Loop Construct	
B.8.4	Long Branches	
B.8.5 B.8.6	Minimum and Maximum Instructions	
B.8.7	Table Lookup and Interpolation	
B.8.8	Extended Bit Manipulation	
B.8.9	Push and Pull D and CCR	.423
B.8.10		
B.8.1	1 Support for Memory Expansion	.424
	Appendix C. High-Level Language Support	
C.1	Introduction	.425
C.2	Data Types	
	~	

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

## Reference Manual — S12CPUV2

## Section 1. Introduction

## 1.1 Introduction

This manual describes the features and operation of the core (central processing unit, or CPU, and development support functions) used in all HCS12 microcontrollers. For reference, information is provided for the M68HC12.

## 1.2 Features

The CPU12 is a high-speed, 16-bit processing unit that has a programming model identical to that of the industry standard M68HC11 central processor unit (CPU). The CPU12 instruction set is a proper superset of the M68HC11 instruction set, and M68HC11 source code is accepted by CPU12 assemblers with no changes.

- Full 16-bit data paths supports efficient arithmetic operation and high-speed math execution
- · Supports instructions with odd byte counts, including many single-byte instructions. This allows much more efficient use of ROM space.
- An instruction queue buffers program information so the CPU has immediate access to at least three bytes of machine code at the start of every instruction.
- · Extensive set of indexed addressing capabilities, including:
  - Using the stack pointer as an indexing register in all indexed
  - Using the program counter as an indexing register in all but auto increment/decrement mode
  - Accumulator offsets using A, B, or D accumulators
  - Automatic index predecrement, preincrement, postdecrement, and postincrement (by -8 to +8)

## S12CPUV2 Reference Manual, Rev. 4.0

C.3	Parameters and Variables
C.3.1	Register Pushes and Pulls
C.3.2	Allocating and Deallocating Stack Space
C.3.3	Frame Pointer
C.4	Increment and Decrement Operators
C.5	Higher Math Functions
C.6	Conditional If Constructs
C.7	Case and Switch Statements
C.8	Pointers
C.9	Function Calls

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

## 1.3 Symbols and Notation

The symbols and notation shown here are used throughout the manual. More specialized notation that applies only to the instruction glossary or instruction set summary are described at the beginning of those sections.

## 1.3.1 Abbreviations for System Resources

 Accumulator A В — Accumulator B D — Double accumulator D (A : B) — Index register X Х - Index register Y Stack pointer SP PC — Program counter

CCR — Condition code register

S — STOP instruction control bit
X — Non-maskable interrupt control bit

H — Half-carry status bit

Maskable interrupt control bit
 N — Negative status bit

Z — Zero status bit
V — Two's complement overflow status bit

Carry/Borrow status bit

## 1.3.2 Memory and Addressing

\$

- 8-bit memory location pointed to by the effective address of the instruction M: M+1 16-bit memory location. Consists of the contents of the location pointed to by the effective address concatenated with the contents of the location at the next higher memory address. The most significant byte is at location M. 32-bit memory location. Consists of the contents of the M~M+3 effective address of the instruction concatenated with  $\mathsf{M}_{(Y)}{\sim}\mathsf{M}_{(Y+3)}$ the contents of the next three higher memory locations. The most significant byte is at location M or M<sub>(Y)</sub>. - Memory locations pointed to by index register X  $M_{(X)}$ - Memory locations pointed to by the stack pointer  $M_{(SP)}$ — Memory locations pointed to by index register Y plus 3 M<sub>(Y+3)</sub> PPAGE Program overlay page (bank) number for extended memory (>64 Kbytes). Page Program overlay page  $X_{\mathsf{H}}$ - High-order byte - Low-order byte  $X_L$ () - Content of register or memory location

## S12CPUV2 Reference Manual, Rev. 4.0

— Hexadecimal value

- Binary value

Freescale Semiconductor

## 1.3.4 Definitions

Logic level 1 is the voltage that corresponds to the true (1) state.

Logic level 0 is the voltage that corresponds to the false (0) state.

Set refers specifically to establishing logic level 1 on a bit or bits.

Cleared refers specifically to establishing logic level 0 on a bit or bits.

Asserted means that a signal is in active logic state. An active low signal changes from logic level 1 to logic level 0 when asserted, and an active high signal changes from logic level 0 to logic level 1.

Negated means that an asserted signal changes logic state. An active low signal changes from logic level 0 to logic level 1 when negated, and an active high signal changes from logic level 1 to logic level 0.

ADDR is the mnemonic for address bus.

DATA is the mnemonic for data bus.

LSB means least significant bit or bits.

MSB means most significant bit or bits.

LSW means least significant word or words.

MSW means most significant word or words.

A specific bit location within a range is referred to by mnemonic and number. For example, A7 is bit 7 of accumulator A.

A range of bit locations is referred to by mnemonic and the numbers that define the range. For example, DATA[15:8] form the high byte of the data hus

## S12CPUV2 Reference Manual, Rev. 4.0

#### 1.3.3 Operators

- + Addition
- - Subtraction
- — Logical AND
- + Logical OR (inclusive)
- ⊕ Logical exclusive OR
- × Multiplication
- Division
- $\overline{\mathrm{M}}$  Negation. One's complement (invert each bit of M)
- : Concatenate

Example: A: B means the 16-bit value formed by concatenating 8-bit accumulator A with 8-bit accumulator B. A is in the high-order position.

→ Transfer

Example: (A)  $\Rightarrow$  M means the content of accumulator A is transferred to memory location M.

⇒ — Exchange

Example:  $D \Leftrightarrow X$  means exchange the contents of D with

those of X.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## Section 2. Overview

#### 2.1 Introduction

This section describes the CPU12 programming model, register set, the data types used, and basic memory organization.

#### 2.2 Programming Model

The CPU12 programming model, shown in Figure 2-1, is the same as that of the M68HC11 CPU. The CPU has two 8-bit general-purpose accumulators (A and B) that can be concatenated into a single 16-bit accumulator (D) for certain instructions. It also has:

- Two index registers (X and Y)
- 16-bit stack pointer (SP)
- 16-bit program counter (PC)
- 8-bit condition code register (CCR)

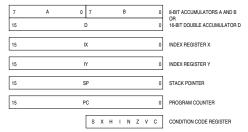


Figure 2-1. Programming Model

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

loads the program counter with the previously stacked return address and execution continues at that address.

When an interrupt occurs, the current instruction finishes execution. The address of the next instruction is calculated and pushed onto the stack, all the CPU registers are pushed onto the stack, the program counter is loaded with the address pointed to by the interrupt vector, and execution continues at that address. The stacked registers are referred to as an interrupt stack frame. The CPU12 stack frame is the same as that of the M68HC11.

## NOTE:

These instructions can be interrupted, and they resume execution once the interrupt has been serviced:

- REV (fuzzy logic rule evaluation)
- REVW (fuzzy logic rule evaluation (weighted))
- WAV (weighted average)

## 2.2.4 Program Counter

The program counter (PC) is a 16-bit register that holds the address of the next instruction to be executed. It is automatically incremented each time an instruction is fetched.

## 2.2.5 Condition Code Register

The condition code register (CCR), named for its five status indicators, contains:

- Five status indicators
- Two interrupt masking bits
- STOP instruction control bit

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 23 24 Freescale Semiconductor

#### 2.2.1 Accumulators

General-purpose 8-bit accumulators A and B are used to hold operands and results of operations. Some instructions treat the combination of these two 8-bit accumulators (A: B) as a 16-bit double accumulator (D).

Most operations can use accumulator A or B interchangeably. However, there are a few exceptions. Add, subtract, and compare instructions involving both A and B (ABA, SBA, and CBA) only operate in one direction, so it is important to make certain the correct operand is in the correct accumulator. The decimal adjust accumulator A (DAA) instruction is used after binary-coded decimal (BCD) arithmetic operations. There is no equivalent instruction to adjust accumulator B.

#### 2.2.2 Index Registers

16-bit index registers X and Y are used for indexed addressing. In the indexed addressing modes, the contents of an index register are added to 5-bit, 9-bit, or 16-bit constants or to the content of an accumulator to form the effective address of the instruction operand. The second index register is especially useful for moves and in cases where operands from two separate tables are used in a calculation.

#### 2.2.3 Stack Pointer

The CPU12 supports an automatic program stack. The stack is used to save system context during subroutine calls and interrupts and can also be used for temporary data storage. The stack can be located anywhere in the standard 64-Kbyte address space and can grow to any size up to the total amount of memory available in the system.

The stack pointer (SP) holds the 16-bit address of the last stack location used. Normally, the SP is initialized by one of the first instructions in an application program. The stack grows downward from the address pointed to by the SP. Each time a byte is pushed onto the stack, the stack pointer is automatically decremented, and each time a byte is pulled from the stack, the stack pointer is automatically incremented.

When a subroutine is called, the address of the instruction following the calling instruction is automatically calculated and pushed onto the stack. Normally, a return-from-subroutine (RTS) or a return-from-call (RTC) instruction is executed at the end of a subroutine. The return instruction

#### S12CPUV2 Reference Manual, Rev. 4.0

22 Freescale Semiconductor

The status bits reflect the results of CPU operation as it executes instructions. The five flags are:

- Half carry (H)
- Negative (N)
- Zero (Z)
- Overflow (V)
- Carry/borrow (C)

The half-carry flag is used only for BCD arithmetic operations. The N, Z, V, and C status bits allow for branching based on the results of a previous operation.

In some architectures, only a few instructions affect condition codes, so that multiple instructions must be executed in order to load and test a variable. Since most CPU12 instructions automatically update condition codes, it is rarely necessary to execute an extra instruction for this purpose. The challenge in using the CPU12 lies in finding instructions that do not alter the condition codes. The most important of these instructions are pushes, pulls, transfers, and exchanges.

It is always a good idea to refer to an instruction set summary (see Appendix A. Instruction Reference) to check which condition codes are affected by a particular instruction.

The following paragraphs describe normal uses of the condition codes. There are other, more specialized uses. For instance, the C status bit is used to enable weighted fuzzy logic rule evaluation. Specialized usages are described in the relevant portions of this manual and in Section 6. Instruction Glossary.

## 2.2.5.1 S Control Bit

Clearing the S bit enables the STOP instruction. Execution of a STOP instruction normally causes the on-chip oscillator to stop. This may be undesirable in some applications. If the CPU encounters a STOP instruction while the S bit is set, it is treated like a no-operation (NOP) instruction and continues to the next instruction. Reset sets the S bit.

#### 2.2.5.2 X Mask Bit

The  $\overline{\text{XIRQ}}$  input is an updated version of the  $\overline{\text{NMI}}$  input found on earlier generations of MCUs. Non-maskable interrupts are typically used to deal with major system failures, such as loss of power. However, enabling non-maskable interrupts before a system is fully powered and initialized can lead to spurious interrupts. The X bit provides a mechanism for enabling non-maskable interrupts after a system is stable.

By default, the X bit is set to 1 during reset. As long as the X bit remains set, interrupt service requests made via the  $\overline{\text{XIRQ}}$  pin are not recognized. An instruction must clear the X bit to enable non-maskable interrupt service requests made via the  $\overline{\text{XIRQ}}$  pin. Once the X bit has been cleared to 0, software cannot reset it to 1 by writing to the CCR. The X bit is not affected by maskable interrupts.

When an  $\overline{\text{XIRQ}}$  interrupt occurs after non-maskable interrupts are enabled, both the X bit and the I bit are set automatically to prevent other interrupts from being recognized during the interrupt service routine. The mask bits are set after the registers are stacked, but before the interrupt vector is fetched.

Normally, a return-from-interrupt (RTI) instruction at the end of the interrupt service routine restores register values that were present before the interrupt occurred. Since the CCR is stacked before the X bit is set, the RTI normally clears the X bit, and thus re-enables non-maskable interrupts. While it is possible to manipulate the stacked value of X so that X is set after an RTI, there is no software method to reset X (and disable  $\overline{\text{XIRQ}}$ ) once X has been cleared.

#### 2.2.5.3 H Status Bit

The H bit indicates a carry from accumulator A bit 3 during an addition operation. The DAA instruction uses the value of the H bit to adjust a result in accumulator A to correct BCD format. H is updated only by the add accumulator A to accumulator B (ABA), add without carry (ADD), and add with carry (ADC) instructions.

#### 2.2.5.4 | Mask Bit

The I bit enables and disables maskable interrupt sources. By default, the I bit is set to 1 during reset. An instruction must clear the I bit to enable maskable interrupts. While the I bit is set, maskable interrupts can become

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

operations. Shift and rotate instructions operate through the C bit to facilitate multiple-word shifts.

## 2.3 Data Types

The CPU12 uses these types of data:

- Bits
- 5-bit signed integers
- 8-bit signed and unsigned integers
- 8-bit, 2-digit binary-coded decimal numbers
- 9-bit signed integers
- 16-bit signed and unsigned integers
- 16-bit effective addresses
- 32-bit signed and unsigned integers

Negative integers are represented in two's complement form.

Five-bit and 9-bit signed integers are used only as offsets for indexed addressing modes.

Sixteen-bit effective addresses are formed during addressing mode computations.

Thirty-two-bit integer dividends are used by extended division instructions. Extended multiply and extended multiply-and-accumulate instructions produce 32-bit products.

## 2.4 Memory Organization

The standard CPU12 address space is 64 Kbytes. Some M68HC12 devices support a paged memory expansion scheme that increases the standard space by means of predefined windows in address space. The CPU12 has special instructions that support use of expanded memory.

Eight-bit values can be stored at any odd or even byte address in available memory.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 27 28 Freescale Semiconductor

pending and are remembered, but operation continues uninterrupted until the I bit is cleared.

When an interrupt occurs after interrupts are enabled, the I bit is automatically set to prevent other maskable interrupts during the interrupt service routine. The I bit is set after the registers are stacked, but before the first instruction in the interrupt service routine is executed.

Normally, an RTI instruction at the end of the interrupt service routine restores register values that were present before the interrupt occurred. Since the CCR is stacked before the I bit is set, the RTI normally clears the I bit, and thus re-enables interrupts. Interrupts can be re-enabled by clearing the I bit within the service routine.

#### 2.2.5.5 N Status Bit

The N bit shows the state of the MSB of the result. N is most commonly used in two's complement arithmetic, where the MSB of a negative number is 1 and the MSB of a positive number is 0, but it has other uses. For instance, if the MSB of a register or memory location is used as a status flag, the user can test status by loading an accumulator.

#### 2.2.5.6 Z Status Bit

The Z bit is set when all the bits of the result are 0s. Compare instructions perform an internal implied subtraction, and the condition codes, including Z, reflect the results of that subtraction. The increment index register X (INX), decrement index register X (DEX), increment index register Y (INY), and decrement index register Y (DEY) instructions affect the Z bit and no other condition flags. These operations can only determine = (equal) and  $\neq$  (not equal).

#### 2.2.5.7 V Status Bit

The V bit is set when two's complement overflow occurs as a result of an operation.

#### 2.2.5.8 C Status Bit

The C bit is set when a carry occurs during addition or a borrow occurs during subtraction. The C bit also acts as an error flag for multiply and divide

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

Sixteen-bit values are stored in memory as two consecutive bytes; the high byte occupies the lowest address, but need not be aligned to an even boundary.

Thirty-two-bit values are stored in memory as four consecutive bytes; the high byte occupies the lowest address, but need not be aligned to an even boundary.

All input/output (I/O) and all on-chip peripherals are memory-mapped. No special instruction syntax is required to access these addresses. On-chip registers and memory typically are grouped in blocks which can be relocated within the standard 64-Kbyte address space. Refer to device documentation for specific information.

## 2.5 Instruction Queue

The CPU12 uses an instruction queue to buffer program information. The mechanism is called a queue rather than a pipeline because a typical pipelined CPU executes more than one instruction at the same time, while the CPU12 always finishes executing an instruction before beginning to execute another. Refer to Section 4. Instruction Queue for more information.

#### Reference Manual — \$12CPUV2

## Section 3. Addressing Modes

#### 3.1 Introduction

Addressing modes determine how the central processor unit (CPU) accesses memory locations to be operated upon. This section discusses the various modes and how they are used.

#### 3.2 Mode Summary

Addressing modes are an implicit part of CPU12 instructions. Refer to Appendix A. Instruction Reference for the modes used by each instruction. All CPU12 addressing modes are shown in Table 3-1.

The CPU12 uses all M68HC11 modes as well as new forms of indexed addressing. Differences between M68HC11 and M68HC12 indexed modes are described in 3.9 Indexed Addressing Modes. Instructions that use more than one mode are discussed in 3.10 Instructions Using Multiple Modes.

#### 3.3 Effective Address

Each addressing mode except inherent mode generates a 16-bit effective address which is used during the memory reference portion of the instruction. Effective address computations do not require extra execution cycles.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 3.4 Inherent Addressing Mode

Instructions that use this addressing mode either have no operands or all operands are in internal CPU registers. In either case, the CPU does not need to access any memory locations to complete the instruction.

## Examples:

NOP ; this instruction has no operands INX ; operand is a CPU register

## 3.5 Immediate Addressing Mode

Operands for immediate mode instructions are included in the instruction stream and are fetched into the instruction queue one 16-bit word at a time during normal program fetch cycles. Since program data is read into the instruction queue several cycles before it is needed, when an immediate addressing mode operand is called for by an instruction, it is already present in the instruction queue.

The pound symbol (#) is used to indicate an immediate addressing mode operand. One common programming error is to accidentally omit the # symbol. This causes the assembler to misinterpret the expression that follows it as an address rather than explicitly provided data. For example, LDAA #\$55 means to load the immediate value \$55 into the A accumulator, while LDAA \$55 means to load the value from address \$0055 into the A accumulator. Without the # symbol, the instruction is erroneously interpreted as a direct addressing mode instruction.

## Examples:

LDAA #\$55 LDX #\$1234 LDY #\$67

These are common examples of 8-bit and 16-bit immediate addressing modes. The size of the immediate operand is implied by the instruction context. In the third example, the instruction implies a 16-bit immediate value but only an 8-bit value is supplied. In this case the assembler will generate the 16-bit value \$0067 because the CPU expects a 16-bit value in the instruction stream.

## Example:

BRSET FOO, #\$03, THERE

## S12CPUV2 Reference Manual. Rev. 4.0

#### Table 3-1. M68HC12 Addressing Mode Summary

Addressing Mode	Source Format	Abbreviation	Description
Inherent	INST (no externally supplied operands)	INH	Operands (if any) are in CPU registers
Immediate	INST #opr8i or INST #opr16i	IMM	Operand is included in instruction stream 8- or 16-bit size implied by context
Direct	INST opr8a	DIR	Operand is the lower 8 bits of an address in the range \$0000–\$00FF
Extended	INST opr16a	EXT	Operand is a 16-bit address
Relative	INST rel8 or INST rel16	REL	An 8-bit or 16-bit relative offset from the current point is supplied in the instruction
Indexed (5-bit offset)	INST oprx5,xysp	IDX	5-bit signed constant offset from X, Y, SP, or PC
Indexed (pre-decrement)	INST oprx3,-xys	IDX	Auto pre-decrement x, y, or sp by 1 ~ 8
Indexed (pre-increment)	INST oprx3,+xys	IDX	Auto pre-increment x, y, or sp by 1 ~ 8
Indexed (post-decrement)	INST oprx3,xys-	IDX	Auto post-decrement x, y, or sp by 1 ~ 8
Indexed (post-increment)	INST oprx3,xys+	IDX	Auto post-increment x, y, or sp by 1 ~ 8
Indexed (accumulator offset)	INST abd,xysp	IDX	Indexed with 8-bit (A or B) or 16-bit (D) accumulator offset from X, Y, SP, or PC
Indexed (9-bit offset)	INST oprx9,xysp	IDX1	9-bit signed constant offset from X, Y, SP, or PC (lower 8 bits of offset in one extension byte)
Indexed (16-bit offset)	INST oprx16,xysp	IDX2	16-bit constant offset from X, Y, SP, or PC (16-bit offset in two extension bytes)
Indexed-Indirect (16-bit offset)	INST [oprx16,xysp]	[IDX2]	Pointer to operand is found at 16-bit constant offset from X, Y, SP, or PC (16-bit offset in two extension bytes)
Indexed-Indirect (D accumulator offset)	INST [D,xysp]	[D,IDX]	Pointer to operand is found at X, Y, SP, or PC plus the value in D

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

In this example, extended addressing mode is used to access the operand FOO, immediate addressing mode is used to access the mask value \$03, and relative addressing mode is used to identify the destination address of a branch in case the branch-taken conditions are met. BRSET is listed as an extended mode instruction even though immediate and relative modes are also used.

## 3.6 Direct Addressing Mode

This addressing mode is sometimes called zero-page addressing because it is used to access operands in the address range \$0000 through \$00FF. Since these addresses always begin with \$00, only the eight low-order bits of the address need to be included in the instruction, which saves program space and execution time. A system can be optimized by placing the most commonly accessed data in this area of memory. The eight low-order bits of the operand address are supplied with the instruction, and the eight high-order bits of the address are assumed to be 0.

## Example:

LDAA \$5

This is a basic example of direct addressing. The value \$55 is taken to be the low-order half of an address in the range \$0000 through \$00FF. The high order half of the address is assumed to be 0. During execution of this instruction, the CPU combines the value \$55 from the instruction with the assumed value of \$00 to form the address \$0055, which is then used to access the data to be loaded into accumulator A.

## Example:

LDX \$20

In this example, the value \$20 is combined with the assumed value of \$00 to form the address \$0020. Since the LDX instruction requires a 16-bit value, a 16-bit word of data is read from addresses \$0020 and \$0021. After execution of this instruction, the X index register will have the value from address \$0020 in its high-order half and the value from address \$0021 in its low-order half.

Freescale Semiconductor 31 32 Freescale Semiconductor

#### 3.7 Extended Addressing Mode

In this addressing mode, the full 16-bit address of the memory location to be operated on is provided in the instruction. This addressing mode can be used to access any location in the 64-Kbyte memory map.

Example:

\$F03B

This is a basic example of extended addressing. The value from address \$F03B is loaded into the A accumulator.

#### 3.8 Relative Addressing Mode

The relative addressing mode is used only by branch instructions. Short and long conditional branch instructions use relative addressing mode exclusively, but branching versions of bit manipulation instructions (branch if bits set (BRSET) and branch if bits cleared (BRCLR)) use multiple addressing modes, including relative mode. Refer to

3.10 Instructions Using Multiple Modes for more information.

Short branch instructions consist of an 8-bit opcode and a signed 8-bit offset contained in the byte that follows the opcode. Long branch instructions consist of an 8-bit prebyte, an 8-bit opcode, and a signed 16-bit offset contained in the two bytes that follow the opcode.

Each conditional branch instruction tests certain status bits in the condition code register. If the bits are in a specified state, the offset is added to the address of the next memory location after the offset to form an effective address, and execution continues at that address. If the bits are not in the specified state, execution continues with the instruction immediately following the branch instruction.

Bit-condition branches test whether bits in a memory byte are in a specific state. Various addressing modes can be used to access the memory location. An 8-bit mask operand is used to test the bits. If each bit in memory that corresponds to a 1 in the mask is either set (BRSET) or clear (BRCLR), an 8-bit offset is added to the address of the next memory location after the offset to form an effective address, and execution continues at that address. If all the bits in memory that correspond to a 1 in the mask are not in the specified state, execution continues with the instruction immediately following the branch instruction.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 3

This approach eliminates the differences between X and Y register use while dramatically enhancing the indexed addressing capabilities.

Major advantages of the CPU12 indexed addressing scheme are:

- The stack pointer can be used as an index register in all indexed operations.
- The program counter can be used as an index register in all but autoincrement and autodecrement modes.
- A, B, or D accumulators can be used for accumulator offsets.
- Automatic pre- or post-increment or pre- or post-decrement by –8 to +8
- A choice of 5-, 9-, or 16-bit signed constant offsets
- Use of two new indexed-indirect modes:
  - Indexed-indirect mode with 16-bit offset
  - Indexed-indirect mode with accumulator D offset

Table 3-2 is a summary of indexed addressing mode capabilities and a description of postbyte encoding. The postbyte is noted as xb in instruction descriptions. Detailed descriptions of the indexed addressing mode variations follow the table.

All indexed addressing modes use a 16-bit CPU register and additional information to create an effective address. In most cases the effective address specifies the memory location affected by the operation. In some variations of indexed addressing, the effective address specifies the location of a value that points to the memory location affected by the operation.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 35 36 Freescale Semiconductor

8-bit, 9-bit, and 16-bit offsets are signed two's complement numbers to support branching upward and downward in memory. The numeric range of short branch offset values is \$80 (–128) to \$7F (127). Loop primitive instructions support a 9-bit offset which allows a range of \$100 (–256) to \$0FF (255). The numeric range of long branch offset values is \$8000 (–32,768) to \$7FFF (32,767). If the offset is 0, the CPU executes the instruction immediately following the branch instruction, regardless of the test involved.

Since the offset is at the end of a branch instruction, using a negative offset value can cause the program counter (PC) to point to the opcode and initiate a loop. For instance, a branch always (BRA) instruction consists of two bytes, so using an offset of \$FE sets up an infinite loop; the same is true of a long branch always (LBRA) instruction with an offset of \$FFFC.

An offset that points to the opcode can cause a bit-condition branch to repeat execution until the specified bit condition is satisfied. Since bit-condition branches can consist of four, five, or six bytes depending on the addressing mode used to access the byte in memory, the offset value that sets up a loop can vary. For instance, using an offset of \$FC with a BRCLR that accesses memory using an 8-bit indexed postbyte sets up a loop that executes until all the bits in the specified memory byte that correspond to 1s in the mask byte are cleared.

#### 3.9 Indexed Addressing Modes

The CPU12 uses redefined versions of M68HC11 indexed modes that reduce execution time and eliminate code size penalties for using the Y index register. In most cases, CPU12 code size for indexed operations is the same or is smaller than that for the M68HC11. Execution time is shorter in all cases. Execution time improvements are due to both a reduced number of cycles for all indexed instructions and to faster system clock speed.

The indexed addressing scheme uses a postbyte plus zero, one, or two extension bytes after the instruction opcode. The postbyte and extensions do the following tasks:

- 1. Specify which index register is used
- 2. Determine whether a value in an accumulator is used as an offset
- 3. Enable automatic pre- or post-increment or pre- or post-decrement
- 4. Specify size of increment or decrement
- 5. Specify use of 5-, 9-, or 16-bit signed offsets

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Table 3-2. Summary of Indexed Operations

Postbyte Code (xb)	Source Code Syntax	Comments rr; 00 = X, 01 = Y, 10 = SP, 11 = PC			
rr0nnnn	,r n,r –n,r	5-bit constant offset n = -16 to +15 r can specify X, Y, SP, or PC			
111rr0zs	n,r –n,r	Constant offset (9- or 16-bit signed) z- 0 = 9-bit with sign in LSB of postbyte(s) 1 = 16-bit if z = s = 1, 16-bit offset indexed-indirect (see below) r can specify X, Y, SP, or PC	$-256 \le n \le 255$ $-32,768 \le n \le 65,535$		
111rr011	[n,r]	16-bit offset indexed-indirect rr can specify X, Y, SP, or PC	-32,768 ≤ n ≤ 65,535		
rr1pnnnn	n,-r n,+r n,r- n,r+	Auto predecrement, preincrement, postdecrement, of p = pre-(0) or post-(1), n = -8 to -1, +1 to +8 r can specify X, Y, or SP (PC not a valid choice) +8 = 0111 +1 = 0000 -1 = 11118 = 1000	r postincrement;		
111rr1aa	Accumulator offset (unsigned 8-bit or 16-bit) a -00 = A 01 = B 10 = D (16-bit) 11 = see accumulator D offset indexed-indirect r can specify X, Y, SP, or PC				
111rr111 [D,r] Accumulator D offset indexed-indirect r can specify X, Y, SP, or PC					

Indexed addressing mode instructions use a postbyte to specify index registers (X and Y), stack pointer (SP), or program counter (PC) as the base index register and to further classify the way the effective address is formed. A special group of instructions cause this calculated effective address to be loaded into an index register for further calculations:

• Load stack pointer with effective address (LEAS)

- Load X with effective address (LEAX)
- . Load Y with effective address (LEAY)

#### 3.9.1 5-Bit Constant Offset Indexed Addressing

This indexed addressing mode uses a 5-bit signed offset which is included in the instruction postbyte. This short offset is added to the base index register (X, Y, SP, or PC) to form the effective address of the memory location that will be affected by the instruction. This gives a range of -16 through +15 from the value in the base index register. Although other indexed addressing modes allow 9- or 16-bit offsets, those modes also require additional extension bytes in the instruction for this extra information. The majority of indexed instructions in real programs use offsets that fit in the shortest 5-bit form of indexed addressing.

Examples: LDAA 0 x STAB -8,Y

For these examples, assume X has a value of \$1000 and Y has a value of \$2000 before execution. The 5-bit constant offset mode does not change the value in the index register, so X will still be \$1000 and Y will still be \$2000 after execution of these instructions. In the first example, A will be loaded with the value from address \$1000. In the second example, the value from the B accumulator will be stored at address \$1FF8 (\$2000 -\$8).

#### 3.9.2 9-Bit Constant Offset Indexed Addressing

This indexed addressing mode uses a 9-bit signed offset which is added to the base index register (X, Y, SP, or PC) to form the effective address of the memory location affected by the instruction. This gives a range of -256 through +255 from the value in the base index register. The most significant bit (sign bit) of the offset is included in the instruction postbyte and the remaining eight bits are provided as an extension byte after the instruction postbyte in the instruction flow.

Examples: T.DAA LDAB -20.Y

For these examples, assume X is \$1000 and Y is \$2000 before execution of these instructions.

NOTE: These instructions do not alter the index registers so they will still be \$1000 and \$2000, respectively, after the instructions.

> The first instruction will load A with the value from address \$10FF and the second instruction will load B with the value from address \$1FEC.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 3.9.5 Auto Pre/Post Decrement/Increment Indexed Addressing

This indexed addressing mode provides four ways to automatically change the value in a base index register as a part of instruction execution. The index register can be incremented or decremented by an integer value either before or after indexing takes place. The base index register may be X, Y, or SP. (Auto-modify modes would not make sense on PC.)

Pre-decrement and pre-increment versions of the addressing mode adjust the value of the index register before accessing the memory location affected by the instruction — the index register retains the changed value after the instruction executes. Post-decrement and post-increment versions of the addressing mode use the initial value in the index register to access the memory location affected by the instruction, then change the value of the

The CPU12 allows the index register to be incremented or decremented by any integer value in the ranges -8 through -1 or 1 through 8. The value need not be related to the size of the operand for the current instruction. These instructions can be used to incorporate an index adjustment into an existing instruction rather than using an additional instruction and increasing execution time. This addressing mode is also used to perform operations on a series of data structures in memory.

When an LEAS, LEAX, or LEAY instruction is executed using this addressing mode, and the operation modifies the index register that is being loaded, the final value in the register is the value that would have been used to access a memory operand. (Premodification is seen in the result but postmodification is not.)

Examples: STAA 1.-SP

:equivalent to PSHA STX 2,-SP ;equivalent to PSHX צח.ד 2,SP+ ;equivalent to PULX LDAA 1.SP+ ;equivalent to PULA

For a "last-used" type of stack like the CPU12 stack, these four examples are equivalent to common push and pull instructions.

For a "next-available" stack like the M68HC11 stack, push A onto stack (PSHA) is equivalent to store accumulator A (STAA) 1,SP- and pull A from stack (PULA) is equivalent to load accumulator A (LDAA) 1,+SP. However, in the M68HC11, 16-bit operations like push register X onto stack (PSHX) and pull register X from stack (PULX) require multiple instructions to decrement the SP by one, then store X, then decrement SP by one again.

## S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor Freescale Semiconductor

This variation of the indexed addressing mode in the CPU12 is similar to the M68HC11 indexed addressing mode, but is functionally enhanced. The M68HC11 CPU provides for unsigned 8-bit constant offset indexing from X or Y, and use of Y requires an extra instruction byte and thus, an extra execution cycle. The 9-bit signed offset used in the CPU12 covers the same range of positive offsets as the M68HC11, and adds negative offset capability. The CPU12 can use X, Y, SP, or PC as the base index register.

#### 3.9.3 16-Bit Constant Offset Indexed Addressing

This indexed addressing mode uses a 16-bit offset which is added to the base index register (X, Y, SP, or PC) to form the effective address of the memory location affected by the instruction. This allows access to any address in the 64-Kbyte address space. Since the address bus and the offset are both 16 bits, it does not matter whether the offset value is considered to be a signed or an unsigned value (\$FFFF may be thought of as +65,535 or as -1). The 16-bit offset is provided as two extension bytes after the instruction postbyte in the instruction flow.

#### 3.9.4 16-Bit Constant Indirect Indexed Addressing

This indexed addressing mode adds a 16-bit instruction-supplied offset to the base index register to form the address of a memory location that contains a pointer to the memory location affected by the instruction. The instruction itself does not point to the address of the memory location to be acted upon, but rather to the location of a pointer to the address to be acted on. The square brackets distinguish this addressing mode from 16-bit constant offset indexing.

LDAA [10,X]

In this example, X holds the base address of a table of pointers. Assume that X has an initial value of \$1000, and that the value \$2000 is stored at addresses \$100A and \$100B. The instruction first adds the value 10 to the value in X to form the address \$100A. Next, an address pointer (\$2000) is fetched from memory at \$100A. Then, the value stored in location \$2000 is read and loaded into the A accumulator.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

In the STAA 1.-SP example, the stack pointer is pre-decremented by one and then A is stored to the address contained in the stack pointer. Similarly the LDX 2,SP+ first loads X from the address in the stack pointer, then post-increments SP by two

Example: MOVW 2, X+, 4, +Y

This example demonstrates how to work with data structures larger than bytes and words. With this instruction in a program loop, it is possible to move words of data from a list having one word per entry into a second table that has four bytes per table element. In this example the source pointer is updated after the data is read from memory (post-increment) while the destination pointer is updated before it is used to access memory (pre-increment)

## 3.9.6 Accumulator Offset Indexed Addressing

In this indexed addressing mode, the effective address is the sum of the values in the base index register and an unsigned offset in one of the accumulators. The value in the index register itself is not changed. The index register can be X, Y, SP, or PC and the accumulator can be either of the 8-bit accumulators (A or B) or the 16-bit D accumulator.

Example:

LDAA

This instruction internally adds B to X to form the address from which A will be loaded. B and X are not changed by this instruction. This example is similar to the following 2-instruction combination in an M68HC11.

Examples:

T.DAA

However, this 2-instruction sequence alters the index register. If this sequence was part of a loop where B changed on each pass, the index register would have to be reloaded with the reference value on each loop pass. The use of LDAA B,X is more efficient in the CPU12.

#### 3.9.7 Accumulator D Indirect Indexed Addressing

This indexed addressing mode adds the value in the D accumulator to the value in the base index register to form the address of a memory location that contains a pointer to the memory location affected by the instruction. The instruction operand does not point to the address of the memory location to be acted upon, but rather to the location of a pointer to the address to be acted upon. The square brackets distinguish this addressing mode from D accumulator offset indexing.

#### Examples:

JMP	[D, PC]	
GO1	DC.W	PLACE1
GO2	DC.W	PLACE2
GO3	DC.W	PLACE3

This example is a computed GOTO. The values beginning at GO1 are addresses of potential destinations of the jump (JMP) instruction. At the time the JMP [D,PC] instruction is executed, PC points to the address GO1, and D holds one of the values \$0000, \$0002, or \$0004 (determined by the program some time before the JMP).

Assume that the value in D is \$0002. The JMP instruction adds the values in D and PC to form the address of GO2. Next the CPU reads the address PLACE2 from memory at GO2 and jumps to PLACE2. The locations of PLACE1 through PLACE3 were known at the time of program assembly but the destination of the JMP depends upon the value in D computed during program execution.

#### 3.10 Instructions Using Multiple Modes

Several CPU12 instructions use more than one addressing mode in the course of execution.

#### 3.10.1 Move Instructions

Move instructions use separate addressing modes to access the source and destination of a move. There are move variations for all practical combinations of immediate, extended, and indexed addressing modes.

The only combinations of addressing modes that are not allowed are those with an immediate mode destination (the operand of an immediate mode instruction is data, not an address). For indexed moves, the reference index register may be X, Y, SP, or PC.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## Example:

. 1000 18 09 C2 20 00 MOVB \$2000 2,PC

Moves a byte of data from \$2000 to \$1009

The expected location of the PC = 1005. The offset = +2. 1005 + 2 (for 2,PC) + 2 (for correction) = 1009

\$18 is the page pre-byte, 09 is the MOVB opcode for ext-idx, C2 is the indexed postbyte for 2,PC (without correction).

The Freescale MCUasm assembler produces corrected object code for PC-relative moves (18 09 C0 20 00 for the example shown).

## NOTE:

Instead of assembling the 2,PC as C2, the correction has been applied to make it C0. Check whether an assembler makes the correction before using PC-relative moves.

On the newer HCS12, the instruction queue was implemented such that an internal pointer, to the start of the next instruction, is always available. On the HCS12, PC-relative move instructions work as expected without any offset adjustment. Although this is different from the original M68HC12, it is unlikely to be a problem because PC-relative indexing is rarely, if ever, used with move instructions.

## 3.10.2 Bit Manipulation Instructions

Bit manipulation instructions use either a combination of two or a combination of three addressing modes.

The clear bits in memory (BCLR) and set bits in memory (BSET) instructions use an 8-bit mask to determine which bits in a memory byte are to be changed. The mask must be supplied with the instruction as an immediate mode value. The memory location to be modified can be specified by means of direct, extended, or indexed addressing modes.

The branch if bits cleared (BRCLR) and branch if bits set (BRSET) instructions use an 8-bit mask to test the states of bits in a memory byte. The mask is supplied with the instruction as an immediate mode value. The memory location to be tested is specified by means of direct, extended, or indexed addressing modes. Relative addressing mode is used to determine the branch address. A signed 8-bit offset must be supplied with the instruction.

S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

Move instructions do not support indirect modes, 9-bit, or 16-bit offset modes requiring extra extension bytes. There are special considerations when using PC-relative addressing with move instructions. The original M68HC12 implemented the instruction queue slightly differently than the newer HCS12. In the older M68HC12 implementation, the CPU did not maintain a pointer to the start of the instruction after the current instruction (what the user thinks of as the PC value during execution). This caused an offset for PC-relative move instructions.

PC-relative addressing uses the address of the location immediately following the last byte of object code for the current instruction as a reference point. The CPU12 normally corrects for queue offset and for instruction alignment so that queue operation is transparent to the user. However, in the original M68HC12, move instructions pose three special problems:

- · Some moves use an indexed source and an indexed destination.
- Some moves have object code that is too long to fit in the queue all at one time, so the PC value changes during execution.
- All moves do not have the indexed postbyte as the last byte of object code

These cases are not handled by automatic queue pointer maintenance, but it is still possible to use PC-relative indexing with move instructions by providing for PC offsets in source code.

**Table 3-3** shows PC offsets from the location immediately following the current instruction by addressing mode.

Table 3-3. PC Offsets for MOVE Instructions (M68HC12 Only)

MOVE Instruction	Addressing Modes	Offset Value
	$IMM \Rightarrow IDX$	+1
	$EXT \Rightarrow IDX$	+2
MOVB	$IDX \Rightarrow EXT$	-2
	$IDX \Rightarrow IDX$	-1 for first operand +1 for second operand
	$IMM \Rightarrow IDX$	+2
	$EXT \Rightarrow IDX$	+2
MOVW	$IDX \Rightarrow EXT$	-2
	$IDX \Rightarrow IDX$	-1 for first operand +1 for second operand

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

## 3.11 Addressing More than 64 Kbytes

Some M68HC12 devices incorporate hardware that supports addressing a larger memory space than the standard 64 Kbytes. The expanded memory system uses fast on-chip logic to implement a transparent bank-switching scheme.

Increased code efficiency is the greatest advantage of using a switching scheme instead of a large linear address space. In systems with large linear address spaces, instructions require more bits of information to address a memory location, and CPU overhead is greater. Other advantages include the ability to change the size of system memory and the ability to use various types of external memory.

However, the add-on bank switching schemes used in other microcontrollers have known weaknesses. These include the cost of external glue logic, increased programming overhead to change banks, and the need to disable interrupts while banks are switched.

The M68HC12 system requires no external glue logic. Bank switching overhead is reduced by implementing control logic in the MCU. Interrupts do not need to be disabled during switching because switching tasks are incorporated in special instructions that greatly simplify program access to extended memory.

MCUs with expanded memory treat the 16 Kbytes of memory space from \$8000 to \$BFFF as a program memory window. Expanded-memory architecture includes an 8-bit program page register (PPAGE), which allows up to 256 16-Kbyte program memory pages to be switched into and out of the program memory window. This provides for up to 4 Megabytes of paged program memory.

The CPU12 instruction set includes call subroutine in expanded memory (CALL) and return from call (RTC) instructions, which greatly simplify the use of expanded memory space. These instructions also execute correctly on devices that do not have expanded-memory addressing capability, thus providing for portable code.

The CALL instruction is similar to the jump-to-subroutine (JSR) instruction. When CALL is executed, the current value in PPAGE is pushed onto the stack with a return address, and a new instruction-supplied value is written to PPAGE. This value selects the page the called subroutine resides upon and can be considered part of the effective address. For all addressing mode variations except indexed indirect modes, the new page value is

## S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

provided by an immediate operand in the instruction. For indexed indirect variations of CALL, a pointer specifies memory locations where the new page value and the address of the called subroutine are stored. Use of indirect addressing for both the page value and the address within the page frees the program from keeping track of explicit values for either address.

The RTC instruction restores the saved program page value and the return address from the stack. This causes execution to resume at the next instruction after the original CALL instruction.

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

## Reference Manual — S12CPUV2

## Section 4. Instruction Queue

## 4.1 Introduction

The CPU12 uses an instruction queue to increase execution speed. This section describes queue operation during normal program execution and changes in execution flow. These concepts augment the descriptions of instructions and cycle-by-cycle instruction execution in subsequent sections, but it is important to note that queue operation is automatic, and generally transparent to the user.

The material in this section is general. Section 6. Instruction Glossary contains detailed information concerning cycle-by-cycle execution of each instruction. Section 8. Instruction Queue contains detailed information about tracking queue operation and instruction execution.

## 4.2 Queue Description

The fetching mechanism in the CPU12 is best described as a queue rather than as a pipeline. Queue logic fetches program information and positions it for execution, but instructions are executed sequentially. A typical pipelined central processor unit (CPU) can execute more than one instruction at the same time, but interactions between the prefetch and execution mechanisms can make tracking and debugging difficult. The CPU12 thus gains the advantages of independent fetches, yet maintains a straightforward relationship between bus and execution cycles.

Each instruction refills the queue by fetching the same number of bytes that the instruction uses. Program information is fetched in aligned 16-bit words. Each program fetch (P) indicates that two bytes need to be replaced in the instruction queue. Each optional fetch (0) indicates that only one byte needs to be replaced. For example, an instruction composed of five bytes does two program fetches and one optional fetch. If the first byte of the five-byte instruction was even-aligned, the optional fetch is converted into a free

## S12CPUV2 Reference Manual, Rev. 4.0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

cycle. If the first byte was odd-aligned, the optional fetch is executed as a program fetch.

Two external pins, IPIPE[1:0], provide time-multiplexed information about data movement in the queue and instruction execution. Decoding and use of these signals is discussed in **Section 8. Instruction Queue**.

## 4.2.1 Original M68HC12 Queue Implementation

There are two 16-bit queue stages and one 16-bit buffer. Program information is fetched in aligned 16-bit words. Unless buffering is required, program information is first queued into stage 1, then advanced to stage 2 for execution.

At least two words of program information are available to the CPU when execution begins. The first byte of object code is in either the even or odd half of the word in stage 2, and at least two more bytes of object code are in the queue.

The buffer is used when a program word arrives before the queue can advance. This occurs during execution of single-byte and odd-aligned instructions. For instance, the queue cannot advance after an aligned, single-byte instruction is executed, because the first byte of the next instruction is also in stage 2. In these cases, information is latched into the buffer until the queue can advance.

## 4.2.2 HCS12 Queue Implementation

There are three 16-bit stages in the instruction queue. Instructions enter the queue at stage 1 and shift out of stage 3 as the CPU executes instructions and fetches new ones into stage 1. Each byte in the queue is selectable. An opcode prediction algorithm determines the location of the next opcode in the instruction queue.

## 4.3 Data Movement in the Queue

All queue operations are combinations of four basic queue movement cycles. Descriptions of each of these cycles follows. Queue movement cycles are only one factor in instruction execution time and should not be confused with bus cycles.

## S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 47 48 Freescale Semiconductor

#### 4.3.1 No Movement

There is no data movement in the instruction queue during the cycle. This occurs during execution of instructions that must perform a number of internal operations, such as division instructions.

#### 4.3.2 Latch Data from Bus (Applies Only to the M68HC12 Queue Implementation)

All instructions initiate fetches to refill the queue as execution proceeds. However, a number of conditions, including instruction alignment and the length of previous instructions, affect when the queue advances. If the queue is not ready to advance when fetched information arrives, the information is latched into the buffer. Later, when the queue does advance, stage 1 is refilled from the buffer. If more than one latch cycle occurs before the queue advances, the buffer is filled on the first latch event and subsequent latch events are ignored until the queue advances.

#### 4.3.3 Advance and Load from Data Bus

The content of queue is advanced by one stage, and stage 1 is loaded with a word of program information from the data bus. The information was requested two bus cycles earlier but has only become available this cycle, due to access delay.

#### 4.3.4 Advance and Load from Buffer (Applies Only to M68HC12 Queue Implementation)

The content of queue stage 1 advances to stage 2, and stage 1 is loaded with a word of program information from the buffer. The information in the buffer was latched from the data bus during a previous cycle because the queue was not ready to advance when it arrived.

## 4.4 Changes in Execution Flow

During normal instruction execution, queue operations proceed as a continuous sequence of queue movement cycles. However, situations arise which call for changes in flow. These changes are categorized as resets, interrupts, subroutine calls, conditional branches, and jumps. Generally speaking, resets and interrupts are considered to be related to events outside the current program context that require special processing, while

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Subroutines in the normal 64-Kbyte address space are terminated with a return-from-subroutine (RTS) instruction. RTS unstacks the return address, then performs three program word fetches from that address to refill the queue.

CALL is similar to JSR. MCUs with expanded memory treat 16 Kbytes of addresses from \$8000 to \$BFFF as a memory window. An 8-bit PPAGE register switches memory pages into and out of the window. When CALL is executed, a return address is calculated, then it and the current PPAGE value are stacked, and a new instruction-supplied value is written to PPAGE. The subroutine address is calculated, then three program word fetches are made from that address to refill the instruction queue.

The return-from-call (RTC) instruction is used to terminate subroutines in expanded memory. RTC unstacks the PPAGE value and the return address, then performs three program word fetches from that address to refill the queue.

CALL and RTC execute correctly in the normal 64-Kbyte address space, thus providing for portable code. However, since extra execution cycles are required, routinely substituting CALL/RTC for JSR/RTS is not recommended.

## 4.4.3 Branches

Freescale Semiconductor

Branch instructions cause execution flow to change when specific pre-conditions exist. The CPU12 instruction set includes:

- Short conditional branches
- Long conditional branches
- Bit-condition branches

Types and conditions of branch instructions are described in 5.19 Branch Instructions. All branch instructions affect the queue similarly, but there are differences in overall cycle counts between the various types. Loop primitive instructions are a special type of branch instruction used to implement counter-based loops.

Branch instructions have two execution cases:

- The branch condition is satisfied, and a change of flow takes place.
- The branch condition is not satisfied, and no change of flow occurs.

S12CPUV2 Reference Manual, Rev. 4.0

subroutine calls, branches, and jumps are considered to be elements of program structure.

During design, great care is taken to assure that the mechanism that increases instruction throughput during normal program execution does not cause bottlenecks during changes of program flow, but internal queue operation is largely transparent to the user. The following information is provided to enhance subsequent descriptions of instruction execution.

#### 4.4.1 Exceptions

Exceptions are events that require processing outside the normal flow of instruction execution. CPU12 exceptions include five types of exceptions:

- · Reset (including COP, clock monitor, and pin)
- Unimplemented opcode trap
- · Software interrupt instruction
- X-bit interrupts
- I-bit interrupts

All exceptions use the same microcode, but the CPU follows different execution paths for each type of exception.

CPU12 exception handling is designed to minimize the effect of queue operation on context switching. Thus, an exception vector fetch is the first part of exception processing, and fetches to refill the queue from the address pointed to by the vector are interleaved with the stacking operations that preserve context, so that program access time does not delay the switch. Refer to Section 7. Exception Processing for detailed information.

#### 4.4.2 Subroutines

The CPU12 can branch to (BSR), jump to (JSR), or call (CALL) subroutines. BSR and JSR are used to access subroutines in the normal 64-Kbyte address space. The CALL instruction is intended for use in MCUs with expanded memory capability.

BSR uses relative addressing mode to generate the effective address of the subroutine, while JSR can use various other addressing modes. Both instructions calculate a return address, stack the address, then perform three program word fetches to refill the queue.

#### S12CPUV2 Reference Manual. Rev. 4.0

50 Freescale Semiconductor

## 4.4.3.1 Short Branches

The "not-taken" case for short branches is simple. Since the instruction consists of a single word containing both an opcode and an 8-bit offset, the queue advances, another program word is fetched, and execution continues with the next instruction.

The "taken" case for short branches requires that the queue be refilled so that execution can continue at a new address. First, the effective address of the destination is calculated using the relative offset in the instruction. Then, the address is loaded into the program counter, and the CPU performs three program word fetches at the new address to refill the instruction queue.

## 4.4.3.2 Long Branches

The "not-taken" case for all long branches requires three cycles, while the "taken" case requires four cycles. This is due to differences in the amount of program information needed to fill the queue.

Long branch instructions begin with a \$18 prebyte which indicates that the opcode is on page 2 of the opcode map. The CPU12 treats the prebyte as a special one-byte instruction. If the prebyte is not aligned, the first cycle is used to perform a program word access; if the prebyte is aligned, the first cycle is used to perform a free cycle. The first cycle for the prebyte is executed whether or not the branch is taken.

The first cycle of the branch instruction is an optional cycle. Optional cycles make the effects of byte-sized and misaligned instructions consistent with those of aligned word-length instructions. Program information is always fetched as aligned 16-bit words. When an instruction has an odd number of bytes, and the first byte is not aligned with an even byte boundary, the optional cycle makes an additional program word access that maintains queue order. In all other cases, the optional cycle is a free cycle.

In the "not-taken" case, the queue must advance so that execution can continue with the next instruction. Two cycles are used to refill the queue. Alignment determines how the second of these cycles is used.

In the "taken" case, the effective address of the branch is calculated using the 16-bit relative offset contained in the second word of the instruction. This address is loaded into the program counter, then the CPU performs three program word fetches at the new address.

Freescale Semiconductor

#### 4.4.3.3 Bit Condition Branches

Bit condition branch instructions read a location in memory, and branch if the bits in that location are in a certain state. These instructions can use direct, extended, or indexed addressing modes. Indexed operations require varying amounts of information to determine the effective address, so instruction length varies according to the mode used, which in turn affects the amount of program information fetched. To shorten execution time, these branches perform one program word fetch in anticipation of the "taken" case. The data from this fetch is ignored in the "not-taken" case. If the branch is taken, the CPU fetches three program word fetches at the new address to fill the instruction queue.

#### 4.4.3.4 Loop Primitives

The loop primitive instructions test a counter value in a register or accumulator and branch to an address specified by a 9-bit relative offset contained in the instruction if a specified condition is met. There are auto-increment and auto-decrement versions of these instructions. The test and increment/decrement operations are performed on internal CPU registers, and require no additional program information. To shorten execution time, these branches perform one program word fetch in anticipation of the "taken" case. The data from this fetch is ignored if the branch is not taken, and the CPU does one program fetch and one optional fetch to refill the queue<sup>1</sup>. If the branch is taken, the CPU finishes refilling the queue with two additional program word fetches at the new address

#### 4.4.4 Jumps

Jump (JMP) is the simplest change of flow instruction. JMP can use extended or indexed addressing. Indexed operations require varying amounts of information to determine the effective address, so instruction length varies according to the mode used, which in turn affects the amount of program information fetched. All forms of JMP perform three program word fetches at the new address to refill the instruction queue.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## Reference Manual — S12CPUV2

## Section 5. Instruction Set Overview

## 5.1 Introduction

This section contains general information about the central processor unit (CPU12) instruction set. It is organized into instruction categories grouped by function

## 5.2 Instruction Set Description

CPU12 instructions are a superset of the M68HC11 instruction set. Code written for an M68HC11 can be reassembled and run on a CPU12 with no changes. The CPU12 provides expanded functionality and increased code efficiency. There are two implementations of the CPU12, the original M68HC12 and the newer HCS12. Both implementations have the same instruction set, although there are small differences in cycle-by-cycle access details (the order of some bus cycles changed to accommodate differences in the way the instruction queue was implemented). These minor differences are transparent for most users.

In the M68HC12 and HCS12 architecture, all memory and input/output (I/O) are mapped in a common 64-Kbyte address space (memory-mapped I/O). This allows the same set of instructions to be used to access memory, I/O, and control registers. General-purpose load, store, transfer, exchange, and move instructions facilitate movement of data to and from memory and peripherals.

The CPU12 has a full set of 8-bit and 16-bit mathematical instructions. There are instructions for signed and unsigned arithmetic, division, and multiplication with 8-bit, 16-bit, and some larger operands

Special arithmetic and logic instructions aid stacking operations, indexing, binary-coded decimal (BCD) calculation, and condition code register manipulation. There are also dedicated instructions for multiply and

S12CPUV2 Reference Manual, Rev. 4.0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

accumulate operations, table interpolation, and specialized fuzzy logic operations that involve mathematical calculations.

Refer to Section 6. Instruction Glossary for detailed information about individual instructions. Appendix A. Instruction Reference contains quick-reference material, including an opcode map and postbyte encoding for indexed addressing, transfer/exchange instructions, and loop primitive instructions.

## 5.3 Load and Store Instructions

Load instructions copy memory content into an accumulator or register. Memory content is not changed by the operation. Load instructions (but not LEA\_instructions) affect condition code bits so no separate test instructions are needed to check the loaded values for negative or 0 conditions.

Store instructions copy the content of a CPU register to memory Register/accumulator content is not changed by the operation. Store instructions automatically update the N and Z condition code bits, which can eliminate the need for a separate test instruction in some programs.

Table 5-1 is a summary of load and store instructions.

Table 5-1, Load and Store Instructions

Mnemonic	Function	Operation
	Load Instructions	•
LDAA	Load A	(M) ⇒ A
LDAB	Load B	(M) ⇒ B
LDD	Load D	(M : M + 1) ⇒ (A:B)
LDS	Load SP	$(M:M+1) \Rightarrow SP_H:SP_L$
LDX	Load index register X	$(M:M+1) \Rightarrow X_H:X_L$
LDY	Load index register Y	$(M:M+1) \Rightarrow Y_H:Y_L$
LEAS	Load effective address into SP	Effective address ⇒ SP
LEAX	Load effective address into X	Effective address ⇒ X
LEAY	Load effective address into Y	Effective address ⇒ Y

Continued on next page

<sup>1.</sup> In the original M68HC12, the implementation of these two cycles are both program word

Table 5-1, Load and Store Instructions (Continued)

Store Instructions		
STAA	Store A	(A) ⇒ M
STAB	Store B	(B) ⇒ M
STD	Store D	$(A) \Rightarrow M, (B) \Rightarrow M + 1$
STS	Store SP	$(SP_H:SP_L) \Rightarrow M: M+1$
STX	Store X	$(X_H:X_L) \Rightarrow M:M+1$
STY	Store Y	$(Y_H:Y_L) \Rightarrow M:M+1$

#### 5.4 Transfer and Exchange Instructions

Transfer instructions copy the content of a register or accumulator into another register or accumulator. Source content is not changed by the operation. Transfer register to register (TFR) is a universal transfer instruction, but other mnemonics are accepted for compatibility with the M68HC11. The transfer A to B (TAB) and transfer B to A (TBA) instructions affect the N. Z. and V condition code bits in the same way as M68HC11 instructions. The TFR instruction does not affect the condition code bits.

The sign extend 8-bit operand (SEX) instruction is a special case of the universal transfer instruction that is used to sign extend 8-bit two's complement numbers so that they can be used in 16-bit operations. The 8-bit number is copied from accumulator A, accumulator B, or the condition code register to accumulator D, the X index register, the Y index register, or the stack pointer. All the bits in the upper byte of the 16-bit result are given the value of the most-significant bit (MSB) of the 8-bit number.

Exchange instructions exchange the contents of pairs of registers or accumulators. When the first operand in an EXG instruction is 8-bits and the second operand is 16 bits, a zero-extend operation is performed on the 8-bit register as it is copied into the 16-bit register.

Section 6. Instruction Glossary contains information concerning other transfers and exchanges between 8- and 16-bit registers.

S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

## 5.6 Addition and Subtraction Instructions

Signed and unsigned 8- and 16-bit addition can be performed between registers or between registers and memory. Special instructions support index calculation. Instructions that add the carry bit in the condition code register (CCR) facilitate multiple precision computation.

Signed and unsigned 8- and 16-bit subtraction can be performed between registers or between registers and memory. Special instructions support index calculation. Instructions that subtract the carry bit in the CCR facilitate multiple precision computation. Refer to Table 5-4 for addition and subtraction instructions

Load effective address (LEAS, LEAX, and LEAY) instructions could also be considered as specialized addition and subtraction instructions. See 5.25 Pointer and Index Calculation Instructions for more information.

Table 5-4. Addition and Subtraction Instructions

Mnemonic	Function	Operation
	Addition Instruction	s
ABA	Add B to A	(A) + (B) ⇒ A
ABX	Add B to X	$(B) + (X) \Rightarrow X$
ABY	Add B to Y	$(B) + (Y) \Rightarrow Y$
ADCA	Add with carry to A	$(A) + (M) + C \Rightarrow A$
ADCB	Add with carry to B	$(B) + (M) + C \Rightarrow B$
ADDA	Add without carry to A	(A) + (M) ⇒ A
ADDB	Add without carry to B	$(B) + (M) \Rightarrow B$
ADDD	Add to D	(A:B) + (M : M + 1) ⇒ A : B
	Subtraction Instruction	ons
SBA	Subtract B from A	$(A) - (B) \Rightarrow A$
SBCA	Subtract with borrow from A	$(A) - (M) - C \Rightarrow A$
SBCB	Subtract with borrow from B	$(B) - (M) - C \Rightarrow B$
SUBA	Subtract memory from A	$(A) - (M) \Rightarrow A$
SUBB	Subtract memory from B	$(B) - (M) \Rightarrow B$
SUBD	Subtract memory from D (A:B)	$(D)-(M:M+1)\Rightarrow D$

S12CPUV2 Reference Manual, Rev. 4.0

Table 5-2 is a summary of transfer and exchange instructions.

Table 5-2, Transfer and Exchange Instructions

Mnemonic	Function	Operation	
Transfer Instructions			
TAB	Transfer A to B	(A) ⇒ B	
TAP	Transfer A to CCR	(A) ⇒ CCR	
TBA	Transfer B to A	(B) ⇒ A	
TFR	Transfer register to register	(A, B, CCR, D, X, Y, or SP) ⇒ A, B, CCR, D, X, Y, or SP	
TPA	Transfer CCR to A	(CCR) ⇒ A	
TSX	Transfer SP to X	$(SP) \Rightarrow X$	
TSY	Transfer SP to Y	$(SP) \Rightarrow Y$	
TXS	Transfer X to SP	$(X) \Rightarrow SP$	
TYS	Transfer Y to SP	(Y) ⇒ SP	
	Exchange I	nstructions	
EXG	Exchange register to register	(A, B, CCR, D, X, Y, or SP) ⇔ (A, B, CCR, D, X, Y, or SP)	
XGDX	Exchange D with X	(D) ⇔ (X)	
XGDY	Exchange D with Y	(D) ⇔ (Y)	
	Sign Extension	n Instruction	
SEX	Sign extend 8-Bit operand	Sign-extended (A, B, or CCR) $\Rightarrow$ D, X, Y, or SP	

#### 5.5 Move Instructions

Move instructions move (copy) data bytes or words from a source  $(M_1 \text{ or } M : M + 1_1)$  to a destination  $(M_2 \text{ or } M : M + 1_2)$  in memory. Six combinations of immediate, extended, and indexed addressing are allowed to specify source and destination addresses (IMM  $\Rightarrow$  EXT,  $IMM \Rightarrow IDX$ , EXT  $\Rightarrow$  EXT, EXT  $\Rightarrow$  IDX, IDX  $\Rightarrow$  EXT, IDX  $\Rightarrow$  IDX). Addressing mode combinations with immediate for the destination would not be useful.

Table 5-3 shows byte and word move instructions.

Table 5-3. Move Instructions

Mnemonic	Function	Operation
MOVB	Move byte (8-bit)	$(M_1) \Rightarrow M_2$
MOVW	Move word (16-bit)	$(M:M+1_1) \Rightarrow M:M+1_2$

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 5.7 Binary-Coded Decimal Instructions

To add binary-coded decimal (BCD) operands, use addition instructions that set the half-carry bit in the CCR, then adjust the result with the decimal adjust A (DAA) instruction. Table 5-5 is a summary of instructions that can be used to perform BCD operations.

Table 5-5, BCD Instructions

Mnemonic	Function	Operation
ABA	Add B to A	(A) + (B) ⇒ A
ADCA	Add with carry to A	$(A) + (M) + C \Rightarrow A$
ADCB <sup>(1)</sup>	Add with carry to B	$(B) + (M) + C \Rightarrow B$
ADDA <sup>(1)</sup>	Add memory to A	$(A) + (M) \Rightarrow A$
ADDB	Add memory to B	$(B) + (M) \Rightarrow B$
DAA	Decimal adjust A	(A) <sub>10</sub>

These instructions are not normally used for BCD operations because, although they affect H
correctly, they do not leave the result in the correct accumulator (A) to be used with the DAA
instruction. Thus additional steps would be needed to adjust the result to correct BCD form.

## 5.8 Decrement and Increment Instructions

The decrement and increment instructions are optimized 8- and 16-bit addition and subtraction operations. They are generally used to implement counters. Because they do not affect the carry bit in the CCR, they are particularly well suited for loop counters in multiple-precision computation routines. Refer to 5.20 Loop Primitive Instructions for information concerning automatic counter branches. Table 5-6 is a summary of decrement and increment instructions.

Table 5-6. Decrement and Increment Instructions

Mnemonic	Function	Operation
	Decrement Instruction	ıs
DEC	Decrement memory	(M) – \$01 ⇒ M
DECA	Decrement A	(A) – \$01 ⇒ A
DECB	Decrement B	(B) – \$01 ⇒ B
DES	Decrement SP	(SP) – \$0001 ⇒ SP
DEX	Decrement X	(X) − \$0001 ⇒ X
DEY	Decrement Y	(Y) – \$0001 ⇒ Y
Increment Instructions		
INC	Increment memory	(M) + \$01 ⇒ M
INCA	Increment A	(A) + \$01 ⇒ A
INCB	Increment B	(B) + \$01 ⇒ B
INS	Increment SP	(SP) + \$0001 ⇒ SP
INX	Increment X	(X) + \$0001 ⇒ X
INY	Increment Y	(Y) + \$0001 ⇒ Y

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 5.10 Boolean Logic Instructions

The Boolean logic instructions perform a logic operation between an 8-bit accumulator or the CCR and a memory value. AND, OR, and exclusive OR functions are supported. **Table 5-8** summarizes logic instructions.

Table 5-8. Boolean Logic Instructions

Mnemonic	Function	Operation
ANDA	AND A with memory	(A) • (M) ⇒ A
ANDB	AND B with memory	(B) • (M) ⇒ B
ANDCC	AND CCR with memory (clear CCR bits)	(CCR) • (M) ⇒ CCR
EORA	Exclusive OR A with memory	$(A) \oplus (M) \Rightarrow A$
EORB	Exclusive OR B with memory	$(B) \oplus (M) \Rightarrow B$
ORAA	OR A with memory	$(A) + (M) \Rightarrow A$
ORAB	OR B with memory	$(B) + (M) \Rightarrow B$
ORCC	OR CCR with memory (set CCR bits)	$(CCR) + (M) \Rightarrow CCR$

## 5.11 Clear, Complement, and Negate Instructions

Each of the clear, complement, and negate instructions performs a specific binary operation on a value in an accumulator or in memory. Clear operations clear the value to 0, complement operations replace the value with its one's complement, and negate operations replace the value with its two's complement. Table 5-9 is a summary of clear, complement, and negate instructions.

Table 5-9. Clear, Complement, and Negate Instructions

Mnemonic	Function	Operation
CLC	Clear C bit in CCR	0 ⇒ C
CLI	Clear I bit in CCR	0 ⇒ I
CLR	Clear memory	\$00 ⇒ M
CLRA	Clear A	\$00 ⇒ A
CLRB	Clear B	\$00 ⇒ B
CLV	Clear V bit in CCR	0 ⇒ V
COM	One's complement memory	$FF - (M) \Rightarrow M \text{ or } (\overline{M}) \Rightarrow M$
COMA	One's complement A	$FF - (A) \Rightarrow A \text{ or } (\overline{A}) \Rightarrow A$
COMB	One's complement B	$FF - (B) \Rightarrow B \text{ or } (\overline{B}) \Rightarrow B$
NEG	Two's complement memory	$\$00 - (M) \Rightarrow M \text{ or } (\overline{M}) + 1 \Rightarrow M$
NEGA	Two's complement A	$\$00 - (A) \Rightarrow A \text{ or } (\overline{A}) + 1 \Rightarrow A$
NEGB	Two's complement B	$\$00 - (B) \Rightarrow B \text{ or } (\overline{B}) + 1 \Rightarrow B$

## S12CPUV2 Reference Manual, Rev. 4.0

## 5.9 Compare and Test Instructions

Compare and test instructions perform subtraction between a pair of registers or between a register and memory. The result is not stored, but condition codes are set by the operation. These instructions are generally used to establish conditions for branch instructions. In this architecture, most instructions update condition code bits automatically, so it is often unnecessary to include separate test or compare instructions. **Table 5-7** is a summary of compare and test instructions.

Table 5-7. Compare and Test Instructions

Mnemonic	Function	Operation
	Compare Instructions	
CBA	Compare A to B	(A) – (B)
CMPA	Compare A to memory	(A) – (M)
СМРВ	Compare B to memory	(B) – (M)
CPD	Compare D to memory (16-bit)	(A : B) – (M : M + 1)
CPS	Compare SP to memory (16-bit)	(SP) - (M : M + 1)
CPX	Compare X to memory (16-bit)	(X) - (M : M + 1)
CPY	Compare Y to memory (16-bit)	(Y) - (M : M + 1)
	Test Instructions	•
TST	Test memory for zero or minus	(M) - \$00
TSTA	Test A for zero or minus	(A) - \$00
TSTB	Test B for zero or minus	(B) - \$00

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 5.12 Multiplication and Division Instructions

There are instructions for signed and unsigned 8- and 16-bit multiplication. Eight-bit multiplication operations have a 16-bit product. Sixteen-bit multiplication operations have 32-bit products.

Integer and fractional division instructions have 16-bit dividend, divisor, quotient, and remainder. Extended division instructions use a 32-bit dividend and a 16-bit divisor to produce a 16-bit quotient and a 16-bit remainder.

Table 5-10 is a summary of multiplication and division instructions.

Table 5-10. Multiplication and Division Instructions

Mnemonic	Function	Operation
	Multiplication Instructions	
EMUL 16 by 16 multiply (unsigned)		$(D) \times (Y) \Rightarrow Y : D$
EMULS	16 by 16 multiply (signed)	$(D) \times (Y) \Rightarrow Y : D$
MUL	8 by 8 multiply (unsigned)	$(A) \times (B) \Rightarrow A : B$
Division Instructions		
EDIV	32 by 16 divide (unsigned)	$(Y : D) \div (X) \Rightarrow Y$ Remainder $\Rightarrow D$
EDIVS	32 by 16 divide (signed)	$(Y : D) \div (X) \Rightarrow Y$ Remainder $\Rightarrow D$
FDIV	16 by 16 fractional divide	$(D) \div (X) \Rightarrow X$ Remainder $\Rightarrow D$
IDIV	16 by 16 integer divide (unsigned)	$(D) \div (X) \Rightarrow X$ Remainder $\Rightarrow D$
IDIVS	16 by 16 integer divide (signed)	$(D) \div (X) \Rightarrow X$ Remainder $\Rightarrow D$

#### 5.13 Bit Test and Manipulation Instructions

The bit test and manipulation operations use a mask value to test or change the value of individual bits in an accumulator or in memory. Bit test A (BITA) and bit test B (BITB) provide a convenient means of testing bits without altering the value of either operand. Table 5-11 is a summary of bit test and manipulation instructions.

Table 5-11. Bit Test and Manipulation Instructions

Mnemonic	Function	Operation
BCLR	Clear bits in memory	$(M) \bullet (\overline{mm}) \Rightarrow M$
BITA	Bit test A	(A) • (M)
BITB	Bit test B	(B) • (M)
BSET	Set bits in memory	$(M) + (mm) \Rightarrow M$

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 5.15 Fuzzy Logic Instructions

The CPU12 instruction set includes instructions that support efficient processing of fuzzy logic operations. The descriptions of fuzzy logic instructions given here are functional overviews. Table 5-13 summarizes the fuzzy logic instructions. Refer to Section 9. Fuzzy Logic Support for detailed discussion.

## 5.15.1 Fuzzy Logic Membership Instruction

The membership function (MEM) instruction is used during the fuzzification process. During fuzzification, current system input values are compared against stored input membership functions to determine the degree to which each label of each system input is true. This is accomplished by finding the y value for the current input on a trapezoidal membership function for each label of each system input. The MEM instruction performs this calculation for one label of one system input. To perform the complete fuzzification task for a system, several MEM instructions must be executed, usually in a program loop structure.

## 5.15.2 Fuzzy Logic Rule Evaluation Instructions

The MIN-MAX rule evaluation (REV and REVW) instructions perform MIN-MAX rule evaluations that are central elements of a fuzzy logic inference program. Fuzzy input values are processed using a list of rules from the knowledge base to produce a list of fuzzy outputs. The REV instruction treats all rules as equally important. The REVW instruction allows each rule to have a separate weighting factor. The two rule evaluation instructions also differ in the way rules are encoded into the knowledge base. Because they require a number of cycles to execute, rule evaluation instructions can be interrupted. Once the interrupt has been serviced, instruction execution resumes at the point the interrupt occurred.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 67 68 Freescale Semiconductor

#### 5.14 Shift and Rotate Instructions

There are shifts and rotates for all accumulators and for memory bytes. All pass the shifted-out bit through the C status bit to facilitate multiple-byte operations. Because logical and arithmetic left shifts are identical, there are no separate logical left shift operations. Logic shift left (LSL) mnemonics are assembled as arithmetic shift left memory (ASL) operations. Table 5-12 shows shift and rotate instructions.

Table 5-12. Shift and Rotate Instructions

Mnemonic	Function	Operation	
Logical Shift		s	
LSL LSLA LSLB	Logic shift left memory Logic shift left A Logic shift left B	<u>C</u> ←∰—•	
LSLD	Logic shift left D	C b7 A b0 b7 B b0	
LSR LSRA LSRB	Logic shift right memory Logic shift right A Logic shift right B	0 → 1 1 1 1 0 C	
LSRD	Logic shift right D	0-b7 A b0 b7 B b0 C	
Arithmetic Shi		ifts	
ASL ASLA ASLB	Arithmetic shift left memory Arithmetic shift left A Arithmetic shift left B	C b7 b0 0	
ASLD	Arithmetic shift left D		
ASR ASRA ASRB	Arithmetic shift right memory Arithmetic shift right A Arithmetic shift right B		
Rotates			
ROL ROLA ROLB	ROLA Rotate left A through carry		
ROR RORA RORB	Rotate right memory through carry Rotate right A through carry Rotate right B through carry	right A through carry	

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

## 5.15.3 Fuzzy Logic Weighted Average Instruction

The weighted average (WAV) instruction computes a sum-of-products and a sum-of-weights used for defuzzification. To be usable, the fuzzy outputs produced by rule evaluation must be defuzzified to produce a single output value which represents the combined effect of all of the fuzzy outputs. Fuzzy outputs correspond to the labels of a system output and each is defined by a membership function in the knowledge base. The CPU12 typically uses singletons for output membership functions rather than the trapezoidal shapes used for inputs. As with inputs, the x-axis represents the range of possible values for a system output. Singleton membership functions consist of the x-axis position for a label of the system output. Fuzzy outputs correspond to the y-axis height of the corresponding output membership function. The WAV instruction calculates the numerator and denominator sums for a weighted average of the fuzzy outputs. Because WAV requires a number of cycles to execute, it can be interrupted. The WAVR pseudo-instruction causes execution to resume at the point where it was interrupted.

Table 5-13. Fuzzy Logic Instructions

Mnemonic Function	Operation
MEM Membership function	$\begin{array}{c} \mu \ (\operatorname{grade}) \Rightarrow M_{(Y)} \\ (X) + 4 \Rightarrow X; \ (Y) + 1 \Rightarrow Y; \ A \ \operatorname{unchanged} \\ if \ (A) < P1 \ \operatorname{or} \ (A) > P2, \ \operatorname{then} \ \mu = 0, \ \operatorname{else} \\ \mu = \operatorname{MIN} \left[ ((A) - P1) \times S1, \ (P2 - (A)) \times S2, \ \$FF \right] \\ \text{where:} \\ A = \operatorname{current \ crisp \ input \ value} \\ X \ \operatorname{points \ to} \ a \ 4 \ \operatorname{byte} \ \operatorname{data} \ \operatorname{structure} \\ \text{that} \ \operatorname{describes} \ a \ \operatorname{trapezoidal \ membership} \\ function \ \operatorname{as} \ \operatorname{base} \ \operatorname{intercept} \\ \operatorname{points} \ \operatorname{and} \ \operatorname{slopes} \ (P1, P2, S1, S2) \end{array}$

S12CPUV2 Reference Manual, Rev. 4.0

Continued on next page

Table 5-13. Fuzzy Logic Instructions (Continued)

Mnemonic	Function	Operation
		Find smallest rule input (MIN) Store to rule outputs unless fuzzy output is larger (MAX)
		Rules are unweighted
REV	REV MIN-MAX rule evaluation	Each rule input is an 8-bit offset from a base address in Y Each rule output is an 8-bit offset from a base address in Y \$FE separates rule inputs from rule outputs \$FF terminates the rule list
		REV can be interrupted
REVW	MIN-MAX rule evaluation	Find smallest rule input (MIN) Multiply by a rule weighting factor (optional) Store to rule outputs unless fuzzy output is larger (MAX)  Each rule input is the 16-bit address of a fuzzy input Each rule output is the 16-bit address of a fuzzy output Address \$FFFE separates rule inputs from rule outputs \$FFFE ferminates the rule list Weights are 8-bit values in a separate table REVW can be interrupted
WAV	Calculates numerator (sum of products) and denominator (sum of weights) for weighted average calculation Results are placed in correct registers for EDIV immediately after WAV	$\sum_{i=1}^{B} S_{i}F_{i} \Rightarrow Y:D$ $\sum_{i=1}^{B} F_{i} \Rightarrow X$
WAVR	Resumes execution of interrupted WAV instruction	Recover immediate results from stack rather than initializing them to 0.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 5.17 Multiply and Accumulate Instruction

Freescale Semiconductor

The multiply and accumulate (EMACS) instruction multiplies two 16-bit operands stored in memory and accumulates the 32-bit result in a third memory location. EMACS can be used to implement simple digital filters and defuzzification routines that use 16-bit operands. The WAV instruction incorporates an 8- to 16-bit multiply and accumulate operation that obtains a numerator for the weighted average calculation. The EMACS instruction can automate this portion of the averaging operation when 16-bit operands are used. Table 5-15 shows the EMACS instruction.

Table 5-15. Multiply and Accumulate Instructions

Mnemonic Function		Operation
EMACS	Multiply and accumulate (signed) 16 bit by 16 bit ⇒ 32 bit	$((M_{(X)}:M_{(X+1)}) \times (M_{(Y)}:M_{(Y+1)}))$ + $(M \sim M + 3) \Rightarrow M \sim M + 3$

#### 5.16 Maximum and Minimum Instructions

The maximum (MAX) and minimum (MIN) instructions are used to make comparisons between an accumulator and a memory location. These instructions can be used for linear programming operations, such as simplex-method optimization, or for fuzzification.

MAX and MIN instructions use accumulator A to perform 8-bit comparisons, while EMAX and EMIN instructions use accumulator D to perform 16-bit comparisons. The result (maximum or minimum value) can be stored in the accumulator (EMAXD, EMIND, MAXA, MINA) or the memory address (EMAXM, EMINM), MAXM, MINM).

Table 5-14 is a summary of minimum and maximum instructions.

Table 5-14. Minimum and Maximum Instructions

Mnemonic Function		Operation
Minimum Instruct		tions
EMIND	EMIND MIN of two unsigned 16-bit values result to accumulator MIN ((D), (M : M + 1))	
EMINM	$ \begin{array}{c c} \mbox{EMINM} & \mbox{MIN of two unsigned 16-bit values} \\ \mbox{result to memory} & \mbox{MIN ((D), (M:M+1))} \Rightarrow \mbox{M:} \\ \end{array} $	
MINA	MINA MIN of two unsigned 8-bit values result to accumulator MIN $((A), (M)) \Rightarrow A$	
$ \begin{array}{c c} \mbox{MINM} & \mbox{MIN of two unsigned 8-bit values} \\ \mbox{result to memory} & \mbox{MIN ((A), (M))} \Rightarrow \mbox{M} \\ \hline \mbox{Maximum Instructions} &  \end{array}$		$MIN ((A), (M)) \Rightarrow M$
		tions
EMAXD	MAX of two unsigned 16-bit values result to accumulator	$MAX\;((D),(M:M+1))\RightarrowD$
EMAXM	EMAXM MAX of two unsigned 16-bit values result to memory $ MAX ((D), (M:M+1)) \Rightarrow M: $	
$ \begin{array}{llllllllllllllllllllllllllllllllllll$		$MAX ((A), (M)) \Rightarrow A$
		$MAX ((A), (M)) \Rightarrow M$

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

## 5.18 Table Interpolation Instructions

The table interpolation instructions (TBL and ETBL) interpolate values from tables stored in memory. Any function that can be represented as a series of linear equations can be represented by a table of appropriate size. Interpolation can be used for many purposes, including tabular fuzzy logic membership functions. TBL uses 8-bit table entries and returns an 8-bit result; ETBL uses 16-bit table entries and returns a 16-bit result. Use of indexed addressing mode provides great flexibility in structuring tables.

Consider each of the successive values stored in a table to be y-values for the endpoint of a line segment. The value in the B accumulator before instruction execution begins represents the change in x from the beginning of the line segment to the lookup point divided by total change in x from the beginning to the end of the line segment. B is treated as an 8-bit binary fraction with radix point left of the MSB, so each line segment is effectively divided into 256 smaller segments. During instruction execution, the change in y between the beginning and end of the segment (a signed byte for TBL or a signed word for ETBL) is multiplied by the content of the B accumulator to obtain an intermediate delta-y term. The result (stored in the A accumulator by TBL, and in the D accumulator by ETBL) is the y-value of the beginning point plus the signed intermediate delta-y value. Table 5-16 shows the table interpolation instructions.

Table 5-16. Table Interpolation Instructions

Mnemonic	Function	Operation
ETBL	16-bit table lookup and interpolate (no indirect addressing modes allowed)	$\begin{aligned} (M:M+1) + [(B) \times ((M+2:M+3)\\ - (M:M+1)]] &\Rightarrow D \\ \text{Initialize B, and index before ETBL.} \\  \ points \ to \ the first table entry \ (M:M+1) \\ B \ is fractional part of lookup value \end{aligned}$
TBL	8-bit table lookup and interpolate (no indirect addressing modes allowed)	(M) + [(B) × ((M + 1) – (M))] ⇒ A Initialize B, and index before TBL. <a> points to the first 8-bit table entry (M) B is fractional part of lookup value.</a>

Freescale Semiconductor

#### 5.19 Branch Instructions

Branch instructions cause a sequence to change when specific conditions exist. The CPU12 uses three kinds of branch instructions. These are short branches, long branches, and bit condition branches.

Branch instructions can also be classified by the type of condition that must be satisfied in order for a branch to be taken. Some instructions belong to more than one classification. For example:

- · Unary branch instructions always execute.
- Simple branches are taken when a specific bit in the condition code register is in a specific state as a result of a previous operation.
- Unsigned branches are taken when comparison or test of unsigned quantities results in a specific combination of condition code register bits.
- Signed branches are taken when comparison or test of signed quantities results in a specific combination of condition code register bits.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 5.19.2 Long Branch Instructions

Long branch instructions operate this way: When a specified condition is met, a signed 16-bit offset is added to the value in the program counter. Program execution continues at the new address. Long branches are used when large displacements between decision-making steps are necessary.

The numeric range of long branch offset values is \$8000 (–32,768) to \$7FFF (32,767) from the address of the next memory location after the offset value. This permits branching from any location in the standard 64-Kbyte address map to any other location in the 64-Kbyte map.

Table 5-18 is a summary of the long branch instructions.

Table 5-18. Long Branch Instructions

Mnemonic	Function	Equation or Operation	
	Unary Branches		
LBRA	Long branch always	1 = 1	
LBRN	Long branch never	1 = 0	
	Simple Branches		
LBCC	Long branch if carry clear	C = 0	
LBCS	Long branch if carry set	C = 1	
LBEQ	Long branch if equal	Z = 1	
LBMI	Long branch if minus	N = 1	
LBNE	Long branch if not equal	Z = 0	
LBPL	Long branch if plus	N = 0	
LBVC	Long branch if overflow clear	V = 0	
LBVS	Long branch if overflow set	V = 1	
	Unsigned Branches		
LBHI	Long branch if higher	C + Z = 0	
LBHS	Long branch if higher or same	C = 0	
LBLO	Long branch if lower	Z = 1	
LBLS	Long branch if lower or same	C + Z = 1	
	Signed Branches		
LBGE	Long branch if greater than or equal	N ⊕ V = 0	
LBGT	Long branch if greater than	Z + (N ⊕ V) = 0	
LBLE	Long branch if less than or equal	Z + (N ⊕ V) = 1	
LBLT	Long branch if less than	N ⊕ V = 1	

## S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 75 76 Freescale Semiconductor

#### 5.19.1 Short Branch Instructions

Short branch instructions operate this way: When a specified condition is met, a signed 8-bit offset is added to the value in the program counter. Program execution continues at the new address.

The numeric range of short branch offset values is \$80 (-128) to \$7F (127) from the address of the next memory location after the offset value.

Table 5-17 is a summary of the short branch instructions.

Table 5-17. Short Branch Instructions

Mnemonic	Function		Equation or Operation	
	Unary Branches			
BRA	Branch always		1 = 1	
BRN	Branch never		1 = 0	
	Simple Brand	hes		
BCC	Branch if carry clear		C = 0	
BCS	Branch if carry set		C = 1	
BEQ	Branch if equal		Z = 1	
BMI	Branch if minus		N = 1	
BNE	Branch if not equal		Z = 0	
BPL	Branch if plus		N = 0	
BVC	Branch if overflow clear		V = 0	
BVS	Branch if overflow set		V = 1	
	Unsigned Bran	nches		
		Relation		
BHI	Branch if higher	R > M	C + Z = 0	
BHS	Branch if higher or same	R≥M	C = 0	
BLO	Branch if lower	R < M	C = 1	
BLS	Branch if lower or same	R≤M	C + Z = 1	
Signed Branches				
BGE	Branch if greater than or equal	R≥M	N ⊕ V = 0	
BGT	Branch if greater than	R > M	$Z + (N \oplus V) = 0$	
BLE	Branch if less than or equal	R≤M	Z + (N ⊕ V) = 1	
BLT	Branch if less than	R < M	N ⊕ V = 1	

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 5.19.3 Bit Condition Branch Instructions

The bit condition branches are taken when bits in a memory byte are in a specific state. A mask operand is used to test the location. If all bits in that location that correspond to ones in the mask are set (BRSET) or cleared (BRCLR), the branch is taken.

The numeric range of 8-bit offset values is \$80 (-128) to \$7F (127) from the address of the next memory location after the offset value.

Table 5-19 is a summary of bit condition branches.

Table 5-19. Bit Condition Branch Instructions

Mnemonic Function		Function	Equation or Operation
	BRCLR Branch if selected bits clear		(M) • (mm) = 0
	BRSET	Branch if selected bits set	$(\overline{M}) \bullet (mm) = 0$

#### 5.20 Loop Primitive Instructions

The loop primitives can also be thought of as counter branches. The instructions test a counter value in a register or accumulator (A, B, D, X, Y, or SP) for zero or non-zero value as a branch condition. There are predecrement, preincrement, and test-only versions of these instructions.

The numeric range of 9-bit offset values is \$100 (-256) to \$0FF (255) from the address of the next memory location after the offset value.

Table 5-20 is a summary of loop primitive branches.

Table 5-20. Loop Primitive Instructions

Mnemonic	Function	Equation or Operation
DBEQ	Decrement counter and branch if = 0 (counter = A, B, D, X, Y, or SP)	(counter) – 1⇒ counter If (counter) = 0, then branch; else continue to next instruction
DBNE	Decrement counter and branch if ≠ 0 (counter = A, B, D, X, Y, or SP)	(counter) – 1⇒ counter If (counter) not = 0, then branch; else continue to next instruction
IBEQ	Increment counter and branch if = 0 (counter = A, B, D, X, Y, or SP)	(counter) + 1⇒ counter If (counter) = 0, then branch; else continue to next instruction
IBNE	Increment counter and branch if ≠ 0 (counter = A, B, D, X, Y, or SP)	(counter) + 1⇒ counter If (counter) not = 0, then branch; else continue to next instruction
TBEQ	Test counter and branch if = 0 (counter = A, B, D, X,Y, or SP)	If (counter) = 0, then branch; else continue to next instruction
TBNE	Test counter and branch if ≠ 0 (counter = A, B, D, X,Y, or SP)	If (counter) not = 0, then branch; else continue to next instruction

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Table 5-21. Jump and Subroutine Instructions

Mnemonic	Function	Operation
BSR	Branch to subroutine	$\begin{array}{c} \text{SP-2} \Rightarrow \text{SP} \\ \text{RTN}_{\text{H}} : \text{RTN}_{\text{L}} \Rightarrow \text{M}_{(\text{SP})} : \text{M}_{(\text{SP+1})} \\ \text{Subroutine address} \Rightarrow \text{PC} \end{array}$
CALL	Call subroutine in expanded memory	$\begin{array}{c} SP-2 \Rightarrow SP \\ RTN_H : RTN_L \Rightarrow M_{(SP)} : M_{(SP+1)} \\ SP-1 \Rightarrow SP \\ (PPAGE) \Rightarrow M_{(SP)} \\ Page \Rightarrow PPAGE \\ Subroutine \ address \Rightarrow PC \end{array}$
JMP	Jump	Address ⇒ PC
JSR	Jump to subroutine	$\begin{array}{c} \text{SP-2} \Rightarrow \text{SP} \\ \text{RTN}_{\text{H}} : \text{RTN}_{\text{L}} \Rightarrow M_{(\text{SP})} : M_{(\text{SP+1})} \\ \text{Subroutine address} \Rightarrow \text{PC} \end{array}$
RTC	Return from call	$\begin{aligned} & M_{(SP)} \Rightarrow PPAGE \\ & SP + 1 \Rightarrow SP \\ & M_{(SP)} : M_{(SP+1)} \Rightarrow PC_{H} : PC_{L} \\ & SP + 2 \Rightarrow SP \end{aligned}$
RTS	Return from subroutine	$M_{(SP)}: M_{(SP+1)} \Rightarrow PC_H: PC_L$ $SP + 2 \Rightarrow SP$

## 5.22 Interrupt Instructions

Interrupt instructions handle transfer of control to a routine that performs a critical task. Software interrupts are a type of exception. Section 7.

Exception Processing covers interrupt exception processing in detail.

The software interrupt (SWI) instruction initiates synchronous exception processing. First, the return PC value is stacked. After CPU context is stacked, execution continues at the address pointed to by the SWI vector.

Execution of the SWI instruction causes an interrupt without an interrupt service request. SWI is not inhibited by global mask bits I and X in the CCR, and execution of SWI sets the I mask bit. Once an SWI interrupt begins, maskable interrupts are inhibited until the I bit in the CCR is cleared. This typically occurs when a return from interrupt (RTI) instruction at the end of the SWI service routine restores context.

The CPU12 uses a variation of the software interrupt for unimplemented opcode trapping. There are opcodes in all 256 positions in the page 1 opcode map, but only 54 of the 256 positions on page 2 of the opcode map

## S12CPUV2 Reference Manual. Rev. 4.0

## Freescale Semiconductor 79 80 Freescale Semiconductor

#### 5.21 Jump and Subroutine Instructions

Jump (JMP) instructions cause immediate changes in sequence. The JMP instruction loads the PC with an address in the 64-Kbyte memory map, and program execution continues at that address. The address can be provided as an absolute 16-bit address or determined by various forms of indexed addressing.

Subroutine instructions optimize the process of transferring control to a code segment that performs a particular task. A short branch (BSR), a jump to subroutine (JSR), or an expanded-memory call (CALL) can be used to initiate subroutines. There is no LBSR instruction, but a PC-relative JSR performs the same function. A return address is stacked, then execution begins at the subroutine address. Subroutines in the normal 64-Kbyte address space are terminated with a return-from-subroutine (RTS) instruction. RTS unstacks the return address so that execution resumes with the instruction after BSR or JSR.

The call subroutine in expanded memory (CALL) instruction is intended for use with expanded memory. CALL stacks the value in the PPAGE register and the return address, then writes a new value to PPAGE to select the memory page where the subroutine resides. The page value is an immediate operand in all addressing modes except indexed indirect modes; in these modes, an operand points to locations in memory where the new page value and subroutine address are stored. The return from call (RTC) instruction is used to terminate subroutines in expanded memory. RTC unstacks the PPAGE value and the return address so that execution resumes with the next instruction after CALL. For software compatibility, CALL and RTC execute correctly on devices that do not have expanded addressing capability. Table 5-21 summarizes the jump and subroutine instructions.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

are used. If the CPU attempts to execute one of the unimplemented opcodes on page 2, an opcode trap interrupt occurs. Traps are essentially interrupts that share the \$FFF8:\$FFF9 interrupt vector.

The RTI instruction is used to terminate all exception handlers, including interrupt service routines. RTI first restores the CCR, B:A, X, Y, and the return address from the stack. If no other interrupt is pending, normal execution resumes with the instruction following the last instruction that executed prior to interrupt.

Table 5-22 is a summary of interrupt instructions.

Table 5-22. Interrupt Instructions

Mnemonic	Function	Operation
RTI	Return from interrupt	$\begin{split} &(M_{(SP)}) \Rightarrow CCR; (SP) + \$0001 \Rightarrow SP \\ &(M_{(SP)} : M_{(SP+1)}) \Rightarrow B : A; (SP) + \$0002 \Rightarrow SP \\ &(M_{(SP)} : M_{(SP+1)}) \Rightarrow Y_H : X_L : (SP) + \$0004 \Rightarrow SP \\ &(M_{(SP)} : M_{(SP+1)}) \Rightarrow PC_H : PC_L : (SP) + \$0002 \Rightarrow SP \\ &(M_{(SP)} : M_{(SP+1)}) \Rightarrow Y_H : Y_L : (SP) + \$0004 \Rightarrow SP \end{split}$
SWI	Software interrupt	$\begin{split} &SP-2\Rightarrow SP; RTN_H: RTN_L\Rightarrow M_{(SP)}: M_{(SP+1)}\\ &SP-2\Rightarrow SP; V_H: V_L\Rightarrow M_{(SP)}: M_{(SP+1)}\\ &SP-2\Rightarrow SP; V_H: X_L\Rightarrow M_{(SP)}: M_{(SP+1)}\\ &SP-2\Rightarrow SP; B: A\Rightarrow M_{(SP)}: M_{(SP+1)}\\ &SP-1\Rightarrow SP; CCR\Rightarrow M_{(SP)} \end{split}$
TRAP	Unimplemented opcode interrupt	$\begin{split} SP-2 &\Rightarrow SP; RTN_H: RTN_L \Rightarrow M_{(SP)}: M_{(SP+1)} \\ SP-2 &\Rightarrow SP; Y_H: Y_L \Rightarrow M_{(SP)}: M_{(SP+1)} \\ SP-2 &\Rightarrow SP; X_H: X_L \Rightarrow M_{(SP)}: M_{(SP+1)} \\ SP-2 &\Rightarrow SP; B: A \Rightarrow M_{(SP)}: M_{(SP+1)} \\ SP-1 &\Rightarrow SP; CCR \Rightarrow M_{(SP)} \end{split}$

## 5.23 Index Manipulation Instructions

The index manipulation instructions perform 8- and 16-bit operations on the three index registers and accumulators, other registers, or memory, as shown in Table 5-23.

Table 5-23. Index Manipulation Instructions

Mnemonic	Function	Operation							
Addition Instructions									
ABX	Add B to X	$(B) + (X) \Rightarrow X$							
ABY	Add B to Y	$(B) + (Y) \Rightarrow Y$							
	Compare Instructions								
CPS	Compare SP to memory	(SP) – (M : M + 1)							
CPX	Compare X to memory	(X) – (M : M + 1)							
CPY	Compare Y to memory	(Y) – (M : M + 1)							
	Load Instruction	ns							
LDS	Load SP from memory	M : M+1 ⇒ SP							
LDX	Load X from memory	$(M:M+1) \Rightarrow X$							
LDY	Load Y from memory	$(M:M+1) \Rightarrow Y$							
LEAS	Load effective address into SP	Effective address ⇒ SP							
LEAX	Load effective address into X	Effective address $\Rightarrow$ X							
LEAY	Load effective address into Y	Effective address ⇒ Y							
	Store Instructions								
STS	Store SP in memory	(SP) ⇒ M:M+1							
STX	Store X in memory	(X) ⇒ M : M + 1							
STY Store Y in memory		(Y) ⇒ M : M + 1							
	Transfer Instructi	ons							
TFR	Transfer register to register	(A, B, CCR, D, X, Y, or SP) $\Rightarrow A, B, CCR, D, X, Y, or SP$							
TSX	Transfer SP to X	$(SP) \Rightarrow X$							
TSY	Transfer SP to Y	$(SP) \Rightarrow Y$							
TXS	transfer X to SP	$(X) \Rightarrow SP$							
TYS	transfer Y to SP	(Y) ⇒ SP							
	Exchange Instruct	ions							
EXG	Exchange register to register	(A, B, CCR, D, X, Y, or SP) ⇔ (A, B, CCR, D, X, Y, or SP)							
XGDX	EXchange D with X	(D) ⇔ (X)							
XGDY	EXchange D with Y	(D) ⇔ (Y)							

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 5.25 Pointer and Index Calculation Instructions

The load effective address instructions allow 5-, 8-, or 16-bit constants or the contents of 8-bit accumulators A and B or 16-bit accumulator D to be added to the contents of the X and Y index registers, or to the SP.

Table 5-25 is a summary of pointer and index instructions.

Table 5-25. Pointer and Index Calculation Instructions

Mnemonic	Function	Operation
LEAS	Load result of indexed addressing mode effective address calculation into stack pointer	$ \begin{array}{c} r \pm constant \Rightarrow SP \ or \\ (r) + (accumulator) \Rightarrow SP \\ r = X, \ Y, \ SP, \ or \ PC \end{array} $
LEAX	Load result of indexed addressing mode effective address calculation into x index register	$r \pm \text{constant} \Rightarrow X \text{ or}$ $(r) + (\text{accumulator}) \Rightarrow X$ r = X, Y, SP,  or  PC
LEAY	Load result of indexed addressing mode effective address calculation into y index register	$r \pm constant \Rightarrow Y \text{ or}$ $(r) + (accumulator) \Rightarrow Y$ r = X, Y, SP, or PC

## 5.24 Stacking Instructions

The two types of stacking instructions, are shown in Table 5-24. Stack pointer instructions use specialized forms of mathematical and data transfer instructions to perform stack pointer manipulation. Stack operation instructions save information on and retrieve information from the system stack.

Table 5-24. Stacking Instructions

Mnemonic Function		Operation		
Stack Poir		nter Instructions		
CPS	Compare SP to memory	(SP) – (M : M + 1)		
DES	Decrement SP	(SP) – 1 ⇒ SP		
INS	Increment SP	(SP) + 1 ⇒ SP		
LDS	Load SP	$(M:M+1) \Rightarrow SP$		
LEAS	Load effective address into SP	Effective address ⇒ SP		
STS	Store SP	(SP) ⇒ M : M + 1		
TSX	Transfer SP to X	$(SP) \Rightarrow X$		
TSY	Transfer SP to Y	$(SP) \Rightarrow Y$		
TXS	Transfer X to SP	$(X) \Rightarrow SP$		
TYS	Transfer Y to SP	$(Y) \Rightarrow SP$		
	Stack Opera	ation Instructions		
PSHA	Push A	$(SP) - 1 \Rightarrow SP; (A) \Rightarrow M_{(SP)}$		
PSHB	Push B	$(SP) - 1 \Rightarrow SP; (B) \Rightarrow M_{(SP)}$		
PSHC	Push CCR	$(SP) - 1 \Rightarrow SP; (A) \Rightarrow M_{(SP)}$		
PSHD	Push D	$(SP) - 2 \Rightarrow SP; (A : B) \Rightarrow M_{(SP)} : M_{(SP+1)}$		
PSHX	Push X	$(SP) - 2 \Rightarrow SP; (X) \Rightarrow M_{(SP)} : M_{(SP+1)}$		
PSHY	Push Y	$(SP) - 2 \Rightarrow SP; (Y) \Rightarrow M_{(SP)} : M_{(SP+1)}$		
PULA	Pull A	$(M_{(SP)}) \Rightarrow A; (SP) + 1 \Rightarrow SP$		
PULB	Pull B	$(M_{(SP)}) \Rightarrow B; (SP) + 1 \Rightarrow SP$		
PULC	Pull CCR	$(M_{(SP)}) \Rightarrow CCR; (SP) + 1 \Rightarrow SP$		
PULD	Pull D	$(M_{(SP)}: M_{(SP+1)}) \Rightarrow A : B; (SP) + 2 \Rightarrow SP$		
PULX	Pull X	$(M_{(SP)}: M_{(SP+1)}) \Rightarrow X; (SP) + 2 \Rightarrow SP$		
PULY	Pull Y	$(M_{(SP)}: M_{(SP+1)}) \Rightarrow Y; (SP) + 2 \Rightarrow SP$		

#### S12CPUV2 Reference Manual, Rev. 4.0

2 Freescale Semiconductor

## 5.26 Condition Code Instructions

Condition code instructions are special forms of mathematical and data transfer instructions that can be used to change the condition code register. **Table 5-26** shows instructions that can be used to manipulate the CCR.

Table 5-26. Condition Code Instructions

Mnemonic	Function	Operation
ANDCC	Logical AND CCR with memory	(CCR) • (M) ⇒ CCR
CLC	Clear C bit	0 ⇒ C
CLI	Clear I bit	0 ⇒ I
CLV	Clear V bit	0 ⇒ V
ORCC	Logical OR CCR with memory	$(CCR) + (M) \Rightarrow CCR$
PSHC	Push CCR onto stack (SP) – 1 ⇒ SP; (CCR)	
PULC	Pull CCR from stack	$(M_{(SP)}) \Rightarrow CCR; (SP) + 1 \Rightarrow SP$
SEC	Set C bit	1 ⇒ C
SEI	Set I bit	1 ⇒ I
SEV	Set V bit	1 ⇒ V
TAP	Transfer A to CCR	(A) ⇒ CCR
TPA	Transfer CCR to A	(CCR) ⇒ A

#### 5.27 Stop and Wait Instructions

As shown in Table 5-27, two instructions put the CPU12 in an inactive state that reduces power consumption.

The stop instruction (STOP) stacks a return address and the contents of CPU registers and accumulators, then halts all system clocks.

The wait instruction (WAI) stacks a return address and the contents of CPU registers and accumulators, then waits for an interrupt service request; however, system clock signals continue to run.

Both STOP and WAI require that either an interrupt or a reset exception occur before normal execution of instructions resumes. Although both instructions require the same number of clock cycles to resume normal program execution after an interrupt service request is made, restarting after a STOP requires extra time for the oscillator to reach operating speed.

Table 5-27. Stop and Wait Instructions

Mnemonic	Function	Operation			
STOP	Stop	$\begin{split} &SP-2\Rightarrow SP;RTN_H:RTN_L\Rightarrow M_{(SP)}:M_{(SP+1)}\\ &SP-2\Rightarrow SP;Y_H:Y_L\Rightarrow M_{(SP)}:M_{(SP+1)}\\ &SP-2\Rightarrow SP;X_H:X_L\Rightarrow M_{(SP)}:M_{(SP+1)}\\ &SP-2\Rightarrow SP;S=A\Rightarrow M_{(SP)}:M_{(SP+1)}\\ &SP-1\Rightarrow SP;CCR\Rightarrow M_{(SP)}\\ &SP-D=SP;CCR\Rightarrow M_{(SP)}\\ &SP-D=SP;CCR\Rightarrow M_{(SP)}\\ &SP=SP,CCR\Rightarrow M_{(SP)}\\ &SP=SP,$			
WAI	Wait for interrupt	$\begin{split} SP - 2 &\Rightarrow SP; RTN_H : RTN_L \Rightarrow M_{(SP)} : M_{(SP+1)} \\ SP - 2 &\Rightarrow SP; Y_H : Y_L \Rightarrow M_{(SP)} : M_{(SP+1)} \\ SP - 2 &\Rightarrow SP; X_H : X_L \Rightarrow M_{(SP)} : M_{(SP+1)} \\ SP - 2 &\Rightarrow SP, B : A \Rightarrow M_{(SP)} : M_{(SP+1)} \\ SP - 1 &\Rightarrow SP; CCR \Rightarrow M_{(SP)} \end{split}$			

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## Reference Manual — \$12CPUV2

## Section 6. Instruction Glossary

## 6.1 Introduction

This section is a comprehensive reference to the CPU12 instruction set.

## S12CPUV2 Reference Manual, Rev. 4.0

## Freescale Semiconductor 87 88 Freescale Semiconductor

#### 5.28 Background Mode and Null Operations

Background debug mode (BDM) is a special CPU12 operating mode that is used for system development and debugging. Executing enter background debug mode (BGND) when BDM is enabled puts the CPU12 in this mode. For complete information, refer to Section 8. Instruction Queue.

Null operations are often used to replace other instructions during software debugging. Replacing conditional branch instructions with branch never (BRN), for instance, permits testing a decision-making routine by disabling the conditional branch without disturbing the offset value.

Null operations can also be used in software delay programs to consume execution time without disturbing the contents of other CPU registers or memory.

Table 5-28 shows the BGND and null operation (NOP) instructions.

Table 5-28. Background Mode and Null Operation Instructions

Mnemonic	Function	Operation
BGND	Enter background debug mode	If BDM enabled, enter BDM; else resume normal processing
BRN	Branch never	Does not branch
LBRN	Long branch never	Does not branch
NOP	Null operation	1

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 6.2 Glossary Information

The glossary contains an entry for each assembler mnemonic, in alphabetic order. Figure 6-1 is a representation of a glossary page.

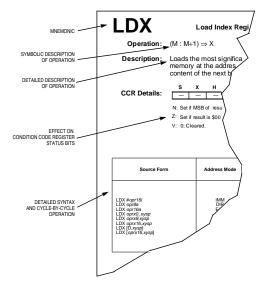


Figure 6-1. Example Glossary Page

Each entry contains symbolic and textual descriptions of operation, information concerning the effect of operation on status bits in the condition code register, and a table that describes assembler syntax, address mode variations, and cycle-by-cycle execution of the instruction.

#### 6.3 Condition Code Changes

The following special characters are used to describe the effects of instruction execution on the status bits in the condition code register.

- - Status bit not affected by operation
- 0 Status bit cleared by operation
- 1 Status bit set by operation
- $\Delta$  Status bit affected by operation
- Status bit may be cleared or remain set, but is not set by operation.
- Status bit may be set or remain cleared, but is not cleared by operation.
- ? Status bit may be changed by operation, but the final state is not defined.
- ! Status bit used for a special purpose

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## 6.5 Source Forms

The glossary pages provide only essential information about assembler source forms. Assemblers generally support a number of assembler directives, allow definition of program labels, and have special conventions for comments. For complete information about writing source files for a particular assembler, refer to the documentation provided by the assembler vendor.

Assemblers are typically flexible about the use of spaces and tabs. Often, any number of spaces or tabs can be used where a single space is shown on the glossary pages. Spaces and tabs are also normally allowed before and after commas. When program labels are used, there must also be at least one tab or space before all instruction mnemonics. This required space is not apparent in the source forms.

Everything in the source forms columns, except expressions in italic characters, is literal information which must appear in the assembly source file exactly as shown. The initial 3- to 5-letter mnemonic is always a literal expression. All commas, pound signs (#), parentheses, square brackets ( [ or ] ), plus signs (+), minus signs (–), and the register designation D (as in [D,...), are literal characters.

Groups of italic characters in the columns represent variable information to be supplied by the programmer. These groups can include any alphanumeric character or the underscore character, but cannot include a space or comma. For example, the groups xysp and oprx0\_xysp are both valid, but the two groups oprx0 xysp are not valid because there is a space between them. Permitted syntax is described here.

The definition of a legal label or expression varies from assembler to assembler. Assemblers also vary in the way CPU registers are specified. Refer to assembler documentation for detailed information. Recommended register designators are a, A, b, B, ccr, CCR, d, D, x, X, y, Y, sp, SP, pc, and PC

S12CPUV2 Reference Manual, Rev. 4.0

## S12CPUV2 Reference Manual, Rev. 4.0

## 6.4 Object Code Notation

The digits 0 to 9 and the uppercase letters A to F are used to express hexadecimal values. Pairs of lowercase letters represent the 8-bit values as described here.

- dd 8-bit direct address \$0000 to \$00FF; high byte assumed to be \$00
- High-order byte of a 16-bit constant offset for indexed addressing
- eb Exchange/transfer post-byte
- £f Low-order eight bits of a 9-bit signed constant offset for indexed addressing, or low-order byte of a 16-bit constant offset for indexed addressing
- hh High-order byte of a 16-bit extended address
- ii 8-bit immediate data value
- jj High-order byte of a 16-bit immediate data value
- kk Low-order byte of a 16-bit immediate data value
- 1b Loop primitive (DBNE) post-byte
- 11 Low-order byte of a 16-bit extended address
- mm 8-bit immediate mask value for bit manipulation instructions; set bits indicate bits to be affected
- pg Program overlay page (bank) number used in CALL instruction
- qq High-order byte of a 16-bit relative offset for long branches
- tn Trap number \$30-\$39 or \$40-\$FF
- rr Signed relative offset \$80 (-128) to \$7F (+127) offset relative to the byte following the relative offset byte, or low-order byte of a 16-bit relative offset for long branches
- xb Indexed addressing post-byte

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

- abc Any one legal register designator for accumulators A or B or the CCR
- abcdxys Any one legal register designator for accumulators A or B, the CCR, the double accumulator D, index registers X or Y, or the SP. Some assemblers may accept 12, T2, 13, or T3 codes in certain cases of transfer and exchange instructions, but these forms are intended for Freescale use only.
  - abd Any one legal register designator for accumulators A or B or the double accumulator D
  - abdxys Any one legal register designator for accumulators A or B, the double accumulator D, index register X or Y, or the
  - dxys Any one legal register designation for the double accumulator D, index registers X or Y, or the SP
  - msk8 Any label or expression that evaluates to an 8-bit value.

    Some assemblers require a # symbol before this value.
  - opr8i Any label or expression that evaluates to an 8-bit immediate value
  - opr16i Any label or expression that evaluates to a 16-bit immediate value
  - opr8a Any label or expression that evaluates to an 8-bit value. The instruction treats this 8-bit value as the low-order 8 bits of an address in the direct page of the 64-Kbyte address space (\$00xx).
- opr16a Any label or expression that evaluates to a 16-bit value. The instruction treats this value as an address in the 64-Kbyte address space.

Freescale Semiconductor 91 92 Freescale Semiconductor

oprx0\_xysp — This word breaks down into one of the following alternative forms that assemble to an 8-bit indexed addressing postbyte code. These forms generate the same object code except for the value of the postbyte code, which is designated as xb in the object code columns of the glossary pages. As with the source forms, treat all commas, plus signs, and minus signs as literal syntax elements. The italicized words used in these forms are included in this key.

oprx5,xysp oprx3,-xys oprx3,+xys oprx3,xysoprx3,xys+ abd,xysp

- $\it{oprx3}$  Any label or expression that evaluates to a value in the range +1 to +8
- oprx5 Any label or expression that evaluates to a 5-bit value in the range –16 to +15
- oprx9 Any label or expression that evaluates to a 9-bit value in the range –256 to +255
- oprx16 Any label or expression that evaluates to a 16-bit value. Since the CPU12 has a 16-bit address bus, this can be either a signed or an unsigned value.
- page Any label or expression that evaluates to an 8-bit value. The CPU12 recognizes up to an 8-bit page value for memory expansion but not all MCUs that include the CPU12 implement all of these bits. It is the programmer's responsibility to limit the page value to legal values for the intended MCU system. Some assemblers require a # symbol before this value.
- rel8 Any label or expression that refers to an address that is within –128 to +127 locations from the next address after the last byte of object code for the current instruction. The assembler will calculate the 8-bit signed offset and include it in the object code for this instruction.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

example of a best-case system is a single-chip 16-bit system with no 16-bit off-boundary data accesses to any locations other than on-chip RAM.

Many conditions can cause one or more instruction cycles to be stretched, but the CPU is not aware of the stretch delays because the clock to the CPU is temporarily stopped during these delays.

The following paragraphs explain the cycle code letters used and note conditions that can cause each type of cycle to be stretched.

- f Free cycle. This indicates a cycle where the CPU does not require use of the system buses. An f cycle is always one cycle of the system bus clock. These cycles can be used by a queue controller or the background debug system to perform single cycle accesses without disturbing the CPU.
- g Read 8-bit PPAGE register. These cycles are used only with the CALL instruction to read the current value of the PPAGE register and are not visible on the external bus. Since the PPAGE register is an internal 8-bit register, these cycles are never stretched.
- I Read indirect pointer. Indexed indirect instructions use this 16-bit pointer from memory to address the operand for the instruction. These are always 16-bit reads but they can be either aligned or misaligned. These cycles are extended to two bus cycles if the MCU is operating with an 8-bit external data bus and the corresponding data is stored in external memory. There can be additional stretching when the address space is assigned to a chip-select circuit programmed for slow memory. These cycles are also stretched if they correspond to misaligned access to a memory that is not designed for single-cycle misaligned access.
- i Read indirect PPAGE value. These cycles are only used with indexed indirect versions of the CALL instruction, where the 8-bit value for the memory expansion page register of the CALL destination is fetched from an indirect memory location. These cycles are stretched only when controlled by a chip-select circuit that is programmed for slow memory.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 95 96 Freescale Semiconductor

- rel9 Any label or expression that refers to an address that is within -256 to +255 locations from the next address after the last byte of object code for the current instruction. The assembler will calculate the 9-bit signed offset and include it in the object code for this instruction. The sign bit for this 9-bit value is encoded by the assembler as a bit in the looping postbyte (lb) of one of the loop control instructions DBEQ, DBNE, IBEQ, IBNE, TBEQ, or TBNE. The remaining eight bits of the offset are included as an extra byte of object code.
- re/16 Any label or expression that refers to an address anywhere in the 64-Kbyte address space. The assembler will calculate the 16-bit signed offset between this address and the next address after the last byte of object code for this instruction and include it in the object code for this instruction.
- trapnum Any label or expression that evaluates to an 8-bit number in the range \$30–\$39 or \$40–\$FF. Used for TRAP instruction.
  - xys Any one legal register designation for index registers X or Y or the SP
  - xysp Any one legal register designation for index registers X or Y, the SP, or the PC. The reference point for PC-relative instructions is the next address after the last byte of object code for the current instruction.

## 6.6 Cycle-by-Cycle Execution

This information is found in the tables at the bottom of each instruction glossary page. Entries show how many bytes of information are accessed from different areas of memory during the course of instruction execution. With this information and knowledge of the type and speed of memory in the system, a user can determine the execution time for any instruction in any system.

A single letter code in the column represents a single CPU cycle. Uppercase letters indicate 16-bit access cycles. There are cycle codes for each addressing mode variation of each instruction. Simply count code letters to determine the execution time of an instruction in a best-case system. An

#### S12CPUV2 Reference Manual, Rev. 4.0

4 Freescale Semiconductor

- n Write 8-bit PPAGE register. These cycles are used only with the CALL and RTC instructions to write the destination value of the PPAGE register and are not visible on the external bus. Since the PPAGE register is an internal 8-bit register, these cycles are never
- O Optional cycle. Program information is always fetched as aligned 16-bit words. When an instruction consists of an odd number of bytes, and the first byte is misaligned, an O cycle is used to make an additional program word access (P) cycle that maintains queue order. In all other cases, the O cycle appears as a free (f) cycle. The \$18 prebyte for page two opcodes is treated as a special 1-byte instruction. If the prebyte is misaligned, the O cycle is used as a program word access for the prebyte; if the prebyte is aligned, the O cycle appears as a free cycle. If the remainder of the instruction consists of an odd number of bytes, another O cycle is required some time before the instruction is completed. If the O cycle for the prebyte is treated as a P cycle, any subsequent O cycle in the same instruction is treated as an f cycle; if the O cycle for the prebyte is treated as an f cycle, any subsequent O cycle in the same instruction is treated as a P cycle. Optional cycles used for program word accesses can be extended to two bus cycles if the MCU is operating with an 8-bit external data bus and the program is stored in external memory. There can be additional stretching when the address space is assigned to a chip-select circuit programmed for slow memory. Optional cycles used as free cycles are never stretched.
- P Program word access. Program information is fetched as aligned 16-bit words. These cycles are extended to two bus cycles if the MCU is operating with an 8-bit external data bus and the program is stored externally. There can be additional stretching when the address space is assigned to a chip-select circuit programmed for slow memory.

- r 8-bit data read. These cycles are stretched only when controlled by a chip-select circuit programmed for slow memory.
- R 16-bit data read. These cycles are extended to two bus cycles if the MCU is operating with an 8-bit external data bus and the corresponding data is stored in external memory. There can be additional stretching when the address space is assigned to a chip-select circuit programmed for slow memory. These cycles are also stretched if they correspond to misaligned accesses to memory that is not designed for single-cycle misaligned access.
- S Stack 8-bit data. These cycles are stretched only when controlled by a chip-select circuit programmed for slow memory.
- S Stack 16-bit data. These cycles are extended to two bus cycles if the MCU is operating with an 8-bit external data bus and the SP is pointing to external memory. There can be additional stretching if the address space is assigned to a chip-select circuit programmed for slow memory. These cycles are also stretched if they correspond to misaligned accesses to a memory that is not designed for single cycle misaligned access. The internal RAM is designed to allow single cycle misaligned word access.
- w 8-bit data write. These cycles are stretched only when controlled by a chip-select circuit programmed for slow memory.
- W 16-bit data write. These cycles are extended to two bus cycles if the MCU is operating with an 8-bit external data bus and the corresponding data is stored in external memory. There can be additional stretching when the address space is assigned to a chip-select circuit programmed for slow memory. These cycles are also stretched if they correspond to misaligned access to a memory that is not designed for single-cycle misaligned access.
- U Unstack 8-bit data. These cycles are stretched only when controlled by a chip-select circuit programmed for slow memory.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## Special Notation for Branch Taken/Not Taken Cases

PPP/P — Short branches require three cycles if taken, one cycle if not taken. Since the instruction consists of a single word containing both an opcode and an 8-bit offset, the not-taken case is simple — the queue advances, another program word fetch is made, and execution continues with the next instruction. The taken case requires that the queue be refilled so that execution can continue at a new address. First, the effective address of the destination is determined, then the CPU performs three program word fetches from that address.

OPPP/OPO - Long branches require four cycles if taken, three cycles if not taken. Optional cycles are required because all long branches are page two opcodes, and thus include the \$18 prebyte. The CPU12 treats the prebyte as a special 1-byte instruction. If the prebyte is misaligned, the optional cycle is used to perform a program word access; if the prebyte is aligned, the optional cycle is used to perform a free cycle. As a result, both the taken and not-taken cases use one optional cycle for the prebyte. In the not-taken case, the queue must advance so that execution can continue with the next instruction, and another optional cycle is required to maintain the queue. The taken case requires that the queue be refilled so that execution can continue at a new address. First, the effective address of the destination is determined, then the CPU performs three program word fetches from that address.

## 6.7 Glossary

This subsection contains an entry for each assembler mnemonic, in alphabetic order.

S12CPUV2 Reference Manual, Rev. 4.0

- U Unstack 16-bit data. These cycles are extended to two bus cycles if the MCU is operating with an 8-bit external data bus and the SP is pointing to external memory. There can be additional stretching when the address space is assigned to a chip-select circuit programmed for slow memory. These cycles are also stretched if they correspond to misaligned accesses to a memory that is not designed for single-cycle misaligned access. The internal RAM is designed to allow single-cycle misaligned word access.
- V Vector fetch. Vectors are always aligned 16-bit words. These cycles are extended to two bus cycles if the MCU is operating with an 8-bit external data bus and the program is stored in external memory. There can be additional stretching when the address space is assigned to a chip-select circuit programmed for slow memory.
- t 8-bit conditional read. These cycles are either data read cycles or unused cycles, depending on the data and flow of the REVW instruction. These cycles are stretched only when controlled by a chip-select circuit programmed for slow memory.
- T 16-bit conditional read. These cycles are either data read cycles or free cycles, depending on the data and flow of the REV or REVW instruction. These cycles are extended to two bus cycles if the MCU is operating with an 8-bit external data bus and the corresponding data is stored in external memory. There can be additional stretching when the address space is assigned to a chip-select circuit programmed for slow memory. These cycles are also stretched if they correspond to misaligned accesses to a memory that is not designed for single-cycle misaligned access.
- x 8-bit conditional write. These cycles are either data write cycles or free cycles, depending on the data and flow of the REV or REVW instruction. These cycles are only stretched when controlled by a chip-select circuit programmed for slow memory.

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

# **ABA**

## Add Accumulator B to Accumulator A



Operation:  $(A) + (B) \Rightarrow A$ 

Description: (A) + (B) ⇒ (B)

Adds the content of accumulator B to the content of accumulator A and places the result in A. The content of B is not changed. This instruction affects the H status bit so it is suitable for use in BCD arithmetic operations. See DAA instruction for additional information.

CCR Details:

S	X	Н	ı	N	Z	٧	С
-	-	Δ	-	Δ	Δ	Δ	Δ

- H: A3 B3 + B3  $\overline{R3}$  +  $\overline{R3}$  A3
- Set if there was a carry from bit 3; cleared otherwise
- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- /: A7 B7 R7 + Ā7 B7 R7 Set if a two's complement overflow resulted from the operation; cleared otherwise
- C: A7 B7 + B7 R7 + R7 A7 Set if there was a carry from the MSB of the result; cleared otherwise

	Source Form	Address	Ob:+ C	Access Detail	
	Source Form	orm Mode Object Code	Object Code	HCS12	M68HC12
Į	ABA	INH	18 06	00	00

## Add Accumulator B to Index Register X



Operation:  $(B) + (X) \Rightarrow X$ 

Description:

Adds the 8-bit unsigned content of accumulator B to the content of index register X considering the possible carry out of the low-order byte of X; places the result in X. The content of B is not changed.

This mnemonic is implemented by the LEAX B,X instruction. The LEAX instruction allows A. B. D. or a constant to be added to X. For compatibility with the M68HC11, the mnemonic ABX is translated into the LEAX B,X

instruction by the assembler.

**CCR Details:** 

s	X	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address Mode	Object Code	Access Detail	M68HC12
ABX translates to LEAX B,X	IDX	1A E5	Pf	PP <sup>(1)</sup>

Due to internal M68HC12 CPU requirements, the program word fetch is performed twice to the same address during this instruction.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## **ADCA**

Add with Carry to A

# **ADCA**

Operation:  $(A) + (M) + C \Rightarrow A$ 

Description:

Adds the content of accumulator A to the content of memory location M, then adds the value of the C bit and places the result in A. This instruction affects the H status bit, so it is suitable for use in BCD arithmetic operations. See DAA instruction for additional information.

**CCR Details:** 

s	X	н	1	N	Z	٧	С	
-	-	Δ	-	Δ	Δ	Δ	Δ	

H: A3 • M3 + M3 •  $\overline{R3}$  +  $\overline{R3}$  • A3

Set if there was a carry from bit 3; cleared otherwise

N: Set if MSB of result is set: cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: A7 • M7 • <del>R7</del> + <del>A7</del> • <del>M7</del> • R7

Set if two's complement overflow resulted from the operation: cleared otherwise

C: A7 • M7 + M7 • <del>R7</del> + <del>R7</del> • A7

Set if there was a carry from the MSB of the result; cleared otherwise

Source Form	Address	Object Code	Ac	cess Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ADCA #opr8i	IMM	89 ii	P	P
ADCA opr8a	DIR	99 dd	rPf	rfP
ADCA opr16a	EXT	B9 hh 11	rPO	rOP
ADCA oprx0_xysp	IDX	A9 xb	rPf	rfP
ADCA oprx9,xysp	IDX1	A9 xb ff	rPO	rPO
ADCA oprx16,xysp	IDX2	A9 xb ee ff	frPP	frPP
ADCA [D,xysp]	[D,IDX]	A9 xb	fIfrPf	fIfrfP
ADCA [oprx16,xysp]	[IDX2]	A9 xb ee ff	fIPrPf	fIPrfP

# ΔRY

#### Add Accumulator B to Index Register Y

**ARY** 

Operation:  $(B) + (Y) \Rightarrow Y$ 

Description:

Adds the 8-bit unsigned content of accumulator B to the content of index register Y considering the possible carry out of the low-order byte of Y;

places the result in Y. The content of B is not changed.

This mnemonic is implemented by the LEAY B,Y instruction. The LEAY instruction allows A. B. D. or a constant to be added to Y. For compatibility with the M68HC11, the mnemonic ABY is translated into the LEAY B,Y instruction by the assembler.

CCR Details:

s	X	н	1	N	z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address Mode	Object Code	HCS12	Access Detail M68HC12
ABY translates to LEAY B,Y	IDX	19 ED	Pf	PP <sup>(1)</sup>

Due to internal M68HC12CPU requirements, the program word fetch is performed twice to the same address during this instruction.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

# **ADCB**

102

Add with Carry to B

ADCB

Operation:  $(B) + (M) + C \Rightarrow B$ 

Description:

Adds the content of accumulator B to the content of memory location M, then adds the value of the C bit and places the result in B. This instruction affects the H status bit, so it is suitable for use in BCD arithmetic operations.

See DAA instruction for additional information.

CCR Details:

S	X	Н	1	N	Z	٧	С	
-	-	Δ	-	Δ	Δ	Δ	Δ	1

H: X3 • M3 + M3 •  $\overline{R3}$  +  $\overline{R3}$  • X3

Set if there was a carry from bit 3: cleared otherwise

N: Set if MSB of result is set: cleared otherwise

Z: Set if result is \$00; cleared otherwise

V:  $X7 \bullet M7 \bullet \overline{R7} + \overline{X7} \bullet \overline{M7} \bullet R7$ 

Set if two's complement overflow resulted from the operation: cleared otherwise

C: X7 • M7 + M7 • <del>R7</del> + <del>R7</del> • X7

Set if there was a carry from the MSB of the result; cleared otherwise

Source Form	Address	Object Code	Acces	ss Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ADCB #opr8i	IMM	C9 ii	P	P
ADCB opr8a	DIR	D9 dd	rPf	rfP
ADCB opr16a	EXT	F9 hh 11	rPO	rOP
ADCB oprx0_xysp	IDX	E9 xb	rPf	rfP
ADCB oprx9,xysp	IDX1	E9 xb ff	rPO	rPO
ADCB oprx16,xysp	IDX2	E9 xb ee ff	frPP	frPP
ADCB [D,xysp]	[D,IDX]	E9 xb	fIfrPf	fIfrfP
ADCB [oprx16,xysp]	[IDX2]	E9 xb ee ff	fIPrPf	fIPrfP

# ΔΠΠΔ

#### Add without Carry to A

## ADDA

Operation:  $(A) + (M) \Rightarrow A$ 

Description: Adds the content of memory location M to accumulator A and places the

result in A. This instruction affects the H status bit, so it is suitable for use in BCD arithmetic operations. See DAA instruction for additional information.

**CCR Details:** 

SXHINZVC - Δ - Δ Δ Δ Δ

H: A3 • M3 + M3 •  $\overline{\text{R3}}$  +  $\overline{\text{R3}}$  • A3

Set if there was a carry from bit 3; cleared otherwise

N: Set if MSB of result is set; cleared otherwise

Set if result is \$00; cleared otherwise

 $A7 \bullet M7 \bullet \overline{R7} + \overline{A7} \bullet \overline{M7} \bullet R7$ 

Set if two's complement overflow resulted from the operation; cleared otherwise

C: A7 • M7 + M7 •  $\overline{R7}$  +  $\overline{R7}$  • A7 Set if there was a carry from the MSB of the result; cleared

otherwise

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
ADDA #opr8i	IMM	8B ii	P	P
ADDA opr8a	DIR	9B dd	rPf	rfP
ADDA opr16a	EXT	BB hh 11	rPO	rOP
ADDA oprx0_xysp	IDX	AB xb	rPf	rfP
ADDA oprx9,xysp	IDX1	AB xb ff	rPO	rPO
ADDA oprx16,xysp	IDX2	AB xb ee ff	frPP	frPP
ADDA [D,xysp]	[D,IDX]	AB xb	fIfrPf	fIfrfP
ADDA [oprx16,xysp]	[IDX2]	AB xb ee ff	fIPrPf	fIPrfP

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## **ADDD**

Add Double Accumulator

ADDD

Operation:  $(A:B) + (M:M+1) \Rightarrow A:B$ 

Adds the content of memory location M concatenated with the content of Description:

memory location M +1 to the content of double accumulator D and places the result in D. Accumulator A forms the high-order half of 16-bit double

accumulator D: accumulator B forms the low-order half.

**CCR Details:** 

S X H I N Z V C - - Δ Δ Δ Δ

N: Set if MSB of result is set: cleared otherwise

Z: Set if result is \$0000; cleared otherwise D15 • M15 • R15 + D15 • M15 • R15

Set if two's complement overflow resulted from the operation; cleared otherwise

C: D15 • M15 + M15 • R15 + R15 • D15 Set if there was a carry from the MSB of the result; cleared

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
ADDD #opr16i	IMM	C3 jj kk	PO	OP
ADDD opr8a	DIR	D3 dd	RPf	RfP
ADDD opr16a	EXT	F3 hh 11	RPO	ROP
ADDD oprx0_xysp	IDX	E3 xb	RPf	RfP
ADDD oprx9,xysp	IDX1	E3 xb ff	RPO	RPO
ADDD oprx16,xysp	IDX2	E3 xb ee ff	fRPP	fRPP
ADDD [D,xysp]	[D,IDX]	E3 xb	fIfRPF	fIfRfP
ADDD [oprx16,xysp]	[IDX2]	E3 xb ee ff	fIPRPf	fIPRfP

ADDR

Add without Carry to B

ADDR

Operation:  $(B) + (M) \Rightarrow B$ 

Adds the content of memory location M to accumulator B and places the Description:

result in B. This instruction affects the H status bit, so it is suitable for use in BCD arithmetic operations. See DAA instruction for additional information.

SXHINZVC **CCR Details:** - - Δ - Δ Δ Δ Δ

H: B3 • M3 + M3 •  $\overline{\text{R3}}$  +  $\overline{\text{R3}}$  • B3

Set if there was a carry from bit 3; cleared otherwise

Set if MSB of result is set; cleared otherwise

Set if result is \$00; cleared otherwise

B7 • M7 • <del>R7</del> + <del>B7</del> • <del>M7</del> • R7

Set if two's complement overflow resulted from the operation; cleared otherwise

C: B7 • M7 + M7 •  $\overline{R7}$  +  $\overline{R7}$  • B7

Set if there was a carry from the MSB of the result; cleared otherwise

Source Form	Address	Object Code	Ac	cess Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ADDB #opr8i	IMM	CB ii	P	P
ADDB opr8a	DIR	DB dd	rPf	rfP
ADDB opr16a	EXT	FB hh 11	rPO	rOP
ADDB oprx0_xysp	IDX	EB xb	rPf	rfP
ADDB oprx9,xysp	IDX1	EB xb ff	rPO	rPO
ADDB oprx16,xysp	IDX2	EB xb ee ff	frPP	frPP
ADDB [D,xysp]	[D,IDX]	EB xb	fIfrPf	fIfrfP
ADDB [oprx16,xysp]	[IDX2]	EB xb ee ff	fIPrPf	fIPrfP

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

# **ANDA**

106

Logical AND A

Operation: (A) • (M) ⇒ A

Description:

Performs logical AND between the content of memory location M and the

content of accumulator A. The result is placed in A. After the operation is performed, each bit of A is the logical AND of the corresponding bits of M

and of A before the operation began.

CCR Details:

SXHINZVC - - Δ Δ 0 -

N: Set if MSB of result is set: cleared otherwise

Z: Set if result is \$00; cleared otherwise

0; cleared.

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ANDA #opr8i	IMM	84 ii	P	P
ANDA opr8a	DIR	94 dd	rPf	rfP
ANDA opr16a	EXT	B4 hh 11	rPO	rOP
ANDA oprx0_xysp	IDX	A4 xb	rPf	rfP
ANDA oprx9,xysp	IDX1	A4 xb ff	rPO	rPO
ANDA oprx16,xysp	IDX2	A4 xb ee ff	frPP	frPP
ANDA [D,xysp]	[D,IDX]	A4 xb	fIfrPf	fIfrfP
ANDA [oprx16,xysp]	[IDX2]	A4 xb ee ff	fIPrPf	fIPrfP

## **ANDB**

Logical AND B

**ANDB** 

Operation: (B)  $\bullet$  (M)  $\Rightarrow$  B

Description: Performs logical AND between the content of memory location M and the

content of accumulator B. The result is placed in B. After the operation is performed, each bit of B is the logical AND of the corresponding bits of M  $\,$ 

and of B before the operation began.

**CCR Details:** 

s	Х	н	ı	N	z	V	С
-	-	-	-	Δ	Δ	0	-

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: 0; cleared

Source Form	Address	Object Code	Acc	cess Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ANDB #opr8i	IMM	C4 ii	P	P
ANDB opr8a	DIR	D4 dd	rPf	rfP
ANDB opr16a	EXT	F4 hh 11	rPO	rOP
ANDB oprx0_xysp	IDX	E4 xb	rPf	rfP
ANDB oprx9,xysp	IDX1	E4 xb ff	rPO	rPO
ANDB oprx16,xysp	IDX2	E4 xb ee ff	frPP	frPP
ANDB [D,xysp]	[D,IDX]	E4 xb	fIfrPf	fIfrfP
ANDB [oprx16,xysp]	[IDX2]	E4 xb ee ff	fIPrPf	fIPrfP

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 109

**ASL** 

Arithmetic Shift Left Memory (same as LSL)

ASL

Operation:

Description:

Shifts all bits of memory location M one bit position to the left. Bit 0 is loaded with a 0. The C status bit is loaded from the most significant bit of M.

CCR Details:

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V:  $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)
- C: M7

Set if the MSB of M was set before the shift; cleared otherwise

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ASL opr16a	EXT	78 hh 11	rPwO	rOPw
ASL oprx0_xysp	IDX	68 xb	rPw	rPw
ASL oprx9,xysp	IDX1	68 xb ff	rPwO	rPOw
ASL oprx16,xysp	IDX2	68 xb ee ff	frPwP	frPPw
ASL [D,xysp]	[D,IDX]	68 xb	fIfrPw	fIfrPw
ASL [oprx16,xysp]	[IDX2]	68 xb ee ff	fIPrPw	fIPrPw

S12CPUV2 Reference Manual, Rev. 4.0

# **ANDCC**

Logical AND CCR with Mask

## ANDCC

Operation: (CCR) • (Mask) ⇒ CCR

Description:

Performs bitwise logical AND between the content of a mask operand and the content of the CCR. The result is placed in the CCR. After the operation is performed, each bit of the CCR is the result of a logical AND with the corresponding bits of the mask. To clear CCR bits, clear the corresponding mask bits. CCR bits that correspond to ones in the mask are not changed by the ANDCC operation.

If the I mask bit is cleared, there is a 1-cycle delay before the system allows interrupt requests. This prevents interrupts from occurring between instructions in the sequences CLI, WAI and CLI, STOP (CLI is equivalent to ANDCC #SEF).

CCR Details:

s	X	Н	ı	N	Z	٧	С
↓	↓	↓	↓	↓	↓	↓	↓

Condition code bits are cleared if the corresponding bit was 0 before the operation or if the corresponding bit in the mask is 0.

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ANDCC #opr8i	IMM	10 ii	P	P

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor


# **ASLA**

110

Arithmetic Shift Left A (same as LSLA)

**ASLA** 

Operation:



Description: Shifts all bits of accumulator A one bit position to the left. Bit 0 is loaded with

a 0. The C status bit is loaded from the most significant bit of A.

CCR Details:



- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: N ⊕ C = [N C̄] + [N̄ C] (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)
- C: A7

Set if the MSB of A was set before the shift; cleared otherwise


Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ASLA	INH	48	0	0

**ASLB** 

Arithmetic Shift Left B (same as LSLB)

**ASLE** 

Operation:



Description:

Shifts all bits of accumulator B one bit position to the left. Bit 0 is loaded with a 0. The C status bit is loaded from the most significant bit of B.

**CCR Details:** 

	s	X	Н	ı	N	Z	٧	С
ſ	-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V:  $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)
- C: B7

Set if the MSB of B was set before the shift; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
ASLB	INH	58	1	0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 113

**ASR** 

Arithmetic Shift Right Memory

ASR

Operation:



Description:

Shifts all bits of memory location M one place to the right. Bit 7 is held constant. Bit 0 is loaded into the C status bit. This operation effectively divides a two's complement value by two without changing its sign. The carry bit can be used to round the result.

**CCR Details:** 

S	X	Н	1	N	Z	٧	С	
<u> </u>	-	-	-	Δ	Δ	Δ	Δ	Ì

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: N ⊕ C = [N C̄] + [N̄ C] (for N and C after the shift)

  Set if (N is set and C is cleared) or (N is cleared and C is set);
  cleared otherwise (for values of N and C after the shift)
- C: M0

Set if the LSB of M was set before the shift; cleared otherwise


Source Form	Address	Object Code Access Detail		Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ASR opr16a	EXT	77 hh 11	rPwO	rOPw
ASR oprx0_xysp	IDX	67 xb	rPw	rPw
ASR oprx9,xysp	IDX1	67 xb ff	rPwO	rPOw
ASR oprx16,xysp	IDX2	67 xb ee ff	frPwP	frPPw
ASR [D,xysp]	[D,IDX]	67 xb	fIfrPw	fIfrPw
ASR [oprx16,xysp]	[IDX2]	67 xb ee ff	fIPrPw	fIPrPw

**ASLD** 

# Arithmetic Shift Left Double Accumulator (same as LSLD)

ASI D

Operation:



Description:

Shifts all bits of double accumulator D one bit position to the left. Bit 0 is loaded with a 0. The C status bit is loaded from the most significant bit of D.

CCR Details:

s	Х	Н	1	N	Z	٧	С	
-	-	-	-	Δ	Δ	Δ	Δ	

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V:  $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)
- C: D15

Set if the MSB of D was set before the shift; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
ASLD	INH	59	0	0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**ASRA** 

114

Arithmetic Shift Right A

**ASRA** 

Operation:



Description:

Shifts all bits of accumulator A one place to the right. Bit 7 is held constant. Bit 0 is loaded into the C status bit. This operation effectively divides a two's complement value by two without changing its sign. The carry bit can be used to round the result.

CCR Details:

S	X	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: N ⊕ C = [N C̄] + [N̄ C] (for N and C after the shift)

  Set if (N is set and C is cleared) or (N is cleared and C is set);
  cleared otherwise (for values of N and C after the shift)
- C: A0

Set if the LSB of A was set before the shift; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
ASRA	INH	47	0	0

**ASRB** 

Arithmetic Shift Right B

**ASRB** 

Operation:



Description:

Shifts all bits of accumulator B one place to the right. Bit 7 is held constant. Bit 0 is loaded into the C status bit. This operation effectively divides a two's complement value by two without changing its sign. The carry bit can be used to round the result.

CCR Details:

S	Х	Н	ı	N	Z	٧	С
_	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: N ⊕ C = [N C̄] + [N̄ C̄] (for N and C after the shift)
   Set if (N is set and C is cleared) or (N is cleared and C is set);
   cleared otherwise (for values of N and C after the shift)
- C: B0

Set if the LSB of B was set before the shift; cleared otherwise

Source Form	Address	Object Code	Acces	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12		
ASRB	INH	57	0	0		

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 1

**BCLR** 

Clear Bits in Memory

**BCLR** 

Operation:

 $(\mathsf{M}) \bullet (\overline{\mathsf{Mask}}) \Rightarrow \mathsf{M}$ 

Description:

Clears bits in location M. To clear a bit, set the corresponding bit in the mask byte. Bits in M that correspond to 0s in the mask byte are not changed. Mask

bytes can be located at PC + 2, PC + 3, or PC + 4, depending on addressing mode used.

CCR Details:

S	X	Н	ı	N	Z	٧	С
-	-	-	-	Δ	Δ	0	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared

Source Form	Address Mode <sup>(1)</sup>	Object Code	Access Detail		
oource i oiiii		Object Code	HCS12	M68HC12	
BCLR opr8a, msk8	DIR	4D dd mm	rPwO	rPOw	
BCLR opr16a, msk8	EXT	1D hh 11 mm	rPwP	rPPw	
BCLR oprx0_xysp, msk8	IDX	0D xb mm	rPwO	rPOw	
BCLR oprx9,xysp, msk8	IDX1	0D xb ff mm	rPwP	rPwP	
BCLR oprx16,xysp, msk8	IDX2	OD xb ee ff mm	frPwPO	frPwOP	

Indirect forms of indexed addressing cannot be used with this instruction.

BCC

Branch if Carry Cleared (Same as BHS)

BCC

Operation: If C = 0, then (PC) +  $\$0002 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the C status bit and branches if C = 0.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details: S X H I N Z V C

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
BCC rel8	REL	24 rr	PPP/P(1)	PPP/P(1)	

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program
fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch				
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment	
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed	
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed	
r≤m	BLE	2F	Z + (N ⊕ V) = 1	r>m	BGT	2E	Signed	
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed	
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned	
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned	
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned	
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned	
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple	
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple	
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple	
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple	
Always	BRA	20	_	Never	BRN	21	Unconditional	

S12CPUV2 Reference Manual, Rev. 4.0

118 Freescale Semiconductor

BCS

Branch if Carry Set (Same as BLO) **BCS** 

**Operation:** If C = 1, then (PC) +  $\$0002 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the C status bit and branches if C = 1.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

 S	Х	н		N	z	٧	С
_	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Gource Form	Mode	Object Code	HCS12	M68HC12	
BCS rel8	REL	25 rr	PPP/P <sup>(1)</sup>	PPP/P(1)	

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch				
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment	
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed	
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed	
r≤m	BLE	2F	Z + (N ⊕ V) = 1	r>m	BGT	2E	Signed	
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed	
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned	
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned	
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned	
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned	
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple	
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple	
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple	
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple	
Always	BRA	20	_	Never	BRN	21	Unconditional	

 $\mathsf{BEQ}$ 

## **Branch if Equal**

**BEQ** 

**Operation:** If Z = 1, then (PC) +  $\$0002 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the Z status bit and branches if Z = 1.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

s	Х	Н	ı	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Oource roini	Mode	Object Code	HCS12	M68HC12	
BEQ rel8	REL	27 rr	PPP/P(1)	PPP/P <sup>(1)</sup>	

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch				
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment	
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed	
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed	
r≤m	BLE	2F	Z + (N ⊕ V) = 1	r>m	BGT	2E	Signed	
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed	
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned	
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned	
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned	
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned	
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple	
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple	
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple	
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple	
Always	BRA	20	_	Never	BRN	21	Unconditional	

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 121

# **BGND**

## Enter Background Debug Mode

# **BGND**

## Description:

BGND operates like a software interrupt, except that no registers are stacked. First, the current PC value is stored in internal CPU register TMP2. Next, the BDM ROM and background register block become active. The BDM ROM contains a substitute vector, mapped to the address of the software interrupt vector, which points to routines in the BDM ROM that control background operation. The substitute vector is fetched, and execution continues from the address that it points to. Finally, the CPU checks the location that TMP2 points to. If the value stored in that location is \$00 (the BGND opcode), TMP2 is incremented, so that the instruction that follows the BGND instruction is the first instruction executed when normal program execution resumes.

For all other types of BDM entry, the CPU performs the same sequence of operations as for a BGND instruction, but the value stored in TMP2 already points to the instruction that would have executed next had BDM not become active. If active BDM is triggered just as a BGND instruction is about to execute, the BDM firmware does increment TMP2, but the change does not affect resumption of normal execution.

While BDM is active, the CPU executes debugging commands received via a special single-wire serial interface. BDM is terminated by the execution of specific debugging commands. Upon exit from BDM, the background/boot ROM and registers are disabled, the instruction queue is refilled starting with the return address pointed to by TMP2, and normal processing resumes.

BDM is normally disabled to avoid accidental entry. While BDM is disabled, BGND executes as described, but the firmware causes execution to return to the user program. Refer to Section 8. Instruction Queue for more information concerning BDM.

CCR Details:



Source Form	Address	Object Code	Acces	s Detail
Source Form	Mode	Object Code	HCS12	M68HC12
BGND	INH	00	VfPPP	VfPPP

## BGE

#### Branch if Greater than or Equal to Zero

**BGF** 

**Operation:** If N  $\oplus$  V = 0, then (PC) + \$0002 + Rel  $\Rightarrow$  PC

S X H I N Z V C

For signed two's complement values

if (Accumulator) ≥ (Memory), then branch

**Description:** BGE can be used to branch after comparing or subtracting signed two's

complement values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is greater than or equal to the value in M. After CBA or SBA, the branch occurs if the value in B is greater than or equal to the value in A.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

	A	ddre	ss	Τ.	Ohio	at Ca	do	Access Detail
_	-	-	_	_	_	_	-	

	Source Form	Address	Object Code		Access Detail
	Source Form	Mode	Object Code	HCS12	M68HC12
ĺ	BGE rel8	REL	2C rr	PPP/P(1)	PPP/P <sup>(1)</sup>

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program
fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch				
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment	
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed	
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed	
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed	
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed	
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned	
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned	
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned	
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned	
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple	
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple	
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple	
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple	
Always	BRA	20	_	Never	BRN	21	Unconditional	

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

# **BGT**

122

## Branch if Greater than Zero

# **BGT**

Freescale Semiconductor

**Operation:** If  $Z + (N \oplus V) = 0$ , then (PC) + \$0002 + Rel  $\Rightarrow$  PC

For signed two's complement values if (Accumulator) > (Memory), then branch

Description:

BGT can be used to branch after comparing or subtracting signed two's complement values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is greater than the value in M. After CBA or SBA, the branch occurs if the value in B is greater than the value in A.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

S	Х	Н	- 1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
BGT rel8	REL	2E rr	PPP/P(1)	PPP/P(1)	

1. PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch				
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment	
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed	
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed	
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed	
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed	
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned	
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned	
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned	
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned	
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple	
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple	
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple	
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple	
Always	BRA	20	_	Never	BRN	21	Unconditional	

BHI

## Branch if Higher

BHI

**Operation:** If C + Z = 0, then  $(PC) + \$0002 + Rel \Rightarrow PC$ 

For unsigned values, if (Accumulator) > (Memory), then branch

Description:

BHI can be used to branch after comparing or subtracting unsigned values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is greater than the value in M. After CBA or SBA, the branch occurs if the value in B is greater than the value in A. BHI should not be used for branching after instructions that do not affect the C bit, such as increment, decrement, load, store, test, clear, or complement.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

S	Х	Н	ı	N	z	V	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Source i oilli	Mode	Object Code	HCS12	M68HC12	
BHI rel8	REL	22 rr	PPP/P(1)	PPP/P(1)	

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch				
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment	
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed	
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed	
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed	
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed	
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned	
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned	
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned	
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned	
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple	
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple	
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple	
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple	
Always	BRA	20	_	Never	BRN	21	Unconditional	

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 12

**BITA** 

Bit Test A

BITA

Operation: (A)  $\bullet$  (M)

Description:

Performs bitwise logical AND on the content of accumulator A and the content of memory location M and modifies the condition codes accordingly. Each bit of the result is the logical AND of the corresponding bits of the accumulator and the memory location. Neither the content of the accumulator nor the content of the memory location is affected.

CCR Details:

S	Х	н		N	Z	٧	С
_	-	-	-	Δ	Δ	0	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared

Source Form	Address	Object Code	Access Detail	
Source I offit	Mode	Object Code	HCS12	M68HC12
BITA #opr8i	IMM	85 ii	P	P
BITA opr8a	DIR	95 dd	rPf	rfP
BITA opr16a	EXT	B5 hh 11	rPO	rOP
BITA oprx0_xysp	IDX	A5 xb	rPf	rfP
BITA oprx9,xysp	IDX1	A5 xb ff	rPO	rPO
BITA oprx16,xysp	IDX2	A5 xb ee ff	frPP	frPP
BITA [D,xysp]	[D,IDX]	A5 xb	fIfrPf	fIfrfP
BITA [oprx16,xysp]	[IDX2]	A5 xb ee ff	fIPrPf	fIPrfP

BHS

# Branch if Higher or Same (Same as BCC)

**RHS** 

Operation: If C = 0, then  $(PC) + \$0002 + Rel \Rightarrow PC$ 

For unsigned values, if (Accumulator) ≥ (Memory), then branch

Description:

BHS can be used to branch after subtracting or comparing unsigned values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBA, or SUBD, the branch occurs if the CPU register value is greater than or equal to the value in M. After CBA or SBA, the branch occurs if the value in B is greater than or equal to the value in A. BHS should not be used for branching after instructions that do not affect the C bit, such as increment, decrement, load, store, test, clear, or complement.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

	-	-	-	-	-	-	-	-
_								

SXHINZVC

Source Form	Address	Object Code	Access Detail		
Course Form	Mode	Object Code	HCS12	M68HC12	
BHS rel8	REL	24 rr	PPP/P <sup>(1)</sup>	PPP/P <sup>(1)</sup>	

 PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch					
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment		
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed		
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed		
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed		
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed		
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed		
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned		
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned		
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned		
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned		
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned		
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple		
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple		
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple		
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple		
Always	BRA	20	_	Never	BRN	21	Unconditional		

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**BITB** 

126

Bit Test B

**BITB** 

Operation: (B)  $\bullet$  (M)

Description:

Performs bitwise logical AND on the content of accumulator B and the content of memory location M and modifies the condition codes accordingly. Each bit of the result is the logical AND of the corresponding bits of the accumulator and the memory location. Neither the content of the accumulator nor the content of the memory location is affected.

CCR Details:

S	X	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	0	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared

Source Form	Address	Object Code	Acc	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12		
BITB #opr8i	IMM	C5 ii	P	P		
BITB opr8a	DIR	D5 dd	rPf	rfP		
BITB opr16a	EXT	F5 hh 11	rPO	rOP		
BITB oprx0_xysp	IDX	E5 xb	rPf	rfP		
BITB oprx9,xysp	IDX1	E5 xb ff	rPO	rPO		
BITB oprx16,xysp	IDX2	E5 xb ee ff	frPP	frPP		
BITB [D,xysp]	[D,IDX]	E5 xb	fIfrPf	fIfrfP		
BITB [oprx16,xysp]	[IDX2]	E5 xb ee ff	fIPrPf	fIPrfP		

 $\mathsf{BLE}$ 

#### Branch if Less Than or Equal to Zero

**BLE** 

Operation: If  $Z + (N \oplus V) = 1$ , then (PC) + \$0002 + Rel  $\Rightarrow$  PC

For signed two's complement numbers if (Accumulator) ≤ (Memory), then branch

Description:

BLE can be used to branch after subtracting or comparing signed two's complement values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is less than or equal to the value in M. After CBA or SBA, the branch occurs if the value in B is less than or equal to the value in A.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

S	Х	н		N	Z	٧	C
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Course Form	Mode	Object Code	HCS12	M68HC12	
BLE rel8	REL	2F rr	PPP/P <sup>(1)</sup>	PPP/P <sup>(1)</sup>	

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch					
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment		
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed		
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed		
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed		
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed		
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed		
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned		
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned		
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned		
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned		
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned		
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple		
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple		
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple		
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple		
Always	BRA	20	_	Never	BRN	21	Unconditional		

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 12

BLS Branch if Lower or Same

BLS

 $\textbf{Operation:} \quad \text{If } C+Z=1, \text{ then (PC)} + \$0002 + \text{Rel} \Rightarrow PC$ 


For unsigned values, if (Accumulator)  $\leq$  (Memory), then branch

Description:

If BLS is executed immediately after execution of CBA, CMPA, CMPB, CMPD, CPX, CPY, SBA, SUBA, SUBB, or SUBD, a branch occurs if and only if the unsigned binary number in the accumulator is less than or equal to the unsigned binary number in memory. Generally not useful after INC/DEC, LD/ST, and TST/CLR/COM because these instructions do not affect the C status bit

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:



Source Form	Address	Object Code		Access Detail	
Source i oilli	Mode	Object Code	HCS12	M68HC12	
BLS rel8	REL	23 rr	PPP/P(1)	PPP/P(1)	

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch				
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment	
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed	
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed	
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed	
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed	
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned	
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned	
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned	
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned	
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned	
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple	
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple	
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple	
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple	
Always	BRA	20	_	Never	BRN	21	Unconditional	

Branch if Lower (Same as BCS)

BI O

Operation: If C = 1, then (PC) +  $\$0002 + Rel \Rightarrow PC$ 

For unsigned values, if (Accumulator) < (Memory), then branch

Description:

BLO can be used to branch after subtracting or comparing unsigned values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBA, or SUBD, the branch occurs if the CPU register value is less than the value in M. After CBA or SBA, the branch occurs if the value in B is less than the value in A. BLO should not be used for branching after instructions that do not affect the C bit, such as increment, decrement, load, store, test, clear, or complement.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

	3	^		•	14	_	٧	٠
	-	-	-		-	-	-	-

Source Form	Address	Object Code	Access Detail		
Source i oilli	Mode	Object Code	HCS12	M68HC12	
BLO rel8	REL	25 rr	PPP/P <sup>(1)</sup>	PPP/P <sup>(1)</sup>	

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch					
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment		
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed		
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed		
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed		
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed		
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed		
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned		
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned		
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned		
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned		
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned		
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple		
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple		
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple		
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple		
Always	BRA	20	_	Never	BRN	21	Unconditional		

S12CPUV2 Reference Manual, Rev. 4.0

130 Freescale Semiconductor

**BLT** 

Branch if Less than Zero

**BLT** 

 $\textbf{Operation:} \quad \text{If N} \oplus \text{V} = \text{1, then (PC)} + \$0002 + \text{Rel} \Rightarrow \text{PC}$ 


For signed two's complement numbers if (Accumulator) < (Memory), then branch

Description:

BLT can be used to branch after subtracting or comparing signed two's complement values. After CMPA, CMPB, CMPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is less than the value in M. After CBA or SBA, the branch occurs if the value in B is less than the value in A.

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 



Source Form	Address	Object Code		Access Detail
Source i oilli	Mode	Object Code	HCS12	M68HC12
BLT rel8	REL	2D rr	PPP/P <sup>(1)</sup>	PPP/P <sup>(1)</sup>

<sup>1.</sup> PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program

	Br	anch			Complement	tary Branch	1
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple
Always	BRA	20	_	Never	BRN	21	Unconditional

BMI

Branch if Minus

**BMI** 

Branch if Not Equal to Zero

**BNE** 

PPP/P(1)

**Operation:** If N = 1, then (PC) +  $\$0002 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the N status bit and branches if N = 1.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

S X H I N Z V C

Source Form	Address	Object Code	Access D	etail
Octave i cimi	Mode	Object Code	HCS12	M68HC12
BMI rel8	REL	2B rr	PPP/P <sup>(1)</sup>	PPP/P <sup>(1)</sup>

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch					
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment		
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed		
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed		
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed		
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed		
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed		
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned		
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned		
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned		
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned		
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned		
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple		
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple		
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple		
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple		
Always	BRA	20	_	Never	BRN	21	Unconditional		

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 133

Branch if Plus

BPL

- —

BPI


**Operation:** If N = 0, then  $(PC) + \$0002 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the N status bit and branches if N = 0.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:



Source Form	Address	Object Code	Acce	ess Detail	
Oource roini	Mode	Object Code	HCS12	M68HC12	
BPL rel8	REL	2A rr	PPP/P(1)	PPP/P(1)	

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch			Complement	tary Branch	1
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed
r≤m	BLE	2F	Z + (N ⊕ V) = 1	r>m	BGT	2E	Signed
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple
Always	BRA	20	_	Never	BRN	21	Unconditiona

**Operation:** If Z = 0, then (PC) +  $\$0002 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the Z status bit and branches if Z = 0.

RFI

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

BNE

Source F

BNE rel8

	Ē	_	_	_	_	_	_						
Form		A	ddre	ss	Ι.	Obje	-+ C-	do		Access D	etail		
-OI III		- 1	Mode	•	'	Juje		ue	HCS12			M68HC12	

PPP/P(1

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program
fetch cycle if the branch is not taken.

26 rr

	Br	anch			Complemen	tary Branch	1
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple
Always	BRA	20	_	Never	BRN	21	Unconditional

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**BRA** 

134

**Branch Always** 

BRA

 $\textbf{Operation:} \quad (PC) + \$0002 + Rel \Rightarrow PC$ 

**Description:** Unconditional branch to a

Unconditional branch to an address calculated as shown in the expression. Rel is a relative offset stored as a two's complement number in the second

byte of the branch instruction.

Execution time is longer when a conditional branch is taken than when it is not, because the instruction queue must be refilled before execution resumes at the new address. Since the BRA branch condition is always satisfied, the branch is always taken, and the instruction queue must always be refilled.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

s	Х	н		N	Z	٧	С
_	-	-	-	-	-	ı	-

Source Form	Address	Object Code	Access Detail	
Source i oiiii	Mode	Object Code	HCS12	M68HC12
BRA rel8	REL	20 rr	PPP	PPP

## BRCLR

Branch if Bits Cleared

**BRCLR** 

Operation: If (M) ● (Mask) = 0, then branch

**Description:** Performs a bitwise logical AND of memory location M and the mask supplied

with the instruction, then branches if and only if all bits with a value of 1 in the mask byte correspond to bits with a value of 0 in the tested byte. Mask operands can be located at PC + 1, PC + 2, or PC + 4, depending on addressing mode. The branch offset is referenced to the next address after the relative offset (rr) which is the last byte of the instruction object code.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

s	X	Н	-1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address Object Code		Access Detail		
Source Form	Mode <sup>(1)</sup>	Object Code	HCS12	M68HC12	
BRCLR opr8a, msk8, rel8	DIR	4F dd mm rr	rPPP	rPPP	
BRCLR opr16a, msk8, rel8	EXT	1F hh 11 mm rr	rfPPP	rfPPP	
BRCLR oprx0_xysp, msk8, rel8	IDX	0F xb mm rr	rPPP	rPPP	
BRCLR oprx9,xysp, msk8, rel8	IDX1	OF xb ff mm rr	rfPPP	rffPPP	
BRCLR oprx16,xysp, msk8, rel8	IDX2	OF xb ee ff mm rr	PrfPPP	frPffPPP	

<sup>1.</sup> Indirect forms of indexed addressing cannot be used with this instruction.

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

# **BRSET**

Branch if Bits Set

# **BRSET**

**Operation:** If  $(\overline{M}) \bullet (Mask) = 0$ , then branch


Description: Performs a

Performs a bitwise logical AND of the inverse of memory location M and the mask supplied with the instruction, then branches if and only if all bits with a value of 1 in the mask byte correspond to bits with a value of one in the tested byte. Mask operands can be located at PC + 1, PC + 2, or PC + 4, depending on addressing mode. The branch offset is referenced to the next address after the relative offset (rr) which is the last byte of the instruction

object code.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:



Source Form	Address Object Code		Access Detail	
Source Form	Mode <sup>(1)</sup>	Object Code	HCS12 M68HC12	
BRSET opr8a, msk8, rel8	DIR	4E dd mm rr	rPPP rPPP	
BRSET opr16a, msk8, rel8	EXT	1E hh 11 mm rr	rfPPP rfPPP	
BRSET oprx0_xysp, msk8, rel8	IDX	0E xb mm rr	rPPP rPPP	
BRSET oprx9,xysp, msk8, rel8	IDX1	0E xb ff mm rr	rfPPP rffPPP	
BRSET oprx16,xysp, msk8, rel8	IDX2	0E xb ee ff mm rr	PrfPPP frPffPPP	

S12CPUV2 Reference Manual, Rev. 4.0

## BRN

#### Branch Never

BRN

Operation: (PC) +  $\$0002 \Rightarrow PC$ 

Description:

Never branches. BRN is effectively a 2-byte NOP that requires one cycle to execute. BRN is included in the instruction set to provide a complement to the BRA instruction. The instruction is useful during program debug, to negate the effect of another branch instruction without disturbing the offset byte. A complement for BRA is also useful in compiler implementations.

Execution time is longer when a conditional branch is taken than when it is not, because the instruction queue must be refilled before execution resumes at the new address. Since the BRN branch condition is never satisfied, the branch is never taken, and only a single program fetch is needed to update the instruction queue.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

s	Х	н	1	N	z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code		Access Detail
Source i oilli	Mode	Object Code	HCS12	M68HC12
BRN rel8	REL	21 rr	P	P

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## **BSET**

## Set Bit(s) in Memory

# **BSET**

Operation:  $(M) + (Mask) \Rightarrow M$ 

**Description:** Sets bits in memory location M. To set a bit, set the corresponding bit in the mask byte. All other bits in M are unchanged. The mask byte can be located

at PC + 2, PC + 3, or PC + 4, depending upon addressing mode.

CCR Details:



N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: 0; cleared

Source Form	Address	Object Code	Access Detail		
Source Form	Mode <sup>(1)</sup>	Object Code	HCS12	M68HC12	
BSET opr8a, msk8	DIR	4C dd mm	rPw0	rPOw	
BSET opr16a, msk8	EXT	1C hh 11 mm	rPwP	rPPw	
BSET oprx0_xysp, msk8	IDX	0C xb mm	rPwO	rPOw	
BSET oprx9,xysp, msk8	IDX1	OC xb ff mm	rPwP	rPwP	
BSET oprx16,xysp, msk8	IDX2	OC xb ee ff mm	frPwPO	frPwOP	

<sup>1.</sup> Indirect forms of indexed addressing cannot be used with this instruction.

Indirect forms of indexed addressing cannot be used with this instruction.

BSR

#### **Branch to Subroutine**

**BSR** 

**Branch if Overflow Cleared** 

Operation:  $(SP) - \$0002 \Rightarrow SP$ 

 $RTN_H : RTN_L \Rightarrow M_{(SP)} : M_{(SP+1)}$ 

(PC) + Rel ⇒ PC

Description:

Sets up conditions to return to normal program flow, then transfers control to a subroutine. Uses the address of the instruction after the BSR as a return

Decrements the SP by two, to allow the two bytes of the return address to be stacked.

Stacks the return address (the SP points to the high-order byte of the return

address).

Branches to a location determined by the branch offset.

Subroutines are normally terminated with an RTS instruction, which

restores the return address from the stack.

**CCR Details:** 

s	X	Н	ı	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Acces	s Detail
Source Form	Mode	Object Code	HCS12	M68HC12
BSR rel8	REL	07 rr	SPPP	PPPS

#### S12CPUV2 Reference Manual, Rev. 4.0

141 Freescale Semiconductor

**BVS Branch if Overflow Set** 

Operation: If V = 1, then (PC) +  $$0002 + Rel \Rightarrow PC$ 


Simple branch

Description: Tests the V status bit and branches if V = 1.

> BVS causes a branch when a previous operation on two's complement binary values causes an overflow. That is, when BVS follows a two's complement operation, a branch occurs when the result of the operation is invalid.

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 



Source Form	Address	Object Code	Access De	tail
Source Form	Mode	Object Code	HCS12	M68HC12
BVS rel8	REL	29 rr	PPP/P <sup>(1)</sup>	PPP/P <sup>(1)</sup>

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

Branch			Complementary Branch				
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple
Always	BRA	20	_	Never	BRN	21	Unconditional

Operation: If V = 0, then (PC) +  $$0002 + Rel \Rightarrow PC$ 

Simple branch

Description: Tests the V status bit and branches if V = 0.

> BVC causes a branch when a previous operation on two's complement binary values does not cause an overflow. That is, when BVC follows a two's complement operation, a branch occurs when the result of the operation is

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 

- - - - - - -

Source Form	Address	Object Code	Access Deta	nil
Source Form	Mode	Object Code	HCS12	M68HC12
BVC rel8	REL	28 rr	PPP/P <sup>(1)</sup>	PPP/P <sup>(1)</sup>

PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple
Always	BRA	20	_	Never	BRN	21	Unconditional

## S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## CALL

142

## **Call Subroutine in Expanded Memory**

CALL

 $(\text{SP}) - \$0002 \Rightarrow \text{SP}; \, \text{RTN}_{\text{H}} : \text{RTN}_{\text{L}} \Rightarrow \text{M}_{(\text{SP})} : \text{M}_{(\text{SP+1})}$ Operation:

(SP) – \$0002  $\Rightarrow$  SP; KINH I NOL = 1 (OF) (SP) – \$0001  $\Rightarrow$  SP; (PPAGE)  $\Rightarrow$  M(SP)  $\Rightarrow$  Mdroutine Address  $\Rightarrow$  PC page ⇒ PPAGE; Subroutine Address =

Description:

Sets up conditions to return to normal program flow, then transfers control to a subroutine in expanded memory. Uses the address of the instruction following the CALL as a return address. For code compatibility, CALL also executes correctly in devices that do not have expanded memory capability.

Decrements the SP by two, then stores the return address on the stack. The SP points to the high-order byte of the return address.


Decrements the SP by one, then stacks the current memory page value from the PPAGE register on the stack

Writes a new page value supplied by the instruction to PPAGE and transfers control to the subroutine.

In indexed-indirect modes, the subroutine address and the PPAGE value are fetched from memory in the order M high byte, M low byte, and new

Expanded-memory subroutines must be terminated by an RTC instruction, which restores the return address and PPAGE value from the stack.

**CCR Details:** 



Source Form	Address Mode	Object Code	Access Detail	
			HCS12	M68HC12
CALL opr16a, page	EXT	4A hh 11 pg	gnSsPPP	gnfSsPPP
CALL oprx0_xysp, page	IDX	4B xb pg	gnSsPPP	gnfSsPPP
CALL oprx9,xysp, page	IDX1	4B xb ff pg	gnSsPPP	gnfSsPPP
CALL oprx16,xysp, page	IDX2	4B xb ee ff pg	fgnSsPPP	fgnfSsPPP
CALL [D,xysp]	[D,IDX]	4B xb	fIignSsPPP	flignSsPPP
CALL [oprx16,xysp]	[IDX2]	4B xb ee ff	fIignSsPPP	fIignSsPPP

**Compare Accumulators** 

Operation:

Compares the content of accumulator A to the content of accumulator B and Description:

sets the condition codes, which may then be used for arithmetic and logical conditional branches. The contents of the accumulators are not changed.

**CCR Details:** 

X H I N Z V C - - - - Δ Δ Δ Δ

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

 $A7 \bullet \overline{B7} \bullet \overline{R7} + \overline{A7} \bullet B7 \bullet R7$ 

Set if a two's complement overflow resulted from the operation;

cleared otherwise

C:  $\overline{A7} \bullet B7 + B7 \bullet R7 + R7 \bullet \overline{A7}$ 

Set if there was a borrow from the MSB of the result; cleared

otherwise

Source Form	Address Mode	Object Code	Access Detail HCS12	M68HC12
CBA	INH	18 17	00	00

S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

Clear Interrupt Mask

Operation:

Clears the I mask bit. This instruction is assembled as ANDCC #\$EF. The Description: ANDCC instruction can be used to clear any combination of bits in the CCR

in one operation.

When the I bit is cleared, interrupts are enabled. There is a 1-cycle (bus clock) delay in the clearing mechanism for the I bit so that, if interrupts were previously disabled, the next instruction after a CLI will always be executed, even if there was an interrupt pending prior to execution of the CLI

**CCR Details:** - - 0 - - - -

I: 0; cleared

Source Form	Address		Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
CLI translates to ANDCC #\$EF	IMM	10 EF	P	Р

**Clear Carry** 

Operation:

Clears the C status bit. This instruction is assembled as ANDCC #\$FE. The Description:

ANDCC instruction can be used to clear any combination of bits in the CCR

CLC can be used to set up the C bit prior to a shift or rotate instruction

involving the C bit.

S X H I N Z V C CCR Details: - - - - - 0

C: 0; cleared

Source Form	Address Mode	Object Code	Access Detail HCS12	M68HC12
CLC translates to ANDCC #\$FE	IMM	10 FE	P	P

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**CLR** 

**Clear Memory** 

Freescale Semiconductor

Operation:

Description: All bits in memory location M are cleared to 0.

CCR Details:

s	X	Н	-1	N	Z	٧	С
-	-	-	-	0	1	0	0

N: 0; cleared Z: 1; set V: 0; cleared C: 0: cleared

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
CLR opr16a	EXT	79 hh 11	PwO	WOP
CLR oprx0_xysp	IDX	69 xb	Pw	Pw
CLR oprx9,xysp	IDX1	69 xb ff	PwO	PwO
CLR oprx16,xysp	IDX2	69 xb ee ff	PwP	PwP
CLR [D,xysp]	[D,IDX]	69 xb	PIfw	PIfPw
CLR [oprx16,xysp]	[IDX2]	69 xb ee ff	PIPw	PIPPW

**CLRA** 

Clear A

**CLRA** 

Operation:  $0 \Rightarrow A$ 

**Description:** All bits in accumulator A are cleared to 0.

CCR Details:

N Z V C - - - 0 1 0 0

N: 0; cleared Z: 1; set V: 0; cleared C: 0: cleared

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12 M68	
CLRA	INH	87	0	0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 149

**CLV** 

Clear Two's Complement Overflow Bit

Operation:

Clears the V status bit. This instruction is assembled as ANDCC #\$FD. The Description:

ANDCC instruction can be used to clear any combination of bits in the CCR

in one operation.

**CCR Details:** 

X H I N Z V C - - - - 0 -

V: 0; cleared

Source Form	Address	Object Code	Acce	ss Detail
Source Form	Mode	Object Code	HCS12 M68	
CLV translates to ANDCC #\$ED	IMM	10 FD	P	P

**CLRB** 

Clear B

**CLRB** 

Operation:  $0 \Rightarrow B$ 

**Description:** All bits in accumulator B are cleared to 0.

CCR Details:

X H I N Z V C - - - - 0 1 0 0

N: 0; cleared Z: 1; set V: 0; cleared C: 0: cleared

Source Form	Address Mode	Object Code	Access Detail	M68HC12
CLRB	INH	C7	0	0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**CMPA** 

150

Compare A

**CMPA** 

Operation: (A) - (M)

Compares the content of accumulator A to the content of memory location Description:

M and sets the condition codes, which may then be used for arithmetic and logical conditional branching. The contents of A and location M are not

**CCR Details:** 

S	X	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: A7 • M7 • R7 + A7 • M7 • R7

Set if a two's complement overflow resulted from the operation;

cleared otherwise

C:  $\overline{A7} \bullet M7 + M7 \bullet R7 + R7 \bullet \overline{A7}$ 

Set if there was a borrow from the MSB of the result; cleared

otherwise

C	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
CMPA #opr8i	IMM	81 ii	P	P
CMPA opr8a	DIR	91 dd	rPf	rfP
CMPA opr16a	EXT	B1 hh 11	rPO	rOP
CMPA oprx0_xysp	IDX	A1 xb	rPf	rfP
CMPA oprx9,xysp	IDX1	A1 xb ff	rPO	rPO
CMPA oprx16,xysp	IDX2	Al xb ee ff	frPP	frPP
CMPA [D,xysp]	[D,IDX]	A1 xb	fIfrPf	fIfrfP
CMPA [oprx16,xysp]	[IDX2]	Al xb ee ff	fIPrPf	fIPrfP

## CMPB

### Compare B

## **CMPR**

Operation: (B) - (M)

Description:

Compares the content of accumulator B to the content of memory location M and sets the condition codes, which may then be used for arithmetic and logical conditional branching. The contents of B and location M are not

CCR Details:

S	X	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: B7 M7 R7 + B7 M7 R7

Set if a two's complement overflow resulted from the operation;

cleared otherwise

C:  $\overline{B7} \bullet M7 + M7 \bullet R7 + R7 \bullet \overline{B7}$ 

Set if there was a borrow from the MSB of the result; cleared

otherwise

Source Form	Address	Object Code	Acce	ss Detail
Source Form	Mode	Object Code	HCS12	M68HC12
CMPB #opr8i	IMM	C1 ii	P	P
CMPB opr8a	DIR	D1 dd	rPf	rfP
CMPB opr16a	EXT	F1 hh 11	rPO	rOP
CMPB oprx0_xysp	IDX	E1 xb	rPf	rfP
CMPB oprx9,xysp	IDX1	E1 xb ff	rPO	rPO
CMPB oprx16,xysp	IDX2	El xb ee ff	frPP	frPP
CMPB [D,xysp]	[D,IDX]	E1 xb	fIfrPf	fIfrfP
CMPB [oprx16,xysp]	[IDX2]	E1 xb ee ff	fIPrPf	fIPrfP

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

# **COMA**

Complement A

# COMA

Operation:  $(\overline{A}) = FF - (A) \Rightarrow A$ 

Description:

Replaces the content of accumulator A with its one's complement. Each bit of A is complemented. Immediately after a COM operation on unsigned values, only the BEQ, BNE, LBEQ, and LBNE branches can be expected to perform consistently. After operation on two's complement values, all

signed branches are available.

**CCR Details:** 

S	Х	Н	ı	N	Z	V	С
-	-	-	-	Δ	Δ	0	1

- N: Set if MSB of result is set: cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0: cleared
- C: 1; set (for M6800 compatibility)

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
COMA	INH	41	0	0

**Complement Memory** 

Operation:  $(\overline{M}) = FF - (M) \Rightarrow M$ 

Description:

Replaces the content of memory location M with its one's complement. Each bit of M is complemented. Immediately after a COM operation on unsigned values, only the BEQ, BNE, LBEQ, and LBNE branches can be expected to perform consistently. After operation on two's complement

values, all signed branches are available.

**CCR Details:** 

s	X	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	0	1

- N: Set if MSB of result is set: cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared
- C: 1; set (for M6800 compatibility)

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
COM opr16a	EXT	71 hh 11	rPw0	rOPw	
COM oprx0_xysp	IDX	61 xb	rPw	rPw	
COM oprx9,xysp	IDX1	61 xb ff	rPwO	rPOw	
COM oprx16,xysp	IDX2	61 xb ee ff	frPwP	frPPw	
COM [D,xysp]	[D,IDX]	61 xb	fIfrPw	fIfrPw	
COM [oprx16,xysp]	[IDX2]	61 xb ee ff	fIPrPw	fIPrPw	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**COMB** 

Complement B

COMB

Operation:

 $(\overline{B}) = FF - (B) \Rightarrow B$ 

Replaces the content of accumulator B with its one's complement. Each bit Description: of B is complemented. Immediately after a COM operation on unsigned

values, only the BEQ, BNE, LBEQ, and LBNE branches can be expected to perform consistently. After operation on two's complement values, all

signed branches are available.

**CCR Details:** 

s	Х	Н	1	N	z	٧	С
-	_	_	_	Δ	Δ	0	1

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0: cleared
- C: 1; set (for M6800 compatibility)

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
COMB	INH	51	0	0

### **Compare Double Accumulator**

Operation: (A : B) - (M : M + 1)

Description:

Compares the content of double accumulator D with a 16-bit value at the address specified and sets the condition codes accordingly. The compare is accomplished internally by a 16-bit subtract of (M: M+1) from D without modifying either D or (M: M+1).

CCR Details:

S	Х	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V: D15 M15 R15 + D15 M15 R15 Set if two's complement overflow resulted from the operation: cleared otherwise
- C:  $\overline{D15} \cdot M15 + M15 \cdot R15 + R15 \cdot \overline{D15}$ Set if the absolute value of the content of memory is larger than the absolute value of the accumulator: cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source Form	Mode Mode		HCS12	M68HC12
CPD #opr16i	IMM	8C jj kk	PO	OP
CPD opr8a	DIR	9C dd	RPf	RfP
CPD opr16a	EXT	BC hh 11	RPO	ROP
CPD oprx0_xysp	IDX	AC xb	RPf	RfP
CPD oprx9,xysp	IDX1	AC xb ff	RPO	RPO
CPD oprx16,xysp	IDX2	AC xb ee ff	fRPP	fRPP
CPD [D,xysp]	[D,IDX]	AC xb	fIfRPf	fIfRfP
CPD [oprx16,xysp]	[IDX2]	AC xb ee ff	fIPRPf	fIPRfP

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

CPX

Compare Index Register X

Operation: (X) - (M : M + 1)

Description:

Compares the content of index register X with a 16-bit value at the address specified and sets the condition codes accordingly. The compare is accomplished internally by a 16-bit subtract of (M: M+1) from index register X without modifying either index register X or (M:M+1).

**CCR Details:** 

S	X	Н	1	N	Z	٧	С	
-	-	-	-	Δ	Δ	Δ	Δ	Ì

- N: Set if MSB of result is set: cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- X15 M15 R15 + X15 M15 R15 Set if two's complement overflow resulted from the operation; cleared otherwise
- C:  $\overline{X15} \cdot M15 + M15 \cdot R15 + R15 \cdot \overline{X15}$ Set if the absolute value of the content of memory is larger than the absolute value of the index register; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source Form	Mode Mode		HCS12	M68HC12
CPX #opr16i	IMM	8E jj kk	PO	OP
CPX opr8a	DIR	9E dd	RPf	RfP
CPX opr16a	EXT	BE hh 11	RPO	ROP
CPX oprx0_xysp	IDX	AE xb	RPf	RfP
CPX oprx9,xysp	IDX1	AE xb ff	RPO	RPO
CPX oprx16,xysp	IDX2	AE xb ee ff	fRPP	fRPP
CPX [D,xysp]	[D,IDX]	AE xb	fIfRPf	fIfRfP
CPX [oprx16,xysp]	[IDX2]	AE xb ee ff	fIPRPf	fIPRfP

**Compare Stack Pointer** 

Operation: (SP) - (M : M + 1)

Description:

Compares the content of the SP with a 16-bit value at the address specified, and sets the condition codes accordingly. The compare is accomplished internally by doing a 16-bit subtract of (M: M+1) from the SP without modifying either the SP or (M: M + 1).

**CCR Details:** 

s	Х	Н	ı	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V: S15 M15 R15 + S15 M15 R15 Set if two's complement overflow resulted from the operation; cleared otherwise
- C:  $\overline{S15} \cdot M15 + M15 \cdot R15 + R15 \cdot \overline{S15}$ Set if the absolute value of the content of memory is larger than the absolute value of the SP; cleared otherwise

0	ource Form Address		Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
CPS #opr16i	IMM	8F jj kk	PO	OP	
CPS opr8a	DIR	9F dd	RPf	RfP	
CPS opr16a	EXT	BF hh 11	RPO	ROP	
CPS oprx0_xysp	IDX	AF xb	RPf	RfP	
CPS oprx9,xysp	IDX1	AF xb ff	RPO	RPO	
CPS oprx16,xysp	IDX2	AF xb ee ff	fRPP	fRPP	
CPS [D,xysp]	[D,IDX]	AF xb	fIfRPf	fIfRfP	
CPS [oprx16,xysp]	[IDX2]	AF xb ee ff	fIPRPf	fIPRfP	

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Compare Index Register Y

Operation: (Y) - (M : M + 1)

Description:

Compares the content of index register Y to a 16-bit value at the address specified and sets the condition codes accordingly. The compare is accomplished internally by a 16-bit subtract of (M: M + 1) from Y without

modifying either Y or (M: M+1).

**CCR Details:** 

S	X	Н	ı	N	Z	٧	С
<b>-</b>	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set: cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- Y15 M15 R15 + Y15 M15 R15 Set if two's complement overflow resulted from the operation; cleared otherwise
- C: <u>Y15</u> M15 + M15 R15 + R15 <u>Y15</u> Set if the absolute value of the content of memory is larger than the absolute value of the index register; cleared otherwise

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
CPY #opr16i	IMM	8D jj kk	PO	OP
CPY opr8a	DIR	9D dd	RPf	RfP
CPY opr16a	EXT	BD hh 11	RPO	ROP
CPY oprx0_xysp	IDX	AD xb	RPf	RfP
CPY oprx9,xysp	IDX1	AD xb ff	RPO	RPO
CPY oprx16,xysp	IDX2	AD xb ee ff	fRPP	fRPP
CPY [D,xysp]	[D,IDX]	AD xb	fIfRPf	fIfRfP
CPY [oprx16,xysp]	[IDX2]	AD xb ee ff	fIPRPf	fIPRfP

## DAA

### Decimal Adjust A

# DAA

#### Description

DAA adjusts the content of accumulator A and the state of the C status bit to represent the correct binary-coded-decimal sum and the associated carry when a BCD calculation has been performed. To execute DAA, the content of accumulator A, the state of the C status bit, and the state of the H status bit must all be the result of performing an ABA, ADD, or ADC on BCD operands, with or without an initial carry.

The table shows DAA operation for all legal combinations of input operands. Columns 1 through 4 represent the results of ABA, ADC, or ADD operations on BCD operands. The correction factor in column 5 is added to the accumulator to restore the result of an operation on two BCD operands to a valid BCD value and to set or clear the C bit. All values are in hexadecimal.

1	2	3	4	5	6
Initial C Bit Value	Value of A[7:4]	Initial H Bit Value	Value of A[3:0]	Correction Factor	Corrected C Bit Value
0	0–9	0	0–9	00	0
0	0–8	0	A–F	06	0
0	0–9	1	0–3	06	0
0	A–F	0	0–9	60	1
0	9–F	0	A–F	66	1
0	A–F	1	0–3	66	1
1	0–2	0	0–9	60	1
1	0–2	0	A–F	66	1
1	0–3	1	0–3	66	1

### CCR Details:

S	X	Н	ı	N	Z	٧	С	
-	-	-	-	Δ	Δ	?	Δ	l

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: Undefined
- C: Represents BCD carry. See bit table

Source Form	Address	Object Code	Access Detai	ı
Source Form	Mode	Object Code	HCS12	M68HC12
DAA	INH	18 07	OfO	OfO

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Glossary

### **DBNE**

### Decrement and Branch if Not Equal to Zero

# **DBNE**

Operation: (

(Counter) – 1 ⇒ Counter

If (Counter) not = 0, then (PC) +  $\$0003 + Rel \Rightarrow PC$ 

Description:

Subtract one from the specified counter register A, B, D, X, Y, or SP. If the counter register has not been decremented to zero, execute a branch to the specified relative destination. The DBNE instruction is encoded into three bytes of machine code including a 9-bit relative offset (-256 to +255 locations from the start of the next instruction).

IBNE and TBNE instructions are similar to DBNE except that the counter is incremented or tested rather than being decremented. Bits 7 and 6 of the instruction postbyte are used to determine which operation is to be performed.

CCR Details:

S	X	Н	ı	N	Z	٧	С
<b>—</b>	<b>-</b>	-	-	-	-	-	<b>-</b>

Source Form	Address Mode	Object Code <sup>(1)</sup>	Access Detail HCS12	M68HC12
DBNE abdxys, rel9	REL	04 lb rr	PPP/PPO	PPP

Encoding for 1b is summarized in the following table. Bit 3 is not used (don't care), bit 5 selects branch on zero (DBEQ – 0)
or not zero (DBNE – 1) versions, and bit 4 is the sign bit of the 9-bit relative offset. Bits 7 and 6 would be 0:0 for DBNE.

Count Register	Bits 2:0	Source Form	Object Code (If Offset is Positive)	Object Code (If Offset is Negative)
Α	000	DBNE A, rel9	04 20 rr	04 30 rr
В	001	DBNE B, rel9	04 21 rr	04 31 rr
D	100	DBNE D, rel9	04 24 rr	04 34 rr
X	101	DBNE X, rel9	04 25 rr	04 35 rr
Υ	110	DBNE Y, rel9	04 26 rr	04 36 rr
SP	111	DBNE SP, rel9	04 27 rr	04 37 rr

**DBEQ** 

### Decrement and Branch if Equal to Zero

**DBEQ** 

Operation: (Counter) – 1 ⇒ Counter

If (Counter) = 0, then (PC) +  $\$0003 + Rel \Rightarrow PC$ 

Description:

Subtract one from the specified counter register A, B, D, X, Y, or SP. If the counter register has reached zero, execute a branch to the specified relative destination. The DBEQ instruction is encoded into three bytes of machine code including the 9-bit relative offset (–256 to +255 locations from the start of the next instruction).

IBEQ and TBEQ instructions are similar to DBEQ except that the counter is incremented or tested rather than being decremented. Bits 7 and 6 of the instruction postbyte are used to determine which operation is to be performed.

CCR Details:

Source Form	Address	Object Code <sup>(1)</sup>	Acces	s Detail
Source I offin	Mode	Object Code	HCS12	M68HC12
DBEQ abdxys, rel9	REL	04 lb rr	PPP/PPO	PPP

S X H I N Z V C

1. Encoding for 1b is summarized in the following table. Bit 3 is not used (don't care), bit 5 selects branch on zero (DBEQ - 0) or not zero (DBNE - 1) versions, and bit 4 is the sign bit of the 9-bit relative offset. Bits 7 and 6 would be 0:0 for DBEQ.

Count Register	Bits 2:0	Source Form	Object Code (If Offset is Positive)	Object Code (If Offset is Negative)
Α	000	DBEQ A, rel9	04 00 rr	04 10 rr
В	001	DBEQ B, rel9	04 01 rr	04 11 rr
D	100	DBEQ D, rel9	04 04 rr	04 14 rr
Х	101	DBEQ X, rel9	04 05 rr	04 15 rr
Y			04 06 rr	04 16 rr
SP	111	DBEQ SP, rel9	04 07 rr	04 17 rr

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

162

# **DEC**

### **Decrement Memory**

DEC

Operation:  $(M) - \$01 \Rightarrow M$ 

Description: Subtract one from the content of memory location M.

The N, Z, and V status bits are set or cleared according to the results of the operation. The C status bit is not affected by the operation, thus allowing the DEC instruction to be used as a loop counter in multiple-precision computations.

CCR Details:

5	3	X	н	1	N	z	٧	С
[-	-	-	-	-	Δ	Δ	Δ	-

- N: Set if MSB of result is set: cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: Set if there was a two's complement overflow as a result of the operation; cleared otherwise. Two's complement overflow occurs if and only if (M) was \$80 before the operation.

Source Form	Address	Object Code <sup>(1)</sup>	Access Detail	
Source Form	Mode	Object Code.	HCS12	M68HC12
DEC opr16a	EXT	73 hh 11	rPwO	rOPw
DEC oprx0_xysp	IDX	63 xb	rPw	rPw
DEC oprx9,xysp	IDX1	63 xb ff	rPw0	rPOw
DEC oprx16,xysp	IDX2	63 xb ee ff	frPwP	frPPw
DEC [D,xysp]	[D,IDX]	63 xb	fIfrPw	fIfrPw
DEC [oprx16,xysp]	[IDX2]	63 xb ee ff	fIPrPw	fIPrPw

Encoding for 1b is summarized in the following table. Bit 3 is not used (don't care), bit 5 selects branch on zero (DBEQ – 0) or not zero (DBNE – 1) versions, and bit 4 is the sign bit of the 9-bit relative offset. Bits 7 and 6 would be 0:0 for DBNE.

lossarv

DECA

Decrement A

**DECA** 

Operation:  $(A) - \$01 \Rightarrow A$ 

**Description:** Subtract one from the content of accumulator A.

The N, Z, and V status bits are set or cleared according to the results of the operation. The C status bit is not affected by the operation, thus allowing the DEC instruction to be used as a loop counter in multiple-precision

computations.

**CCR Details:** 

s	Х	Н	- 1	N	Z	٧	С	
-	-	-	-	Δ	Δ	Δ	-	

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: Set if there was a two's complement overflow as a result of the operation; cleared otherwise. Two's complement overflow occurs if and only if (A) was \$80 before the operation.

Source Form	Address	Object Code	Access	Detail
Source i oilli	Mode	Object Code	HCS12	M68HC12
DECA	INH	43	0	0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 165

Glossary

**DES** 

Decrement Stack Pointer

DES

 $\textbf{Operation:} \quad (SP)-\$0001 \Rightarrow SP$ 

**Description:** Subtract one from the SP. This instruction assembles to LEAS -1,SP. The

LEAS instruction does not affect condition codes as DEX or DEY

instructions do.

CCR Details:

S	X	Н	1	N	Z	٧	С
_	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
DES translates to LEAS -1 SP	IDX	1B 9F	Pf	PP <sup>(1)</sup>	

<sup>1.</sup> Due to internal M68HC12 CPU requirements, the program word fetch is performed twice to the same address during this

Instruction Glossary

DECB

Decrement B

**DECB** 

 $\textbf{Operation:} \quad (B) - \$01 \Rightarrow B$ 

Description: Subtract one from the content of accumulator B.

The N, Z, and V status bits are set or cleared according to the results of the operation. The C status bit is not affected by the operation, thus allowing the DEC instruction to be used as a loop counter in multiple-precision

computations.

**CCR Details:** 

s	Х	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: Set if there was a two's complement overflow as a result of the operation; cleared otherwise. Two's complement overflow occurs if and only if (B) was \$80 before the operation.

Source Form	Address	Object Code		Access Detail
Source I offin	Mode	Object Code	HCS12	M68HC12
DECB	INH	53	0	0

S12CPUV2 Reference Manual, Rev. 4.0

166 Freescale Semiconductor

Instruction Gl

**DEX** 

Decrement Index Register X

DEX

Operation:  $(X) - \$0001 \Rightarrow X$ 

**Description:** Subtract one from index register X. LEAX –1,X can produce the same result,

but LEAX does not affect the Z bit. Although the LEAX instruction is more

flexible, DEX requires only one byte of object code.

Only the Z bit is set or cleared according to the result of this operation.

CCR Details:

5	3	X	Н	1	N	Z	٧	С
[-	-	-	-	-	-	Δ	-	-

Z: Set if result is \$0000; cleared otherwise

Source Form	Address Mode	Object Code	HCS12	Access Detail M68HC	12
DEX	INH	09	0		0

### Decrement Index Register Y

DFY

Operation:  $(Y) - \$0001 \Rightarrow Y$ 

Subtract one from index register Y. LEAY -1, Y can produce the same result, Description:

but LEAY does not affect the Z bit. Although the LEAY instruction is more

flexible, DEY requires only one byte of object code.

Only the Z bit is set or cleared according to the result of this operation.

CCR Details:

S	Х	Н	- 1	N	Z	٧	С
-	-	-	-	-	Δ	-	-

Z: Set if result is \$0000; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source i oilli	Mode	Object Code	HCS12	M68HC12
DEY	INH	03	0	0

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**EDIVS** 

Extended Divide 32-Bit by 16-Bit (Signed)

**EDIVS** 

**Operation:**  $(Y : D) \div (X) \Rightarrow Y$ ; Remainder  $\Rightarrow D$ 

Description:

Divides a signed 32-bit dividend by a 16-bit signed divisor, producing a signed 16-bit quotient and a signed 16-bit remainder. All operands and results are located in CPU registers. If an attempt to divide by zero is made, C is set and the states of the N, Z, and V bits in the CCR are undefined. In case of an overflow or a divide by zero, the contents of the registers D and Y do not change.

**CCR Details:** 

s	X	Н	ı	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise Undefined after overflow or division by zero
- Set if result is \$0000; cleared otherwise Undefined after overflow or division by zero
- Set if the result was > \$7FFF or < \$8000; cleared otherwise Undefined after division by zero
- Set if divisor was \$0000; cleared otherwise
- Indicates division by zero

Source Form	Source Form Address Object Code		Access Detail		
Source i oilli	Mode	Object Code	HCS12	M68HC12	
EDIVS	INH	18 14	Offffffffff	Offffffffff	

S12CPUV2 Reference Manual, Rev. 4.0

#### Extended Divide 32-Bit by 16-Bit (Unsigned)

Operation:  $(Y : D) \div (X) \Rightarrow Y$ ; Remainder  $\Rightarrow D$ 

Description:

Divides a 32-bit unsigned dividend by a 16-bit divisor, producing a 16-bit unsigned quotient and an unsigned 16-bit remainder. All operands and results are located in CPU registers. If an attempt to divide by zero is made, C is set and the states of the N, Z, and V bits in the CCR are undefined. In case of an overflow or a divide by zero, the contents of the registers D and Y do not change.

CCR Details:

S	Х	Н	ı	N	z	٧	С
_	-	-	-	Δ	Δ	Δ	Δ

- Set if MSB of result is set; cleared otherwise Undefined after overflow or division by zero
- Set if result is \$0000; cleared otherwise Undefined after overflow or division by zero
- Set if the result was > \$FFFF; cleared otherwise Undefined after division by zero
- Set if divisor was \$0000; cleared otherwise

Source Form	Address	Object Code	Access Detail		
Source i oilli	Mode	Object Code	HCS12	M68HC12	
EDIV	INH	11	ffffffffff	ffffffffff	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

170

# **EMACS**

### Extended Multiply and Accumulate (Signed) 16-Bit by 16-Bit to 32-Bit

# **EMACS**

 $(M_{(X)}: M_{(X+1)}) \times (M_{(Y)}: M_{(Y+1)}) + (M \sim M+3) \Rightarrow M \sim M+3$ 

Description:

A 16-bit value is multiplied by a 16-bit value to produce a 32-bit intermediate result. This 32-bit intermediate result is then added to the content of a 32-bit accumulator in memory.  ${\tt EMACS}$  is a signed integer operation. All operands and results are located in memory. When the EMACS instruction is executed, the first source operand is fetched from an address pointed to by X, and the second source operand is fetched from an address pointed to by index register Y. Before the instruction is executed, the X and Y index registers must contain values that point to the most significant bytes of the source operands. The most significant byte of the 32-bit result is specified by an extended address supplied with the instruction.

**CCR Details:** 

s	Х	Н	-1	N	Z	٧	С
<u> </u>	Τ-	Ι-	I -	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00000000; cleared otherwise
- M31 I31 R31 + M31 I31 R31 Set if result > \$7FFFFFF (+ overflow) or < \$80000000 (- underflow) Indicates two's complement overflow
- M15 I15 + I15 R15 + R15 M15 Set if there was a carry from bit 15 of the result; cleared otherwise Indicates a carry from low word to high word of the result occurred

Source Form <sup>(1)</sup>	Address Mode	Object Code	Access	
	Wiode		HCS12	M68HC12
EMACS opr16a	Special	18 12 hh 11	ORROfffRRfWWP	ORROfffRRfWWP

S12CPUV2 Reference Manual, Rev. 4.0

opr16a is an extended address specification. Both X and Y point to source operands.

Slossary



Place Larger of Two Unsigned 16-Bit Values in Accumulator D

## **EMAXD**

Operation:  $MAX ((D), (M : M + 1)) \Rightarrow D$ 

Description:

Subtracts an unsigned 16-bit value in memory from an unsigned 16-bit value in double accumulator D to determine which is larger, and leaves the larger of the two values in D. The Z status bit is set when the result of the subtraction is zero (the values are equal), and the C status bit is set when the subtraction requires a borrow (the value in memory is larger than the value in the accumulator). When C = 1, the value in D has been replaced by the value in memory.

The unsigned value in memory is accessed by means of indexed addressing modes, which allow a great deal of flexibility in specifying the address of the operand. Auto increment/decrement variations of indexed addressing facilitate finding the largest value in a list of values.

CCR Details:

S	Х	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V: D15 M15 R15 + D15 M15 R15
  Set if a two's complement overflow resulted from the operation; cleared otherwise
- C: D15 M15 + M15 R15 + R15 D15
  Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Condition codes reflect internal subtraction (R = D - M: M + 1)

Source Form Address		Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
EMAXD oprx0_xysp	IDX	18 1A xb	ORPf	ORfP	
EMAXD oprx9,xysp	IDX1	18 1A xb ff	ORPO	ORPO	
EMAXD oprx16,xysp	IDX2	18 1A xb ee ff	OfRPP	OfRPP	
EMAXD [D,xysp]	[D,IDX]	18 1A xb	OfIfRPf	OfIfRfP	
EMAXD [oprx16,xysp]	[IDX2]	18 1A xb ee ff	OfIPRPf	OfIPRfP	

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 173

Glossary

**EMIND** 

Place Smaller of Two Unsigned 16-Bit Values in Accumulator D

**EMIND** 

Operation:

 $MIN ((D), (M : M + 1)) \Rightarrow D$ 

Description:

Subtracts an unsigned 16-bit value in memory from an unsigned 16-bit value in double accumulator D to determine which is larger, and leaves the smaller of the two values in D. The Z status bit is set when the result of the subtraction is zero (the values are equal), and the C status bit is set when the subtraction requires a borrow (the value in memory is larger than the value in the accumulator). When C = 0, the value in D has been replaced by the value in memory.

The unsigned value in memory is accessed by means of indexed addressing modes, which allow a great deal of flexibility in specifying the address of the operand. Auto increment/decrement variations of indexed addressing facilitate finding the smallest value in a list of values.

CCR Details:

S	Х	Н	1	N	Z	٧	С
_	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V: D15 M15 R15 + D15 M15 R15
  Set if a two's complement overflow resulted from the operation; cleared otherwise
- C: D15 M15 + M15 R15 R15 D15
  Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Condition codes reflect internal subtraction (R = D - M : M + 1)

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
EMIND oprx0_xysp	IDX	18 1B xb	ORPf	ORfP	
EMIND oprx9,xysp	IDX1	18 1B xb ff	ORPO	ORPO	
EMIND oprx16,xysp	IDX2	18 1B xb ee ff	OfRPP	OfRPP	
EMIND [D,xysp]	[D,IDX]	18 1B xb	OfIfRPf	OfIfRfP	
EMIND [oprx16,xysp]	[IDX2]	18 1B xb ee ff	OfIPRPf	OfIPRfP	

S12CPUV2 Reference Manual, Rev. 4.0

Instruction Glossary

## **EMAXM**

#### Place Larger of Two Unsigned 16-Bit Values in Memory

### **EMAXM**

Operation:  $MAX ((D), (M : M + 1)) \Rightarrow M : M + 1$ 

Description:

Subtracts an unsigned 16-bit value in memory from an unsigned 16-bit value in double accumulator D to determine which is larger, and leaves the larger of the two values in the memory location. The Z status bit is set when the result of the subtraction is zero (the values are equal), and the C status bit is set when the subtraction requires a borrow (the value in memory is larger than the value in the accumulator). When C = 0, the value in D has replaced the value in memory.

The unsigned value in memory is accessed by means of indexed addressing modes, which allow a great deal of flexibility in specifying the address of the operand.

CCR Details:

S	Х	Н	1	N	Z	٧	С	
-	-	-	-	Δ	Δ	Δ	Δ	

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V: D15 M15 R15 + D15 M15 R15
  Set if a two's complement overflow resulted from the operation; cleared otherwise
- C: D15 M15 + M15 R15 + R15 D15
  Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Condition codes reflect internal subtraction (R = D - M : M + 1)

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
EMAXM oprx0_xysp	IDX	18 1E xb	ORPW	ORPW
EMAXM oprx9,xysp	IDX1	18 1E xb ff	ORPWO	ORPWO
EMAXM oprx16,xysp	IDX2	18 1E xb ee ff	OfRPWP	OfRPWP
EMAXM [D,xysp]	[D,IDX]	18 1E xb	OfIfRPW	OfIfRPW
EMAXM [oprx16,xysp]	[IDX2]	18 1E xb ee ff	OfIPRPW	OfIPRPW

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

174

# **EMINM**

Place Smaller of Two Unsigned 16-Bit Values in Memory

**EMINM** 

Operation: MIN  $((D), (M : M + 1)) \Rightarrow M : M + 1$ 

Description:

Subtracts an unsigned 16-bit value in memory from an unsigned 16-bit value in double accumulator D to determine which is larger and leaves the smaller of the two values in the memory location. The Z status bit is set when the result of the subtraction is zero (the values are equal), and the C status bit is set when the subtraction requires a borrow (the value in memory is larger than the value in the accumulator). When C = 1, the value in D has replaced the value in memory.

The unsigned value in memory is accessed by means of indexed addressing modes, which allow a great deal of flexibility in specifying the address of the operand.

**CCR Details:** 

s	Х	Н	1	N	Z	٧	С
_	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V: D15 M15 R15 + D15 M15 R15
  Set if a two's complement overflow resulted from the operation; cleared otherwise
- C: D15 M15 + M15 R15 + R15 D15
  Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Condition codes reflect internal subtraction (R = D - M : M + 1)

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
EMINM oprx0_xysp	IDX	18 1F xb	ORPW	ORPW
EMINM oprx9,xysp	IDX1	18 1F xb ff	ORPWO	ORPWO
EMINM oprx16,xysp	IDX2	18 1F xb ee ff	OfRPWP	OfRPWP
EMINM [D,xysp]	[D,IDX]	18 1F xb	OfIfRPW	OfIfRPW
EMINM [oprx16,xysp]	[IDX2]	18 1F xb ee ff	OfIPRPW	OfIPRPW

### **EMUL**

#### Extended Multiply 16-Bit by 16-Bit (Unsigned)

## **EMUL**

Description:

An unsigned 16-bit value is multiplied by an unsigned 16-bit value to produce an unsigned 32-bit result. The first source operand must be loaded into 16-bit double accumulator D and the second source operand must be loaded into index register Y before executing the instruction. When the instruction is executed, the value in D is multiplied by the value in Y. The upper 16-bits of the 32-bit result are stored in Y and the low-order 16-bits of the result are stored in D.

The C status bit can be used to round the high-order 16 bits of the result.

CCR Details:

S	Х	Н	ı	N	Z	V	С
_	-	-	-	Δ	Δ	-	Δ

- N: Set if the MSB of the result is set; cleared otherwise
- Z: Set if result is \$00000000; cleared otherwise
- C: Set if bit 15 of the result is set; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source i oilli	Mode	Object Code	HCS12	M68HC12
EMUL	INH	13	ff0	ffO

### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

Glossary

**EORA** 

Exclusive OR A

**EORA** 

 $\textbf{Operation:} \quad (A) \oplus (M) \Rightarrow A$ 

Description: F

Performs the logical exclusive OR between the content of accumulator A and the content of memory location M. The result is placed in A. Each bit of A after the operation is the logical exclusive OR of the corresponding bits of M and A before the operation.

CCR Details:

S	X	Н	ı	N	Z	٧	С
-	-	-	-	Δ	Δ	0	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
EORA #opr8i	IMM	88 ii	P	P
EORA opr8a	DIR	98 dd	rPf	rfP
EORA opr16a	EXT	B8 hh 11	rPO	rOP
EORA oprx0_xysp	IDX	A8 xb	rPf	rfP
EORA oprx9,xysp	IDX1	A8 xb ff	rPO	rPO
EORA oprx16,xysp	IDX2	A8 xb ee ff	frPP	frPP
EORA [D,xysp]	[D,IDX]	A8 xb	fIfrPf	fIfrfP
EORA [oprx16,xysp]	[IDX2]	A8 xb ee ff	fIPrPf	fIPrfP

Instruction Glos

### **EMULS**

Extended Multiply 16-Bit by 16-Bit (Signed) **EMULS** 

Description:

A signed 16-bit value is multiplied by a signed 16-bit value to produce a signed 32-bit result. The first source operand must be loaded into 16-bit double accumulator D, and the second source operand must be loaded into index register Y before executing the instruction. When the instruction is executed, D is multiplied by the value Y. The 16 high-order bits of the 32-bit result are stored in Y and the 16 low-order bits of the result are stored in D.

The C status bit can be used to round the high-order 16 bits of the result.

CCR Details:

	s	X	Н	1	N	Z	٧	С
[	-	-	-	-	Δ	Δ	ı	Δ

- N: Set if the MSB of the result is set: cleared otherwise
- Z: Set if result is \$00000000; cleared otherwise
- C: Set if bit 15 of the result is set; cleared otherwise

Source Form	Address Mode	Object Code	Access Detail	M68HC12
EMULS	INH	18 13	OfO OffO <sup>(1)</sup>	OfO

1. EMULS has an extra free cycle if it is followed by another PAGE TWO instruction.

### S12CPUV2 Reference Manual, Rev. 4.0

178 Freescale Semiconductor

Instruction Glossary

**EORB** 

Exclusive OR B

**EORB** 

 $\textbf{Operation:} \quad (B) \oplus (M) \Rightarrow B$ 

Description: F

**CCR Details:** 

Performs the logical exclusive OR between the content of accumulator B and the content of memory location M. The result is placed in A. Each bit of A after the operation is the logical exclusive OR of the corresponding bits of M and B before the operation.

C V

S X H I N Z V C

- - - - Δ Δ 0 -

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared

Source Form	Address	Object Code	Access Detail		
Source i oilli	Mode	Object Code	HCS12	M68HC12	
EORB #opr8i	IMM	C8 ii	P	P	
EORB opr8a	DIR	D8 dd	rPf	rfP	
EORB opr16a	EXT	F8 hh 11	rPO	rOP	
EORB oprx0_xysp	IDX	E8 xb	rPf	rfP	
EORB oprx9,xysp	IDX1	E8 xb ff	rPO	rPO	
EORB oprx16,xysp	IDX2	E8 xb ee ff	frPP	frPP	
EORB [D,xysp]	[D,IDX]	E8 xb	fIfrPf	fIfrfP	
EORB [oprx16,xysp]	[IDX2]	E8 xb ee ff	fIPrPf	fIPrfP	

### **Extended Table Lookup and Interpolate**

### ETBL

Operation:

 $(M:M+1)+[(B)\times((M+2:M+3)-(M:M+1))] \Rightarrow D$ 

Description:

ETBL linearly interpolates one of 256 result values that fall between each pair of data entries in a lookup table stored in memory. Data entries in the table represent the y values of endpoints of equally-spaced line segments. Table entries and the interpolated result are 16-bit values. The result is stored in the D accumulator.

Before executing ETBL, an index register points to the table entry corresponding to the x value (X1 that is closest to, but less than or equal to, the desired lookup point (XL, YL). This defines the left end of a line segment and the right end is defined by the next data entry in the table. Prior to execution, accumulator B holds a binary fraction (radix left of MSB) representing the ratio of (XL-X1) ÷ (X2-X1).

The 16-bit unrounded result is calculated using the following expression:

 $D = Y1 + [(B) \times (Y2 - Y1)]$ 

Where:

 $(B) = (XL - X1) \div (X2 - X1)$ 

Y1 = 16-bit data entry pointed to by <effective address>

Y2 = 16-bit data entry pointed to by <effective address> + 2

The intermediate value [(B)  $\times$  (Y2 – Y1)] produces a 24-bit result with the radix point between bits 7 and 8. Any indexed addressing mode, except indirect modes or 9-bit and 16-bit offset modes, can be used to identify the first data point (X1,Y1). The second data point is the next table entry.

CCR Details:

s	х	н	1	N	z	٧	С
-	-	-	-	Δ	Δ	-	Δ <sup>(1)</sup>

N: Set if MSB of result is set: cleared otherwise

Set if result is \$0000: cleared otherwise

C: Set if result can be rounded up; cleared otherwise

1. C-bit was undefined in original M68HC12

Source Form	Address	Object Code	Access Detail HCS12 M68HC	
Source i oilli	Mode	Object Code		
ETBL oprx0_xysp	IDX	18 3F xb	ORRffffffp	ORRffffffP

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

### FDIV

Fractional Divide

**FDIV** 

Operation:

(D)  $\div$  (X)  $\Rightarrow$  X; Remainder  $\Rightarrow$  D

Description:

Divides an unsigned 16-bit numerator in double accumulator D by an unsigned 16-bit denominator in index register X, producing an unsigned 16-bit quotient in X and an unsigned 16-bit remainder in D. If both the numerator and the denominator are assumed to have radix points in the same positions, the radix point of the quotient is to the left of bit 15. The numerator must be less than the denominator. In the case of overflow (denominator is less than or equal to the numerator) or division by zero, the quotient is set to \$FFFF, and the remainder is indeterminate.

FDIV is equivalent to multiplying the numerator by  $2^{16}$  and then performing 32 by 16-bit integer division. The result is interpreted as a binary-weighted fraction, which resulted from the division of a 16-bit integer by a larger 16-bit integer. A result of \$0001 corresponds to 0.000015, and \$FFFF corresponds to 0.9998. The remainder of an IDIV instruction can be resolved into a binary-weighted fraction by an FDIV instruction. The remainder of an FDIV instruction can be resolved into the next 16 bits of binary-weighted fraction by another FDIV instruction.

**CCR Details:** 

S	X	Н	1	N	Z	٧	С	
-	-	-	-	-	Δ	Δ	Δ	1

Z: Set if quotient is \$0000; cleared otherwise

1 if X < D

Set if the denominator was less than or equal to the numerator; cleared otherwise

 $\overline{\mathsf{X}15} \bullet \overline{\mathsf{X}14} \bullet \overline{\mathsf{X}13} \bullet \overline{\mathsf{X}12} \bullet ... \bullet \overline{\mathsf{X}3} \bullet \overline{\mathsf{X}2} \bullet \overline{\mathsf{X}1} \bullet \overline{\mathsf{X}0}$ Set if denominator was \$0000; cleared otherwise

Source Form	Address	Object Code	Access Detail HCS12 M68HC	
Source Form	Mode	Object Code		
FDIV	INH	18 11	Offffffffff	Offffffffff

S12CPUV2 Reference Manual, Rev. 4.0

### **Exchange Register Contents**

Operation: See table

Description:

Exchanges the contents of registers specified in the instruction as shown below. Note that the order in which exchanges between 8-bit and 16-bit registers are specified affects the high byte of the 16-bit registers differently. Exchanges of D with A or B are ambiguous. Cases involving TMP2 and TMP3 are reserved for Freescale use, so some assemblers may not permit their use, but it is possible to generate these cases by using DC.B or DC.W assembler directives.

**CCR Details:** 

-			-1		_	-	-	Or	s			-			-	-
-	-	-	-	-	-	-	-	Or:	Δ	⇒	Δ	Δ	Δ	Δ	Δ	Δ

None affected, unless the CCR is the destination register. Condition codes take on the value of the corresponding source bits, except that the X mask bit cannot change from 0 to 1. Software can leave the X bit set, leave it reset or by recognition of an XIRQ interrupt.

Source Form	Address	Object Code <sup>(1)</sup>	Access Detail		
Source I offin	Mode	Object Code	HCS12	M68HC12	
EXG abcdxys,abcdxys	INH	B7 eb	P	P	

Legal coding for eb is summarized in the following table. Columns represent the high-order source digit. Rows represent the low-order destination digit (bit 3 is a don't care). Values are in hexadecimal.

	8	9	Α	В	С	D	E	F
0	A ⇔ A	B ⇔ A	CCR ⇔ A	$TMP3_L \Rightarrow A$ $$00:A \Rightarrow TMP3$	$B \Rightarrow A$ $A \Rightarrow B$	$X_L \Rightarrow A$ \$00:A \Rightarrow X	$Y_L \Rightarrow A$ $\$00:A \Rightarrow Y$	$SP_L \Rightarrow A$ $$00:A \Rightarrow SP$
1	A ⇔ B	B⇔B	CCR ⇔ B	$TMP3_L \Rightarrow B$ $FF:B \Rightarrow TMP3$	$B \Rightarrow B$ \$FF $\Rightarrow A$	$X_L \Rightarrow B$ $FF:B \Rightarrow X$	$Y_L \Rightarrow B$ $FF:B \Rightarrow Y$	$SP_L \Rightarrow B$ $FF:B \Rightarrow SP$
2	A ⇔ CCR	B ⇔ CCR	CCR ⇔ CCR	$TMP3_L \Rightarrow CCR$ $FF:CCR \Rightarrow TMP3$	$B \Rightarrow CCR$ \$FF:CCR $\Rightarrow$ D	$X_L \Rightarrow CCR$ \$FF:CCR $\Rightarrow X$	$Y_L \Rightarrow CCR$ \$FF:CCR $\Rightarrow$ Y	$SP_L \Rightarrow CCR$ \$FF:CCR $\Rightarrow$ SP
3	$$00:A \Rightarrow TMP2$ $TMP2_L \Rightarrow A$	$$00:B \Rightarrow TMP2$ $TMP2_L \Rightarrow B$	$$00:CCR \Rightarrow TMP2$ $TMP2_L \Rightarrow CCR$	TMP3 ⇔ TMP2	D ⇔ TMP2	$X \Leftrightarrow TMP2$	Y ⇔ TMP2	SP ⇔ TMP2
4	\$00:A ⇒ D	\$00:B ⇒ D	$$00:CCR \Rightarrow D$ B $\Rightarrow CCR$	TMP3 ⇔ D	D ⇔ D	$X \Leftrightarrow D$	Y⇔D	SP ⇔ D
5	$00:A \Rightarrow X$ $X_L \Rightarrow A$	$00:B \Rightarrow X$ $X_L \Rightarrow B$	$00:CCR \Rightarrow X$ $X_L \Rightarrow CCR$	TMP3 ⇔ X	$D \Leftrightarrow X$	$X \Leftrightarrow X$	$Y \Leftrightarrow X$	SP ⇔ X
6	$00:A \Rightarrow Y$ $Y_L \Rightarrow A$	$$00:B \Rightarrow Y$ $Y_L \Rightarrow B$	$00:CCR \Rightarrow Y$ $Y_L \Rightarrow CCR$	TMP3 ⇔ Y	$D \Leftrightarrow Y$	$X \Leftrightarrow Y$	$Y \Leftrightarrow Y$	SP ⇔ Y
7	$$00:A \Rightarrow SP$ $SP_L \Rightarrow A$	$$00:B \Rightarrow SP$ $SP_L \Rightarrow B$	$$00:CCR \Rightarrow SP$ $SP_L \Rightarrow CCR$	TMP3 ⇔ SP	D ⇔ SP	$X \Leftrightarrow SP$	Y ⇔ SP	SP ⇔ SP

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

182

# **IBEQ**

Increment and Branch if Equal to Zero

IBEQ

Operation: (Counter) + 1 ⇒ Counter

If (Counter) = 0, then (PC) + \$0003 + Rel ⇒ PC

Description:

Add one to the specified counter register A, B, D, X, Y, or SP. If the counter register has reached zero, branch to the specified relative destination. The IBEQ instruction is encoded into three bytes of machine code including a 9-bit relative offset (-256 to +255 locations from the start of the next instruction)

DBEQ and TBEQ instructions are similar to IBEQ except that the counter is decremented or tested rather than being incremented. Bits 7 and 6 of the instruction postbyte are used to determine which operation is to be performed.

**CCR Details:** 

S	Х	Н	ı	N	z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code <sup>(1)</sup>	Access Detail		
Source i oiiii	Mode	Object Code	HCS12	M68HC12	
IBEQ abdxys, rel9	REL	04 lb rr	PPP/PPO	PPP	

Encoding for 1b is summarized in the following table. Bit 3 is not used (don't care), bit 5 selects branch on zero (IBEQ –
0) or not zero (IBNE – 1) versions, and bit 0 is the sign bit of the 9-bit relative offset. Bits 7 and 6 should be 1:0 for IBEQ.

Count Register	Bits 2:0	Source Form	Object Code (If Offset is Positive)	Object Code (If Offset is Negative)
Α	000	IBEQ A, rel9	04 80 rr	04 90 rr
В	001	IBEQ B, rel9	04 81 rr	04 91 rr
D	100	IBEQ D, rel9	04 84 rr	04 94 rr
Х	101	IBEQ X, rel9	04 85 rr	04 95 rr
Y	110	IBEQ Y, rel9	04 86 rr	04 96 rr
SP	111	IBEQ SP, rel9	04 87 rr	04 97 rr

### IBNE

### Increment and Branch if Not Equal to Zero

IBNE

Operation: (Counter) + 1 ⇒ Counter

If (Counter) not = 0, then (PC) + \$0003 + Rel ⇒ PC

Description:

Add one to the specified counter register A, B, D, X, Y, or SP. If the counter register has not been incremented to zero, branch to the specified relative destination. The IBNE instruction is encoded into three bytes of machine code including a 9-bit relative offset (-256 to +255 locations from the start of the next instruction).

DBNE and TBNE instructions are similar to IBNE except that the counter is decremented or tested rather than being incremented. Bits 7 and 6 of the instruction postbyte are used to determine which operation is to be performed.

CCR Details:

S	X	Н	ı	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code <sup>(1)</sup>	Access Detail		
Source i oilli	Mode	Object Code	HCS12	M68HC12	
IBNE abdxys, rel9	REL	04 lb rr	PPP/PPO	PPP	

Encoding for 1b is summarized in the following table. Bit 3 is not used (don't care), bit 5 selects branch on zero (IBEQ –
0) or not zero (IBNE – 1) versions, and bit 0 is the sign bit of the 9-bit relative offset. Bits 7 and 6 should be 1:0 for IBNE

	Count Register	Bits 2:0	Source Form	Object Code (If Offset is Positive)	Object Code (If Offset is Negative)
	Α	000	IBNE A, rel9	04 A0 rr	04 B0 rr
	В	001	IBNE B, rel9	04 A1 rr	04 B1 rr
Γ	D	100	IBNE D, rel9	04 A4 rr	04 B4 rr
	Х	101	IBNE X, rel9	04 A5 rr	04 B5 rr
	Y	110	IBNE Y, rel9	04 A6 rr	04 B6 rr
L	SP	111	IBNE SP, rel9	04 A7 rr	04 B7 rr

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 185

### **IDIVS**

Integer Divide (Signed)

**IDIVS** 

Operation:

(D)  $\div$  (X)  $\Rightarrow$  X; Remainder  $\Rightarrow$  D

Description:

Performs signed integer division of a signed 16-bit numerator in double accumulator D by a signed 16-bit denominator in index register X, producing a signed 16-bit quotient in X, and a signed 16-bit remainder in D. If division by zero is attempted, the values in D and X are not changed, C is set, and the values of the N. Z. and V status bits are undefined.

Other than division by zero, which is not legal and causes the C status bit to be set, the only overflow case is:

$$\frac{$8000}{$FFFF} = \frac{-32,768}{-1} = +32,768$$

But the highest positive value that can be represented in a 16-bit two's complement number is 32,767 (\$7FFF).

**CCR Details:** 

S	Х	Н	ı	N	Z	٧	С	
-	-	-	-	Δ	Δ	Δ	Δ	Ì

- N: Set if MSB of result is set: cleared otherwise Undefined after overflow or division by zero
- Set if quotient is \$0000; cleared otherwise Undefined after overflow or division by zero
- Set if the result was > \$7FFF or < \$8000; cleared otherwise Undefined after division by zero
- C:  $\overline{X15} \bullet \overline{X14} \bullet \overline{X13} \bullet \overline{X12} \bullet \dots \bullet \overline{X3} \bullet \overline{X2} \bullet \overline{X1} \bullet \overline{X0}$ Set if denominator was \$0000; cleared otherwise

Source Form	Address	Object Code	Access Detail		
Source i oilli	Mode	Object Code	HCS12	M68HC12	
IDIVS	INH	18 15	Offffffffffo	Offffffffff	

### Integer Divide

Operation: (D)  $\div$  (X)  $\Rightarrow$  X; Remainder  $\Rightarrow$  D

Description:

Divides an unsigned 16-bit dividend in double accumulator D by an unsigned 16-bit divisor in index register X, producing an unsigned 16-bit quotient in X, and an unsigned 16-bit remainder in D. If both the divisor and the dividend are assumed to have radix points in the same positions, the radix point of the quotient is to the right of bit 0. In the case of division by zero, C is set, the quotient is set to \$FFFF, and the remainder is indeterminate.

CCR Details:

S	X	Н	1	N	Z	٧	С
-	-	-	-	-	Δ	0	Δ

- Z: Set if quotient is \$0000; cleared otherwise
- V: 0; cleared
- C:  $\overline{X15} \bullet \overline{X14} \bullet \overline{X13} \bullet \overline{X12} \bullet \dots \bullet \overline{X3} \bullet \overline{X2} \bullet \overline{X1} \bullet \overline{X0}$ Set if denominator was \$0000; cleared otherwise

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
IDIV	INH	18 10	Offffffffff	Offffffffff	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

186

# INC

### **Increment Memory**

INC

Operation:  $(M) + \$01 \Rightarrow M$ 

Add one to the content of memory location M. Description:

> The N, Z and V status bits are set or cleared according to the results of the operation. The C status bit is not affected by the operation, thus allowing the INC instruction to be used as a loop counter in multiple-precision computations.

> When operating on unsigned values, only BEQ, BNE, LBEQ, and LBNE branches can be expected to perform consistently. When operating on two's complement values, all signed branches are available.

CCR Details:

s	Х	Н	-1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00: cleared otherwise
- Set if there is a two's complement overflow as a result of the operation: cleared otherwise. Two's complement overflow occurs if and only if (M) was \$7F before the operation.

Causas Farm	Source Form Address			Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
INC opr16a	EXT	72 hh 11	rPwO	rOPw
INC oprx0_xysp	IDX	62 xb	rPw	rPw
INC oprx9,xysp	IDX1	62 xb ff	rPwO	rPOw
INC oprx16,xysp	IDX2	62 xb ee ff	frPwP	frPPw
INC [D,xysp]	[D,IDX]	62 xb	fIfrPw	fIfrPw
INC [oprx16,xysp]	[IDX2]	62 xb ee ff	fIPrPw	fIPrPw

Increment A

**INCA** 

Operation:  $(A) + \$01 \Rightarrow A$ 

Description: Add one to the content of accumulator A.

The N, Z, and V status bits are set or cleared according to the results of the operation. The C status bit is not affected by the operation, thus allowing the INC instruction to be used as a loop counter in multiple-precision computations.

When operating on unsigned values, only BEQ, BNE, LBEQ, and LBNE branches can be expected to perform consistently. When operating on two's complement values, all signed branches are available.

CCR Details:

5	X	н	•	N	2	V	C
_	-	-	-	Δ	Δ	Δ	-

- N: Set if MSB of result is set; cleared otherwise
- 7: Set if result is \$00: cleared otherwise
- Set if there is a two's complement overflow as a result of the operation: cleared otherwise. Two's complement overflow occurs if and only if (A) was \$7F before the operation.

Source Form	Address	Obiect Code		Access Detail
Source i oilli	Mode	Object Code	HCS12	M68HC12
INCA	INH	42	0	0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 189

INS

**Increment Stack Pointer** 

INS

Operation: (SP) + \$0001 ⇒ SP

Add one to the SP. This instruction is assembled to LEAS 1,SP. The LEAS Description:

instruction does not affect condition codes as an INX or INY instruction

**CCR Details:** 

S	X	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address Mode	Object Code	HCS12	Access Detail M68HC12
INS translates to LEAS 1,SP	IDX	1B 81	Pf	PP <sup>(1)</sup>

Due to internal M68HC12 CPU requirements, the program word fetch is performed twice to the same address during this
instruction.

Instruction Glossary

**INCB** 

Increment B

Operation:  $(B) + \$01 \Rightarrow B$ 

Add one to the content of accumulator B. Description:

> The N, Z, and V status bits are set or cleared according to the results of the operation. The C status bit is not affected by the operation, thus allowing the INC instruction to be used as a loop counter in multiple-precision computations.

> When operating on unsigned values, only BEQ, BNE, LBEQ, and LBNE branches can be expected to perform consistently. When operating on two's

complement values, all signed branches are available.

**CCR Details:** 

S	Х	Н	-1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	-

- N: Set if MSB of result is set; cleared otherwise
- Set if result is \$00; cleared otherwise
- Set if there is a two's complement overflow as a result of the operation: cleared otherwise. Two's complement overflow occurs if and only if (B) was \$7F before the operation.

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
INCB	INH	52	0	0	

S12CPUV2 Reference Manual, Rev. 4.0

190 Freescale Semiconductor

**INX** 

Increment Index Register X

Operation:  $(X) + \$0001 \Rightarrow X$ 

Add one to index register X. LEAX 1,X can produce the same result but Description:

LEAX does not affect the Z status bit. Although the LEAX instruction is more

flexible, INX requires only one byte of object code.

INX operation affects only the Z status bit.

CCR Details:

S	Х	Н	-1	N	Z	٧	С
<b>-</b>	T-	-	-	-	Δ	-	-

Z: Set if result is \$0000; cleared otherwise

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
INX	INH	08	0	0	

Glossary

# INY

Operation:

### Increment Index Register Y

INY

**Description:** Add one to index registe

 $(Y) + \$0001 \Rightarrow Y$ 

Add one to index register Y. LEAY 1,Y can produce the same result but LEAY does not affect the Z status bit. Although the LEAY instruction is more

flexible, INY requires only one byte of object code.

INY operation affects only the Z status bit.

CCR Details:

s	X	Н	ı	N	Z	٧	С
-	-	-	-	-	Δ	-	-

Z: Set if result is \$0000; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
INY	INH	02	0	0

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 193

Glossar

**JSR** 

Jump to Subroutine

**JSR** 

Operation: (SP)

(SP) − \$0002 ⇒ SP

 $RTN_H : RTN_L \Rightarrow M_{(SP)} : M_{(SP + 1)}$ Subroutine Address  $\Rightarrow PC$ 

Description:

Sets up conditions to return to normal program flow, then transfers control to a subroutine. Uses the address of the instruction following the JSR as a return address.

return address

Decrements the SP by two to allow the two bytes of the return address to be stacked.

stacked.

Stacks the return address. The SP points to the high order byte of the return

address.

Calculates an effective address according to the rules for extended, direct,

or indexed addressing.

Jumps to the location determined by the effective address.

Subroutines are normally terminated with an RTS instruction, which

restores the return address from the stack.

CCR Details:

s	Х	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
JSR opr8a	DIR	17 dd	SPPP	PPPS
JSR opr16a	EXT	16 hh 11	SPPP	PPPS
JSR oprx0_xysp	IDX	15 xb	PPPS	PPPS
JSR oprx9,xysp	IDX1	15 xb ff	PPPS	PPPS
JSR oprx16,xysp	IDX2	15 xb ee ff	fPPPS	fPPPS
JSR [D,xysp]	[D,IDX]	15 xb	fIfPPPS	fIfPPPS
JSR [oprx16,xysp]	[IDX2]	15 xb ee ff	fIfPPPS	fIfPPPS

Instruction Glossar

# **JMP**

Jump

IMP

**Operation:** Effective Address  $\Rightarrow$  PC

**Description:** Jumps to the instruction stored at the effective address. The effective

address is obtained according to the rules for extended or indexed

addressina.

CCR Details:

S	X	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
JMP opr16a	EXT	06 hh 11	PPP	PPP	
JMP oprx0_xysp	IDX	05 xb	PPP	PPP	
JMP oprx9,xysp	IDX1	05 xb ff	PPP	PPP	
JMP oprx16,xysp	IDX2	05 xb ee ff	fPPP	fPPP	
JMP [D,xysp]	[D,IDX]	05 xb	fIfPPP	fIfPPP	
JMP [oprx16,xysp]	[IDX2]	05 xb ee ff	fIfPPP	fIfPPP	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

194

**LBCC** 

Long Branch if Carry Cleared (Same as LBHS)

**LBCC** 

**Operation:** If C = 0, then  $(PC) + \$0004 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the C status bit and branches if C = 0.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

s	X	Н	1	N	z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access	Detail
Gource Form	Mode	Object Code	HCS12	M68HC12
LBCC rel16	REL	18 24 qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>

1. OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	Z + (N ⊕ V) = 1	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

Slossary

LBCS

Long Branch if Carry Set (Same as LBLO)

**LBCS** 

Operation: If C = 1, then (PC) +  $\$0004 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the C status bit and branches if C = 1.

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 

S	Х	Н	1	N	Z	٧	С	
-	-	-	-	-	-	-	-	

Source Form	Address	Object Code	Α	ccess Detail
Source i oiiii	Mode	Object Code	HCS12	M68HC12
LBCS rel16	REL	18 25 qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	Z + (N ⊕ V) = 1	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 1

Glossar

**LBGE** 

Long Branch if Greater Than or Equal to Zero

**LBGE** 

 $\textbf{Operation:} \quad \text{If N} \oplus \text{V} = 0\text{, (PC)} + \$0004 + \text{Rel} \Rightarrow \text{PC}$ 

For signed two's complement numbers, if (Accumulator)  $\geq$  Memory), then


brancl

Description: LBGE can be used to branch after subtracting or comparing signed two's complement values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA,

SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is greater than or equal to the value in M. After CBA or SBA, the branch occurs if the value in B is greater than or equal to the value in A.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:



Source Form	Address	Object Code	Access D	etail
Course Form	Mode	Object oode	HCS12 M6	
LBGE rel16	REL	18 2C qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles if the branch is not taken.

	Br	anch			Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment	
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed	
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed	
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed	
r≤m	LBLE	18 2F	Z + (N ⊕ V) = 1	r>m	LBGT	18 2E	Signed	
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed	
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned	
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned	
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned	
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned	
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned	
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple	
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple	
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple	
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple	
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional	

Instruction Glossar

### **LBEQ**

### Long Branch if Equal

LBEQ

**Operation:** If Z = 1, (PC) + \$0004 + Rel  $\Rightarrow$  PC

Simple branch

**Description:** Tests the Z status bit and branches if Z = 1.

S X H I N Z V C

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

Source Form	Address	Object Code	Access Detail		
Source I offin	Mode	Object Code	HCS12	M68HC12	
LBEQ rel16	REL	18 27 qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>	

1. OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	Z + (N ⊕ V) = 1	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

198

# **LBGT**

### Long Branch if Greater Than Zero

**LBGT** 

 $\textbf{Operation:} \quad \text{If Z} + (N \oplus V) = 0, \text{ then (PC)} + \$0004 + \text{ReI} \Rightarrow \text{PC}$ 

For signed two's complement numbers, If (Accumulator) > (Memory), then


branch

**Description:** LBGT can be used to branch after subtracting or comparing signed two's

complement values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is greater than or equal to the value in M. After CBA or SBA, the branch occurs if the value in B is greater than or equal to the value in A.

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 



Source Form	Address	Object Code	Access Detail			
Godiec i omi	Mode	,	HCS12	M68HC12		
LBGT rel16	REL	18 2E qq rr	OPPP/OPO(1)	OPPP/OPO <sup>(1)</sup>		

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	Z + (N ⊕ V) = 1	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

## .BHI

### Long Branch if Higher

LBHI

If C + Z = 0, then (PC) + \$0004 + ReI  $\Rightarrow$  PC Operation:

For unsigned binary numbers, if (Accumulator) > (Memory), then branch

Description:

LBHI can be used to branch after subtracting or comparing unsigned values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is greater than the value in M. After CBA or SBA, the branch occurs if the value in B is greater than the value in A. LBHI should not be used for branching after instructions that do not affect the C bit, such as increment, decrement, load, store, test, clear, or complement.

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 

s	X	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
LBHI rel16	REL	18 22 qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>	

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	$Z + (N \oplus V) = 1$	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 201

# **LBLE**

Long Branch if Less Than or Equal to Zero



Description:

Operation: If  $Z + (N \oplus V) = 1$ , then (PC) + \$0004 + Rel  $\Rightarrow$  PC

For signed two's complement numbers, if (Accumulator)  $\leq$  (Memory), then

branch

LBLE can be used to branch after subtracting or comparing signed two's complement values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is less than or equal to the value in M. After CBA or SBA, the branch occurs if the value in B is less than or equal to the value in A.

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 



Source Form	Address	Object Code	Access Detail			
004100101111	Mode	02,000.0000	HCS12	M68HC12		
LBLE rel16	REL	18 2F qq rr	OPPP/OPO(1)	OPPP/OPO <sup>(1)</sup>		

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	$Z + (N \oplus V) = 1$	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

S12CPUV2 Reference Manual, Rev. 4.0

#### LBHS Long Branch if Higher or Same (Same as LBCC)

BHS

Operation: If C = 0, then (PC) +  $\$0004 + ReI \Rightarrow PC$ 

For unsigned binary numbers, if (Accumulator) ≥ (Memory), then branch

Description:

LBHS can be used to branch after subtracting or comparing unsigned values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is greater than or equal to the value in M. After CBA or SBA, the branch occurs if the value in B is greater than or equal to the value in A. LBHS should not be used for branching after instructions that do not affect the C bit, such as increment, decrement, load, store, test, clear, or complement.

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 

		ddre	ss	Ι,	Obie	ct Co	ode	Access Detail
_	-	-	-	-	-	-	-	

Source Form	Address	Object Code	Access I	Detail
Course Form	Mode	Object oode	HCS12	M68HC12
LBHS rel16	REL	18 24 qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>

S X H I N Z V C

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	$Z + (N \oplus V) = 1$	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

### S12CPUV2 Reference Manual, Rev. 4.0

202 Freescale Semiconductor

struction Glossary

**LBLO** 

Long Branch if Lower (Same as LBCS)

**LBLO** 

Operation: If C = 1, then (PC) +  $\$0004 + Rel \Rightarrow PC$ 

For unsigned binary numbers, if (Accumulator) < (Memory), then branch

Description:

LBLO can be used to branch after subtracting or comparing unsigned values, After CMPA, CMPB, CPD, CPS, CPX, CPY, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is less than the value in M. After CBA or SBA, the branch occurs if the value in B is less than the value in A. LBLO should not be used for branching after instructions that do not affect the C bit, such as increment, decrement, load, store, test, clear, or complement.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:



Source Form	Address Mode	Object Code	HCS12	Access Detail M68HC12
LBLO rel16	REL	18 25 gg rr	OPPP/OPO(1)	OPPP/OPO <sup>(1)</sup>

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	$Z + (N \oplus V) = 1$	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

# **LBLS**

### Long Branch if Lower or Same

**LBLS** 

Operation: If C + Z = 1, then (PC) +  $\$0004 + Rel \Rightarrow PC$ 

For unsigned binary numbers, if (Accumulator) ≤ (Memory), then branch

Description:

LBLS can be used to branch after subtracting or comparing unsigned values, After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value is less than or equal to the value in M. After CBA or SBA, the branch occurs if the value in B is less than or equal to the value in A. LBLS should not be used for branching after instructions that do not affect the C bit, such as increment, decrement, load, store, test, clear, or complement.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

S	X	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access D	Detail
Gource Form	Mode	Object Code	HCS12	M68HC12
LBLS rel16	REL	18 23 qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	$Z + (N \oplus V) = 1$	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

**LBMI** 

Long Branch if Minus

LBMI


**Operation:** If N = 1, then (PC) +  $\$0004 + Rel \Rightarrow PC$ 

Simple branch

Tests the N status bit and branches if N = 1. Description:

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 



Source Form	Address	Object Code	Access Detail		
Course Form	Mode	02,000.0000	HCS12	M68HC12	
LBMI rel16	REL	18 2B qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>	

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	Z + (N ⊕ V) = 1	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

S12CPUV2 Reference Manual, Rev. 4.0

Instruction Glossary **LBLT** 

Long Branch if Less Than Zero

Operation: If N  $\oplus$  V = 1, (PC) + \$0004 + Rel  $\Rightarrow$  PC

For signed two's complement numbers, if (Accumulator) < (Memory), then

branch

Description: LBLT can be used to branch after subtracting or comparing signed two-s complement values. After CMPA, CMPB, CPD, CPS, CPX, CPY, SBCA, SBCB, SUBA, SUBB, or SUBD, the branch occurs if the CPU register value

is less than the value in M. After CBA or SBA, the branch occurs if the value

in B is less than the value in A.

See 3.8 Relative Addressing Mode for details of branch execution.

**CCR Details:** 

						٧	
- [	-	-	-	-	-	-	-

Source Form	Address	Object Code	Acc	ess Detail
Source I offin	Mode	Object Code	HCS12	M68HC12
LBLT rel16	REL	18 2D qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch			
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed
r≤m	LBLE	18 2F	$Z + (N \oplus V) = 1$	r>m	LBGT	18 2E	Signed
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional

### S12CPUV2 Reference Manual, Rev. 4.0

206 Freescale Semiconductor

Instruction Glossary

# **LBNE**

Long Branch if Not Equal to Zero

LBNE

**Operation:** If Z = 0, then (PC) +  $$0004 + Rel \Rightarrow PC$ 

Simple branch

Tests the Z status bit and branches if Z = 0. Description:

See 3.8 Relative Addressing Mode for details of branch execution.

SXHINZVC **CCR Details:** 

Source Form	Address	Object Code		Access Detail
	Mode	,	HCS12	M68HC12
LBNE rel16	REL	18 26 qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch					
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment		
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed		
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed		
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed		
r≤m	LBLE	18 2F	Z + (N ⊕ V) = 1	r>m	LBGT	18 2E	Signed		
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed		
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned		
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned		
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned		
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned		
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned		
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple		
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple		
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple		
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple		
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional		

### $\mathsf{LBPL}$

### Long Branch if Plus

# **LBPL**

Operation: If N = 0, then (PC) +  $\$0004 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the N status bit and branches if N = 0.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

 S	Х	н		N	Z	٧	C
_	-	_	-	-	-	-	-

Source Form	Address	Object Code	Access	Detail
Gource Form	Mode	Object Code	HCS12	M68HC12
LBPL rel16	REL	18 2A qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch					
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment		
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed		
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed		
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed		
r≤m	LBLE	18 2F	Z + (N ⊕ V) = 1	r>m	LBGT	18 2E	Signed		
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed		
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned		
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned		
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned		
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned		
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned		
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple		
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple		
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple		
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple		
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional		

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 20

Glossar

# **LBRN**

Long Branch Never

**LBRN** 

 $\textbf{Operation:} \quad (PC) + \$0004 \Rightarrow PC$ 

Description:

Never branches. LBRN is effectively a 4-byte NOP that requires three cycles to execute. LBRN is included in the instruction set to provide a complement to the LBRA instruction. The instruction is useful during program debug, to negate the effect of another branch instruction without disturbing the offset byte. A complement for LBRA is also useful in compiler implementations.

Execution time is longer when a conditional branch is taken than when it is not, because the instruction queue must be refilled before execution resumes at the new address. Since the LBRN branch condition is never satisfied, the branch is never taken, and the queue does not need to be refilled, so execution time is always the smaller value.

CCR Details:

s	Х	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address Mode	Object Code	HCS12	Access Detail M68HC12
LBRN rel16	RFI	18 21 gg rr	OPO	OPO

Instruction Glossar

### LBRA

### Long Branch Always

### IBRA

**Operation:** (PC) +  $$0004 + Rel \Rightarrow PC$ 

Description:

Unconditional branch to an address calculated as shown in the expression. Rel is a relative offset stored as a two's complement number in the second and third bytes of machine code corresponding to the long branch

struction.

Execution time is longer when a conditional branch is taken than when it is not, because the instruction queue must be refilled before execution resumes at the new address. Since the LBRA branch condition is always satisfied, the branch is always taken, and the instruction queue must always be refilled, so execution time is always the larger value.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

S	X	Н	ı	N	Z	٧	С
_	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Octave i orini	Mode	Object oode	HCS12	M68HC12	
LBRA rel16	REL	18 20 qq rr	OPPP	OPPP	

### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

Instruction Glossary

210

# **LBVC**

### Long Branch if Overflow Cleared



**Operation:** If V = 0, then (PC) +  $\$0004 + Rel \Rightarrow PC$ 


Simple branch

**Description:** Tests the V status bit and branches if V = 0.

LBVC causes a branch when a previous operation on two's complement binary values does not cause an overflow. That is, when LBVC follows a two's complement operation, a branch occurs when the result of the operation is valid.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:



Source Form	Address			Access Detail			
Source i oiiii	Mode	Object Code	HCS12	M68HC12			
LBVC rel16	REL	18 28 qq rr	OPPP/OPO(1)	OPPP/OPO <sup>(1)</sup>			

1. OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles if the branch is not taken.

	Br	anch		Complementary Branch					
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment		
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed		
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed		
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed		
r≤m	LBLE	18 2F	$Z + (N \oplus V) = 1$	r>m	LBGT	18 2E	Signed		
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed		
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned		
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned		
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned		
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned		
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned		
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple		
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple		
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple		
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple		
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional		

### LBVS

### Long Branch if Overflow Set



**Operation:** If V = 1, then (PC) +  $$0004 + Rel \Rightarrow PC$ 

Simple branch

**Description:** Tests the V status bit and branches if V = 1.

LBVS causes a branch when a previous operation on two's complement binary values causes an overflow. That is, when LBVS follows a two's complement operation, a branch occurs when the result of the operation is invalid.

invalia.

See 3.8 Relative Addressing Mode for details of branch execution.

CCR Details:

s	X	Н	I	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Source i oilli	Mode	Object Code	HCS12	M68HC12	
LBVS rel16	REL	18 29 qq rr	OPPP/OPO <sup>(1)</sup>	OPPP/OPO <sup>(1)</sup>	

OPPP/OPO indicates this instruction takes four cycles to refill the instruction queue if the branch is taken and three cycles
if the branch is not taken.

	Br	anch		Complementary Branch				
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment	
r>m	LBGT	18 2E	$Z + (N \oplus V) = 0$	r≤m	LBLE	18 2F	Signed	
r≥m	LBGE	18 2C	N ⊕ V = 0	r <m< td=""><td>LBLT</td><td>18 2D</td><td>Signed</td></m<>	LBLT	18 2D	Signed	
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Signed	
r≤m	LBLE	18 2F	$Z + (N \oplus V) = 1$	r>m	LBGT	18 2E	Signed	
r <m< td=""><td>LBLT</td><td>18 2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>LBGE</td><td>18 2C</td><td>Signed</td></m<>	LBLT	18 2D	N ⊕ V = 1	r≥m	LBGE	18 2C	Signed	
r>m	LBHI	18 22	C + Z = 0	r≤m	LBLS	18 23	Unsigned	
r≥m	LBHS/LBCC	18 24	C = 0	r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	Unsigned	
r=m	LBEQ	18 27	Z = 1	r≠m	LBNE	18 26	Unsigned	
r≤m	LBLS	18 23	C + Z = 1	r>m	LBHI	18 22	Unsigned	
r <m< td=""><td>LBLO/LBCS</td><td>18 25</td><td>C = 1</td><td>r≥m</td><td>LBHS/LBCC</td><td>18 24</td><td>Unsigned</td></m<>	LBLO/LBCS	18 25	C = 1	r≥m	LBHS/LBCC	18 24	Unsigned	
Carry	LBCS	18 25	C = 1	No Carry	LBCC	18 24	Simple	
Negative	LBMI	18 2B	N = 1	Plus	LBPL	18 2A	Simple	
Overflow	LBVS	18 29	V = 1	No Overflow	LBVC	18 28	Simple	
r=0	LBEQ	18 27	Z = 1	r≠0	LBNE	18 26	Simple	
Always	LBRA	18 20	_	Never	LBRN	18 21	Unconditional	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 2

Glossar

**LDAB** 

Load Accumulator B

**LDAB** 

 $\textbf{Operation:} \quad (M) \Rightarrow B$ 

**Description:** Loads the content of memory location M into accumulator B. The condition

codes are set according to the data.

CCR Details:

s	х	н	1	N	z	٧	С
-	-	-	-	Δ	Δ	0	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
LDAB #opr8i	IMM	C6 ii	P	P
LDAB opr8a	DIR	D6 dd	rPf	rfP
LDAB opr16a	EXT	F6 hh 11	rPO	rOP
LDAB oprx0_xysp	IDX	E6 xb	rPf	rfP
LDAB oprx9,xysp	IDX1	E6 xb ff	rPO	rPO
LDAB oprx16,xysp	IDX2	E6 xb ee ff	frPP	frPP
LDAB [D,xysp]	[D,IDX]	E6 xb	fIfrPf	fIfrfP
LDAB [oprx16,xysp]	[IDX2]	E6 xb ee ff	fIPrPf	fIPrfP

Instruction Glos

### LDAA

#### Load Accumulator A

IDAA

**Description:** Loads the content of memory location M into accumulator A. The condition

codes are set according to the data.

CCR Details:

S	Х	н	ı	N	z	V	С
-	-	-	-	Δ	Δ	0	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
LDAA #opr8i	IMM	86 ii	P	P
LDAA opr8a	DIR	96 dd	rPf	rfP
LDAA opr16a	EXT	B6 hh 11	rPO	rOP
LDAA oprx0_xysp	IDX	A6 xb	rPf	rfP
LDAA oprx9,xysp	IDX1	A6 xb ff	rPO	rPO
LDAA oprx16,xysp	IDX2	A6 xb ee ff	frPP	frPP
LDAA [D,xysp]	[D,IDX]	A6 xb	fIfrPf	fIfrfP
LDAA [oprx16,xysp]	[IDX2]	A6 xb ee ff	fIPrPf	fIPrfP

### S12CPUV2 Reference Manual, Rev. 4.0

214 Freescale Semiconductor

Instruction Glossary

# **LDD**

**Load Double Accumulator** 



 $\textbf{Operation:} \quad (M:M+1) \Rightarrow A:B$ 

**Description:** Loads the contents of memory locations M and M+1 into double

accumulator D. The condition codes are set according to the data. The information from M is loaded into accumulator A, and the information from

M+1 is loaded into accumulator B.

CCR Details:

S	X	Н	ı	N	Z	٧	С
-	-	-	-	Δ	Δ	0	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V: 0; cleared

Source Form	Address	Object Code		Access Detail		
Source i oilii	Mode	Object Code	HCS12	M68HC12		
LDD #opr16i	IMM	CC jj kk	PO	OP		
LDD opr8a	DIR	DC dd	RPf	RfP		
LDD opr16a	EXT	FC hh 11	RPO	ROP		
LDD oprx0_xysp	IDX	EC xb	RPf	RfP		
LDD oprx9,xysp	IDX1	EC xb ff	RPO	RPO		
LDD oprx16,xysp	IDX2	EC xb ee ff	fRPP	fRPP		
LDD [D,xysp]	[D,IDX]	EC xb	fIfRPf	fIfRfP		
LDD [oprx16,xysp]	[IDX2]	EC xb ee ff	fIPRPf	fIPRfP		

#### **Load Stack Pointer**

LDS

Operation:  $(M:M+1) \Rightarrow SP$ 

Loads the most significant byte of the SP with the content of memory Description:

location M, and loads the least significant byte of the SP with the content of

the next byte of memory at M+1.

X H I N Z V C **CCR Details:** 

- - Δ Δ 0 -

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$0000; cleared otherwise

0; cleared

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
LDS #opr16i	IMM	CF jj kk	PO	OP
LDS opr8a	DIR	DF dd	RPf	RfP
LDS opr16a	EXT	FF hh 11	RPO	ROP
LDS oprx0_xysp	IDX	EF xb	RPf	RfP
LDS oprx9,xysp	IDX1	EF xb ff	RPO	RPO
LDS oprx16,xysp	IDX2	EF xb ee ff	fRPP	fRPP
LDS [D,xysp]	[D,IDX]	EF xb	fIfRPf	fIfRfP
LDS [oprx16,xysp]	[IDX2]	EF xb ee ff	fIPRPf	fIPRfP

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

LDY

Load Index Register Y

אח ו

Operation:  $(M:M+1) \Rightarrow Y$ 

Loads the most significant byte of index register Y with the content of Description:

memory location M, and loads the least significant byte of Y with the content

of the next memory location at M+1.

**CCR Details:** 

- - Δ Δ 0 -

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$0000; cleared otherwise

V: 0; cleared

Source Form	Address	Object Code		Access Detail
	Mode	Object Code	HCS12	M68HC12
LDY #opr16i	IMM	CD jj kk	PO	OP
LDY opr8a	DIR	DD dd	RPf	RfP
LDY opr16a	EXT	FD hh 11	RPO	ROP
LDY oprx0_xysp	IDX	ED xb	RPf	RfP
LDY oprx9,xysp	IDX1	ED xb ff	RPO	RPO
LDY oprx16,xysp	IDX2	ED xb ee ff	fRPP	fRPP
LDY [D,xysp]	[D,IDX]	ED xb	fIfRPf	fIfRfP
LDY [oprx16.xvsp]	IIDX21	ED xb ee ff	fIPRPf	fIPRfP

S12CPUV2 Reference Manual, Rev. 4.0

### Load Index Register X

Operation:  $(M:M+1) \Rightarrow X$ 

Loads the most significant byte of index register X with the content of Description:

memory location M, and loads the least significant byte of X with the content

of the next byte of memory at M+1.

CCR Details:

s	Х	Н	ı	N	z	V	С
-	-	-	-	Δ	Δ	0	-

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$0000; cleared otherwise

0; cleared

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
LDX #opr16i	IMM	CE jj kk	PO	OP
LDX opr8a	DIR	DE dd	RPf	RfP
LDX opr16a	EXT	FE hh 11	RPO	ROP
LDX oprx0_xysp	IDX	EE xb	RPf	RfP
LDX oprx9,xysp	IDX1	EE xb ff	RPO	RPO
LDX oprx16,xysp	IDX2	EE xb ee ff	fRPP	fRPP
LDX [D,xysp]	[D,IDX]	EE xb	fIfRPf	fIfRfP
LDX [oprx16,xysp]	[IDX2]	EE xb ee ff	fIPRPf	fIPRfP

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

218

# **LEAS**

Load Stack Pointer with Effective Address

LEAS

Operation: Effective Address ⇒ SP

Description:

Loads the stack pointer with an effective address specified by the program. The effective address can be any indexed addressing mode operand address except an indirect address. Indexed addressing mode operand addresses are formed by adding an optional constant supplied by the program or an accumulator value to the current value in X, Y, SP, or PC. See 3.9 Indexed Addressing Modes for more details.

LEAS does not alter condition code bits. This allows stack modification without disturbing CCR bits changed by recent arithmetic operations.

Operation is a bit more complex when LEAS is used with auto-increment or auto-decrement operand specifications and the SP is the referenced index register. The index register is loaded with what would have gone out to the address bus in the case of a load index instruction. In the case of a pre-increment or pre-decrement, the modification is made before the index register is loaded. In the case of a post-increment or post-decrement, modification would have taken effect after the address went out on the address bus, so post-modification does not affect the content of the index

In the unusual case where LEAS involves two different index registers and post-increment or post-decrement, both index registers are modified as demonstrated by the following example. Consider the instruction LEAS 4,Y+. First S is loaded with the value of Y, then Y is incremented by 4.

CCR Details:

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
LEAS oprx0_xysp	IDX	1B xb	Pf	PP <sup>(1)</sup>
LEAS oprx9,xysp	IDX1	1B xb ff	PO	PO
LEAS oprx16,xysp	IDX2	1B xb ee ff	PP	PP

Due to internal M68HC12 CPU requirements, the program word fetch is performed twice to the same address during this
instruction.

S12CPUV2 Reference Manual, Rev. 4.0

S X H I N Z V C

- | - | - | - | - | -

FΔX

Load X with Effective Address

 ${\sf \_FAX}$ 

Operation:

Effective Address  $\Rightarrow X$ 

Description:

Loads index register X with an effective address specified by the program. The effective address can be any indexed addressing mode operand address except an indirect address. Indexed addressing mode operand

addresses are formed by adding an optional constant supplied by the program or an accumulator value to the current value in X, Y, SP, or PC. See 3.9 Indexed Addressing Modes for more details.

Operation is a bit more complex when LEAX is used with auto-increment or auto-decrement operand specifications and index register X is the referenced index register. The index register is loaded with what would have gone out to the address bus in the case of a load indexed instruction. In the case of a pre-increment or pre-decrement, the modification is made before the index register is loaded. In the case of a post-increment or post-decrement, modification would have taken effect after the address went out on the address bus, so post-modification does not affect the content of the index register.

In the unusual case where LEAX involves two different index registers and post-increment and post-decrement, both index registers are modified as demonstrated by the following example. Consider the instruction LEAX 4,Y+. First X is loaded with the value of Y, then Y is incremented by 4.

**CCR Details:** 

5	•	Х	Н	ı	N	Z	٧	С
-	-	-	-	-	-	-	-	-

Source Form	Address	Object Code		Access Detail
Source i oilli	Mode	Object Code	HCS12	M68HC12
LEAX oprx0_xysp	IDX	1A xb	Pf	PP <sup>(1)</sup>
LEAX oprx9,xysp	IDX1	1A xb ff	PO	PO
LEAX oprx16,xysp	IDX2	1A xb ee ff	PP	PP

<sup>1.</sup> Due to internal M68HC12 CPU requirements, the program word fetch is performed twice to the same address during this

### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

Logical Shift Left Memory (Same as ASL)


Operation:



Description:

Shifts all bits of the memory location M one place to the left. Bit 0 is loaded with 0. The C status bit is loaded from the most significant bit of M.

CCR Details:



- N: Set if MSB of result is set: cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)

Set if the LSB of M was set before the shift; cleared otherwise

Source Form	Address	Address Object Code		Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12		
LSL opr16a	EXT	78 hh 11	rPwO	rOPw		
LSL oprx0_xysp	IDX	68 xb	rPw	rPw		
LSL oprx9,xysp	IDX1	68 xb ff	rPwO	rPOw		
LSL oprx16,xysp	IDX2	68 xb ee ff	frPwP	frPPw		
LSL [D,xysp]	[D,IDX]	68 xb	fIfrPw	fIfrPw		
LSL [oprx16,xysp]	[IDX2]	68 xb ee ff	fIPrPw	fIPrPw		

S12CPUV2 Reference Manual, Rev. 4.0

### LEAY

#### Load Y with Effective Address

I FAY

Operation:

Effective Address ⇒ Y

Description:

Loads index register Y with an effective address specified by the program. The effective address can be any indexed addressing mode operand address except an indirect address. Indexed addressing mode operand addresses are formed by adding an optional constant supplied by the program or an accumulator value to the current value in X, Y, SP, or PC. See 3.9 Indexed Addressing Modes for more details.

Operation is a bit more complex when LEAY is used with auto-increment or auto-decrement operand specifications and index register Y is the referenced index register. The index register is loaded with what would have gone out to the address bus in the case of a load indexed instruction. In the case of a pre-increment or pre-decrement, the modification is made before the index register is loaded. In the case of a post-increment or post-decrement, modification would have taken effect after the address went out on the address bus, so post-modification does not affect the content of the index register.

In the unusual case where LEAY involves two different index registers and post-increment and post-decrement, both index registers are modified as demonstrated by the following example. Consider the instruction LEAY 4,X+. First Y is loaded with the value of X, then X is incremented by 4.

**CCR Details:** 

s	Х	Н	-1	N	Z	٧	С	
-	-	-	-	-	-	-	-	

Source Form	Address Object Code		Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
LEAY oprx0_xysp	IDX	19 xb	Pf	PP <sup>(1)</sup>
LEAY oprx9,xysp	IDX1	19 xb ff	PO	PO
LEAY oprx16,xysp	IDX2	19 xb ee ff	PP	PP

1. Due to internal M68HC12 CPU requirements, the program word fetch is performed twice to the same address during this

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

222

Logical Shift Left A (Same as ASLA)

LSLA


Operation:



Description:

Shifts all bits of accumulator A one place to the left. Bit 0 is loaded with 0. The C status bit is loaded from the most significant bit of A.

CCR Details:



- N: Set if MSB of result is set: cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)

Set if the LSB of A was set before the shift; cleared otherwise

Source Form	Address	Object Code		Access Detail
Source I offin	Mode	Object Code	HCS12	M68HC12
LSLA	INH	48	0	0

SLB

Logical Shift Left B (Same as ASLB)

LSLB

Operation:



Description:

Shifts all bits of accumulator B one place to the left. Bit 0 is loaded with 0. The C status bit is loaded from the most significant bit of B.

**CCR Details:** 

s	Х	Н	ı	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)

Set if the LSB of B was set before the shift; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source i oilli	Mode	Object Code	HCS12	M68HC12
LSLB	INH	58	0	0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

LSR

**Logical Shift Right Memory** 

LSR

Operation:

Description:

Shifts all bits of memory location M one place to the right. Bit 7 is loaded with 0. The C status bit is loaded from the least significant bit of M.

CCR Details:

- Set if result is \$00; cleared otherwise
- $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C] \text{ (for N and C after the shift)}$ Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)
- MO C:

Set if the LSB of M was set before the shift; cleared otherwise


Source Form	Address	Object Code	Ac	cess Detail
Source i oilli	Mode	Object Code	HCS12	M68HC12
LSR opr16a	EXT	74 hh 11	rPw0	rOPw
LSR oprx0_xysp	IDX	64 xb	rPw	rPw
LSR oprx9,xysp	IDX1	64 xb ff	rPw0	rPOw
LSR oprx16,xysp	IDX2	64 xb ee ff	frPwP	frPPw
LSR [D,xysp]	[D,IDX]	64 xb	fIfrPw	fIfrPw
LSR [oprx16,xysp]	[IDX2]	64 xb ee ff	fIPrPw	fIPrPw

S12CPUV2 Reference Manual, Rev. 4.0

## LSLD

### Logical Shift Left Double (Same as ASLD)

Operation:



Description:

Shifts all bits of double accumulator D one place to the left. Bit 0 is loaded with 0. The C status bit is loaded from the most significant bit of accumulator

**CCR Details:** 

s	Х	Н	ı	N	Z	V	С
_	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- $\begin{array}{l} N\oplus C=[N\bullet\overline{C}]+[\overline{N}\bullet C] \ (\text{for N and C after the shift}) \\ \text{Set if (N is set and C is cleared) or (N is cleared and C is set);} \\ \text{cleared otherwise (for values of N and C after the shift)} \end{array}$
- C: D15

Set if the MSB of D was set before the shift; cleared otherwise

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
LSLD	INH	59	0	0

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

226

# **LSRA**

Logical Shift Right A

LSRA


Operation:



Description:

Shifts all bits of accumulator A one place to the right. Bit 7 is loaded with 0. The C status bit is loaded from the least significant bit of A.

**CCR Details:** 



- - - 0 Δ Δ Δ

  - Set if result is \$00; cleared otherwise
  - $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C] \text{ (for N and C after the shift)}$ Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)
  - C:

Set if the LSB of A was set before the shift; cleared otherwise

Source Form	Address Mode	Object Code	HCS12	Access Detail M68HC12
ISRA	INH	44	0	0

S12CPUV2 Reference Manual, Rev. 4.0

### LSRB

Logical Shift Right B

LSRB

Operation:



Description:

Shifts all bits of accumulator B one place to the right. Bit 7 is loaded with 0. The C status bit is loaded from the least significant bit of B.

**CCR Details:** 

S	Х	Н	1	N	Z	٧	С
_	-	-	-	0	Δ	Δ	Δ

- N: 0; cleared
- Z: Set if result is \$00; cleared otherwise
- $\begin{array}{l} V{:} & N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C] \ (\text{for N and C after the shift}) \\ \text{Set if (N is set and C is cleared) or (N is cleared and C is set);} \\ \text{cleared otherwise (for values of N and C after the shift)} \end{array}$
- C: B0

Set if the LSB of B was set before the shift; cleared otherwise

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
LSRB	INH	54	0	0	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 229

Glossar

# **MAXA**

Place Larger of Two Unsigned 8-Bit Values in Accumulator A



Operation:

 $\mathsf{MAX}\;((\mathsf{A}),\,(\mathsf{M}))\Rightarrow\mathsf{A}$ 

Description:

Subtracts an unsigned 8-bit value in memory from an unsigned 8-bit value in accumulator A to determine which is larger and leaves the larger of the two values in A. The Z status bit is set when the result of the subtraction is zero (the values are equal), and the C status bit is set when the subtraction requires a borrow (the value in memory is larger than the value in the accumulator). When C = 1, the value in A has been replaced by the value in memory.

The unsigned value in memory is accessed by means of indexed addressing modes, which allow a great deal of flexibility in specifying the address of the operand. Auto increment/decrement variations of indexed addressing facilitate finding the largest value in a list of values.

CCR Details:

s	X	Н	-1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: A7 M7 R7 + A7 M7 R7

Set if a two's complement overflow resulted from the operation; cleared otherwise

C:  $\overline{A7} \bullet M7 + M7 \bullet R7 + R7 \bullet \overline{A7}$ 

Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Condition codes reflect internal subtraction (R = A - M)

Source Form	Address	Object Code	Access Detail	
Source i oiiii	Mode	Object Code	HCS12	M68HC12
MAXA oprx0_xysp	IDX	18 18 xb	OrPf	OrfP
MAXA oprx9,xysp	IDX1	18 18 xb ff	OrPO	OrPO
MAXA oprx16,xysp	IDX2	18 18 xb ee ff	OfrPP	OfrPP
MAXA [D,xysp]	[D,IDX]	18 18 xb	OfIfrPf	OfIfrfP
MAXA [oprx16,xysp]	[IDX2]	18 18 xb ee ff	OfIPrPf	OfIPrfP


instruction Glos

## **LSRD**

### **Logical Shift Right Double**

LSRD

Operation:



Description:

Shifts all bits of double accumulator D one place to the right. D15 (MSB of A) is loaded with 0. The C status bit is loaded from D0 (LSB of B).

**CCR Details:** 

S	Х	Н	ı	N	Z	٧	С
-	-	-	-	0	Δ	Δ	Δ

- N: 0: cleared
  - Z: Set if result is \$0000; cleared otherwise
  - V: D0
    - Set if, after the shift operation, C is set; cleared otherwise
  - Se

Set if the LSB of D was set before the shift; cleared otherwise

	Source Form	Address Mode	Object Code	Access Detail		
			Object Code	HCS12	M68HC12	
	LSRD	INH	49	0	0	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction C

230

# **MAXM**

# Place Larger of Two Unsigned 8-Bit Values in Memory



Operation:

 $MAX ((A), (M)) \Rightarrow M$ 

Description:

Subtracts an unsigned 8-bit value in memory from an unsigned 8-bit value in accumulator A to determine which is larger and leaves the larger of the two values in the memory location. The Z status bit is set when the result of the subtraction is zero (the values are equal), and the C status bit is set when the subtraction requires a borrow (the value in memory is larger than the value in the accumulator). When C=0, the value in accumulator A has replaced the value in memory.

The unsigned value in memory is accessed by means of indexed addressing modes, which allow a great deal of flexibility in specifying the address of the operand.

CCR Details:

232

s	X	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: A7  $\overline{\text{M7}}$   $\overline{\text{R7}}$  +  $\overline{\text{A7}}$  M7 R7
  - Set if a two's complement overflow resulted from the operation; cleared otherwise
- C:  $\overline{A7} \bullet M7 + M7 \bullet R7 + R7 \bullet \overline{A7}$ Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Condition codes reflect internal subtraction (R = A - M)

Source Form	Address	Object Code		Access Detail
	Mode	Object Code	M68HC12	
MAXM oprx0_xysp	IDX	18 1C xb	OrPw	OrPw
MAXM oprx9,xysp	IDX1	18 1C xb ff	OrPwO	OrPwO
MAXM oprx16,xysp	IDX2	18 1C xb ee ff	OfrPwP	OfrPwP
MAXM [D,xysp]	[D,IDX]	18 1C xb	OfIfrPw	OfIfrPw
MAXM [oprx16,xysp]	[IDX2]	18 1C xb ee ff	OfIPrPw	OfIPrPw

Glossary

# MEM

# Determine Grade of Membership (Fuzzy Logic)



Operation:

Grade of Membership  $\Rightarrow M_{(Y)}$ (Y) + \$0001  $\Rightarrow$  Y

 $(Y) + \$0001 \Rightarrow Y$  $(X) + \$0004 \Rightarrow X$ 

Description:

Before executing MEM, initialize A, X, and Y. Load A with the current crisp value of a system input variable. Load Y with the fuzzy input RAM location where the grade of membership is to be stored. Load X with the first address of a 4-byte data structure that describes a trapezoidal membership function. The data structure consists of:

- Point\_1 The x-axis starting point for the leading side (at M<sub>X</sub>)
- Point\_2 The x-axis position of the rightmost point (at M<sub>X+1</sub>)
- Slope\_1 The slope of the leading side (at M<sub>X+2</sub>)
- Slope\_2 The slope of the trailing side (at M<sub>X+3</sub>); the right side slopes up and to the left from point 2

A slope\_1 or slope\_2 value of \$00 is a special case in which the membership function either starts with a grade of \$FF at input = point\_1, or ends with a grade of \$FF at input = point\_2 (infinite slope).

During execution, the value of A remains unchanged. X is incremented by four and Y is incremented by one.

CCR Details:

s	Х	Н	1	N	Z	٧	С
_	-	?	-	?	?	?	?

H, N, Z, V, and C may be altered by this instruction.

Source Form	Address Mode	Object Code	Access Detail HCS12 M68HC12		
MEM	Special	01	RRfOw	RRfOw	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 233

Glossar

## MINM

Place Smaller of Two Unsigned 8-Bit Values in Memory **MINM** 

Operation:

 $MIN((A), (M)) \Rightarrow M$ 

Description:

Subtracts an unsigned 8-bit value in memory from an unsigned 8-bit value in accumulator A to determine which is larger and leaves the smaller of the two values in the memory location. The Z status bit is set when the result of the subtraction is zero (the values are equal), and the C status bit is set when the subtraction requires a borrow (the value in memory is larger than the value in the accumulator). When C = 1, the value in accumulator A has replaced the value in memory.

The unsigned value in memory is accessed by means of indexed addressing modes, which allow a great deal of flexibility in specifying the address of the operand.

CCR Details:

s	Х	Н	1	N	Z	٧	С
_	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: A7  $\bullet$   $\overline{M7}$   $\bullet$   $\overline{R7}$  +  $\overline{A7}$   $\bullet$  M7  $\bullet$  R7 Set if a two's complement overflow resulted from the operation; cleared otherwise
- C:  $\overline{A7} \bullet M7 + M7 \bullet R7 + R7 \bullet \overline{A7}$ Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Condition codes reflect internal subtraction (R = A - M)

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
MINM oprx0_xysp	IDX	18 1D xb	OrPw	OrPw
MINM oprx9,xysp	IDX1	18 1D xb ff	OrPwO	OrPwO
MINM oprx16,xysp	IDX2	18 1D xb ee ff	OfrPwP	OfrPwP
MINM [D,xysp]	[D,IDX]	18 1D xb	OfIfrPw	OfIfrPw
MINM [oprx16,xysp]	[IDX2]	18 1D xb ee ff	OfIPrPw	OfIPrPw

Instruction Glossary

# MINA

#### Place Smaller of Two Unsigned 8-Bit Values in Accumulator A

MINA

Operation:

 $\mathsf{MIN}\;((\mathsf{A}),\,(\mathsf{M}))\Rightarrow\mathsf{A}$ 

Description:

Subtracts an unsigned 8-bit value in memory from an unsigned 8-bit value in accumulator A to determine which is larger, and leaves the smaller of the two values in accumulator A. The Z status bit is set when the result of the subtraction is zero (the values are equal), and the C status bit is set when the subtraction requires a borrow (the value in memory is larger than the value in the accumulator). When C = 0, the value in accumulator A has been replaced by the value in memory.

The unsigned value in memory is accessed by means of indexed addressing modes, which allow a great deal of flexibility in specifying the address of the operand. Auto increment/decrement variations of indexed addressing facilitate finding the smallest value in a list of values.

CCR Details:

S	Х	Н	ı	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- /: A7 M7 R7 + A7 M7 R7 Set if a two's complement overflow resulted from the operation; cleared otherwise
- C: Ā7 M7 + M7 R7 + R7 Ā7

  Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Condition codes reflect internal subtraction (R = A - M)

Source Form	Address	Object Code		Access Detail	
Source I offin	Mode	Object code	HCS12	M68HC12	
MINA oprx0_xysp	IDX	18 19 xb	OrPf	OrfP	
MINA oprx9,xysp	IDX1	18 19 xb ff	OrPO	OrPO	
MINA oprx16,xysp	IDX2	18 19 xb ee ff	OfrPP	OfrPP	
MINA [D,xysp]	[D,IDX]	18 19 xb	OfIfrPf	OfIfrfP	
MINA [oprx16,xysp]	[IDX2]	18 19 xb ee ff	OfIPrPf	OfIPrfP	

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

234

# **MOVB**

Move a Byte of Data from One Memory Location to Another

**MOVB** 

Operation:  $(M_1) \Rightarrow M_2$ 

Description:

Moves the content of one memory location to another memory location. The content of the source memory location is not changed.

Move instructions use separate addressing modes to access the source and destination of a move. The following combinations of addressing modes are supported: IMM–EXT, IMM–IDX, EXT–EXT, EXT–IDX, IDX–EXT, and IDX–IDX. IDX operands allow indexed addressing mode specifications that fit in a single postbyte including 5-bit constant, accumulator offsets, and auto increment/decrement modes. Nine-bit and 16-bit constant offsets would require additional extension bytes and are not allowed. Indexed indirect modes (for example [D,r]) are also not allowed.

There are special considerations when using PC-relative addressing with move instructions. These are discussed in 3.10 Instructions Using Multiple Modes.

CCR Details:

S	х	н	ı	N	z	V	С
-	-	-	-	-	-	-	-

Source Form <sup>(1)</sup>	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
MOVB #opr8, opr16a	IMM-EXT	18 OB ii hh 11	OPwP	OPwP
MOVB #opr8i, oprx0_xysp	IMM-IDX	18 08 xb ii	OPwO	OPwO
MOVB opr16a, opr16a	EXT-EXT	18 OC hh 11 hh 11	OrPwPO	OrPwPO
MOVB opr16a, oprx0_xysp	EXT-IDX	18 09 xb hh 11	OPrPw	OPrPw
MOVB oprx0_xysp, opr16a	IDX-EXT	18 0D xb hh 11	OrPwP	OrPwP
MOVB oprx0_xysp, oprx0_xysp	IDX-IDX	18 0A xb xb	OrPwO	OrPwO

The first operand in the source code statement specifies the source for the move.

### MOVW

### Move a Word of Data from One Memory Location to Another



Operation:  $(M:M+1_1) \Rightarrow M:M+1_2$ 

Description:

Moves the content of one 16-bit location in memory to another 16-bit location in memory. The content of the source memory location is not  $\,$ 

changed.

Move instructions use separate addressing modes to access the source and destination of a move. The following combinations of addressing modes are supported: IMM–EXT, IMM–IDX, EXT–EXT, EXT–IDX, IDX–EXT, and IDX–IDX. IDX operands allow indexed addressing mode specifications that fit in a single postbyte including 5-bit constant, accumulator offsets, and auto increment/decrement modes. Nine-bit and 16-bit constant offsets would require additional extension bytes and are not allowed. Indexed indirect modes (for example [D,r]) are also not allowed.

There are special considerations when using PC-relative addressing with move instructions. These are discussed in 3.10 Instructions Using Multiple Modes.

**CCR Details:** 

S	X	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form <sup>(1)</sup>	Address	Object Code	Access Detail	Access Detail	
Source Forms /	Mode	Object Code	HCS12 M68HC	12	
MOVW #opr16i, opr16a	IMM-EXT	18 03 jj kk hh 11	OPWPO OPWI	PO	
MOVW #opr16i, oprx0_xysp	IMM-IDX	18 00 xb jj kk	OPPW OPI	PW	
MOVW opr16a, opr16a	EXT-EXT	18 04 hh 11 hh 11	ORPWPO ORPWI	PO	
MOVW opr16a, oprx0_xysp	EXT-IDX	18 01 xb hh 11	OPRPW OPRI	PW	
MOVW oprx0_xysp, opr16a	IDX-EXT	18 05 xb hh 11	ORPWP ORPW	WΡ	
MOVW oprx0_xysp, oprx0_xysp	IDX-IDX	18 02 xb xb	ORPWO ORPW	ΝO	

<sup>1.</sup> The first operand in the source code statement specifies the source for the move

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 237

Glossar

**NEG** 

Negate Memory

NEG

Operation:  $0 - (M) = (\overline{M}) + 1 \Rightarrow M$ 

Description: Replaces the content of memory location M with its two's complement (the

value \$80 is left unchanged).

CCR Details:

S	X	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise.
- Z: Set if result is \$00; cleared otherwise.
- V: R7 R6 R5 R4 R3 R2 R1 R0
  Set if there is a two's complement overflow from the implied subtraction from zero; cleared otherwise. Two's complement overflow occurs if and only if (M) = \$80
- C: R7 + R6 + R5 + R4 + R3 + R2 + R1 + R0
  Set if there is a borrow in the implied subtraction from zero; cleared otherwise. Set in all cases except when (M) = \$00.

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
NEG opr16a	EXT	70 hh 11	rPw0	rOPw
NEG oprx0_xysp	IDX	60 xb	rPw	rPw
NEG oprx9,xysp	IDX1	60 xb ff	rPwO	rPOw
NEG oprx16,xysp	IDX2	60 xb ee ff	frPwP	frPPw
NEG [D,xysp]	[D,IDX]	60 xb	fIfrPw	fIfrPw
NEG [oprx16,xysp]	[IDX2]	60 xb ee ff	fIPrPw	fIPrPw

Instruction GI

### MUL

#### Multiply 8-Bit by 8-Bit (Unsigned)

MUL

 $\textbf{Operation:} \quad (A) \times (B) \Rightarrow A : B$ 

Description: Multiplies the 8-bit unsigned binary value in accumulator A by the 8-bit

unsigned binary value in accumulator B and places the 16-bit unsigned result in double accumulator D. The carry flag allows rounding the most significant byte of the result through the sequence MUL, ADCA #0.

CCR Details:

s	Х	Н	1	N	Z	٧	С
_	-	-	-	-	-	-	Δ

C: R

Set if bit 7 of the result (B bit 7) is set; cleared otherwise

Source Form	Address Object Code		Access Detail		
Source I offin	Mode	Object Code	HCS12	M68HC12	
MUL	INH	12	0	ffO	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

238

# **NEGA**

Negate A

**NEGA** 

Operation:  $0 - (A) = (\overline{A}) + 1 \Rightarrow A$ 

Description: Replaces the content of accumulator A with its two's complement (the value

\$80 is left unchanged).

CCR Details:

8	,	X	Н	1	N	Z	٧	С
Γ-		-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: R7 R6 R5 R4 R3 R2 R1 R0
  Set if there is a two's complement overflow from the implied
- subtraction from zero; cleared otherwise
  Two's complement overflow occurs if and only if (A) = \$80
- C: R7 + R6 + R5 + R4 + R3 + R2 + R1 + R0
  Set if there is a borrow in the implied subtraction from zero; cleared otherwise

Set in all cases except when (A) = \$00

Source Form	Address Mode Object Code HCS12	etail		
Source I offin	Mode	Object Code	HCS12	M68HC12
NEGA	INH	40	0	0

**NEGB** 

Negate B

**NEGB** 

Operation:  $0 - (B) = (\overline{B}) + 1 \Rightarrow B$ 

Replaces the content of accumulator B with its two's complement (the value Description:

\$80 is left unchanged).

X H I N Z V C **CCR Details:** 

N: Set if MSB of result is set: cleared otherwise

Z: Set if result is \$00; cleared otherwise

V:  $R7 \bullet \overline{R6} \bullet \overline{R5} \bullet \overline{R4} \bullet \overline{R3} \bullet \overline{R2} \bullet \overline{R1} \bullet \overline{R0}$ 

Set if there is a two's complement overflow from the implied

subtraction from zero; cleared otherwise Two's complement overflow occurs if and only if (B) = \$80

R7 + R6 + R5 + R4 + R3 + R2 + R1 + R0

Set if there is a borrow in the implied subtraction from zero; cleared

Set in all cases except when (B) = \$00

Source Form	Address	Object Code	Access Detail	
Source I offin	Mode	Object Code	HCS12	M68HC12
NEGB	INH	50	0	0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**ORAA** 

Inclusive OR A

ORAA

Operation:  $(A) + (M) \Rightarrow A$ 

Performs bitwise logical inclusive OR between the content of accumulator A Description:

and the content of memory location M and places the result in A. Each bit of A after the operation is the logical inclusive OR of the corresponding bits of

M and of A before the operation.

**CCR Details:** 

X H I N Z V C - - Δ Δ 0 -

Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00: cleared otherwise

V: 0; cleared

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
ORAA #opr8i	IMM	8A ii	P	P
ORAA opr8a	DIR	9A dd	rPf	rfP
ORAA opr16a	EXT	BA hh 11	rPO	rOP
ORAA oprx0_xysp	IDX	AA xb	rPf	rfP
ORAA oprx9,xysp	IDX1	AA xb ff	rPO	rPO
ORAA oprx16,xysp	IDX2	AA xb ee ff	frPP	frPP
ORAA [D,xysp]	[D,IDX]	AA xb	fIfrPf	fIfrfP
ORAA [oprx16,xysp]	[IDX2]	AA xb ee ff	fIPrPf	fIPrfP

**Null Operation** 

Operation: No operation

This single-byte instruction increments the PC and does nothing else. No Description: other CPU registers are affected. NOP is typically used to produce a time

delay, although some software disciplines discourage CPU frequency-based time delays. During debug, NOP instructions are sometimes used to temporarily replace other machine code instructions,

thus disabling the replaced instruction(s).

CCR Details:

S	X	Н	ı	N	Z	٧	С	
-	-	-	-	-	-	-	-	

Source Form	Mode HCS12	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12
NOP	INH	A7	0	0

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

242

**ORAB** 

Inclusive OR B

ORAB

Operation:  $(B) + (M) \Rightarrow B$ 

Description:

Performs bitwise logical inclusive OR between the content of accumulator B and the content of memory location M. The result is placed in B. Each bit of B after the operation is the logical inclusive OR of the corresponding bits of

M and of B before the operation.

**CCR Details:** 

S X H I N Z V C - - Δ Δ 0 -

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00: cleared otherwise

V: 0; cleared

Source Form	Address	Object Code		Access Detail
Source i oilli	Source Form Mode		HCS12	M68HC12
ORAB #opr8i	IMM	CA ii	P	P
ORAB opr8a	DIR	DA dd	rPf	rfP
ORAB opr16a	EXT	FA hh 11	rPO	rOP
ORAB oprx0_xysp	IDX	EA xb	rPf	rfP
ORAB oprx9,xysp	IDX1	EA xb ff	rPO	rPO
ORAB oprx16,xysp	IDX2	EA xb ee ff	frPP	frPP
ORAB [D,xysp]	[D,IDX]	EA xb	fIfrPf	fIfrfP
ORAB [oprx16,xysp]	[IDX2]	EA xb ee ff	fIPrPf	fIPrfP

ORCC

Logical OR CCR with Mask

ORCC

Operation:  $(CCR) + (M) \Rightarrow CCR$ 

Performs bitwise logical inclusive OR between the content of memory Description:

location M and the content of the CCR and places the result in the CCR. Each bit of the CCR after the operation is the logical OR of the corresponding bits of M and of CCR before the operation. To set one or more bits, set the corresponding bit of the mask equal to 1. Bits corresponding to 0s in the mask are not changed by the ORCC operation.

CCR Details:

S	X	Н	-1	N	Z	٧	С	
î	-	î	î	î	î	î	î	

Condition code bits are set if the corresponding bit was 1 before the operation or if the corresponding bit in the instruction-provided mask is 1. The X interrupt mask cannot be set by any software instruction.

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
ORCC #opr8i	IMM	14 ii	P	P	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**PSHB** 

Description:

Push B onto Stack

PSHB

(SP) - \$0001 ⇒ SP Operation:

 $(B) \Rightarrow M_{(SP)}$ 

Stacks the content of accumulator B. The stack pointer is decremented by one. The content of B is then stored at the address the SP points to.

Push instructions are commonly used to save the contents of one or more CPU registers at the start of a subroutine. Complementary pull instructions can be used to restore the saved CPU registers just before returning from

the subroutine.

**CCR Details:** 

S	X	Н	ı	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail			
Source i oilli	Mode	Object Code	HCS12	M68HC12		
PSHB	INH	37	0s	0s		

## **PSHA**

Push A onto Stack

PSHA

(SP) - \$0001 ⇒ SP Operation:

 $(A) \Rightarrow M_{(SP)}$ 

Description: Stacks the content of accumulator A. The stack pointer is decremented by one. The content of A is then stored at the address the SP points to.

> Push instructions are commonly used to save the contents of one or more CPU registers at the start of a subroutine. Complementary pull instructions can be used to restore the saved CPU registers just before returning from

the subroutine.

**CCR Details:** 

S	X	Н	1	N	Z	٧	С	
-	-	-	-	-	-	-	-	

Source Form	Address	Object Code	Access Detail			
Gource Form	Mode	Object Code	HCS12	M68HC12		
PSHA	INH	36	0s	0s		

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

246

**PSHC** 

Push CCR onto Stack

**PSHC** 

(SP) - \$0001 ⇒ SP Operation:

 $(CCR) \Rightarrow M_{(SP)}$ 

Stacks the content of the condition codes register. The stack pointer is Description:

decremented by one. The content of the CCR is then stored at the address

to which the SP points.

Push instructions are commonly used to save the contents of one or more CPU registers at the start of a subroutine. Complementary pull instructions can be used to restore the saved CPU registers just before returning from

the subroutine.

CCR Details:

s	Х	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address Mode	Object Code	HCS12	Access Detail M68HC12
PSHC	INH	39	0s	Os

### PSHD

**Push Double Accumulator onto Stack** 

**PSHD** 

Operation:  $(SP) - \$0002 \Rightarrow SP$ 

 $(A : B) \Rightarrow M_{(SP)} : M_{(SP+1)}$ 

Description: Stacks the content of double accumulator D. The stack pointer is

decremented by two, then the contents of accumulators A and B are stored

at the location to which the SP points.

After PSHD executes, the SP points to the stacked value of accumulator A. This stacking order is the opposite of the order in which A and B are stacked when an interrupt is recognized. The interrupt stacking order is backward-compatible with the M6800, which had no 16-bit accumulator.

Push instructions are commonly used to save the contents of one or more CPU registers at the start of a subroutine. Complementary pull instructions can be used to restore the saved CPU registers just before returning from the subroutine.

CCR Details:

S	X	Н	1	N	Z	٧	С	
-	-	-	-	-	-	-	-	

Source Form	Address	Object Code	Access Detai	i
Source Form	Mode	Object Code	HCS12	M68HC12
PSHD	INH	3B	OS	OS

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**PSHY** 

Push Index Register Y onto Stack

Operation:  $(SP) - \$0002 \Rightarrow SP$ 

 $(Y_H: Y_L) \Rightarrow M_{(SP)}: M_{(SP+1)}$ 

Description:

Stacks the content of index register Y. The stack pointer is decremented by two. The content of Y is then stored at the address to which the SP points. After PSHY executes, the SP points to the stacked value of the high-order half of Y.

Push instructions are commonly used to save the contents of one or more CPU registers at the start of a subroutine. Complementary pull instructions can be used to restore the saved CPU registers just before returning from

the subroutine.

**CCR Details:** 

s	X	Н	ı	N	Z	٧	С
-	-	-	-	-	-	-	-

	Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12		
	PSHY	INH	35	OS	OS	

# **PSHX**

### Push Index Register X onto Stack

Operation:  $(SP) - \$0002 \Rightarrow SP$ 

 $(X_H: X_L) \Rightarrow M_{(SP)}: M_{(SP+1)}$ 

Description: Stacks the content of index register X. The stack pointer is decremented by

two. The content of X is then stored at the address to which the SP points. After PSHX executes, the SP points to the stacked value of the high-order

half of X.

Push instructions are commonly used to save the contents of one or more CPU registers at the start of a subroutine. Complementary pull instructions can be used to restore the saved CPU registers just before returning from the subroutine.

X H I N Z V C CCR Details:

Source Form	Address	Object Code	Access Detail	
Octave Form	Mode	Object Code	HCS12	M68HC12
PSHX	INH	34	os	OS

### S12CPUV2 Reference Manual, Rev. 4.0

250 Freescale Semiconductor

**PULA** 

**Pull A from Stack** 

PUI A

Operation:

 $(M_{(SP)}) \Rightarrow A$ (SP) + \$0001  $\Rightarrow$  SP


Description: Accumulator A is loaded from the address indicated by the stack pointer.

The SP is then incremented by one.

Pull instructions are commonly used at the end of a subroutine, to restore the contents of CPU registers that were pushed onto the stack before

subroutine execution.

CCR Details:



Source Form	Address Mode	Object Code	Access Detail	M68HC12
PULA	INH	32	uf0	uf0

#### Pull B from Stack



 $(M_{(SP)}) \Rightarrow B$ (SP) + \$0001  $\Rightarrow$  SP Operation:

Accumulator B is loaded from the address indicated by the stack pointer. Description:

The SP is then incremented by one.

Pull instructions are commonly used at the end of a subroutine, to restore the contents of CPU registers that were pushed onto the stack before

subroutine execution.

CCR Details:

S	X	Н	- 1	N	Z	٧	С
-	-	-	-	-	-	-	-

	Source Form	Address	Object Code	Access Detail		
	Source I offi	Mode	Object Code	HCS12	M68HC12	
P	PULB	INH	33	uf0	uf0	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**PULD** 

**Pull Double Accumulator from Stack** 



 $\begin{array}{l} (M_{(SP)}:M_{(SP+1)}) \Rightarrow A:B \\ (SP) + \$0002 \Rightarrow SP \end{array}$ Operation:

Double accumulator D is loaded from the address indicated by the stack Description:

pointer. The SP is then incremented by two.

The order in which A and B are pulled from the stack is the opposite of the order in which A and B are pulled when an RTI instruction is executed. The interrupt stacking order for A and B is backward-compatible with the M6800, which had no 16-bit accumulator.

Pull instructions are commonly used at the end of a subroutine to restore the contents of CPU registers that were pushed onto the stack before

subroutine execution.

CCR Details:

s	X	Н	ı	N	Z	٧	С	
-	-	-	-	-	-	-	-	

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
PULD	INH	3A	UfO	UfO	

### **PULC**

### Pull Condition Code Register from Stack

PUI C

 $(M_{(SP)}) \Rightarrow CCR$ (SP) + \$0001  $\Rightarrow$  SP Operation:

Description: The condition code register is loaded from the address indicated by the

stack pointer. The SP is then incremented by one.

Pull instructions are commonly used at the end of a subroutine to restore the contents of CPU registers that were pushed onto the stack before

subroutine execution.

CCR Details:

s	X	Н	ı	N	Z	٧	С	
Δ	↓	Δ	Δ	Δ	Δ	Δ	Δ	Ì

Condition codes take on the value pulled from the stack, except that the X mask bit cannot change from 0 to 1. Software can leave the X bit set, leave it cleared, or change it from 1 to 0, but it can be set only by a reset or by recognition of an XIRQ interrupt.

Source Form	Address	Object Code	Access Detail		
Gource Form	Mode	Object Code	HCS12	M68HC12	
PULC	INH	38	uf0	uf0	

### S12CPUV2 Reference Manual, Rev. 4.0

254 Freescale Semiconductor

Instruction Glossary

# **PULX**

Pull Index Register X from Stack

PUI X

 $\begin{array}{l} (M_{(SP)}:M_{(SP+1)}) \Rightarrow X_H:X_L \\ (SP) + \$0002 \Rightarrow SP \end{array}$ Operation:

Index register X is loaded from the address indicated by the stack pointer. Description:

The SP is then incremented by two.

Pull instructions are commonly used at the end of a subroutine to restore the contents of CPU registers that were pushed onto the stack before

subroutine execution.

CCR Details:

S	Х	Н	-1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address Mode	Object Code	Access Detail HCS12	M68HC12
PULX	INH	30	UfO	UfO

### **Pull Index Register Y from Stack**

### PUI Y

Operation:  $\begin{array}{l} (M_{(SP)}:M_{(SP+1)}) \Rightarrow Y_H:Y_L \\ (SP)+\$0002 \Rightarrow SP \end{array}$ 

Description: Index register Y is loaded from the address indicated by the stack pointer.

The SP is then incremented by two

Pull instructions are commonly used at the end of a subroutine to restore the contents of CPU registers that were pushed onto the stack before

subroutine execution

CCR Details:

S	Х	Н	ı	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Acc	ess Detail
Source Form	Mode	Object Code	HCS12	M68HC12
PULY	INH	31	UfO	UfO

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

### RFV

### **Fuzzy Logic Rule Evaluation** (Continued)



Index register Y points to the base address for the fuzzy inputs and fuzzy outputs. The value in Y does not change during execution

Accumulator A holds intermediate results. During antecedent processing, a MIN function compares each fuzzy input to the value stored in A, and writes the smaller of the two to A. When all antecedents have been evaluated, A contains the smallest input value. This is the truth value used during consequent processing. Accumulator A must be initialized to \$FF for the MIN function to evaluate the inputs of the first rule correctly. For subsequent rules, the value \$FF is written to A when an \$FE marker is encountered. At the end of execution, accumulator A holds the truth value for the last rule.

The V status bit signals whether antecedents (0) or consequents (1) are being processed. V must be initialized to 0 for processing to begin with the antecedents of the first rule. Once execution begins, the value of V is automatically changed as \$FE separators are encountered. At the end of execution, V should equal 1, because the last element before the \$FF end marker should be a rule consequent. If V is equal to 0 at the end of execution, the rule list is incorrect.

Fuzzy outputs must be cleared to \$00 before processing begins in order for the MAX algorithm used during consequent processing to work correctly. Residual output values would cause incorrect comparison.

Refer to Section 9. Fuzzy Logic Support for details.

**CCR Details:** 

S	X	Н	1	N	Z	٧	С
_	l -	?	-	?	?	Δ	?

V: 1; Normally set, unless rule structure is erroneous H, N, Z, and C may be altered by this instruction

Source Form	Address	Object Code	Access Detail <sup>(1)</sup>		
Source Form	Mode	Object Code HCS12		M68HC12	
REV (replace comma if interrupted)	Special	18 3A	Orf(t,tx)O ff + Orf(t,	Orf(t,tx)O ff + Orf(t,	

The 3-cycle loop in parentheses is executed once for each element in the rule list. When an interrupt occurs, there is a 2-cycle exit sequence, a 4-cycle re-entry sequence, then execution resumes with a prefetch of the last antecedent or 2-cycle exit sequence, a 4-cycle re-entry sequence, the consequent being processed at the time of the interrupt

S12CPUV2 Reference Manual, Rev. 4.0

Instruction Glossary

### $\mathsf{REV}$

### **Fuzzy Logic Rule Evaluation**

Operation:

MIN-MAX Rule Evaluation

Description:

Performs an unweighted evaluation of a list of rules, using fuzzy input values to produce fuzzy outputs. REV can be interrupted, so it does not adversely affect interrupt latency.

The REV instruction uses an 8-bit offset from a base address stored in index register Y to determine the address of each fuzzy input and fuzzy output. For REV to execute correctly, each rule in the knowledge base must consist of a table of 8-bit antecedent offsets followed by a table of 8-bit consequent offsets. The value \$FE marks boundaries between antecedents and consequents and between successive rules. The value \$FF marks the end of the rule list. REV can evaluate any number of rules with any number of inputs and outputs

Beginning with the address pointed to by the first rule antecedent, REV evaluates each successive fuzzy input value until it encounters an \$FE separator. Operation is similar to that of a MINA instruction. The smallest input value is the truth value of the rule. Then, beginning with the address pointed to by the first rule consequent, the truth value is compared to each successive fuzzy output value until another \$FE separator is encountered; if the truth value is greater than the current output value, it is written to the output. Operation is similar to that of a MAXM instruction. Rules are processed until an \$FF terminator is encountered.

Before executing REV, perform these set up operations.

- X must point to the first 8-bit element in the rule list.
- Y must point to the base address for fuzzy inputs and fuzzy outputs.
- A must contain the value \$FF, and the CCR V bit must = 0. (LDAA #\$FF places the correct value in A and clears V.)
- Clear fuzzy outputs to 0s.

Index register X points to the element in the rule list that is being evaluated. X is automatically updated so that execution can resume correctly if the instruction is interrupted. When execution is complete, X points to the next address after the \$FF separator at the end of the rule list.

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

258

# **REVW**

### Fuzzy Logic Rule Evaluation (Weighted)

# REVW

Operation:

MIN-MAX Rule Evaluation with Optional Rule Weighting

Description:

REVW performs either weighted or unweighted evaluation of a list of rules, using fuzzy inputs to produce fuzzy outputs. REVW can be interrupted, so it does not adversely affect interrupt latency.

For REVW to execute correctly, each rule in the knowledge base must consist of a table of 16-bit antecedent pointers followed by a table of 16-bit consequent pointers. The value \$FFFE marks boundaries between antecedents and consequents, and between successive rules. The value \$FFFF marks the end of the rule list. REVW can evaluate any number of rules with any number of inputs and outputs.

Setting the C status bit enables weighted evaluation. To use weighted evaluation, a table of 8-bit weighting factors, one per rule, must be stored in memory. Index register Y points to the weighting factors.

Beginning with the address pointed to by the first rule antecedent, REVW evaluates each successive fuzzy input value until it encounters an \$FFFE separator. Operation is similar to that of a MINA instruction. The smallest input value is the truth value of the rule. Next, if weighted evaluation is enabled, a computation is performed, and the truth value is modified. Then, beginning with the address pointed to by the first rule consequent, the truth value is compared to each successive fuzzy output value until another \$FFFE separator is encountered; if the truth value is greater than the current output value, it is written to the output. Operation is similar to that of a MAXM instruction. Rules are processed until an \$FFFF terminator is encountered.

Perform these set up operations before execution:

- . X must point to the first 16-bit element in the rule list.
- A must contain the value \$FF, and the CCR V bit must = 0 (LDAA #\$FF places the correct value in A and clears V).
- Clear fuzzy outputs to 0s.
- Set or clear the CCR C bit. When weighted evaluation is enabled, Y must point to the first item in a table of 8-bit weighting factors.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 260 Freescale Semiconductor Slossary

### REVW

#### Fuzzy Logic Rule Evaluation (Weighted) (Continued)

## **REVW**

Index register X points to the element in the rule list that is being evaluated. X is automatically updated so that execution can resume correctly if the instruction is interrupted. When execution is complete, X points to the address after the \$FFFF separator at the end of the rule list.

Index register Y points to the weighting factor being used. Y is automatically updated so that execution can resume correctly if the instruction is interrupted. When execution is complete, Y points to the last weighting factor used. When weighting is not used (C = 0), Y is not changed.

Accumulator A holds intermediate results. During antecedent processing, a MIN function compares each fuzzy input to the value stored in A and writes the smaller of the two to A. When all antecedents have been evaluated, A contains the smallest input value. For unweighted evaluation, this is the truth value used during consequent processing. For weighted evaluation, the value in A is multiplied by the quantity (Rule Weight + 1) and the upper eight bits of the result replace the content of A. Accumulator A must be initialized to \$FF for the MIN function to evaluate the inputs of the first rule correctly. For subsequent rules, the value \$FF is automatically written to A when an \$FFFE marker is encountered. At the end of execution, accumulator A holds the truth value for the last rule.

The V status bit signals whether antecedents (0) or consequents (1) are being processed. V must be initialized to 0 for processing to begin with the antecedents of the first rule. Once execution begins, the value of V is automatically changed as \$FFFE separators are encountered. At the end of execution, V should equal 1, because the last element before the \$FF end marker should be a rule consequent. If V is equal to 0 at the end of execution, the rule list is incorrect.

Fuzzy outputs must be cleared to \$00 before processing begins in order for the MAX algorithm used during consequent processing to work correctly. Residual output values would cause incorrect comparison.

Refer to Section 9. Fuzzy Logic Support for details.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 261

Glossar

ROL

### Rotate Left Memory



Operation:



Description:

Shifts all bits of memory location M one place to the left. Bit 0 is loaded from the C status bit. The C bit is loaded from the most significant bit of M. Rotate operations include the carry bit to allow extension of shift and rotate operations to multiple bytes. For example, to shift a 24-bit value one bit to the left, the sequence ASL LOW, ROL MID, ROL HIGH could be used where LOW, MID and HIGH refer to the low-order, middle and high-order bytes of the 24-bit value, respectively.

CCR Details:

s	Х	н		N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V:  $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)
- C: M7

Set if the MSB of M was set before the shift; cleared otherwise

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
ROL opr16a	EXT	75 hh 11	rPwO	rOPw	
ROL oprx0_xysp	IDX	65 xb	rPw	rPw	
ROL oprx9,xysp	IDX1	65 xb ff	rPw0	rPOw	
ROL oprx16,xysp	IDX2	65 xb ee ff	frPwP	frPPw	
ROL [D,xysp]	[D,IDX]	65 xb	fIfrPw	fIfrPw	
ROL [oprx16,xysp]	[IDX2]	65 xb ee ff	fIPrPw	fIPrPw	

S12CPUV2 Reference Manual, Rev. 4.0

Instruction Glossar

### REVW

#### Fuzzy Logic Rule Evaluation (Weighted) (Concluded)

# **REVW**

**CCR Details:** 

S	Х	Н	ı	N	Z	٧	С
_	-	?	-	?	?	Δ	!

- V: 1; Normally set, unless rule structure is erroneous
- C: Selects weighted (1) or unweighted (0) rule evaluation
- H, N, Z, and C may be altered by this instruction

Source Form	Address	Object Code	Access Detail <sup>(1)</sup>		
Source Form	Mode	Object Code	HCS12	M68HC12	
REVW (add 2 at end of ins if wts) (replace comma if interrupted)	Special	18 3B	ORf(t,Tx)O (r,RfRf) ffff + ORf(t,	ORf(tTx)O (r,RfRf) ffff + ORf(t,	

The 3-cycle loop in parentheses expands to five cycles for separators when weighting is enabled. The loop is executed
once for each element in the rule list. When an interrupt occurs, there is a 2-cycle exit sequence, a 4-cycle re-entry
sequence, then execution resumes with a prefetch of the last antecedent or consequent being processed at the time of the
interrupt.

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary


262

# **ROLA**

Rotate Left A

**ROLA** 

Operation:



Description:

Shifts all bits of accumulator A one place to the left. Bit 0 is loaded from the C status bit. The C bit is loaded from the most significant bit of A. Rotate operations include the carry bit to allow extension of shift and rotate operations to multiple bytes. For example, to shift a 24-bit value one bit to the left, the sequence ASL LOW, ROL MID, and ROL HIGH could be used where LOW, MID, and HIGH refer to the low-order, middle, and high-order bytes of the 24-bit value, respectively.

CCR Details:

s	X	Н	ı	N	Z	٧	С	
-	-	-	-	Δ	Δ	Δ	Δ	

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V:  $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)
- C: A7

Set if the MSB of A was set before the shift; cleared otherwise

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
ROLA	INH	45	0	0	

S12CPUV2 Reference Manual, Rev. 4.0

### $\mathsf{ROLB}$

#### Rotate Left B

# ROLB

Operation:



Description:

Shifts all bits of accumulator B one place to the left. Bit 0 is loaded from the C status bit. The C bit is loaded from the most significant bit of B. Rotate operations include the carry bit to allow extension of shift and rotate operations to multiple bytes. For example, to shift a 24-bit value one bit to the left, the sequence ASL LOW, ROL MID, and ROL HIGH could be used where LOW, MID, and HIGH refer to the low-order, middle and high-order bytes of the 24-bit value, respectively.

CCR Details:

S	Х	Н	- 1	N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)
- C: B7

Set if the MSB of B was set before the shift; cleared otherwise

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
ROLB	INH	55	0	0

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**RORA** 

Rotate Right A

**RORA** 

Operation:



Description:

Shifts all bits of accumulator A one place to the right. Bit 7 is loaded from the C status bit. The C bit is loaded from the least significant bit of A. Rotate operations include the carry bit to allow extension of shift and rotate operations to multiple bytes. For example, to shift a 24-bit value one bit to the right, the sequence LSR HIGH, ROR MID, and ROR LOW could be used where LOW, MID, and HIGH refer to the low-order, middle, and high-order bytes of the 24-bit value, respectively.

CCR Details:

S	Х	Н	ı	N	z	٧	С	
-	-	-	-	Δ	Δ	Δ	Δ	

- N: Set if MSB of result is set; cleared otherwise
- Set if result is \$00; cleared otherwise
- $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)

A0 Set if the LSB of A was set before the shift; cleared otherwise

Source Form	Address	Object Code		Access Detail
	Mode	Object Code	HCS12	M68HC12
RORA	INH	46	0	0

### ROR

### **Rotate Right Memory**

Operation:



Description:

Shifts all bits of memory location M one place to the right. Bit 7 is loaded from the C status bit. The C bit is loaded from the least significant bit of M. Rotate operations include the carry bit to allow extension of shift and rotate operations to multiple bytes. For example, to shift a 24-bit value one bit to the right, the sequence LSR HIGH, ROR MID, and ROR LOW could be used where LOW, MID, and HIGH refer to the low-order, middle, and high-order bytes of the 24-bit value, respectively.

**CCR Details:** 

s	Х	Н	ı	N	Z	٧	С
_	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- $N \oplus C = [N \bullet \overline{C}] + [\overline{N} \bullet C]$  (for N and C after the shift) Set if (N is set and C is cleared) or (N is cleared and C is set); cleared otherwise (for values of N and C after the shift)

Set if the LSB of M was set before the shift; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
ROR opr16a	EXT	76 hh 11	rPw0	rOPw
ROR oprx0_xysp	IDX	66 xb	rPw	rPw
ROR oprx9,xysp	IDX1	66 xb ff	rPwO	rPOw
ROR oprx16,xysp	IDX2	66 xb ee ff	frPwP	frPPw
ROR [D,xysp]	[D,IDX]	66 xb	fIfrPw	fIfrPw
ROR [oprx16,xysp]	[IDX2]	66 xb ee ff	fIPrPw	fIPrPw

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

266

### **RORB** Rotate Right B

Operation:



Description:

Shifts all bits of accumulator B one place to the right. Bit 7 is loaded from the C status bit. The C bit is loaded from the least significant bit of B. Rotate operations include the carry bit to allow extension of shift and rotate operations to multiple bytes. For example, to shift a 24-bit value one bit to the right, the sequence LSR HIGH, ROR MID, and ROR LOW could be used where LOW, MID, and HIGH refer to the low-order, middle and high-order bytes of the 24-bit value, respectively.

**CCR Details:** 

268

S	Х	Н	ı	N	Z	V	С
-	-	-	-	Δ	Δ	Δ	Δ

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- $\begin{array}{l} N\oplus C=[N\bullet\overline{C}]+[\overline{N}\bullet C] \ (\text{for N and C after the shift}) \\ \text{Set if (N is set and C is cleared) or (N is cleared and C is set);} \\ \text{cleared otherwise (for values of N and C after the shift)} \end{array}$
- Set if the LSB of B was set before the shift; cleared otherwise

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
RORB	INH	56	0	0

RORB

Slossary

RTC

Return from Call

**RTC** 

**Operation:**  $(M_{(SP)}) \Rightarrow PPAGE$ 

(SP) + \$0001 ⇒ SP

 $(M_{(SP)}: M_{(SP+1)}) \Rightarrow PC_H: PC_L$  $(SP) + \$0002 \Rightarrow SP$ 

(6. ) : \$6562 → 6.

Description: Terminates subroutines in expanded memory invoked by the CALL

instruction. Returns execution flow from the subroutine to the calling program. The program overlay page (PPAGE) register and the return address are restored from the stack; program execution continues at the restored address. For code compatibility purposes, CALL and RTC also execute correctly in devices that do not have expanded memory capability.

CCR Details:

S	Х	Н	ı	N	Z	V	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
RTC	INH	0A	uUnfPPP	uUnPPP	

### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

Glossar

**RTS** 

Return from Subroutine

RTS

 $\textbf{Operation:} \quad (M_{(SP)} \colon M_{(SP+1)}) \Rightarrow PC_H \colon PC_L; \, (SP) + \$0002 \Rightarrow SP$ 

Description: Restores context at the end of a subroutine. Loads the program counter with

a 16-bit value pulled from the stack and increments the stack pointer by two. Program execution continues at the address restored from the stack.

CCR Details:

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
RTS	INH	3D	UfPPP	UfPPP

Instruction Glo

RTI

### Return from Interrupt

RTI

**Operation:**  $(M_{(SP)}) \Rightarrow CCR; (SP) + \$0001 \Rightarrow SP$ 

 $\begin{array}{l} (M(SP) : M_{(SP+1)}) \Rightarrow B : A; (SP) + \$0002 \Rightarrow SP \\ (M_{(SP)} : M_{(SP+1)}) \Rightarrow B : A; (SP) + \$0004 \Rightarrow SP \\ (M_{(SP)} : M_{(SP+1)}) \Rightarrow X_H : X_L : (SP) + \$0004 \Rightarrow SP \\ (M_{(SP)} : M_{(SP+1)}) \Rightarrow P_H : P_{C_L} : (SP) - \$0002 \Rightarrow SP \\ (M_{(SP)} : M_{(SP+1)}) \Rightarrow Y_H : Y_L : (SP) + \$0004 \Rightarrow SP \end{array}$ 

Description:

Restores system context after interrupt service processing is completed. The condition codes, accumulators B and A, index register X, the PC, and index register Y are restored to a state pulled from the stack. The X mask bit may be cleared as a result of an RTI instruction, but cannot be set if it was cleared prior to execution of the RTI instruction.

If another interrupt is pending when RTI has finished restoring registers from the stack, the SP is adjusted to preserve stack content, and the new vector is fetched. This operation is functionally identical to the same operation in the M68HC11, where registers actually are re-stacked, but is faster.

**CCR Details:** 

S	Х	Н	-1	N	Z	٧	С
Δ	↓	Δ	Δ	Δ	Δ	Δ	Δ

Condition codes take on the value pulled from the stack, except that the X mask bit cannot change from 0 to 1. Software can leave the X bit set, leave it cleared, or change it from 1 to 0, but it can be set only by a reset or by recognition of an  $\overline{XIRQ}$  interrupt.

Source Form	Address Mode	Object Code	Access D	etail M68HC12
RTI (with interrupt pending)	INH	0В	uUUUUPPP uUUUUfVfPPP	uUUUUUPPP uUUUUVfPPP

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

270

**SBA** 

Subtract Accumulators

SBA

 $\textbf{Operation:} \quad (A)-(B)\Rightarrow A$ 

Description: Subtr

 Subtracts the content of accumulator B from the content of accumulator A and places the result in A. The content of B is not affected. For subtraction

instructions, the C status bit represents a borrow.

CCR Details:

S	Х	Н	1	N	Z	٧	С	
-	-	-	-	Δ	Δ	Δ	Δ	1

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: A7 • B7 • R7 + A7 • B7 • R7

Set if a two's complement overflow resulted from the operation; cleared otherwise

C:  $\overline{A7} \cdot B7 + B7 \cdot R7 + R7 \cdot \overline{A7}$ 

Set if the absolute value of B is larger than the absolute value of A; cleared otherwise

Source Form	Address	Object Code	Access Detail	
Source i oilli	Mode	Object Code	HCS12	M68HC12
SBA	INH	18 16	00	00

### Subtract with Carry from A

**SBCA** 

Operation:  $(A) - (M) - C \Rightarrow A$ 

Subtracts the content of memory location M and the value of the C status bit Description:

from the content of accumulator A. The result is placed in A. For subtraction

instructions, the C status bit represents a borrow.

**CCR Details:** 

S	Х	н		N	Z	٧	С
-	-	-	-	Δ	Δ	Δ	Δ

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

 $A7 \bullet \overline{M7} \bullet \overline{R7} + \overline{A7} \bullet M7 \bullet R7$ 

Set if a two's complement overflow resulted from the operation;

cleared otherwise

 $\overline{A7} \bullet M7 + M7 \bullet R7 + R7 \bullet \overline{A7}$ 

Set if the absolute value of the content of memory plus previous carry is larger than the absolute value of the accumulator; cleared

S F	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
SBCA #opr8i	IMM	82 ii	P	P
SBCA opr8a	DIR	92 dd	rPf	rfP
SBCA opr16a	EXT	B2 hh 11	rPO	rOP
SBCA oprx0_xysp	IDX	A2 xb	rPf	rfP
SBCA oprx9,xysp	IDX1	A2 xb ff	rPO	rPO
SBCA oprx16,xysp	IDX2	A2 xb ee ff	frPP	frPP
SBCA [D,xysp]	[D,IDX]	A2 xb	fIfrPf	fIfrfP
SBCA [oprx16,xysp]	[IDX2]	A2 xb ee ff	fIPrPf	fIPrfP

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**SEC** 

**Set Carry** 

SFC

Operation:  $1 \Rightarrow C$  bit

Sets the C status bit. This instruction is assembled as ORCC #\$01. The Description:

ORCC instruction can be used to set any combination of bits in the CCR in

SEC can be used to set up the C bit prior to a shift or rotate instruction

involving the C bit.

CCR Details:

s	X	Н	ı	N	Z	٧	С
-	-	-	-	-	-	-	1

C: 1; set

Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
SEC translates to ORCC #\$01	IMM	14 01	P	P

Instruction Glossan

### SBCB

### Subtract with Carry from B

SBCB

Operation:  $(B) - (M) - C \Rightarrow B$ 

Description:

Subtracts the content of memory location M and the value of the C status bit from the content of accumulator B. The result is placed in B. For subtraction

instructions, the C status bit represents a borrow.

**CCR Details:** 

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

 $B7 \bullet \overline{M7} \bullet \overline{R7} + \overline{B7} \bullet M7 \bullet R7$ 

Set if a two's complement overflow resulted from the operation;

cleared otherwise

 $\overline{\mathsf{B7}} \bullet \mathsf{M7} + \mathsf{M7} \bullet \mathsf{R7} + \mathsf{R7} \bullet \overline{\mathsf{B7}}$ 

Set if the absolute value of the content of memory plus previous carry is larger than the absolute value of the accumulator; cleared

	Address	01.5.4.0.1.	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
SBCB #opr8i	IMM	C2 ii	P	P	
SBCB opr8a	DIR	D2 dd	rPf	rfP	
SBCB opr16a	EXT	F2 hh 11	rPO	rOP	
SBCB oprx0_xysp	IDX	E2 xb	rPf	rfP	
SBCB oprx9,xysp	IDX1	E2 xb ff	rPO	rPO	
SBCB oprx16,xysp	IDX2	E2 xb ee ff	frPP	frPP	
SBCB [D,xysp]	[D,IDX]	E2 xb	fIfrPf	fIfrfP	
SBCB [oprx16,xysp]	[IDX2]	E2 xb ee ff	fIPrPf	fIPrfP	

S12CPUV2 Reference Manual, Rev. 4.0

274 Freescale Semiconductor

estruction Glossary

**SEI** Set Interrupt Mask

Operation:

Sets the I mask bit. This instruction is assembled as ORCC #\$10. The Description:

ORCC instruction can be used to set any combination of bits in the CCR in one operation. When the I bit is set, all maskable interrupts are inhibited, and the CPU will recognize only non-maskable interrupt sources or an SWI.

**CCR Details:** 

s	X	н	1	N	z	٧	С
-	-	-	1	-	-	-	-

I: 1; set

Source Form	Address	Object Code		Access Detail
004.001.0	Mode	02,001.0000	HCS12	M68HC12
SEI translates to ORCC #\$10	IMM	14 10	Р	P

### Set Two's Complement Overflow Bit

**SEV** 

Operation:

Sets the V status bit. This instruction is assembled as ORCC #\$02. The Description:

ORCC instruction can be used to set any combination of bits in the CCR in

X H I N Z V C **CCR Details:** - | - | - | - | 1 | -

Source Form	Address	Object Code	Access Det	ail
	Mode	_	HCS12	M68HC12
SEV translates to ORCC #\$02	IMM	14 02	P	P

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 277

**STAA** 

Store Accumulator A

STAA

Operation:  $(A) \Rightarrow M$ 

Stores the content of accumulator A in memory location M. The content of Description:

A is unchanged.

**CCR Details:** 

S	Х	н		N	Z	٧	C
-	-	-	-	Δ	Δ	0	-

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: 0; cleared

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
STAA opr8a	DIR	5A dd	Pw	Pw	
STAA opr16a	EXT	7A hh 11	PwO	WOP	
STAA oprx0_xysp	IDX	6A xb	Pw	Pw	
STAA oprx9,xysp	IDX1	6A xb ff	PwO	PwO	
STAA oprx16,xysp	IDX2	6A xb ee ff	PwP	PwP	
STAA [D,xysp]	[D,IDX]	6A xb	PIfw	PIfPw	
STAA [oprx16,xysp]	[IDX2]	6A xb ee ff	PIPw	PIPPW	

# SEX

### Sign Extend into 16-Bit Register

If r1 bit 7 = 0, then  $\$00 : (r1) \Rightarrow r2$ Operation:

If r1 bit 7 = 1, then  $FF: (r1) \Rightarrow r2$ 

This instruction is an alternate mnemonic for the TFR r1,r2 instruction, where r1 is an 8-bit register and r2 is a 16-bit register. The result in r2 is the 16-bit sign extended representation of the original two's complement number in r1. The content of r1 is unchanged in all cases except that of SEX

A,D (D is A : B).

CCR Details:

Description:

s	X	Н	1	N	Z	٧	С	
-	-	-	-	-	-	-	-	

Source Form	Address	Object Code <sup>(1)</sup>		Access Detail
Source i oilli	Mode	Object Code	HCS12	M68HC12
SEX abc,dxys	INH	B7 eb	P	P

Legal coding for eb is summarized in the following table. Columns represent the high-order source digit. Rows repre-the low-order destination digit (MSB is a don't care). Values are in hexadecimal.

	0	1	2
3	sex:A ⇒ TMP2	sex:B ⇒ TMP2	sex:CCR ⇒ TMP2
4	sex:A ⇒ D	sex:B ⇒ D	sex:CCR ⇒ D
	SEX A,D	SEX B,D	SEX CCR,D
5	sex:A ⇒ X	$sex:B \Rightarrow X$	sex:CCR ⇒ X
	SEX A,X	SEX B,X	SEX CCR,X
6	sex:A ⇒ Y	sex:B ⇒ Y	sex:CCR ⇒ Y
	SEX A,Y	SEX B,Y	SEX CCR,Y
7	sex:A ⇒ SP	sex:B ⇒ SP	sex:CCR ⇒ SP
	SEX A,SP	SEX B,SP	SEX CCR,SP

### S12CPUV2 Reference Manual, Rev. 4.0

278 Freescale Semiconductor

**STAB** 

Store Accumulator B

**STAB** 

Operation:  $(B) \Rightarrow M$ 

Stores the content of accumulator B in memory location M. The content of Description:

B is unchanged.

**CCR Details:** 

s	Х	н	1	N	z	٧	С
_	-	-	-	Δ	Δ	0	-

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: 0; cleared

Source Form	Address	Object Code	Ac	cess Detail
Source Form	Mode	Object Code	HCS12	M68HC12
STAB opr8a	DIR	5B dd	Pw	Pw
STAB opr16a	EXT	7B hh 11	PwO	WOP
STAB oprx0_xysp	IDX	6B xb	Pw	Pw
STAB oprx9,xysp	IDX1	6B xb ff	PwO	PwO
STAB oprx16,xysp	IDX2	6B xb ee ff	PwP	PwP
STAB [D,xysp]	[D,IDX]	6B xb	PIfw	PIfPw
STAB [oprx16.xvspl	IIDX21	6B xb ee ff	PIPw	PIPPW

Glossarv

STD

Store Double Accumulator

STD

Operation:  $(A : B) \Rightarrow M : M + 1$ 

**Description:** Stores the content of double accumulator D in memory location

M: M + 1. The content of D is unchanged.

CCR Details:

S	Х	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	0	-

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$0000: cleared otherwise

V: 0; cleared

Source Form	Address	Object Code		Access Detail
30urce i omi	Mode	Object Code	HCS12	M68HC12
STD opr8a	DIR	5C dd	PW	PW
STD opr16a	EXT	7C hh 11	PWO	WOP
STD oprx0_xysp	IDX	6C xb	PW	PW
STD oprx9,xysp	IDX1	6C xb ff	PWO	PWO
STD oprx16,xysp	IDX2	6C xb ee ff	PWP	PWP
STD [D,xysp]	[D,IDX]	6C xb	PIfW	PIfPW
STD [oprx16,xysp]	[IDX2]	6C xb ee ff	PIPW	PIPPW

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 281

Glossar

STS

Store Stack Pointer

STS

 $\textbf{Operation:} \quad (SP_H:SP_L) \Rightarrow M:M+1$ 

Description: Stores the content of th

Stores the content of the stack pointer in memory. The most significant byte of the SP is stored at the specified address, and the least significant byte of the SP is stored at the next higher byte address (the specified address plus

one).

CCR Details:

s	Х	Н	1	N	z	٧	С
-	-	-	-	Δ	Δ	0	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V: 0; cleared

Source Form	Address	Object Code	A	ccess Detail
Source Form	Mode	Object Code	HCS12	M68HC12
STS opr8a	DIR	5F dd	PW	PW
STS opr16a	EXT	7F hh 11	PWO	WOP
STS oprx0_xysp	IDX	6F xb	PW	PW
STS oprx9,xysp	IDX1	6F xb ff	PWO	PWO
STS oprx16,xysp	IDX2	6F xb ee ff	PWP	PWP
STS [D,xysp]	[D,IDX]	6F xb	PIfW	PIfPW
STS [oprx16,xysp]	[IDX2]	6F xb ee ff	PIPW	PIPPW

Instruction Gloss

### STOP

### **Stop Processing**

STOP

Operation:

```
\begin{array}{l} (SP) - \$0002 \Rightarrow SP; \, RTN_H : RTN_L \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0002 \Rightarrow SP; \, Y_H : Y_L \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0002 \Rightarrow SP; \, X_H : X_L \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0002 \Rightarrow SP; \, B : A\Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0001 \Rightarrow SP; \, CCR \Rightarrow (M_{(SP)}) \end{array}
```

Stop All Clocks

Description:

When the S control bit is set, STOP is disabled and operates like a 2-cycle NOP instruction. When the S bit is cleared, STOP stacks CPU context, stops all system clocks, and puts the device in standby mode.

Standby operation minimizes system power consumption. The contents of registers and the states of I/O pins remain unchanged.

Asserting the RESET, XIRQ, or IRQ signals ends standby mode. Stacking on entry to STOP allows the CPU to recover quickly when an interrupt is used, provided a stable clock is applied to the device. If the system uses a clock reference crystal that also stops during low-power mode, crystal startup delay lengthens recovery time.

If  $\overline{XIRQ}$  is asserted while the X mask bit = 0 ( $\overline{XIRQ}$  interrupts enabled), execution resumes with a vector fetch for the  $\overline{XIRQ}$  interrupt. If the X mask bit = 1 ( $\overline{XIRQ}$  interrupts disabled), a 2-cycle recovery sequence including an O cycle is used to adjust the instruction queue and the stack-pointer, and execution continues with the next instruction after STOP.

CCR Details:

S	X	Н	ı	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code		Access Detail	
Source Form	Mode	Object Code	HCS12		M68HC12
STOP (entering STOP)	INH	18 3E	00SSSSsf		00SSSfSs
(exiting STOP)			fVfPPP		fVfPPP
(continue)			ff		fO
(if STOP disabled)			00		00

### S12CPUV2 Reference Manual, Rev. 4.0

32 Freescale Semiconductor

Instruction Glossary

STX

Store Index Register X

STX

Operation:  $(X_H : X_I) \Rightarrow M : M + 1$ 

Description:

Stores the content of index register X in memory. The most significant byte of X is stored at the specified address, and the least significant byte of X is stored at the next higher byte address (the specified address plus one).

CCR Details:

S	Х	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	0	-

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$0000; cleared otherwise
- V: 0; cleared

Source Form	Address	Object Code	Access Detail	Access Detail
Source Form	Mode		HCS12	M68HC12
STX opr8a	DIR	5E dd	PW	PW
STX opr16a	EXT	7E hh 11	PWO	WOP
STX oprx0_xysp	IDX	6E xb	PW	PW
STX oprx9,xysp	IDX1	6E xb ff	PWO	PWO
STX oprx16,xysp	IDX2	6E xb ee ff	PWP	PWP
STX [D,xysp]	[D,IDX]	6E xb	PIfW	PIfPW
STX [oprx16,xysp]	[IDX2]	6E xb ee ff	PIPW	PIPPW

Store Index Register Y

Operation:  $(Y_H: Y_I) \Rightarrow M: M+1$ 

Stores the content of index register Y in memory. The most significant byte Description:

of Y is stored at the specified address, and the least significant byte of Y is stored at the next higher byte address (the specified address plus one).

X H I N Z V C **CCR Details:** - - Δ Δ 0 -

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$0000; cleared otherwise

V: 0; cleared

Source Form	Address	Object Code		Access Detail
Source i oilli	Mode	Object Code	HCS12	M68HC12
STY opr8a	DIR	5D dd	PW	PW
STY opr16a	EXT	7D hh 11	PWO	WOP
STY oprx0_xysp	IDX	6D xb	PW	PW
STY oprx9,xysp	IDX1	6D xb ff	PWO	PWO
STY oprx16,xysp	IDX2	6D xb ee ff	PWP	PWP
STY [D,xysp]	[D,IDX]	6D xb	PIfW	PIfPW
STY [oprx16,xysp]	[IDX2]	6D xb ee ff	PIPW	PIPPW

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

**SUBB** 

Subtract B

SUBB

Operation:  $(B) - (M) \Rightarrow B$ 

Subtracts the content of memory location M from the content of accumulator Description:

B and places the result in B. For subtraction instructions, the C status bit

represents a borrow.

**CCR Details:** 

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00: cleared otherwise

 $B7 \bullet \overline{M7} \bullet \overline{R7} + \overline{B7} \bullet M7 \bullet R7$ 

Set if a two's complement overflow resulted from the operation;

cleared otherwise

 $\overline{\mathsf{B7}} \bullet \mathsf{M7} + \mathsf{M7} \bullet \mathsf{R7} + \mathsf{R7} \bullet \overline{\mathsf{B7}}$ 

Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

	Address	Object Code		Access Detail
Source Form	Mode		HCS12	M68HC12
SUBB #opr8i	IMM	CO ii	P	P
SUBB opr8a	DIR	D0 dd	rPf	rfP
SUBB opr16a	EXT	F0 hh 11	rPO	rOP
SUBB oprx0_xysp	IDX	E0 xb	rPf	rfP
SUBB oprx9,xysp	IDX1	E0 xb ff	rPO	rPO
SUBB oprx16,xysp	IDX2	E0 xb ee ff	frPP	frPP
SUBB [D,xysp]	[D,IDX]	E0 xb	fIfrPf	fIfrfP
SUBB (opry16 yyen)	וטאטו	En vh ee ff	fTDrDf	fTDrfD

SUBA

Subtract A

SURA

Operation:  $(A) - (M) \Rightarrow A$ 

Subtracts the content of memory location M from the content of accumulator Description:

A, and places the result in A. For subtraction instructions, the C status bit

X H I N Z V C **CCR Details:** - - - - Δ Δ Δ Δ

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

 $A7 \bullet \overline{M7} \bullet \overline{R7} + \overline{A7} \bullet M7 \bullet R7$ 

Set if a two's complement overflow resulted from the operation;

cleared otherwise

 $\overline{A7} \bullet M7 + M7 \bullet R7 + R7 \bullet \overline{A7}$ 

Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Source Form	Address	01:		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
SUBA #opr8i	IMM	80 ii	P	P
SUBA opr8a	DIR	90 dd	rPf	rfP
SUBA opr16a	EXT	B0 hh 11	rPO	rOP
SUBA oprx0_xysp	IDX	A0 xb	rPf	rfP
SUBA oprx9,xysp	IDX1	A0 xb ff	rPO	rPO
SUBA oprx16,xysp	IDX2	A0 xb ee ff	frPP	frPP
SUBA [D,xysp]	[D,IDX]	A0 xb	fIfrPf	fIfrfP
SUBA [oprx16,xysp]	[IDX2]	A0 xb ee ff	fIPrPf	fIPrfP

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

286

**SUBD** 

**Subtract Double Accumulator** 

SUBD

Operation:  $(A:B)-(M:M+1)\Rightarrow A:B$ 

Subtracts the content of memory location M: M + 1 from the content of Description:

double accumulator D and places the result in D. For subtraction

instructions, the C status bit represents a borrow.

**CCR Details:** 

- - - - Δ Δ Δ Δ

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$0000; cleared otherwise

D15 • M15 • R15 + D15 • M15 • R15

Set if a two's complement overflow resulted from the operation;

cleared otherwise

C:  $\overline{D15} \cdot M15 + M15 \cdot R15 + R15 \cdot \overline{D15}$ 

Set if the value of the content of memory is larger than the value of the accumulator; cleared otherwise

Source Form	Address	Object Code		Access Detail
Source Form	Mode		HCS12	M68HC12
SUBD #opr16i	IMM	83 jj kk	PO	OP
SUBD opr8a	DIR	93 dd	RPf	RfP
SUBD opr16a	EXT	B3 hh 11	RPO	ROP
SUBD oprx0_xysp	IDX	A3 xb	RPf	RfP
SUBD oprx9,xyssp	IDX1	A3 xb ff	RPO	RPO
SUBD oprx16,xysp	IDX2	A3 xb ee ff	fRPP	fRPP
SUBD [D,xysp]	[D,IDX]	A3 xb	fIfRPf	fIfRfP
SUBD [oprx16,xysp]	[IDX2]	A3 xb ee ff	fIPRPf	fIPRfP

Glossarv

SWI

### Software Interrupt

**SWI** 

Operation:

$$\begin{split} (SP) - \$0002 &\Rightarrow SP; \, RTN_H : RTN_L \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0002 &\Rightarrow SP; \, Y_H : Y_L \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0002 \Rightarrow SP; \, X_H : X_L \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0002 \Rightarrow SP; \, B : A \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0001 \Rightarrow SP; \, CCR \Rightarrow (M_{(SP)}) \\ 1 \Rightarrow I \\ (SWI \, Vector) \Rightarrow PC \\ \end{split}$$

Description:

Causes an interrupt without an external interrupt service request. Uses the address of the next instruction after SWI as a return address. Stacks the return address, index registers Y and X, accumulators B and A, and the CCR, decrementing the SP before each item is stacked. The I mask bit is then set, the PC is loaded with the SWI vector, and instruction execution resumes at that location. SWI is not affected by the I mask bit. Refer to Section 7. Exception Processing for more information.

CCR Details:

s	Х	Н	1	N	Z	٧	С
-	-	-	1	-	-	-	-

I: 1; set

Source Form	Address	Object Code	Access De	Access Detail		
Course Form	Mode	Object Code	HCS12 M68HC			
SWI	INH	3F	VSPSSPSsP <sup>(1)</sup>	VSPSSPSsP <sup>(1)</sup>		

The CPU also uses the SWI processing sequence for hardware interrupts and unimplemented opcode traps. A variation
of the sequence (VEPPP) is used for resets.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 28

Glossar

ΤΔΡ

Transfer from Accumulator A to Condition Code Register

TAP

 $\textbf{Operation:} \quad (A) \Rightarrow CCR$ 

Description:

Transfers the logic states of bits [7:0] of accumulator A to the corresponding bit positions of the CCR. The content of A remains unchanged. The X mask bit can be cleared as a result of a TAP, but cannot be set if it was cleared prior to execution of the TAP. If the I bit is cleared, there is a 1-cycle delay before the system allows interrupt requests. This prevents interrupts from occurring between instructions in the sequences CLI, WAI and CLI, STOP.

This instruction is accomplished with the TFR A,CCR instruction. For compatibility with the M68HC11, the mnemonic TAP is translated by the accomplex.

CCR Details:

Condition codes take on the value of the corresponding bit of accumulator A, except that the X mask bit cannot change from 0 to 1. Software can leave the X bit set, leave it cleared, or change it from 1 to 0, but it can only be set by a reset or by recognition of an XIRQ interrupt.

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12 M68F		
TAP translates to TFR A,CCR	INH	B7 02	P	P	

Instruction Glos

TAB

## Transfer from Accumulator A to Accumulator B

TAP

Operation:  $(A) \Rightarrow B$ 

Description:

Moves the content of accumulator A to accumulator B. The former content of B is lost; the content of A is not affected. Unlike the general transfer instruction TFR A,B which does not affect condition codes, the TAB instruction affects the N, Z, and V status bits for compatibility with M68HC11.

CCR Details:

s	X	Н	ı	N	Z	٧	С
-	-	-	-	Δ	Δ	0	-

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: 0: cleared

Source Form	Address		Access Detail		
Source i oilli	Mode	Object Code	HCS12	M68HC12	
TAB	INH	18 OE	00	00	

S12CPUV2 Reference Manual, Rev. 4.0

290 Freescale Semiconductor

Instructio

**TBA** 

Transfer from Accumulator B to Accumulator A

**TBA** 

 $\textbf{Operation:} \quad (B) \Rightarrow A$ 

Description:

Moves the content of accumulator B to accumulator A. The former content of A is lost; the content of B is not affected. Unlike the general transfer instruction TFR B,A, which does not affect condition codes, the TBA instruction affects N, Z, and V for compatibility with M68HC11.

CCR Details:

S X H I N Z V C
- - - - - Δ Δ 0 -

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: 0; cleared

Source Form	Address Mode	Object Code	HCS12	Access Detail M68HC12
TBA	INH	18 OF	00	00

lossary

## TBEQ

### Test and Branch if Equal to Zero

## TBEQ

**Operation:** If (Counter) = 0, then (PC) +  $$0003 + Rel \Rightarrow PC$ 

Description:

**CCR Details:** 

Tests the specified counter register A, B, D, X, Y, or SP. If the counter register is zero, branches to the specified relative destination. TBEQ is encoded into three bytes of machine code including a 9-bit relative offset (–256 to +255 locations from the start of the next instruction).

DBEQ and IBEQ instructions are similar to TBEQ, except that the counter is decremented or incremented rather than simply being tested. Bits 7 and 6 of the instruction postbyte are used to determine which operation is to be performed.

·

S	X	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code <sup>(1)</sup>	Access Detail	
004100101111	Mode	02,001.000	HCS12	M68HC12
TBEQ abdxys,rel9	REL	04 lb rr	PPP/PPO	PPP

Encoding for 1b is summarized in the following table. Bit 3 is not used (don't care), bit 5 selects branch on zero (TBEQ – 0)
or not zero (TBNE – 1) versions, and bit 4 is the sign bit of the 9-bit relative offset. Bits 7 and 6 should be 0:1 for TBEQ.

Count Register	Bits 2:0	Source Form	Object Code (If Offset is Positive)	Object Code (If Offset is Negative)
Α	000	TBEQ A, rel9	04 40 rr	04 50 rr
В	001	TBEQ B, rel9	04 41 rr	04 51 rr
D	100	TBEQ D, rel9	04 44 rr	04 54 rr
X	101	TBEQ X, rel9	04 45 rr	04 55 rr
Y	110	TBEQ Y, rel9	04 46 rr	04 56 rr
SP	111	TBEQ SP, rel9	04 47 rr	04 57 rr

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 293

Glossar

## **TBNE**

### Test and Branch if Not Equal to Zero

# **TBNE**

Operation:


If (Counter)  $\neq$  0, then (PC) + \$0003 + Rel  $\Rightarrow$  PC

Description:

Tests the specified counter register A, B, D, X, Y, or SP. If the counter register is not zero, branches to the specified relative destination. TBNE is encoded into three bytes of machine code including a 9-bit relative offset (–256 to +255 locations from the start of the next instruction).

DBNE and IBNE instructions are similar to TBNE, except that the counter is decremented or incremented rather than simply being tested. Bits 7 and 6 of the instruction postbyte are used to determine which operation is to be performed.

CCR Details:



Source Form	Address	Object Code <sup>(1)</sup>	Access Detail		
Course roim	Mode	Object Gode**	HCS12	M68HC12	
TBNE abdxys,rel9	REL	04 lb rr	PPP/PPO	PPP	

Encoding for 1b is summarized in the following table. Bit 3 is not used (don't care), bit 5 selects branch on zero (TBEQ –
0) or not zero (TBNE – 1) versions, and bit 4 is the sign bit of the 9-bit relative offset. Bits 7 and 6 should be 0:1 for TBNE

Cou Regis		Bits 2:0	Source Form	(If		bject Code set is Positive)	(If		bject Code set is Negative)
Α		000	TBNE A, rel9	04	60	rr	04	70	rr
В		001	TBNE B, rel9	04	61	rr	04	71	rr
D		100	TBNE D, rel9	04	64	rr	04	74	rr
X		101	TBNE X, rel9	04	65	rr	04	75	rr
Y		110	TBNE Y, rel9	04	66	rr	04	76	rr
SP	,	111	TBNE SP. rel9	n4	67	rr	0.4	77	rr

S12CPUV2 Reference Manual, Rev. 4.0

Instruction Glossary

## **TBL**

### Table Lookup and Interpolate

TRI

 $\textbf{Operation:} \quad (M) + [(B) \times ((M+1) - (M))] \Rightarrow A$ 

Description:

Linearly interpolates one of 256 result values that fall between each pair of data entries in a lookup table stored in memory. Data entries in the table represent the Y values of endpoints of equally spaced line segments. Table entries and the interpolated result are 8-bit values. The result is stored in accumulator A.

Before executing TBL, an index register points to the table entry corresponding to the X value (X1) that is closest to, but less than or equal to, the desired lookup point (XL, YL). This defines the left end of a line segment and the right end is defined by the next data entry in the table. Prior to execution, accumulator B holds a binary fraction (radix point to left of MSB), representing the ratio (XL–X1) + (X2–X1).

The 8-bit unrounded result is calculated using the following expression:

$$A = Y1 + [(B) \times (Y2 - Y1)]$$

Where

(B) =  $(XL - X1) \div (X2 - X1)$ 

Y1 = 8-bit data entry pointed to by <effective address>

Y2 = 8-bit data entry pointed to by <effective address> + 1

The intermediate value [(B)  $\times$  (Y2 - Y1)] produces a 16-bit result with the radix point between bits 7 and 8. Any indexed addressing mode referenced to X, Y, SP, or PC, except indirect modes or 9-bit and 16-bit offset modes, can be used to identify the first data point (X1,Y1). The second data point is the next table entry.

CCR Details:

	s	X	Н	ı	N	Z	٧	С
ĺ	-	-	-	-	Δ	Δ	-	Δ <sup>(1)</sup>

C-bit was undefined in original M68HC12.

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

C: Set if result can be rounded up; cleared otherwise

Source Form	Address	Object Code		Access Detail
	Mode		HCS12	M68HC12
TBL oprx0_xysp	IDX	18 3D xb	ORfffP	OrrffffP

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Instruction Glossary

294

TFR

Transfer Register Content to Another Register

**TFR** 

Operation: See table.

Description:

Transfers the content of a source register to a destination register specified in the instruction. The order in which transfers between 8-bit and 16-bit registers are specified affects the high byte of the 16-bit registers differently. Cases involving TMP2 and TMP3 are reserved for Freescale use, so some assemblers may not permit their use. It is possible to generate these cases by using DC.B or DC.W assembler directives.

CCR Details:

-			-		_	-	-	Or	-			-		_	-	-
-	-	-	-	-	-	-	-	Or:	Δ	⇒	Δ	Δ	Δ	Δ	Δ	Δ

None affected, unless the CCR is the destination register. Condition codes take on the value of the corresponding source bits, except that the X mask bit cannot change from 0 to 1. Software can leave the X bit set, leave it cleared, or change it from 1 to 0, but it can be set only by a reset or by recognition of an XIRQ interrupt.

Source Form	Address	Object Code <sup>(1)</sup>	Access Detail		
Source Form	Mode	Object Code 7	HCS12	M68HC12	
TFR abcdxys,abcdxys	INH	B7 eb	P	P	

Legal coding for eb is summarized in the following table. Columns represent the high-order source digit. Rows represent the low-order destination digit (MSB is a don't-care). Values are in hexadecimal.

	0	1	2	3	4	5	6	7
0	$A \Rightarrow A$	$B \Rightarrow A$	$CCR \Rightarrow A$	$TMP3_L \Rightarrow A$	$B \Rightarrow A$	$X_L \Rightarrow A$	$Y_L \Rightarrow A$	$SP_L \Rightarrow A$
1	$A \Rightarrow B$	$B \Rightarrow B$	CCR ⇒ B	$TMP3_L \Rightarrow B$	$B \Rightarrow B$	$X_L \Rightarrow B$	$Y_L \Rightarrow B$	$SP_L \Rightarrow B$
2	A ⇒ CCR	B ⇒ CCR	CCR ⇒ CCR	$TMP3_L \Rightarrow CCR$	B ⇒ CCR	$X_L \Rightarrow CCR$	$Y_L \Rightarrow CCR$	$SP_L \Rightarrow CCR$
3	sex:A ⇒ TMP2	sex:B ⇒ TMP2	sex:CCR ⇒ TMP2	TMP3 ⇒ TMP2	D ⇒ TMP2	$X \Rightarrow TMP2$	Y ⇒ TMP2	SP ⇒ TMP2
4	sex:A ⇒ D SEX A,D	sex:B ⇒ D SEX B,D	sex:CCR ⇒ D SEX CCR,D	TMP3 ⇒ D	$D \Rightarrow D$	$X \Rightarrow D$	$Y \Rightarrow D$	$SP \Rightarrow D$
5	sex:A ⇒ X SEX A,X	$sex:B \Rightarrow X$ SEX B,X	sex:CCR ⇒ X SEX CCR,X	$TMP3 \Rightarrow X$	$D \Rightarrow X$	$X \Rightarrow X$	$Y \Rightarrow X$	$SP \Rightarrow X$
6	sex:A ⇒ Y SEX A,Y	sex:B ⇒ Y SEX B,Y	sex:CCR ⇒ Y SEX CCR,Y	TMP3 ⇒ Y	$D \Rightarrow Y$	$X \Rightarrow Y$	$Y \Rightarrow Y$	$SP \Rightarrow Y$
7	sex:A ⇒ SP SEX A,SP	sex:B ⇒ SP SEX B,SP	sex:CCR ⇒ SP SEX CCR,SP	TMP3 ⇒ SP	$D \Rightarrow SP$	$X \Rightarrow SP$	Y ⇒ SP	$SP \Rightarrow SP$

Glossarv

Transfer from Condition Code
Register to Accumulator A

**TPA** 

Description: Tr

Transfers the content of the condition code register to corresponding bit

positions of accumulator A. The CCR remains unchanged.

This mnemonic is implemented by the TFR CCR,A instruction. For compatibility with the M68HC11, the mnemonic TPA is translated into the TFR CCR, A instruction of the translated into the TFR CCR.

TFR CCR,A instruction by the assembler.

CCR Details:

S	Х	Н	- 1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address Mode Object Code		Access Detail		
	Wode		HCS12	M68HC12	
TPA translates to TFR CCR,A	INH	B7 20	P	P	

#### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor 297

Glossar

TST

Test Memory

TS1

 $\textbf{Operation:} \quad (M)-\$00$ 

Description: Subtract

Subtracts \$00 from the content of memory location M and sets the condition

codes accordingly.

The subtraction is accomplished internally without modifying M.

The TST instruction provides limited information when testing unsigned values. Since no unsigned value is less than zero, BLO and BLS have no utility following TST. While BHI can be used after TST, it performs the same function as BNE, which is preferred. After testing signed values, all signed branches are available.

CCR Details:

S	X	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	0	0

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared
- C: 0; cleared

Source Form	Address	Object Code	Access Detai	I
Source Form	Mode	Object Code	HCS12	M68HC12
TST opr16a	EXT	F7 hh 11	rPO	rOP
TST oprx0_xysp	IDX	E7 xb	rPf	rfP
TST oprx9,xysp	IDX1	E7 xb ff	rPO	rPO
TST oprx16,xysp	IDX2	E7 xb ee ff	frPP	frPP
TST [D,xysp]	[D,IDX]	E7 xb	fIfrPf	fIfrfP
TST [oprx16,xysp]	[IDX2]	E7 xb ee ff	fIPrPf	fIPrfP

Instruction Gloss

## **TRAP**

### **Unimplemented Opcode Trap**

## TRAP

Operation:

```
\begin{array}{l} (\text{SP}) - \$0002 \Rightarrow \text{SP}; \text{RTN}_H : \text{RTN}_L \Rightarrow (M_{(\text{SP})} : M_{(\text{SP+1})}) \\ (\text{SP}) - \$0002 \Rightarrow \text{SP}; Y_H : Y_L \Rightarrow (M_{(\text{SP})} : M_{(\text{SP+1})}) \\ (\text{SP}) - \$0002 \Rightarrow \text{SP}; X_H : X_L \Rightarrow (M_{(\text{SP})} : M_{(\text{SP+1})}) \\ (\text{SP}) - \$0002 \Rightarrow \text{SP}; B : A \Rightarrow (M_{(\text{SP})} : M_{(\text{SP+1})}) \\ (\text{SP}) - \$0001 \Rightarrow \text{SP}; \text{CCR} \Rightarrow (M_{(\text{SP})}) \\ 1 \Rightarrow 1 \\ (\text{Trap Vector}) \Rightarrow \text{PC} \end{array}
```

Description:

Traps unimplemented opcodes. There are opcodes in all 256 positions in the page 1 opcode map, but only 54 of the 256 positions on page 2 of the opcode map are used. If the CPU attempts to execute one of the unimplemented opcodes on page 2, an opcode trap interrupt occurs. Unimplemented opcode traps are essentially interrupts that share the \$FFF8:\$FFF9 interrupt vector.

TRAP uses the next address after the unimplemented opcode as a return address. It stacks the return address, index registers Y and X, accumulators B and A, and the CCR, automatically decrementing the SP before each item is stacked. The I mask bit is then set, the PC is loaded with the trap vector, and instruction execution resumes at that location. This instruction is not maskable by the I bit. Refer to Section 7. Exception Processing for more information.

CCR Details:

S	)	( H	1 1	N	Z	٧	С
_	-	-   -	1	-	-	-	-

I: 1; set

Source Form	Address	Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12 M68		
TRAP trapnum	INH	\$18 tn <sup>(1)</sup>	OVSPSSPSsP	OfVSPSSPSsP	

1. The value tn represents an unimplemented page 2 opcode in either of the two ranges \$30 to \$39 or \$40 to \$FF.

#### S12CPUV2 Reference Manual, Rev. 4.0

298 Freescale Semiconductor

Instruction Glossary

## **TSTA**

Test A

**TSTA** 

**Operation:** (A) - \$00

Description:

Subtracts \$00 from the content of accumulator A and sets the condition codes accordingly

codes accordingly.

The subtraction is accomplished internally without modifying A.

The TSTA instruction provides limited information when testing unsigned values. Since no unsigned value is less than zero, BLO and BLS have no utility following TSTA. While BHI can be used after TST, it performs the same function as BNE, which is preferred. After testing signed values, all signed branches are available.

CCR Details:

S	X	Н	1	N	Z	٧	С
-	-	-	-	Δ	Δ	0	0

- N: Set if MSB of result is set; cleared otherwise
- Z: Set if result is \$00; cleared otherwise
- V: 0; cleared
- C: 0; cleared

Source Form			Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
TSTA	INH	97	0	0	

Glossarv

TSTB

Test B

**TSTB** 

**Operation:** (B) - \$00

**Description:** Subtracts \$00 from the content of accumulator B and sets the condition

codes accordingly.

The subtraction is accomplished internally without modifying B.

The TSTB instruction provides limited information when testing unsigned values. Since no unsigned value is less than zero, BLO and BLS have no utility following TSTB. While BHI can be used after TST, it performs the same function as BNE, which is preferred. After testing signed values, all

signed branches are available.

CCR Details:

S	X	Н	-1	N	Z	٧	С	
-	-	-	-	Δ	Δ	0	0	

N: Set if MSB of result is set; cleared otherwise

Z: Set if result is \$00; cleared otherwise

V: 0; cleared

C: 0; cleared

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
TSTB	INH	D7	0	0

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 301

Glossar

TSY

Transfer from Stack Pointer to Index Register Y

**TSY** 

 $\textbf{Operation:} \quad (SP) \Rightarrow Y$ 

Description: This is an alternate mnemonic to transfer the stack pointer value to index

register Y. The content of the SP remains unchanged. After a TSY instruction, Y points at the last value that was stored on the stack.

CCR Details:

S	Х	Н	1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
TSY translates to TFR SP,Y	INH	В7 76	P	Р

Instruction Glossa

**TSX** 

Transfer from Stack Pointer to Index Register X

TSX

 $\textbf{Operation:} \quad (SP) \Rightarrow X$ 

Description: This is an alternate mnemonic to transfer the stack pointer value to index

register X. The content of the SP remains unchanged. After a TSX instruction, X points at the last value that was stored on the stack.

	Address			Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
TSX translates to TFR SP,X	INH	B7 75	Р	P

### S12CPUV2 Reference Manual, Rev. 4.0

302 Freescale Semiconductor

Instruction Glossar

**TXS** 

Transfer from Index Register X to Stack Pointer

TXS

Operation:  $(X) \Rightarrow SP$ 

**Description:** This is an alternate mnemonic to transfer index register X value to the stack

pointer. The content of X is unchanged.

CCR Details:



Source Form	Address	Object Code		Access Detail
Source Form	Mode	Object Code	HCS12	M68HC12
TXS translates to TFR X,SP	INH	B7 57	P	P

Glossary

Transfer from Index Register Y to Stack Pointer

**TYS** 

Operation:  $(Y) \Rightarrow SP$ 

**Description:** This is an alternate mnemonic to transfer index register Y value to the stack

pointer. The content of Y is unchanged.

**CCR Details:** 

S	,	Х	Н	ı	N	Z	٧	С
-	.	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail	
Source Form	Mode	Object Code	HCS12	M68HC12
TYS translates to TFR Y,SP	INH	B7 67	P	Р

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 30

Glossary

# WAV

### Weighted Average



Operation: [

Do until B = 0, leave SOP in Y : D, SOW in X

Partial Product = (M pointed to by X)  $\times$  (M pointed to by Y) Sum-of-Products (24-bit SOP) = Previous SOP + Partial Product Sum-of-Weights (16-bit SOW) = Previous SOW + (M pointed to by Y) (X) + \$0001  $\Rightarrow$  X; (Y) + \$0001  $\Rightarrow$  Y

(B) – \$01 ⇒ B

Description:

Performs weighted average calculations on values stored in memory. Uses indexed (X) addressing mode to reference one source operand list, and indexed (Y) addressing mode to reference a second source operand list. Accumulator B is used as a counter to control the number of elements to be included in the weighted average.

For each pair of data points, a 24-bit sum of products (SOP) and a 16-bit sum of weights (SOW) is accumulated in temporary registers. When B reaches zero (no more data pairs), the SOP is placed in Y: D. The SOW is placed in X. To arrive at the final weighted average, divide the content of Y: D by X by executing an EDIV after the WAV.

This instruction can be interrupted. If an interrupt occurs during WAV execution, the intermediate results (six bytes) are stacked in the order  $SOW_{[15:0]}, SOP_{[15:0]}, \$00:SOP_{[23:16]}$  before the interrupt is processed. The wavr pseudo-instruction is used to resume execution after an interrupt. The mechanism is re-entrant. New WAV instructions can be started and interrupted while a previous WAV instruction is interrupted.

This instruction is often used in fuzzy logic rule evaluation. Refer to Section 9. Fuzzy Logic Support for more information.

CCR Details:

Freescale Semiconductor

	s	Х	Н	1	N	Z	٧	С
ĺ	-	-	?	-	?	1	?	?

Z: 1; set

 $H,\,N,\,V$  and C may be altered by this instruction

Source Form	Address	Object Code	Access D	etail <sup>(1)</sup>
Source i oilli	Mode	Object Code	HCS12	M68HC12
WAV	Special		Of(frr,ffff)O	Off(frr,fffff)O
		18 3C	(replace comma i	f interrupted)
			SSS + UUUrr	SSSf + UUUrr

<sup>1.</sup> The replace comma sequence in parentheses represents the loop for one iteration of SOP and SOW accumulation.

S12CPUV2 Reference Manual, Rev. 4.0 S12CPUV2 Reference Manual, Rev. 4.0

308

•

## WAI

### Wait for Interrupt



Operation:

```
 \begin{array}{l} (SP) - \$0002 \Rightarrow SP; \, RTN_H : RTN_L \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0002 \Rightarrow SP; \, Y_H : Y_L \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0002 \Rightarrow SP; \, X_H : X_L \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0002 \Rightarrow SP; \, B : A \Rightarrow (M_{(SP)} : M_{(SP+1)}) \\ (SP) - \$0001 \Rightarrow SP; \, CCR \Rightarrow (M_{(SP)}) \end{array}
```

Stop CPU Clocks

Description:

Puts the CPU into a wait state. Uses the address of the instruction following WAI as a return address. Stacks the return address, index registers Y and X, accumulators B and A, and the CCR, decrementing the SP before each item is stacked.

The CPU then enters a wait state for an integer number of bus clock cycles. During the wait state, CPU clocks are stopped, but other MCU clocks can continue to run. The CPU leaves the wait state when it senses an interrupt that has not been masked.

Upon leaving the wait state, the CPU sets the appropriate interrupt mask bit(s), fetches the vector corresponding to the interrupt sensed, and instruction execution continues at the location the vector points to.

CCR Details:

s	х	н	1	N	z	٧	С
-	-	-	-	-	-	-	-

Source Form Address		Object Code	Access Detail		
Source Form	Mode	Object Code	HCS12	M68HC12	
WAI (before interrupt)	INH	3E	OSSSSsf	OSSSfSsf	
WAI (when interrupt comes)	IINITI		fVfPPP	VfPPP	

Although the WAI instruction itself does not alter the condition codes, the interrupt that causes the CPU to resume processing also causes the I mask bit (and the X mask bit, if the interrupt was  $\overline{\text{XIRQ}}$ ) to be set as the interrupt vector is fetched.

#### S12CPUV2 Reference Manual. Rev. 4.0

306 Freescale Semiconductor

Instruction Glossary



Exchange Double Accumulator and Index Register X



Freescale Semiconductor


Operation:  $(D) \Leftrightarrow (X)$ 

**Description:** Exchanges the c

Exchanges the content of double accumulator D and the content of index register X. For compatibility with the M68HC11, the XGDX instruction is

translated into an EXG D,X instruction by the assembler.

CCR Details:



Source Form	Address Mode	Object Code	HCS12	ccess Detail M68HC12
XGDX translates to EXG D,X	INH	B7 C5	P	P

Instruction Glossary



#### **Exchange Double Accumulator** and Index Register Y



Operation: (D) ⇔ (Y)

Description: Exchanges the content of double accumulator D and the content of index

register Y. For compatibility with the M68HC11, the XGDY instruction is

translated into an EXG D,Y instruction by the assembler.

**CCR Details:** 

s	Х	Н	-1	N	Z	٧	С
-	-	-	-	-	-	-	-

Source Form	Address	Object Code	Access Detail		
004100101111	Mode	0.0,000.000.0	HCS12	M68HC12	
XGDY translates to EXG D,Y	INH	B7 C6	P	Р	

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

### Reference Manual — S12CPUV2

### Section 7. Exception Processing

### 7.1 Introduction

Exceptions are events that require processing outside the normal flow of instruction execution. This section describes exceptions and the way each

### 7.2 Types of Exceptions

Central processor unit (CPU12) exceptions include:

- Resets
- Power-on reset and RESET pin
- Clock monitor reset
- COP watchdog reset
- An unimplemented opcode trap
- A software interrupt instruction (SWI)
- Non-maskable (X-bit) interrupts
- · Maskable (I-bit) interrupts

Each exception has an associated 16-bit vector, which points to the memory location where the routine that handles the exception is located. As shown in Table 7-1, vectors are stored in the upper bytes of the standard 64-Kbyte

The six highest vector addresses are used for resets and unmaskable interrupt sources. The remaining vectors are used for maskable interrupts. All vectors must be programmed to point to the address of the appropriate service routine.

S12CPUV2 Reference Manual, Rev. 4.0

S12CPUV2 Reference Manual, Rev. 4.0

310 Freescale Semiconductor

Table 7-1. CPU12 Exception Vector Map<sup>(1)</sup>

Vector Address	Source	
\$FFFE-\$FFFF	System reset	
\$FFFC-\$FFFD	Clock monitor reset	
\$FFFA-\$FFFB	COP reset	
\$FFF8—\$FFF9 Unimplemented opcode trap		
\$FFF6–\$FFF7 Software interrupt instruction (SWI)		
\$FFF4-\$FFF5	XIRQ signal	
\$FFF2-\$FFF3	IRQ signal	
\$FF00-\$FFF1	Device-specific interrupt sources (HCS12)	
\$FFC0-\$FFF1	Device-specific interrupt sources (M68HC12)	

<sup>1.</sup> See Device User Guide and Interrupt Block Guide for further details

The CPU12 can handle up to 128 exception vectors, but the number actually used varies from device to device, and some vectors are reserved for Freescale use. Refer to Device User Guide for more information.

Exceptions can be classified by the effect of the X and I interrupt mask bits on recognition of a pending request.

- · Resets, the unimplemented opcode trap, and the SWI instruction are not affected by the X and I mask bits.
- Interrupt service requests from the  $\overline{XIRQ}$  pin are inhibited when X = 1, but are not affected by the I bit.
- All other interrupts are inhibited when I = 1.

### 7.3 Exception Priority

A hardware priority hierarchy determines which reset or interrupt is serviced first when simultaneous requests are made. Six sources are not maskable. The remaining sources are maskable, and the device integration module typically can change the relative priorities of maskable interrupts. Refer to 7.5 Interrupts for more detail concerning interrupt priority and servicing.

The priorities of the unmaskable sources are:

- 1. RESET pin or power-on reset (POR)
- 2. Clock monitor reset
- 3. Computer operating properly (COP) watchdog reset
- 4. Non-maskable interrupt request (XIRQ) signal
- Unimplemented opcode trap
- 6. Software interrupt instruction (SWI)

External reset and POR share the highest exception-processing priority, followed by clock monitor reset, and then the on-chip watchdog reset.

The  $\overline{\text{XIRQ}}$  interrupt is pseudo-non-maskable. After reset, the X bit in the CCR is set, which inhibits all interrupt service requests from the  $\overline{\text{XIRQ}}$  pin until the X bit is cleared. The X bit can be cleared by a program instruction, but program instructions cannot change X from 0 to 1. Once the X bit is cleared, interrupt service requests made via the  $\overline{\text{XIRQ}}$  pin become non-maskable.

The unimplemented page 2 opcode trap (TRAP) and the SWI are special cases. In one sense, these two exceptions have very low priority, because any enabled interrupt source that is pending prior to the time exception processing begins will take precedence. However, once the CPU begins processing a TRAP or SWI, neither can be interrupted. Also, since these are mutually exclusive instructions, they have no relative priority.

All remaining interrupts are subject to masking via the I bit in the CCR. Most HCS12 microcontroller units (MCU) have an external  $\overline{\text{IRQ}}$  pin, which is assigned the highest I-bit interrupt priority and an internal periodic real-time interrupt generator, which has the next highest priority. The other maskable sources have default priorities that follow the address order of the interrupt vectors — the higher the address, the higher the priority of the interrupt. Other maskable interrupts are associated with on-chip peripherals such as timers or serial ports. On the HCS12, logic in the device integration module can give one I-masked source priority over other I-masked sources. Refer to the documentation for the specific HCS12 derivative for more information.

### 7.4 Resets

M68HC12 devices perform resets with a combination of hardware and software. Integration module circuitry determines the type of reset that has occurred, performs basic system configuration, then passes control to the CPU12. The CPU fetches a vector determined by the type of reset that has occurred, jumps to the address pointed to by the vector, and begins to execute code at that address.

The are four possible sources of reset are:

- Power-on reset (POR)
- External reset (RESET pin)
- COP reset
- Clock monitor reset

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 313

### 7.5 Interrupts

Each HCS12 device can recognize a number of interrupt sources. Each source has a vector in the vector table. The XIRQ signal, the unimplemented opcode trap, and the SWI instruction are non-maskable, and have a fixed priority. The remaining interrupt sources can be masked by the I bit. In most devices, the external interrupt request pin is assigned the highest maskable interrupt priority, and the internal periodic real-time interrupt generator has the next highest priority. Other maskable interrupts are associated with on-chip peripherals such as timers or serial ports. These maskable sources have default priorities that follow the address order of the interrupt vectors. The higher the vector address, the higher the priority of the interrupt. On The HCS12, a device integration module incorporates logic that can give any one maskable source priority over other maskable sources.

### 7.5.1 Non-Maskable Interrupt Request (XIRQ)

The  $\overline{\text{XIRQ}}$  input is an updated version of the non-maskable interrupt ( $\overline{\text{NMI}}$ ) input of earlier MCUs. The  $\overline{\text{XIRQ}}$  function is disabled during system reset and upon entering the interrupt service routine for an  $\overline{\text{XIRQ}}$  interrupt.

During reset, both the I bit and the X bit in the CCR are set. This disables maskable interrupts and interrupt service requests made by asserting the  $\overline{XIRQ}$  signal. After minimum system initialization, software can clear the X bit using an instruction such as ANDCC #\$BF. Software cannot set the X bit from 0 to 1 once it has been cleared, and interrupt requests made via the  $\overline{XIRQ}$  pin become non-maskable. When a non-maskable interrupt is recognized, both the X and I bits are set after context is saved. The X bit is not affected by maskable interrupts. Execution of an return-from-interrupt (RTI) instruction at the end of the interrupt service routine normally restores the X and I bits to the pre-interrupt request state.

### 7.5.2 Maskable Interrupts

Maskable interrupt sources include on-chip peripheral systems and external interrupt service requests. Interrupts from these sources are recognized when the global interrupt mask bit (I) in the CCR is cleared. The default state of the I bit out of reset is 1, but it can be written at any time.

The interrupt module manages maskable interrupt priorities. Typically, an on-chip interrupt source is subject to masking by associated bits in control registers in addition to global masking by the I bit in the CCR. Sources

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 315 316 Freescale Semiconductor

Power-on reset (POR) and external reset share the same reset vector. The computer operating properly (COP) reset and the clock monitor reset each

### 7.4.1 Power-On Reset

The HCS12 incorporate circuitry to detect a positive transition in the  $V_{DD}$  supply and initialize the device during cold starts, generally by asserting the reset signal internally. The signal is typically released after a delay that allows the device clock generator to stabilize.

#### 7.4.2 External Reset

The MCU distinguishes between internal and external resets by sensing how quickly the signal on the RESET pin rises to logic level 1 after it has been asserted. When the MCU senses any of the four reset conditions, internal circuitry drives the RESET signal low for N clock cycles, then releases. M clock cycles later, the MCU samples the state of the signal applied to the RESET pin. If the signal is still low, an external reset has occurred. If the signal is high, reset is assumed to have been initiated internally by either the COP system or the clock monitor.

#### 7.4.3 COP Reset

The MCU includes a computer operating properly (COP) system to help protect against software failures. When the COP is enabled, software must write a particular code sequence to a specific address to keep a watchdog timer from timing out. If software fails to execute the sequence properly, a reset occurs

### 7.4.4 Clock Monitor Reset

The clock monitor circuit uses an internal RC circuit to determine whether clock frequency is above a predetermined limit. If clock frequency falls below the limit when the clock monitor is enabled, a reset occurs.

#### S12CPUV2 Reference Manual. Rev. 4.0

314 Freescale Semiconductor

generally must be enabled by writing one or more bits in associated control registers. There may be other interrupt-related control bits and flags, and there may be specific register read-write sequences associated with interrupt service. Refer to individual on-chip peripheral descriptions for details.

### 7.5.3 Interrupt Recognition

Once enabled, an interrupt request can be recognized at any time after the I mask bit is cleared. When an interrupt service request is recognized, the CPU responds at the completion of the instruction being executed. Interrupt latency varies according to the number of cycles required to complete the current instruction. Because the fuzzy logic rule evaluation (REV), fuzzy logic rule evaluation weighted (REVW), and weighted average (WAV) instructions can take many cycles to complete, they are designed so that they can be interrupted. Instruction execution resumes when interrupt execution is complete. When the CPU begins to service an interrupt, the instruction queue is refilled, a return address is calculated, and then the return address and the contents of the CPU registers are stacked as shown in Table 7-2.

Table 7-2. Stacking Order on Entry to Interrupts

Memory Location	CPU Registers
SP + 7	RTN <sub>H</sub> : RTN <sub>L</sub>
SP + 5	Y <sub>H</sub> : Y <sub>L</sub>
SP + 3	X <sub>H</sub> : X <sub>L</sub>
SP + 1	B : A
SP	CCR

After the CCR is stacked, the I bit (and the X bit, if an  $\overline{\text{XIRQ}}$  interrupt service request caused the interrupt) is set to prevent other interrupts from disrupting the interrupt service routine. Execution continues at the address pointed to by the vector for the highest-priority interrupt that was pending at the beginning of the interrupt sequence. At the end of the interrupt service routine, an RTI instruction restores context from the stacked registers, and normal program execution resumes.

#### 7.5.4 External Interrupts

External interrupt service requests are made by asserting an active-low signal connected to the  $\overline{\text{IRQ}}$  pin. Typically, control bits affect how the signal is detected and recognized.

The I bit serves as the  $\overline{IRQ}$  interrupt enable flag. When an  $\overline{IRQ}$  interrupt is recognized, the I bit is set to inhibit interrupts during the interrupt service routine. Before other maskable interrupt requests can be recognized, the I bit must be cleared. This is generally done by an RTI instruction at the end of the service routine.

### 7.5.5 Return-from-Interrupt Instruction (RTI)

RTI is used to terminate interrupt service routines. RTI is an 8-cycle instruction when no other interrupt is pending and 11 cycles (10 cycles in M68HC12) when another interrupt is pending. In either case, the first five cycles are used to restore (pull) the CCR, B:A, X, Y, and the return address from the stack. If no other interrupt is pending at this point, three program words are fetched to refill the instruction queue from the area of the return address and processing proceeds from there.

If another interrupt is pending after registers are restored, a new vector is fetched, and the stack pointer is adjusted to point at the CCR value that was just recovered (SP = SP - 9). This makes it appear that the registers have been stacked again. After the SP is adjusted, three program words are fetched to refill the instruction queue, starting at the address the vector points to. Processing then continues with execution of the instruction that is now at the head of the queue.

#### 7.6 Unimplemented Opcode Trap

The CPU12 has opcodes in all 256 positions in the page 1 opcode map, but only 54 of the 256 positions on page 2 of the opcode map are used. If the CPU attempts to execute one of the 202 unused opcodes on page 2, an unimplemented opcode trap occurs. The 202 unimplemented opcodes are essentially interrupts that share a common interrupt vector, \$FFF8:\\$FFF9.

The CPU12 uses the next address after an unimplemented page 2 opcode as a return address. This differs from the M68HC11 illegal opcode interrupt, which uses the address of an illegal opcode as the return address. In the

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 317

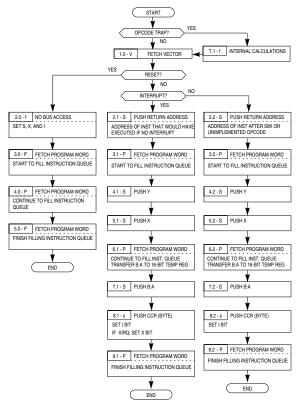


Figure 7-1. Exception Processing Flow Diagram

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 319 320 Freescale Semiconductor

CPU12, the stacked return address can be used to calculate the address of the unimplemented opcode for software-controlled traps.

### 7.7 Software Interrupt Instruction (SWI)

Execution of the SWI instruction causes an interrupt without an interrupt service request. SWI is not inhibited by the global mask bits in the CCR, and execution of SWI sets the I mask bit. Once an SWI interrupt begins, maskable interrupts are inhibited until the I bit in the CCR is cleared. This typically occurs when an RTI instruction at the end of the SWI service routine restores context.

#### 7.8 Exception Processing Flow

The first cycle in the exception processing flow for all CPU12 exceptions is the same, regardless of the source of the exception. Between the first and second cycles of execution, the CPU chooses one of three alternative paths. The first path is for resets, the second path is for pending X or I interrupts, and the third path is used for software interrupts (SWI) and trapping unimplemented opcodes. The last two paths are virtually identical, differing only in the details of calculating the return address. Refer to Figure 7-1 for the following discussion.

#### 7.8.1 Vector Fetch

The first cycle of all exception processing, regardless of the cause, is a vector fetch. The vector points to the address where exception processing will continue. Exception vectors are stored in a table located at the top of the memory map (\$FFxx). The CPU cannot use the fetched vector until the third cycle of the exception processing sequence.

During the vector fetch cycle, the CPU issues a signal that tells the interrupt module to drive the vector address of the highest priority, pending exception onto the system address bus (the CPU does not provide this address).

After the vector fetch, the CPU selects one of the three alternate execution paths, depending upon the cause of the exception.

#### S12CPUV2 Reference Manual. Rev. 4.0

318 Freescale Semiconductor

### 7.8.2 Reset Exception Processing

If reset caused the exception, processing continues to cycle 2.0. This cycle sets the S, X, and I bits in the CCR. Cycles 3.0 through 5.0 are program word fetches that refill the instruction queue. Fetches start at the address pointed to by the reset vector. When the fetches are completed, exception processing ends, and the CPU starts executing the instruction at the head of the instruction queue.

### 7.8.3 Interrupt and Unimplemented Opcode Trap Exception Processing

If an exception was not caused by a reset, a return address is calculated.

- Cycles 2.1and 2.2 are both S cycles (stack a 16-bit word), but the CPU12 performs different return address calculations for each type of exception.
  - When an X- or I-related interrupt causes the exception, the return address points to the next instruction that would have been executed had processing not been interrupted.
  - When an exception is caused by an SWI opcode or by an unimplemented opcode (see 7.6 Unimplemented Opcode Trap), the return address points to the next address after the opcode.
- Once calculated, the return address is pushed onto the stack
- Cycles 3.1 through 9.1 are identical to cycles 3.2 through 9.2 for the rest of the sequence, except for optional setting of the X mask bit performed in cycle 8.1 (see below).
- Cycle 3.1/3.2 is the first of three program word fetches that refill the instruction queue.
- Cycle 4.1/4.2 pushes Y onto the stack.
- Cycle 5.1/5.2 pushes X onto the stack.

- Cycle 6.1/6.2 is the second of three program word fetches that refill
  the instruction queue. During this cycle, the contents of the A and B
  accumulators are concatenated into a 16-bit word in the order B:A.
   This makes register order in the stack frame the same as that of the
  M68HC11, M6801, and the M6800.
- Cycle 7.1/7.2 pushes the 16-bit word containing B:A onto the stack.

- Cycle 8.1/8.2 pushes the 8-bit CCR onto the stack, then updates the mask bits.
  - When an XIRQ interrupt causes an exception, both X and I are set, which inhibits further interrupts during exception processing.
  - When any other interrupt causes an exception, the I bit is set, but the X bit is not changed.
- Cycle 9.1/9.2 is the third of three program word fetches that refill the
  instruction queue. It is the last cycle of exception processing. After this
  cycle the CPU starts executing the first cycle of the instruction at the
  head of the instruction queue.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 32

### Reference Manual — S12CPUV2

### Section 8. Instruction Queue

### 8.1 Introduction

This section describes development and debug support features related to the central processor unit (CPU12). Topics include:

- Single-wire background debug interface
- Hardware breakpoint system
- Instruction queue operation and reconstruction
- Instruction tagging
  - 1 = Valid Data

TRACE — Trace Flag

Indicates when tracing is enabled. Firmware in the BDM ROM sets TRACE in response to a TRACE1 command and TRACE is cleared upon completion of the TRACE1 command. Do not attempt to write TRACE directly with WRITE\_BD\_BYTE commands.

0 = Tracing not enabled

1 = TRACE1 command in progress

### 8.2 External Reconstruction of the Queue

The CPU12 uses an instruction queue to buffer program information and increase instruction throughput. The HCS12 implements the queue somewhat differently from the original M68HC12. The HCS12 queue consists of three 16-bit stages while the M68HC12 queue consists of two 16-bit stages, plus a 16-bit holding latch. Program information is always fetched in aligned 16-bit words. At least three bytes of program information are available to the CPU when instruction execution begins. The holding latch in the M68HC12 is used when a word of program information arrives before the queue can advance.

### S12CPUV2 Reference Manual. Rev. 4.0

S12CPUV2 Reference Manual, Rev. 4.0

322 Freescale Semiconductor

Because of the queue, program information is fetched a few cycles before it is used by the CPU. Internally, the microcontroller unit (MCU) only needs to buffer the fetched data. But, in order to monitor cycle-by-cycle CPU activity externally, it is necessary to capture data and address to discern what is happening in the instruction queue.

Two external pins, IPIPE1 and IPIPE0, provide time-multiplexed information about data movement in the queue and instruction execution. The instruction queue and cycle-by-cycle activity can be reconstructed in real time or from trace history captured by a logic analyzer. However, neither scheme can be used to stop the CPU12 at a specific instruction. By the time an operation is visible outside the MCU, the instruction has already begun execution. A separate instruction tagging mechanism is provided for this purpose. A tag follows the information in the queue as the queue is advanced. During debugging, the CPU enters active background debug mode when a tagged instruction reaches the head of the queue, rather than executing the tagged instruction. For more information about tagging, refer to 8.6 Instruction Tagging.

### 8.3 Instruction Queue Status Signals

The IPIPE1 and IPIPE0 signals carry time-multiplexed information about data movement and instruction execution during normal CPU operation. The signals are available on two multifunctional device pins. During reset, the pins are used as mode-select input signals MODA and MODB.

To reconstruct the queue, the information carried by the status signals must be captured externally. In general, data movement and execution start information are considered to be distinct 2-bit values, with the low-order bit on IPIPE0 and the high-order bit on IPIPE1.

### 8.3.1 HCS12 Timing Detail

In the HCS12, data-movement information is available when E clock is high or on falling edges of the E clock; execution-start information is available when E clock is low or on rising edges of the E clock, as shown in Figure 8-1. Data-movement information refers to data on the bus. Execution-start information refers to the bus cycle that starts with that E-low time and continues through the following E-high time. Table 8-1 summarizes the information encoded on the IPIPE1 and IPIPE0 pins.

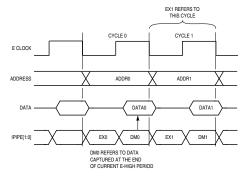


Figure 8-1. Queue Status Signal Timing (HCS12)

#### 8.3.2 M68HC12 Timing Detail

In the M68HC12, data movement information is available on rising edges of the E clock; execution start information is available on falling edges of the E clock, as shown in Figure 8-2. Data movement information refers to data on the bus at the previous falling edge of E. Execution information refers to the bus cycle from the current falling edge to the next falling edge of E. Table 8-1 summarizes the information encoded on the IPIPE1 and IPIPE0 pins.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 3

### 8.3.3 Null (Code 0:0)

The 0:0 data movement state indicates that there was no data movement in the instruction queue; the 0:0 execution start state indicates continuation of an instruction or interrupt sequence (no new instruction or interrupt start).

### 8.3.4 LAT — Latch Data from Bus (Code 0:1)

This code is not used in the HCS12. In the M68HC12, fetched program information has arrived, but the queue is not ready to advance. The information is latched into a buffer. Later, when the queue does advance, stage 1 is refilled from the buffer or from the data bus if the buffer is empty. In some instruction sequences, there can be several latch cycles before the queue advances. In these cases, the buffer is filled on the first latch event and additional latch requests are ignored.

### 8.3.5 ALD — Advance and Load from Data Bus (Code 1:0)

The instruction queue is advanced by one word and stage one is refilled with a word of program information from the data bus. The CPU requested the information two bus cycles earlier but, due to access delays, the information was not available until the E cycle referred to by the ALD code.

### 8.3.6 ALL — Advance and Load from Latch (Code 1:1)

This code is not used in the HCS12. In the M68HC12, the 2-stage instruction queue is advanced by one word and stage one is refilled with a word of program information from the buffer. The information was latched from the data bus at the falling edge of a previous E cycle because the instruction queue was not ready to advance when it arrived.

### 8.3.7 INT — Interrupt Sequence Start (Code 0:1)

The E cycle associated with this code is the first cycle of an interrupt sequence. Normally, this cycle is a read of the interrupt vector. However, in systems that have interrupt vectors in external memory and an 8-bit data bus, this cycle reads the upper byte of the 16-bit interrupt vector.

S12CPUV2 Reference Manual, Rev. 4.0

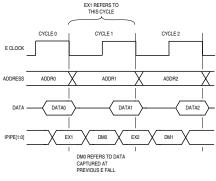


Figure 8-2. Queue Status Signal Timing (M68HC12)

Table 8-1. IPIPE1 and IPIPE0 Decoding (HCS12 and M68HC12)

	Mnemonic	Meaning
Data Movement	Capture a	at E Fall in HCS12 (E Rise in M68HC12)
0:0	_	No movement
0:1	LAT <sup>(1)</sup>	Latch data from bus
1:0	ALD	Advance queue and load from bus
1:1	ALL <sup>(1)</sup>	Advance queue and load from latch
Execution Start	Capture a	at E Rise in HCS12 (E Fall in M68HC12)
0:0	_	No start
0:1	INT	Start interrupt sequence
1:0	SEV	Start even instruction
1:1	SOD	Start odd instruction

The HCS12 implementation does not include a holding latch, so these data movement codes are used only in the original M68HC12.

#### S12CPUV2 Reference Manual, Rev. 4.0

326 Freescale Semiconductor

### 8.3.8 SEV — Start Instruction on Even Address (Code 1:0)

The E cycle associated with this code is the first cycle of the instruction in the even (high order) half of the word at the head of the instruction queue. The queue treats the \$18 prebyte for instructions on page 2 of the opcode map as a special 1-byte, 1-cycle instruction, except that interrupts are not recognized at the boundary between the prebyte and the rest of the instruction.

### 8.3.9 SOD — Start Instruction on Odd Address (Code 1:1)

The E cycle associated with this code is the first cycle of the instruction in the odd (low order) half of the word at the head of the instruction queue. The queue treats the \$18 prebyte for instructions on page 2 of the opcode map as a special 1-byte, 1-cycle instruction, except that interrupts are not recognized at the boundary between the prebyte and the rest of the instruction.

### 8.4 Queue Reconstruction (for HCS12)

The raw signals required for queue reconstruction are the address bus (ADDR), the data bus (DATA), the system clock (E), and the queue status signals (IPIPE1 and IPIPE2). An ALD data movement implies a read; therefore, it is not necessary to capture the  $R\overline{\rm W}$  signal. An E clock cycle begins at a falling edge of E. Addresses and execution status must be captured at the rising E edge in the middle of the cycle. Data and data-movement status must be captured at the falling edge of E at the end of the cycle. These captures can then be organized into records with one record per E clock cycle.

Implementation details depend on the type of MCU and the mode of operation. For instance, the data bus can be eight bits or 16 bits wide, and nonmultiplexed or multiplexed. In all cases, the externally reconstructed queue must use 16-bit words. Demultiplexing and assembly of 8-bit data into 16-bit words is done before program information enters the real queue, so it must also be done for the external reconstruction.

### An example:

Systems with an 8-bit data bus and a program stored in external memory require two cycles for each program word fetch. MCU bus-control logic freezes the CPU clocks long enough to do two 8-bit accesses rather than

Freescale Semiconductor 327 328 Freescale Semiconductor

a single 16-bit access, so the CPU sees only 16-bit words of program information. To recover the 16-bit program words externally, latch the data bus state at the falling edge of E when ADDR0 = 0, and gate the outputs of the latch onto DATA[15:8] when an ALD cycle occurs. Since the 8-bit data bus is connected to DATA[7:0], the 16-bit word on the data lines corresponds to the ALD during the last half of the second 8-bit fetch, which is always to an odd address. IPIPE[1:0] status signals indicate 0:0 for the second half of the E cycle corresponding to the first 8-bit fetch.

Some MCUs have address lines to support memory expansion beyond the standard 64-Kbyte address space. When memory expansion is used, expanded addresses must also be captured and maintained.

### 8.4.1 Queue Reconstruction Registers (for HCS12)

Queue reconstruction requires the following registers, which can be implemented as software variables when previously captured trace data is used, or as hardware latches in real time.

### 8.4.1.1 fetch\_add Register

This register buffers the fetch address.

### 8.4.1.2 st1\_add, st1\_dat Registers

These registers contain address and data for the first stage of the reconstructed instruction queue.

#### 8.4.1.3 st2\_add, st2\_dat Registers

These registers contain address and data for the middle stage of the reconstructed instruction queue.

### 8.4.1.4 st3\_add, st3\_dat Registers

These registers contain address and data for the final stage of the reconstructed instruction queue. When the IPIPE[1:0] signals indicate the execution status, the address and opcode can be found in these registers.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 329

### 8.5 Queue Reconstruction (for M68HC12)

The raw signals required for queue reconstruction are the address bus (ADDR), the data bus (DATA), the system clock (E), and the queue status signals (IPIPE1 and IPIPE0). An E-clock cycle begins after an E fall. Addresses and data movement status must be captured at the E rise in the middle of the cycle. Data and execution start status must be captured at the E fall at the end of the cycle. These captures can then be organized into records with one record per E clock cycle.

Implementation details depend upon the type of device and the mode of operation. For instance, the data bus can be eight bits or 16 bits wide, and non-multiplexed or multiplexed. In all cases, the externally reconstructed queue must use 16-bit words. Demultiplexing and assembly of 8-bit data into 16-bit words is done before program information enters the real queue, so it must also be done for the external reconstruction.

### An example:

Systems with an 8-bit data bus and a program stored in external memory require two cycles for each program word fetch. MCU bus control logic freezes the CPU clocks long enough to do two 8-bit accesses rather than a single 16-bit access, so the CPU sees only 16-bit words of program information. To recover the 16-bit program words externally, latch the data bus state at the falling edge of E when ADDRO = 0, and gate the outputs of the latch onto DATA[15:8] when a LAT or ALD cycle occurs. Since the 8-bit data bus is connected to DATA[7:0], the 16-bit word on the data lines corresponds to the ALD or LAT status indication at the E rise after the second 8-bit fetch, which is always to an odd address. IPIPE1 and IPIPE0 status signals indicate 0:0 at the beginning (E fall) and middle (E rise) of the first 8-bit fetch.

Some M68HC12 devices have address lines to support memory expansion beyond the standard 64-Kbyte address space. When memory expansion is used, expanded addresses must also be captured and maintained.

### 8.5.1 Queue Reconstruction Registers (for M68HC12)

Queue reconstruction requires these registers, which can be implemented as software variables when previously captured trace data is used or as hardware latches in real time.

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 331 332 Freescale Semiconductor

#### 8.4.2 Reconstruction Algorithm (for HCS12)

This section describes how to use IPIPE[1:0] signals and queue reconstruction registers to reconstruct the queue.

Typically, the first few cycles of raw capture data are not useful because it takes several cycles before an instruction propagates to the head of the queue. During these first raw cycles, the only meaningful information available is data movement signals. Information on the external address and data buses during this setup time is still captured and propagated through the reconstructed queue, but the information reflects the actions of instructions that were fetched before data collection started.

In the special case of a reset, there is a five-cycle sequence (VEPPP) during which the reset vector is fetched and the instruction queue is filled, before execution of the first instruction begins. Due to the timing of the switchover of the IPIPE[1:0] pins from their alternate function as mode-select inputs, the status information on these two pins may be erroneous during the first cycle or two after the release of reset. This is not a problem because the status is correct in time for queue reconstruction logic to correctly replicate the gueue.

On an advance-and-load-from-data-bus (ALD) cycle, the information in the instruction queue must advance by one stage. Whatever was in stage three of the queue simply disappears. The previous contents of stage two go to stage three, the previous contents of stage one go to stage two, and the contents of fetch\_add and data from the current cycle go to stage one.

Figure 8-3 shows the reset sequence and illustrates the relationship between instruction cycle codes (VfPPP) and pipe status signals. One cycle of the data bus is shown to indicate the relationship between the ALD data movement code and the data value it refers to. The SEV execution start code indicates that the reset vector pointed to an even address in this example.




Figure 8-3. Reset Sequence for HCS12

#### S12CPUV2 Reference Manual, Rev. 4.0

330 Freescale Semiconductor

### 8.5.1.1 in\_add, in\_dat Registers

These registers contain the address and data from the previous external bus cycle. Depending on how records are read and processed from the raw capture information, it may be possible to simply read this information from the raw capture data file when needed.

### 8.5.1.2 fetch\_add, fetch\_dat Registers

These registers buffer address and data for information that was fetched before the queue was ready to advance.

### 8.5.1.3 st1\_add, st1\_dat Registers

These registers contain address and data for the first stage of the reconstructed instruction queue.

### 8.5.1.4 st2\_add, st2\_dat Registers

These registers contain address and data for the final stage of the reconstructed instruction queue. When the IPIPE1 and IPIPE0 signals indicate that an instruction is starting to execute, the address and opcode can be found in these registers.

### 8.5.2 Reconstruction Algorithm (for M68HC12)

This subsection describes in detail how to use IPIPE1 and IPIPE0 signals and queue reconstruction registers to reconstruct the queue. An "is\_full" flag is used to indicate when the fetch\_add and fetch\_dat buffer registers contain information. The use of the flag is explained more fully in subsequent paragraphs.

Typically, the first few cycles of raw capture data are not useful because it takes several cycles before an instruction propagates to the head of the queue. During these first raw cycles, the only meaningful information available are data movement signals. Information on the external address and data buses during this setup time reflects the actions of instructions that were fetched before data collection started.

In the special case of a reset, there is a 5-cycle sequence (VfPPP) during which the reset vector is fetched and the instruction queue is filled, before execution of the first instruction begins. Due to the timing of the switchover

of the IPIPE1 and IPIPE0 pins from their alternate function as mode select inputs, the status information on these two pins may be erroneous during the first cycle or two after the release of reset. This is not a problem because the status is correct in time for queue reconstruction logic to correctly replicate the queue.

Before starting to reconstruct the queue, clear the is\_full flag to indicate that there is no meaningful information in the fetch\_add and fetch\_dat buffers. Further movement of information in the instruction queue is based on the decoded status on the IPIPE1 and IPIPE0 signals at the rising edges of E.

#### 8.5.2.1 LAT Decoding

On a latch cycle (LAT), check the is\_full flag. If and only if is\_full = 0, transfer the address and data from the previous bus cycle (in\_add and in\_dat) into the fetch\_add and fetch\_dat registers, respectively. Then, set the is\_full flag. The usual reason for a latch request instead of an advance request is that the previous instruction ended with a single aligned byte of program information in the last stage of the instruction queue. Since the odd half of this word still holds the opcode for the next instruction, the queue cannot advance on this cycle. However, the cycle to fetch the next word of program information has already started and the data is on its way.

### 8.5.2.2 ALD Decoding

On an advance-and-load-from-data-bus (ALD) cycle, the information in the instruction queue must advance by one stage. Whatever was in stage 2 of the queue is simply thrown away. The previous contents of stage 1 are moved to stage 2, and the address and data from the previous cycle (in\_add and in\_dat) are transferred into stage 1 of the instruction queue. Finally, clear the is\_full flag to indicate the buffer latch is ready for new data. Usually, there would be no useful information in the fetch buffer when an ALD cycle was encountered, but in the case of a change-of-flow, any data that was there needs to be flushed out (by clearing the is\_full flag).

#### 8.5.2.3 ALL Decoding

On an advance-and-load-from-latch (ALL) cycle, the information in the instruction queue must advance by one stage. Whatever was in stage 2 of the queue is simply thrown away. The previous contents of stage 1 are moved to stage 2, and the contents of the fetch buffer latch are transferred into stage 1 of the instruction queue. One or more cycles preceding the ALL

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 333

### 8.6 Instruction Tagging

The instruction queue and cycle-by-cycle CPU activity can be reconstructed in real time or from trace history that was captured by a logic analyzer. However, the reconstructed queue cannot be used to stop the CPU at a specific instruction, because execution has already begun by the time an operation is visible outside the MCU. A separate instruction tagging mechanism is provided for this purpose.

Executing the BDM TAGGO command configures two MCU pins for tagging. The TAGLO signal shares a pin with the LSTRB signal, and the TAGHI signal shares the BKGD pin. Tagging information is latched on the falling edge of ECLK, as shown in Figure 8-5.




Figure 8-5. Tag Input Timing

Table 8-2 shows the functions of the two independent tagging pins. The presence of logic level 0 on either pin at the fall of ECLK tags (marks) the associated byte of program information as it is read into the instruction queue. Tagging is allowed in all modes. Tagging is disabled when BDM becomes active.

Table 8-2. Tag Pin Function

TAGHI	TAGLO	Tag
1	1	No tag
1	0	Low byte
0	1	High byte
0	0	Both bytes

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 335 336 Freescale Semiconductor

cycle will have been a LAT cycle. After updating the instruction queue, clear the is\_full flag to indicate the fetch buffer is ready for new information.

Figure 8-4 shows the reset sequence and illustrates the relationship between instruction cycle codes (VfPPP) and pipe status signals. One cycle of the data bus is shown to indicate the relationship between the ALD data movement code and the data value it refers to. The SEV execution start code indicates that the reset vector pointed to an even address in this example.




Figure 8-4. Reset Sequence for M68HC12

#### S12CPUV2 Reference Manual. Rev. 4.0

334 Freescale Semiconductor

S12CPUV2 Reference Manual, Rev. 4.0

In HCS12 and M68HC12 derivatives that have hardware breakpoint capability, the breakpoint control logic and BDM control logic use the same internal signals for instruction tagging. The CPU does not differentiate between the two kinds of tags.

The tag follows program information as it advances through the queue. When a tagged instruction reaches the head of the queue, the CPU enters active background debug mode rather than executing the instruction.

### Section 9. Fuzzy Logic Support

#### 9.1 Introduction

Freescale Semiconductor

The instruction set of the central processor unit (CPU12) is the first instruction set to specifically address the needs of fuzzy logic. This section describes the use of fuzzy logic in control systems, discusses the CPU12 fuzzy logic instructions, and provides examples of fuzzy logic programs.

The CPU12 includes four instructions that perform specific fuzzy logic tasks. In addition, several other instructions are especially useful in fuzzy logic programs. The overall C-friendliness of the instruction set also aids development of efficient fuzzy logic programs.

This section explains the basic fuzzy logic algorithm for which the four fuzzy logic instructions are intended. Each of the fuzzy logic instructions are then explained in detail. Finally, other custom fuzzy logic algorithms are discussed, with emphasis on use of other CPU12 instructions.

The four fuzzy logic instructions are:

- MEM (determine grade of membership), which evaluates trapezoidal membership functions
- REV (fuzzy logic rule evaluation) and REVW (fuzzy logic rule evaluation weighted), which perform unweighted or weighted MIN-MAX rule evaluation
- WAV (weighted average), which performs weighted average defuzzification on singleton output membership functions.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 33

solve certain types of complex problems that have eluded traditional control methods.

Fuzzy sets provide a means of using linguistic expressions like "temperature is warm" in rules which can then be evaluated with a high degree of numerical precision and repeatability. This directly contradicts the common misperception that fuzzy logic produces approximate results — a specific set of input conditions always produces the same result, just as a conventional control system does.

A microcontroller-based fuzzy logic control system has two parts:

- A fuzzy inference kernel which is executed periodically to determine system outputs based on current system inputs
- A knowledge base which contains membership functions and rules

Figure 9-1 is a block diagram of this kind of fuzzy logic system.

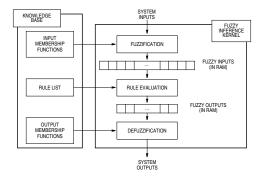


Figure 9-1. Block Diagram of a Fuzzy Logic System

Other instructions that are useful for custom fuzzy logic programs include:

- MINA (place smaller of two unsigned 8-bit values in accumulator A)
- EMIND (place smaller of two unsigned 16-bit values in accumulator D)
- MAXM (place larger of two unsigned 8-bit values in memory)
- EMAXM (place larger of two unsigned 16-bit values in memory)
- TBL (table lookup and interpolate)
- ETBL (extended table lookup and interpolate)
- EMACS (extended multiply and accumulate signed 16-bit by 16-bit to 32-bit)

For higher resolution fuzzy programs, the fast extended precision math instructions in the CPU12 are also beneficial. Flexible indexed addressing modes help simplify access to fuzzy logic data structures stored as lists or tabular data structures in memory.

The actual logic additions required to implement fuzzy logic support in the CPU12 are quite small, so there is no appreciable increase in cost for the typical user. A fuzzy inference kernel for the CPU12 requires one-fifth as much code space and executes almost 50 times faster than a comparable kernel implemented on a typical midrange microcontroller.

### 9.2 Fuzzy Logic Basics

338

This is an overview of basic fuzzy logic concepts. It can serve as a general introduction to the subject, but that is not the main purpose. There are a number of fuzzy logic programming strategies. This discussion concentrates on the methods implemented in the CPU12 fuzzy logic instructions. The primary goal is to provide a background for a detailed explanation of the CPU12 fuzzy logic instructions.

In general, fuzzy logic provides for set definitions that have fuzzy boundaries rather than the crisp boundaries of Aristotelian logic. These sets can overlap so that, for a specific input value, one or more sets associated with linguistic labels may be true to a degree at the same time. As the input varies from the range of one set into the range of an adjacent set, the first set becomes progressively less true while the second set becomes progressively more true.

Fuzzy logic has membership functions which emulate human concepts like "temperature is warm"; that is, conditions are perceived to have gradual boundaries. This concept seems to be a key element of the human ability to

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

The knowledge base can be developed by an application expert without any microcontroller programming experience. Membership functions are simply expressions of the expert's understanding of the linguistic terms that describe the system to be controlled. Rules are ordinary language statements that describe the actions a human expert would take to solve the application problem.

Rules and membership functions can be reduced to relatively simple data structures (the knowledge base) stored in non-volatile memory. A fuzzy inference kernel can be written by a programmer who does not know how the application system works. The only thing the programmer needs to do with knowledge base information is store it in the memory locations used by the kernel.

One execution pass through the fuzzy inference kernel generates system output signals in response to current input conditions. The kernel is executed as often as needed to maintain control. If the kernel is executed more often than needed, processor bandwidth and power are wasted; delaying too long between passes can cause the system to get too far out of control. Choosing a periodic rate for a fuzzy control system is the same as it would be for a conventional control system.

### 9.2.1 Fuzzification (MEM)

During the fuzzification step, the current system input values are compared against stored input membership functions to determine the degree to which each label of each system input is true. This is accomplished by finding the y-value for the current input value on a trapezoidal membership function for each label of each system input. The MEM instruction in the CPU12 performs this calculation for one label of one system input. To perform the complete fuzzification task for a system, several MEM instructions must be executed, usually in a program loop structure.

Figure 9-2 shows a system of three input membership functions, one for each label of the system input. The x-axis of all three membership functions represents the range of possible values of the system input. The vertical line through all three membership functions represents a specific system input value. The y-axis represents degree of truth and varies from completely false (\$00 or 0 percent) to completely true (\$FF or 100 percent). The y-value where the vertical line intersects each of the membership functions, is the degree to which the current input value matches the associated label for this system input. For example, the expression "temperature is warm" is 25

Freescale Semiconductor

S12CPUV2 Reference Manual. Rev. 4.0 S12CPUV2 Reference Manual. Rev. 4.0

percent true (\$40). The value \$40 is stored to a random-access memory (RAM) location and is called a fuzzy input (in this case, the fuzzy input for "temperature is warm"). There is a RAM location for each fuzzy input (for each label of each system input).

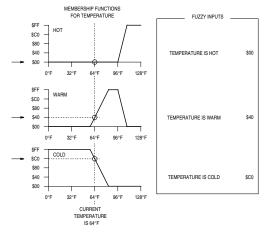


Figure 9-2. Fuzzification Using Membership Functions

When the fuzzification step begins, the current value of the system input is in an accumulator of the CPU12, one index register points to the first membership function definition in the knowledge base, and a second index register points to the first fuzzy input in RAM. As each fuzzy input is calculated by executing a MEM instruction, the result is stored to the fuzzy input and both pointers are updated automatically to point to the locations associated with the next fuzzy input. The MEM instruction takes care of everything except counting the number of labels per system input and loading the current value of any subsequent system inputs.

The end result of the fuzzification step is a table of fuzzy inputs representing current system conditions.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 341

expression corresponds to a specific fuzzy output in RAM. Consequents for a rule can be encoded as a simple list of pointers to (or addresses of) the fuzzy outputs to which they refer.

The complete rules are stored in the knowledge base as a list of pointers or addresses of fuzzy inputs and fuzzy outputs. For the rule evaluation logic to work, there must be some means of knowing which pointers refer to fuzzy inputs and which refer to fuzzy outputs. There also must be a way to know when the last rule in the system has been reached.

- One method of organization is to have a fixed number of rules with a specific number of antecedents and consequents.
- A second method, employed in Freescale Freeware M68HC11 kernels, is to mark the end of the rule list with a reserved value, and use a bit in the pointers to distinguish antecedents from consequents.
- A third method of organization, used in the CPU12, is to mark the end
  of the rule list with a reserved value, and separate antecedents and
  consequents with another reserved value. This permits any number
  of rules, and allows each rule to have any number of antecedents and
  consequents, subject to the limits imposed by availability of system
  memory.

Each rule is evaluated sequentially, but the rules as a group are treated as if they were all evaluated simultaneously. Two mathematical operations take place during rule evaluation. The fuzzy and operator corresponds to the mathematical minimum operation and the fuzzy or operation corresponds to the mathematical maximum operation. The fuzzy and is used to connect antecedents within a rule. The fuzzy or is implied between successive rules. Before evaluating any rules, all fuzzy outputs are set to zero (meaning not true at all). As each rule is evaluated, the smallest (minimum) antecedent is taken to be the overall truth of the rule. This rule truth value is applied to each consequent of the rule (by storing this value to the corresponding fuzzy output) unless the fuzzy output is already larger (maximum). If two rules affect the same fuzzy output, the rule that is most true governs the value in the fuzzy output because the rules are connected by an implied fuzzy or.

In the case of rule weighting, the truth value for a rule is determined as usual by finding the smallest rule antecedent. Before applying this truth value to the consequents for the rule, the value is multiplied by a fraction from zero (rule disabled) to one (rule fully enabled). The resulting modified truth value is then applied to the fuzzy outputs.

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 343 344 Freescale Semiconductor

#### 9.2.2 Rule Evaluation (REV and REVW)

Rule evaluation is the central element of a fuzzy logic inference program. This step processes a list of rules from the knowledge base using current fuzzy input values from RAM to produce a list of fuzzy outputs in RAM. These fuzzy outputs can be thought of as raw suggestions for what the system output should be in response to the current input conditions. Before the results can be applied, the fuzzy outputs must be further processed, or defuzzified, to produce a single output value that represents the combined effect of all of the fuzzy outputs.

The CPU12 offers two variations of rule evaluation instructions. The REV instruction provides for unweighted rules (all rules are considered to be equally important). The REVW instruction is similar but allows each rule to have a separate weighting factor which is stored in a separate parallel data structure in the knowledge base. In addition to the weights, the two rule evaluation instructions also differ in the way rules are encoded into the knowledge base.

An understanding of the structure and syntax of rules is needed to understand how a microcontroller performs the rule evaluation task. An example of a typical rule is:

If temperature is warm and pressure is high, then heat is (should be) off.

At first glance, it seems that encoding this rule in a compact form understandable to the microcontroller would be difficult, but it is actually simple to reduce the rule to a small list of memory pointers. The antecedent portion of the rule is a statement of input conditions and the consequent portion of the rule is a statement of output actions.

The antecedent portion of a rule is made up of one or more (in this case two) antecedents connected by a fuzzy and operator. Each antecedent expression consists of the name of a system input, followed by is, followed by a label name. The label must be defined by a membership function in the knowledge base. Each antecedent expression corresponds to one of the fuzzy inputs in RAM. Since and is the only operator allowed to connect antecedent expressions, there is no need to include these in the encoded rule. The antecedents can be encoded as a simple list of pointers to (or addresses of) the fuzzy inputs to which they refer.

The consequent portion of a rule is made up of one or more (in this case one) consequents. Each consequent expression consists of the name of a system output, followed by *is*, followed by a label name. Each consequent

#### S12CPUV2 Reference Manual, Rev. 4.0

342 Freescale Semiconductor

The end result of the rule evaluation step is a table of suggested or "raw" fuzzy outputs in RAM. These values were obtained by plugging current conditions (fuzzy input values) into the system rules in the knowledge base. The raw results cannot be supplied directly to the system outputs because they may be ambiguous. For instance, one raw output can indicate that the system output should be medium with a degree of truth of 50 percent while, at the same time, another indicates that the system output should be low with a degree of truth of 25 percent. The defuzzification step resolves these ambiguities.

### 9.2.3 Defuzzification (WAV)

The final step in the fuzzy logic program combines the raw fuzzy outputs into a composite system output. Unlike the trapezoidal shapes used for inputs, the CPU12 typically uses singletons for output membership functions. As with the inputs, the x-axis represents the range of possible values for a system output. Singleton membership functions consist of the x-axis position for a label of the system output. Fuzzy outputs correspond to the y-axis height of the corresponding output membership function.

The WAV instruction calculates the numerator and denominator sums for weighted average of the fuzzy outputs according to the formula:

System Output = 
$$\frac{\sum_{i=1}^{n} S_i F_i}{\sum_{i=1}^{n} F_i}$$

Where n is the number of labels of a system output,  $S_i$  are the singleton positions from the knowledge base, and  $F_i$  are fuzzy outputs from RAM. For a common fuzzy logic program on the CPU12, n is eight or less (though this instruction can handle any value to 255) and  $S_i$  and  $F_i$  are 8-bit values. The final divide is performed with a separate EDIV instruction placed immediately after the WAV instruction.

Before executing WAV, an accumulator must be loaded with the number of iterations (n), one index register must be pointed at the list of singleton positions in the knowledge base, and a second index register must be pointed at the list of fuzzy outputs in RAM. If the system has more than one system output, the WAV instruction is executed once for each system output.

#### 9.3 Example Inference Kernel

Figure 9-3 is a complete fuzzy inference kernel written in CPU12 assembly language. Numbers in square brackets are cycle counts for an HCS12 device. The kernel uses two system inputs with seven labels each and one system output with seven labels. The program assembles to 57 bytes. It executes in about 20 µs at an 25-MHz bus rate. The basic structure can easily be extended to a general-purpose system with a larger number of inputs and outputs.

```
;Point at MF definitions
;Point at fuzzy input table
;Get first input value
;7 labels per input
;Evaluate one MF
;For 7 labels of 1 input
;Get second input value
;7 labels per input
;Evaluate one MF
;For 7 labels of 1 input
*
01 [2]
02 [2]
03 [3]
04 [1]
05 [5]
06 [3]
07 [3]
08 [1]
09 [5]
10 [3]
                                   FUZZIFY
                                                                                                            #INPUT MFS
                                                                                                            #FUZ_INS
CURRENT_INS
#7
                                   GRAD_LOOP
                                                                                                            CURRENT_INS+1
#7
                                                                                      LDAR
                                   GRAD LOOP1
                                                                                                           B, GRAD LOOP1
                                                                                    DBNE
         [1]
[2]
[3]
[2]
[2]
[1]
[3n+4]
                                                                                                           #7
1,Y+
b,RULE_EVAL
#RULE_START
#FUZ_INS
#$FF
                                                                                                                                                                        ;Loop count
;Clr a fuzzy out & inc ptr
;Loop to clr all fuzzy outs
;Point at first rule element
;Point at fuzzy ins and outs
;Init A (and clears V-bit)
;Process rule list
11
12
13
14
15
16
                                   RULE EVAL
                                                                                    CLR
DBNE
LDX
LDY
LDAA
REV
18 [2]
19 [2]
20 [1]
21 [7b+4]
22 [11]
23 [1]
24 [3]
                                                                                                                                                                        ;Point at fuzzy outputs;Point at singleton positions;7 fuzzy outs per COG output;Calculate sums for wtd av;Pinal divide for wtd av;Pinal divide for wtd av;Bove result to A:B;Store system output
                                                                                    LDY
LDX
LDAB
                                   DEFUZ
                                                                                                           COG_OUT
              *
**** End
```

Figure 9-3. Fuzzy Inference Engine

Lines 1 to 3 set up pointers and load the system input value into the A accumulator.

Line 4 sets the loop count for the loop in lines 5 and 6.

Lines 5 and 6 make up the fuzzification loop for seven labels of one system input. The MEM instruction finds the y-value on a trapezoidal membership function for the current input value, for one label of the current input, and then stores the result to the corresponding fuzzy input. Pointers in X and Y

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 345

Line 21 is the beginning of defuzzification. The WAV instruction calculates a sum-of-products and a sum-of-weights.

Line 22 completes defuzzification. The EDIV instruction performs a 32-bit by 16-bit divide on the intermediate results from WAV to get the weighted average.

Line 23 moves the EDIV result into the double accumulator.

Line 24 stores the low 8-bits of the defuzzification result

This example inference program shows how easy it is to incorporate fuzzy logic into general applications using the CPU12. Code space and execution time are no longer serious factors in the decision to use fuzzy logic. The next section begins a much more detailed look at the fuzzy logic instructions of the CPU12.

### 9.4 MEM Instruction Details

This section provides a more detailed explanation of the membership function evaluation instruction (MEM), including details about abnormal special cases for improperly defined membership functions.

### 9.4.1 Membership Function Definitions

Figure 9-4 shows how a normal membership function is specified in the CPU12. Typically, a software tool is used to input membership functions graphically, and the tool generates data structures for the target processor and software kernel. Alternatively, points and slopes for the membership functions can be determined and stored in memory with define-constant assembler directives.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 347 348 Freescale Semiconductor

are automatically updated by four and one so they point at the next membership function and fuzzy input respectively.

Line 7 loads the current value of the next system input. Pointers in X and Y already point to the right places as a result of the automatic update function of the MEM instruction in line 5.

Line 8 reloads a loop count.

Lines 9 and 10 form a loop to fuzzify the seven labels of the second system input. When the program drops to line 11, the Y index register is pointing at the next location after the last fuzzy input, which is the first fuzzy output in this system.

Line 11 sets the loop count to clear seven fuzzy outputs.

Lines 12 and 13 form a loop to clear all fuzzy outputs before rule evaluation starts.

Line 14 initializes the X index register to point at the first element in the rule list for the REV instruction.

Line 15 initializes the Y index register to point at the fuzzy inputs and outputs in the system. The rule list (for REV) consists of 8-bit offsets from this base address to particular fuzzy inputs or fuzzy outputs. The special value \$FE is interpreted by REV as a marker between rule antecedents and consequents

Line 16 initializes the A accumulator to the highest 8-bit value in preparation for finding the smallest fuzzy input referenced by a rule antecedent. The LDAA #\$FF instruction also clears the V-bit in the CPU12's condition code register so the REV instruction knows it is processing antecedents. During rule list processing, the V bit is toggled each time an \$FE is detected in the list. The V bit indicates whether REV is processing antecedents or consequents.

Line 17 is the REV instruction, a self-contained loop to process successive elements in the rule list until an \$FF character is found. For a system of 17 rules with two antecedents and one consequent each, the REV instruction takes 259 cycles, but it is interruptible so it does not cause a long interrupt latenov.

Lines 18 through 20 set up pointers and an iteration count for the WAV instruction.

### S12CPUV2 Reference Manual, Rev. 4.0

346 Freescale Semiconductor

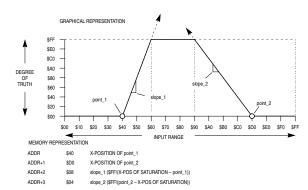


Figure 9-4. Defining a Normal Membership Function

An internal CPU algorithm calculates the y-value where the current input intersects a membership function. This algorithm assumes the membership function obeys some common-sense rules. If the membership function definition is improper, the results may be unusual. See 9.4.2 Abnormal Membership Function Definitions for a discussion of these cases.

These rules apply to normal membership functions

S12CPUV2 Reference Manual, Rev. 4.0

- \$00 ≤ point1 < \$FF
- \$00 < point2 ≤ \$FF
- point1 < point2</li>
- The sloping sides of the trapezoid meet at or above \$FF.

Each system input such as temperature has several labels such as cold, cool, normal, warm, and hot. Each label of each system input must have a membership function to describe its meaning in an unambiguous numerical way. Typically, there are three to seven labels per system input, but there is no practical restriction on this number as far as the fuzzification step is concerned.

#### 9.4.2 Abnormal Membership Function Definitions

In the CPU12, it is possible (and proper) to define "crisp" membership functions. A crisp membership function has one or both sides vertical (infinite slope). Since the slope value \$00 is not used otherwise, it is assigned to mean infinite slope to the MEM instruction in the CPU12.

Although a good fuzzy development tool will not allow the user to specify an improper membership function, it is possible to have program errors or memory errors which result in erroneous abnormal membership functions. Although these abnormal shapes do not correspond to any working systems, understanding how the CPU12 treats these cases can be helpful for debugging.

A close examination of the MEM instruction algorithm will show how such membership functions are evaluated. Figure 9-5 is a complete flow diagram for the execution of a MEM instruction. Each rectangular box represents one CPU bus cycle. The number in the upper left corner corresponds to the cycle number and the letter corresponds to the cycle type (refer to Section 6. Instruction Glossary for details). The upper portion of the box includes information about bus activity during this cycle (if any). The lower portion of the box, which is separated by a dashed line, includes information about internal CPU processes. It is common for several internal functions to take place during a single CPU cycle (for example, in cycle 2, two 8-bit subtractions take place and a flag is set based on the results).

Consider 4a: If  $(((Slope_2 = 0) \text{ or } (Grade_2 > FF)) \text{ and } (flag_d12n = 0)).$ 

The flag\_d12n is zero as long as the input value (in accumulator A) is within the trapezoid. Everywhere outside the trapezoid, one or the other delta term will be negative, and the flag will equal one. Slope\_2 equals zero indicates the right side of the trapezoid has infinite slope, so the resulting grade should be \$FF everywhere in the trapezoid, including at point\_2, as far as this side is concerned. The term grade\_2 greater than \$FF means the value is far enough into the trapezoid that the right sloping side of the trapezoid has crossed above the \$FF cutoff level and the resulting grade should be \$FF as far as the right sloping side is concerned. 4a decides if the value is left of the right sloping side (Grade = \$FF), or on the sloping portion of the right side of the trapezoid (Grade = Grade\_2). 4b could still override this tentative value in grade.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 349

The special cases shown here represent abnormal membership function definitions. The explanations describe how the specific algorithm in the CPU12 resolves these unusual cases. The results are not all intuitively obvious, but rather fall out from the specific algorithm. Remember, these cases should not occur in a normal system.

### 9.4.2.1 Abnormal Membership Function Case 1

This membership function is abnormal because the sloping sides cross below the \$FF cutoff level. The flag\_d12n signal forces the membership function to evaluate to \$00 everywhere except from point\_1 to point\_2. Within this interval, the tentative values for grade\_1 and grade\_2 calculated in cycle 3 fall on the crossed sloping sides. In step 4a, grade gets set to the grade\_2 value, but in 4b this is overridden by the grade\_1 value, which ends up as the result of the MEM instruction. One way to say this is that the result follows the left sloping side until the input passes point\_2, where the result goes to \$00.




Figure 9-6. Abnormal Membership Function Case 1

If point\_1 was to the right of point\_2, flag\_d12n would force the result to be \$00 for all input values. In fact, flag\_d12n always limits the region of interest to the space greater than or equal to point\_1 and less than or equal to point 2.

S12CPUV2 Reference Manual, Rev. 4.0

S12CPUV2 Reference Manual, Rev. 4.0

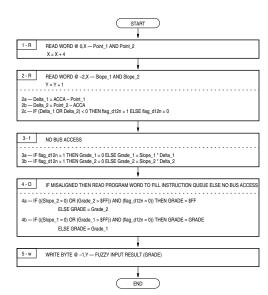


Figure 9-5. MEM Instruction Flow Diagram

In 4b, slope\_1 is zero if the left side of the trapezoid has infinite slope (vertical). If so, the result (grade) should be \$FF at and to the right of point\_1 everywhere within the trapezoid as far as the left side is concerned. The grade\_1 greater than \$FF term corresponds to the input being to the right of where the left sloping side passes the \$FF cutoff level. If either of these conditions is true, the result (grade) is left at the value it got from 4a. The "else" condition in 4b corresponds to the input falling on the sloping portion of the left side of the trapezoid (or possibly outside the trapezoid), so the result is grade equal grade\_1. If the input was outside the trapezoid, flag\_d12n would be one and grade\_1 and grade\_2 would have been forced to \$00 in cycle 3. The else condition of 4b would set the result to \$00.

#### S12CPUV2 Reference Manual, Rev. 4.0

350 Freescale Semiconductor

### 9.4.2.2 Abnormal Membership Function Case 2

Like the previous example, the membership function in case 2 is abnormal because the sloping sides cross below the \$FF cutoff level, but the left sloping side reaches the \$FF cutoff level before the input gets to point .2. In this case, the result follows the left sloping side until it reaches the \$FF cutoff level. At this point, the  $(\text{grade}_{-1} > \text{$FF})$  term of 4b kicks in, making the expression true so grade equals grade (no overwrite). The result from here to point \_2 becomes controlled by the "else" part of 4a  $(\text{grade} = \text{grade}_{-2})$ , and the result follows the right sloping side.




Figure 9-7. Abnormal Membership Function Case 2

### 9.4.2.3 Abnormal Membership Function Case 3

The membership function in case 3 is abnormal because the sloping sides cross below the \$FF cutoff level, and the left sloping side has infinite slope. In this case, 4a is not true, so grade equals grade\_2. 4b is true because slope\_1 is zero, so 4b does not overwrite grade.



Figure 9-8. Abnormal Membership Function Case 3

### 9.5 REV and REVW Instruction Details

This section provides a more detailed explanation of the rule evaluation instructions (REV and REVW). The data structures used to specify rules are somewhat different for the weighted versus unweighted versions of the instruction. One uses 8-bit offsets in the encoded rules, while the other uses full 16-bit addresses. This affects the size of the rule data structure and execution time.

### 9.5.1 Unweighted Rule Evaluation (REV)

This instruction implements basic min-max rule evaluation. CPU registers are used for pointers and intermediate calculation results.

Since the REV instruction is essentially a list-processing instruction, execution time is dependent on the number of elements in the rule list. The REV instruction is interruptible (typically within three bus cycles), so it does not adversely affect worst case interrupt latency. Since all intermediate results and instruction status are held in stacked CPU registers, the interrupt service code can even include independent REV and REVW instructions.

#### 9.5.1.1 Set Up Prior to Executing REV

Some CPU registers and memory locations need to be set up prior to executing the REV instruction. X and Y index registers are used as index pointers to the rule list and the fuzzy inputs and outputs. The A accumulator is used for intermediate calculation results and needs to be set to \$FF initially. The V condition code bit is used as an instruction status indicator to show whether antecedents or consequents are being processed. Initially, the V bit is cleared to zero to indicate antecedents are being processed. The fuzzy outputs (working RAM locations) need to be cleared to \$00. If these values are not initialized before executing the REV instruction, results will be erroneous.

The X index register is set to the address of the first element in the rule list (in the knowledge base). The REV instruction automatically updates this pointer so that the instruction can resume correctly if it is interrupted. After the REV instruction finishes, X will point at the next address past the \$FF separator character that marks the end of the rule list.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 353

### 9.5.1.2 Interrupt Details

The REV instruction includes a 3-cycle processing loop for each byte in the rule list (including antecedents, consequents, and special separator characters). Within this loop, a check is performed to see if any qualified interrupt request is pending. If an interrupt is detected, the current CPU registers are stacked and the interrupt is honored. When the interrupt service routine finishes, an RTI instruction causes the CPU to recover its previous context from the stack, and the REV instruction is resumed as if it had not been interrupted.

The stacked value of the program counter (PC), in case of an interrupted REV instruction, points to the REV instruction rather than the instruction that follows. This causes the CPU to try to execute a new REV instruction upon return from the interrupt. Since the CPU registers (including the V bit in the condition codes register) indicate the current status of the interrupted REV instruction, this effectively causes the rule evaluation operation to resume from where it left off.

### 9.5.1.3 Cycle-by-Cycle Details for REV

The central element of the REV instruction is a 3-cycle loop that is executed once for each byte in the rule list. There is a small amount of housekeeping activity to get this loop started as REV begins and a small sequence to end the instruction. If an interrupt comes, there is a special small sequence to save CPU status on the stack before honoring the requested interrupt.

Figure 9-9 is a REV instruction flow diagram. Each rectangular box represents one CPU clock cycle. Decision blocks and connecting arrows are considered to take no time at all. The letters in the small rectangles in the upper left corner of each bold box correspond to execution cycle codes (refer to Section 6. Instruction Glossary for details). Lower case letters indicate a cycle where 8-bit or no data is transferred. Upper case letters indicate cycles where 16-bit or no data is transferred.

When a value is read from memory, it cannot be used by the CPU until the second cycle after the read takes place. This is due to access and propagation delays.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 355 356 Freescale Semiconductor

The Y index register is set to the base address for the fuzzy inputs and outputs (in working RAM). Each rule antecedent is an unsigned 8-bit offset from this base address to the referenced fuzzy input. Each rule consequent is an unsigned 8-bit offset from this base address to the referenced fuzzy output. The Y index register remains constant throughout execution of the REV instruction.

The 8-bit A accumulator is used to hold intermediate calculation results during execution of the REV instruction. During antecedent processing, A starts out at \$FF and is replaced by any smaller fuzzy input that is referenced by a rule antecedent (MIN). During consequent processing, A holds the truth value for the rule. This truth value is stored to any fuzzy output that is referenced by a rule consequent, unless that fuzzy output is already larger (MAX).

Before starting to execute REV, A must be set to \$FF (the largest 8-bit value) because rule evaluation always starts with processing of the antecedents of the first rule. For subsequent rules in the list, A is automatically set to \$FF when the instruction detects the \$FE marker character between the last consequent of the previous rule and the first antecedent of a new rule.

The instruction LDAA #FF clears the V bit at the same time it initializes A to #FF. This satisfies the REV setup requirement to clear the V bit as well as the requirement to initialize A to #FF. Once the REV instruction starts, the value in the V bit is automatically maintained as #FF separator characters are detected.

The final requirement to clear all fuzzy outputs to \$00 is part of the MAX algorithm. Each time a rule consequent references a fuzzy output, that fuzzy output is compared to the truth value for the current rule. If the current truth value is larger, it is written over the previous value in the fuzzy output. After all rules have been evaluated, the fuzzy output contains the truth value for the most-true rule that referenced that fuzzy output.

After REV finishes, A will hold the truth value for the last rule in the rule list. The V condition code bit should be one because the last element before the \$FF end marker should have been a rule consequent. If V is zero after executing REV, it indicates the rule list was structured incorrectly.

#### S12CPUV2 Reference Manual, Rev. 4.0

354 Freescale Semiconductor

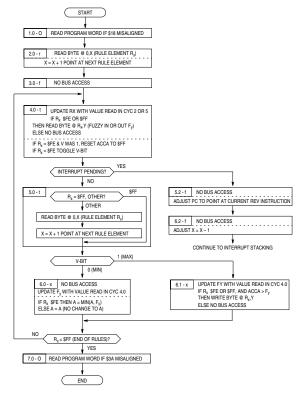


Figure 9-9. REV Instruction Flow Diagram

Since there is more than one flow path through the REV instruction, cycle numbers have a decimal place. This decimal place indicates which of several possible paths is being used. The CPU normally moves forward by one digit at a time within the same flow (flow number is indicated after the decimal point in the cycle number). There are two exceptions possible to this orderly sequence through an instruction. The first is a branch back to an earlier cycle number to form a loop as in 6.0 to 4.0. The second type of sequence change is from one flow to a parallel flow within the same instruction such as 4.0 to 5.2, which occurs if the REV instruction senses an interrupt. In this second type of sequence branch, the whole number advances by one and the flow number changes to a new value (the digit after the decimal point).

In cycle 1.0, the CPU12 does an optional program word access to replace the \$18 prebyte of the REV instruction. Notice that cycle 7.0 is also an O type cycle. One or the other of these will be a program word fetch, while the other will be a free cycle where the CPU does not access the bus. Although the \$18 page prebyte is a required part of the REV instruction, it is treated by the CPU12 as a somewhat separate single cycle instruction.

Rule evaluation begins at cycle 2.0 with a byte read of the first element in the rule list. Usually this would be the first antecedent of the first rule, but the REV instruction can be interrupted, so this could be a read of any byte in the rule list. The X index register is incremented so it points to the next element in the rule list. Cycle 3.0 is needed to satisfy the required delay between a read and when data is valid to the CPU. Some internal CPU housekeeping activity takes place during this cycle, but there is no bus activity. By cycle 4.0, the rule element that was read in cycle 2.0 is available to the CPU.

Cycle 4.0 is the first cycle of the main three cycle rule evaluation loop. Depending upon whether rule antecedents or consequents are being processed, the loop will consist of cycles 4.0, 5.0, 6.0, or the sequence 4.0, 5.0, 6.1. This loop is executed once for every byte in the rule list, including the \$FE separators and the \$FF end-of-rules marker.

At each cycle 4.0, a fuzzy input or fuzzy output is read, except during the loop passes associated with the \$FE and \$FF marker bytes, where no bus access takes place during cycle 4.0. The read access uses the Y index register as the base address and the previously read rule byte  $(R_{\chi})$  as an unsigned offset from Y. The fuzzy input or output value read here will be used during the next cycle 6.0 or 6.1. Besides being used as the offset from Y for this read, the previously read R<sub>x</sub> is checked to see if it is a separator character (\$FE). If Rx was \$FE and the V bit was one, this indicates a switch

#### S12CPUV2 Reference Manual, Rev. 4.0

357 Freescale Semiconductor

### 9.5.2 Weighted Rule Evaluation (REVW)

This instruction implements a weighted variation of min-max rule evaluation. The weighting factors are stored in a table with one 8-bit entry per rule. The weight is used to multiply the truth value of the rule (minimum of all antecedents) by a value from zero to one to get the weighted result. This weighted result is then applied to the consequents, just as it would be for unweighted rule evaluation.

Since the REVW instruction is essentially a list-processing instruction, execution time is dependent on the number of rules and the number of elements in the rule list. The REVW instruction is interruptible (typically within three to five bus cycles), so it does not adversely affect worst case interrupt latency. Since all intermediate results and instruction status are held in stacked CPU registers, the interrupt service code can even include independent REV and REVW instructions.

The rule structure is different for REVW than for REV. For REVW, the rule list is made up of 16-bit elements rather than 8-bit elements. Each antecedent is represented by the full 16-bit address of the corresponding fuzzy input. Each rule consequent is represented by the full address of the corresponding fuzzy output.

The markers separating antecedents from consequents are the reserved 16-bit value \$FFFE, and the end of the last rule is marked by the reserved 16-bit value \$FFFF. Since \$FFFE and \$FFFF correspond to the addresses of the reset vector, there would never be a fuzzy input or output at either of

### 9.5.2.1 Set Up Prior to Executing REVW

Some CPU registers and memory locations need to be set up prior to executing the REVW instruction. X and Y index registers are used as index pointers to the rule list and the list of rule weights. The A accumulator is used for intermediate calculation results and needs to be set to \$FF initially. The V condition code bit is used as an instruction status indicator that shows whether antecedents or consequents are being processed. Initially the  $\ensuremath{\text{V}}$  bit is cleared to zero to indicate antecedents are being processed. The C condition code bit is used to indicate whether rule weights are to be used (1) or not (0). The fuzzy outputs (working RAM locations) need to be cleared to \$00. If these values are not initialized before executing the REVW instruction, results will be erroneous

The X index register is set to the address of the first element in the rule list (in the knowledge base). The REVW instruction automatically updates this

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 360 Freescale Semiconductor

from processing consequents of one rule to starting to process antecedents of the next rule. At this transition, the A accumulator is initialized to \$FF to prepare for the min operation to find the smallest fuzzy input. Also, if Rx is \$FE, the V bit is toggled to indicate the change from antecedents to consequents, or consequents to antecedents.

During cycle 5.0, a new rule byte is read unless this is the last loop pass, and R<sub>v</sub> is \$FF (marking the end of the rule list). This new rule byte will not be used until cycle 4.0 of the next pass through the loop.

Between cycle 5.0 and 6.x, the V-bit is used to decide which of two paths to take. If V is zero, antecedents are being processed and the CPU progresses to cycle 6.0. If V is one, consequents are being processed and the CPU goes to cycle 6.1.

During cycle 6.0, the current value in the A accumulator is compared to the fuzzy input that was read in the previous cycle 4.0, and the lower value is placed in the A accumulator (min operation). If Rx is \$FE, this is the transition between rule antecedents and rule consequents, and this min operation is skipped (although the cycle is still used). No bus access takes place during cycle 6.0 but cycle 6.x is considered an x type cycle because it could be a byte write (cycle 6.1) or a free cycle (cycle 6.0 or 6.1 with Rx = \$FE or \$FF).

If an interrupt arrives while the REV instruction is executing, REV can break between cycles 4.0 and 5.0 in an orderly fashion so that the rule evaluation operation can resume after the interrupt has been serviced. Cycles 5.2 and 6.2 are needed to adjust the PC and X index register so the REV operation can recover after the interrupt. PC is adjusted backward in cycle 5.2 so it points to the currently running REV instruction. After the interrupt, rule evaluation will resume, but the values that were stored on the stack for index registers, accumulator A, and CCR will cause the operation to pick up where it left off. In cycle 6.2, the X index register is adjusted backward by one because the last rule byte needs to be re-fetched when the REV instruction resumes.

After cycle 6.2, the REV instruction is finished, and execution would continue to the normal interrupt processing flow.

#### S12CPUV2 Reference Manual, Rev. 4.0

358 Freescale Semiconductor

> pointer so that the instruction can resume correctly if it is interrupted. After the REVW instruction finishes. X will point at the next address past the \$FFFF separator word that marks the end of the rule list.

The Y index register is set to the starting address of the list of rule weights. Each rule weight is an 8-bit value. The weighted result is the truncated upper eight bits of the 16-bit result, which is derived by multiplying the minimum rule antecedent value (\$00-\$FF) by the weight plus one (\$001-\$100). This method of weighting rules allows an 8-bit weighting factor to represent a value between zero and one inclusive

The 8-bit A accumulator is used to hold intermediate calculation results during execution of the REVW instruction. During antecedent processing, A starts out at \$FF and is replaced by any smaller fuzzy input that is referenced by a rule antecedent. If rule weights are enabled by the C condition code bit equal one, the rule truth value is multiplied by the rule weight just before consequent processing starts. During consequent processing, A holds the truth value (possibly weighted) for the rule. This truth value is stored to any fuzzy output that is referenced by a rule consequent, unless that fuzzy output is already larger (MAX).

Before starting to execute REVW, A must be set to \$FF (the largest 8-bit value) because rule evaluation always starts with processing of the antecedents of the first rule. For subsequent rules in the list, A is automatically set to \$FF when the instruction detects the \$FFFE marker word between the last consequent of the previous rule, and the first antecedent of a new rule.

Both the C and V condition code bits must be set up prior to starting a REVW instruction. Once the REVW instruction starts, the C bit remains constant and the value in the V bit is automatically maintained as \$FFFE separator

The final requirement to clear all fuzzy outputs to \$00 is part of the MAX algorithm. Each time a rule consequent references a fuzzy output, that fuzzy output is compared to the truth value (weighted) for the current rule. If the current truth value is larger, it is written over the previous value in the fuzzy output. After all rules have been evaluated, the fuzzy output contains the truth value for the most-true rule that referenced that fuzzy output.

After REVW finishes, A will hold the truth value (weighted) for the last rule in the rule list. The V condition code bit should be one because the last element before the \$FFFF end marker should have been a rule consequent. If V is zero after executing REVW, it indicates the rule list was structured

incorrectly.

#### 9.5.2.2 Interrupt Details

The REVW instruction includes a 3-cycle processing loop for each word in the rule list (this loop expands to five cycles between antecedents and consequents to allow time for the multiplication with the rule weight). Within this loop, a check is performed to see if any qualified interrupt request is pending. If an interrupt is detected, the current CPU registers are stacked and the interrupt is honored. When the interrupt service routine finishes, an RTI instruction causes the CPU to recover its previous context from the stack, and the REVW instruction is resumed as if it had not been interrupted.

The stacked value of the program counter (PC), in case of an interrupted REVW instruction, points to the REVW instruction rather than the instruction that follows. This causes the CPU to try to execute a new REVW instruction upon return from the interrupt. Since the CPU registers (including the C bit and V bit in the condition codes register) indicate the current status of the interrupted REVW instruction, this effectively causes the rule evaluation operation to resume from where it left off.

### 9.5.2.3 Cycle-by-Cycle Details for REVW

The central element of the REVW instruction is a 3-cycle loop that is executed once for each word in the rule list. For the special case pass (where the \$FFFE separator word is read between the rule antecedents and the rule consequents, and weights are enabled by the C bit equal one), this loop takes five cycles. There is a small amount of housekeeping activity to get this loop started as REVW begins and a small sequence to end the instruction. If an interrupt comes, there is a special small sequence to save CPU status on the stack before the interrupt is serviced.

Figure 9-10 is a detailed flow diagram for the REVW instruction. Each rectangular box represents one CPU clock cycle. Decision blocks and connecting arrows are considered to take no time at all. The letters in the small rectangles in the upper left corner of each bold box correspond to the execution cycle codes (refer to Section 6. Instruction Glossary for details). Lower case letters indicate a cycle where 8-bit or no data is transferred. Upper case letters indicate cycles where 16-bit data could be transferred.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 36

In cycle 2.0, the first element of the rule list (a 16-bit address) is read from memory. Due to propagation delays, this value cannot be used for calculations until two cycles later (cycle 4.0). The X index register, which is used to access information from the rule list, is incremented by two to point at the next element of the rule list.

The operations performed in cycle 4.0 depend on the value of the word read from the rule list. \$FFFE is a special token that indicates a transition from antecedents to consequents or from consequents to antecedents of a new rule. The V bit can be used to decide which transition is taking place, and V is toggled each time the \$FFFE token is detected. If V was zero, a change from antecedents to consequents is taking place, and it is time to apply weighting (provided it is enabled by the C bit equal one). The address in TMP2 (derived from Y) is used to read the weight byte from memory. In this case, there is no bus access in cycle 5.0, but the index into the rule list is updated to point to the next rule element.

The old value of X ( $X_0$ ) is temporarily held on internal nodes, so it can be used to access a rule word in cycle 7.2. The read of the rule word is timed to start two cycles before it will be used in cycle 4.0 of the next loop pass. The actual multiply takes place in cycles 6.2 through 8.2. The 8-bit weight from memory is incremented (possibly overflowing to \$100) before the multiply, and the upper eight bits of the 16-bit internal result is used as the weighted result. By using weight+1, the result can range from 0.0 times A to 1.0 times A. After 8.2, flow continues to the next loop pass at cycle 4.0.

At cycle 4.0, if  $R_x$  is \$FFFE and V was one, a change from consequents to antecedents of a new rule is taking place, so accumulator A must be reinitialized to \$FF. During processing of rule antecedents, A is updated with the smaller of A, or the current fuzzy input (cycle 6.0). Cycle 5.0 is usually used to read the next rule word and update the pointer in X. This read is skipped if the current  $R_x$  is \$FFFF (end of rules mark). If this is a weight multiply pass, the read is delayed until cycle 7.2. During processing of consequents, cycle 6.1 is used to optionally update a fuzzy output if the value in accumulator A is larger.

After all rules have been processed, cycle 7.0 is used to update the PC to point at the next instruction. If weights were enabled, Y is updated to point at the location that immediately follows the last rule weight.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 363 364 Freescale Semiconductor

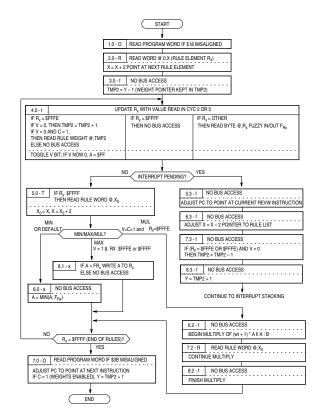


Figure 9-10. REVW Instruction Flow Diagram

S12CPUV2 Reference Manual, Rev. 4.0

362 Freescale Semiconductor

### 9.6 WAV Instruction Details

The WAV instruction performs weighted average calculations used in defuzzification. The pseudo-instruction wavr is used to resume an interrupted weighted average operation. WAV calculates the numerator and denominator sums using:

System Output 
$$= \frac{\sum_{i=1}^{n} S_i}{\sum_{i=1}^{n} I}$$

Where n is the number of labels of a system output,  $S_i$  are the singleton positions from the knowledge base, and  $F_i$  are fuzzy outputs from RAM.  $S_i$  and  $F_i$  are 8-bit values. The 8-bit B accumulator holds the iteration count n. Internal temporary registers hold intermediate sums, 24 bits for the numerator and 16 bits for the denominator. This makes this instruction suitable for n values up to 255 although eight is a more typical value. The final long division is performed with a separate EDIV instruction immediately after the WAV instruction. The WAV instruction returns the numerator and denominator sums in the correct registers for the EDIV. (EDIV performs the unsigned division Y = Y : D / X; remainder in D.)

Execution time for this instruction depends on the number of iterations (labels for the system output). WAV is interruptible so that worst case interrupt latency is not affected by the execution time for the complete weighted average operation. WAV includes initialization for the 24-bit and 16-bit partial sums so the first entry into WAV looks different than a resume from interrupt operation. The CPU12 handles this difficulty with a pseudo-instruction (wavr), which is specifically intended to resume an interrupted weighted average calculation. Refer to 9.6.3 Cycle-by-Cycle Details for WAV and wavr for more detail.

### 9.6.1 Set Up Prior to Executing WAV

Before executing the WAV instruction, index registers X and Y and accumulator B must be set up. Index register X is a pointer to the  $S_i$  singleton list. X must have the address of the first singleton value in the knowledge base. Index register Y is a pointer to the fuzzy outputs  $F_i$ . Y must have the address of the first fuzzy output for this system output. B is the iteration count n. The B accumulator must be set to the number of labels for this system output.

#### 9.6.2 WAV Interrupt Details

The WAV instruction includes a 7-cycle processing loop for each label of the system output (8 cycles in M68HC12). Within this loop, the CPU checks whether a qualified interrupt request is pending. If an interrupt is detected, the current values of the internal temporary registers for the 24-bit and 16-bit sums are stacked, the CPU registers are stacked, and the interrupt is serviced.

A special processing sequence is executed when an interrupt is detected during a weighted average calculation. This exit sequence adjusts the PC so that it points to the second byte of the WAV object code (\$3C), before the PC is stacked. Upon return from the interrupt, the \$3C value is interpreted as a wavr pseudo-instruction. The wavr pseudo-instruction causes the CPU to execute a special WAV resumption sequence. The wavr recovery sequence adjusts the PC so that it looks like it did during execution of the original WAV instruction, then jumps back into the WAV processing loop. If another interrupt occurs before the weighted average calculation finishes, the PC is adjusted again as it was for the first interrupt. WAV can be interrupted any number of times, and additional WAV instructions can be executed while a WAV instruction is interrupted.

#### 9.6.3 Cycle-by-Cycle Details for WAV and wavr

The WAV instruction is unusual in that the logic flow has two separate entry points. The first entry point is the normal start of a WAV instruction. The second entry point is used to resume the weighted average operation after a WAV instruction has been interrupted. This recovery operation is called the wavr pseudo-instruction.

Figure 9-12 is a flow diagram of the WAV instruction in the HCS12, including the wavr pseudo-instruction. Figure 9-12 is a flow diagram of the WAV instruction in the M68HC12, including the wavr pseudo-instruction. Each rectangular box in these figures represents one CPU clock cycle. Decision blocks and connecting arrows are considered to take no time at all. The letters in the small rectangles in the upper left corner of the boxes correspond to execution cycle codes (refer to Section 6. Instruction Glossary for details). Lower case letters indicate a cycle where 8-bit or no data is transferred. Upper case letters indicate cycles where 16-bit data could be transferred.

The cycle-by-cycle description provided here refers to the HCS12 flow in Figure 9-11. In terms of cycle-by-cycle bus activity, the \$18 page select

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 365

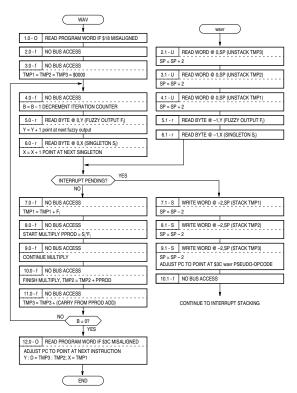


Figure 9-12. WAV and wavr Instruction Flow Diagram (for M68HC12)

S12CPUV2 Reference Manual, Rev. 4.0

S12CPUV2 Reference Manual, Rev. 4.0

prebyte is treated as a special 1-byte instruction. In cycle 1.0 of the WAV instruction, one word of program information will be fetched into the instruction queue if the \$18 is located at an odd address. If the \$18 is at an even address, the instruction queue cannot advance so there is no bus access in this cycle.

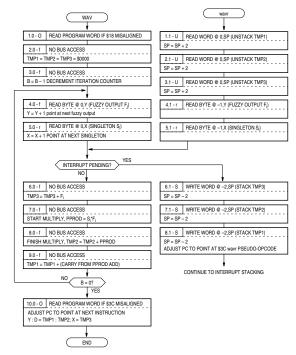


Figure 9-11. WAV and wavr Instruction Flow Diagram (for HCS12)

S12CPUV2 Reference Manual, Rev. 4.0

366 Freescale Semiconductor

In cycle 2.0, three internal 16-bit temporary registers are cleared in preparation for summation operations, but there is no bus access. The WAV instruction maintains a 32-bit sum-of-products in TMP1: TMP2 and a 16-bit sum-of-weights in TMP3. By keeping these sums inside the CPU, bus accesses are reduced and the WAV operation is optimized for high speed.

Cycles 3.0 through 9.0 form the 7-cycle main loop for WAV. The value in the 8-bit B accumulator is used to count the number of loop iterations. B is decremented at the top of the loop in cycle 3.0, and the test for zero is located at the bottom of the loop after cycle 9.0. Cycle 4.0 and 5.0 are used to fetch the 8-bit operands for one iteration of the loop. X and Y index registers are used to access these operands. The index registers are incremented as the operands are fetched. Cycle 6.0 is used to accumulate the current fuzzy output into TMP3. Cycles 7.0 through 9.0 are used to perform the eight by eight multiply of  $F_i$  times  $S_i$ , and accumulate this result into TMP1: TMP2. Even though the sum-of-products will not exceed 24 bits, the sum is maintained in the 32-bit combined TMP1: TMP2 register because it is easier to use existing 16-bit operations than it would be to create a new smaller operation to handle the high order bits of this sum.

Since the weighted average operation could be quite long, it is made to be interruptible. The usual longest latency path is from very early in cycle 6.0, through cycle 9.0, to the top of the loop to cycle 3.0, through cycle 5.0 to the interrupt check.

If the WAV instruction is interrupted, the internal temporary registers TMP3, TMP2, and TMP1 need to be stored on the stack so the operation can be resumed. Since the WAV instruction included initialization in cycle 2.0, the recovery path after an interrupt needs to be different. The wavr pseudo-instruction has the same opcode as WAV, but it is on the first page of the opcode map so there is no page prebyte (\$18) like there is for WAV. When WAV is interrupted, the PC is adjusted to point at the second byte of the WAV object code, so that it will be interpreted as the wavr pseudo-instruction on return from the interrupt, rather than the WAV instruction. During the recovery sequence, the PC is readjusted in case another interrupt comes before the weighted average operation finishes.

The resume sequence includes recovery of the temporary registers from the stack (1.1 through 3.1), and reads to get the operands for the current iteration. The normal WAV flow is then rejoined at cycle 6.0.

Upon normal completion of the instruction (cycle 10.0), the PC is adjusted so it points to the next instruction. The results are transferred from the TMP registers into CPU registers in such a way that the EDIV instruction can be

used to divide the sum-of-products by the sum-of-weights. TMP1 : TMP2 is transferred into Y:D and TMP3 is transferred into X.

### 9.7 Custom Fuzzy Logic Programming

The basic fuzzy logic inference techniques described earlier are suitable for a broad range of applications, but some systems may require customization. The built-in fuzzy instructions use 8-bit resolution and some systems may require finer resolution. The rule evaluation instructions only support variations of MIN-MAX rule evaluation and other methods have been discussed in fuzzy logic literature. The weighted average of singletons is not the only defuzzification technique. The CPU12 has several instructions and addressing modes that can be helpful when developing custom fuzzy logic systems.

### 9.7.1 Fuzzification Variations

The MEM instruction supports trapezoidal membership functions and several other varieties, including membership functions with vertical sides (infinite slope sides). Triangular membership functions are a subset of trapezoidal functions. Some practitioners refer to s-, z-, and  $\pi$ -shaped membership functions. These refer to a trapezoid butted against the right end of the x-axis, a trapezoid butted against the left end of the x-axis, and a trapezoidal membership function that isn't butted against either end of the x-axis, respectively. Many other membership function shapes are possible, if memory space and processing bandwidth are sufficient.

Tabular membership functions offer complete flexibility in shape and very fast evaluation time. However, tables take a very large amount of memory space (as many as 256 bytes per label of one system input). The excessive size to specify tabular membership functions makes them impractical for most microcontroller-based fuzzy systems. The CPU12 instruction set includes two instructions (TBL and ETBL) for lookup and interpolation of compressed tables.

The TBL instruction uses 8-bit table entries (y-values) and returns an 8-bit result. The ETBL instruction uses 16-bit table entries (y-values) and returns a 16-bit result. A flexible indexed addressing mode is used to identify the effective address of the data point at the beginning of the line segment, and the data value for the end point of the line segment is the next consecutive memory location (byte for TBL and word for ETBL). In both cases, the B

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 369

BEGIN FIND_LOOP	LDY CMPA	#TABLE_START-2 2,+Y	;setup initial table pointer ;find first Xn > XL ;(auto pre-inc Y by 2)
* on fall	thru, XB@- TFR CLRA LDAB SUBB EXG SUBA	D, X -2, Y	<pre>;save XL in high half of X ;zero upper half of D ;D = 0:XE ;D = 0:(XE-XB) ;X = (XE-XB) D = XL:junk ;A = (XL-XB)</pre>
NO_ROUND	EXG FDIV EXG EXG TSTA BPL INCB LDAA PSHA LDAA PSHA TBL	A,D D,X A,B NO_ROUND 1,Y -1,Y 2,SP+	;D = 0:(XL-XB), uses trick of EXG; X reg = (XL-XB)/(XE-XB); move fractional result to A:B; byte swap - need result in B; check for rounding; round B up by 1; YE; put on stack for TBL later; YB; mow YB@O,SP and YE@1,SP; interpolate and deallocate; stack temps

Figure 9-13. Endpoint Table Handling

The basic idea is to find the segment of interest, temporarily build a 1-segment table of the correct format on the stack, then use TBL with stack relative indexed addressing to interpolate. The most difficult part of the routine is calculating the proportional distance from the beginning of the segment to the lookup point versus the width of the segment ((XL-XB)/(XE-XB)). With this type of table, this calculation must be done at run time. In the previous type of table, this proportional term is an inherent part (the lowest order bits) of the data input to the table.

Some fuzzy theorists have suggested membership functions should be shaped like normal distribution curves or other mathematical functions. This may be correct, but the processing requirements to solve for an intercept on such a function would be unacceptable for most microcontroller-based fuzzy systems. Such a function could be encoded into a table of one of the previously described types.

For many common systems, the thing that is most important about membership function shape is that there is a gradual transition from non-membership to membership as the system input value approaches the central range of the membership function.

Examine the human problem of stopping a car at an intersection. Rules such as "If intersection is close and speed is fast, apply brakes" might be used.

S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor 371 372 Freescale Semiconductor

accumulator represents the ratio of (the x-distance from the beginning of the line segment to the lookup point) to (the x-distance from the beginning of the line segment to the end of the line segment). B is treated as an 8-bit binary fraction with radix point left of the MSB, so each line segment can effectively be divided into 256 pieces. During execution of the TBL or ETBL instruction, the difference between the end point y-value and the beginning point y-value (a signed byte-TBL or word-ETBL) is multiplied by the B accumulator to get an intermediate delta-y term. The result is the y-value of the beginning point, plus this signed intermediate delta-y value.

Because indexed addressing mode is used to identify the starting point of the line segment of interest, there is a great deal of flexibility in constructing tables. A common method is to break the x-axis range into 256 equal width segments and store the y value for each of the resulting 257 endpoints. The 16-bit D accumulator is then used as the x input to the table. The upper eight bits (A) is used as a coarse lookup to find the line segment of interest, and the lower eight bits (B) is used to interpolate within this line segment.

In the program sequence

LDX #TBL\_START
LDD DATA\_IN
TBL A,X

The notation A,X causes the TBL instruction to use the A<sup>th</sup> line segment in the table. The low-order half of D (B) is used by TBL to calculate the exact data value from this line segment. This type of table uses only 257 entries to approximate a table with 16 bits of resolution. This type of table has the disadvantage of equal width line segments, which means just as many points are needed to describe a flat portion of the desired function as are needed for the most active portions.

Another type of table stores x:y coordinate pairs for the endpoints of each linear segment. This type of table may reduce the table storage space compared to the previous fixed-width segments because flat areas of the functions can be specified with a single pair of endpoints. This type of table is a little harder to use with the CPU12 TBL and ETBL instructions because the table instructions expect y-values for segment endpoints to be in consecutive memory locations.

Consider a table made up of an arbitrary number of x:y coordinate pairs, where all values are eight bits. The table is entered with the x-coordinate of the desired point to lookup in the A accumulator. When the table is exited, the corresponding y-value is in the A accumulator. Figure 9-13 shows one way to work with this type of table.

#### S12CPUV2 Reference Manual. Rev. 4.0

370 Freescale Semiconductor

The meaning (reflected in membership function shape and position) of the labels "close" and "fast" will be different for a teenager than they are for a grandmother, but both can accomplish the goal of stopping. It makes intuitive sense that the exact shape of a membership function is much less important than the fact that it has gradual boundaries.

### 9.7.2 Rule Evaluation Variations

The REV and REVW instructions expect fuzzy input and fuzzy output values to be 8-bit values. In a custom fuzzy inference program, higher resolution may be desirable (although this is not a common requirement). The CPU12 includes variations of minimum and maximum operations that work with the fuzzy MIN-MAX inference algorithm. The problem with the fuzzy inference algorithm is that the min and max operations need to store their results differently, so the min and max instructions must work differently or more than one variation of these instructions is needed.

The CPU12 has MIN and MAX instructions for 8- or 16-bit operands, where one operand is in an accumulator and the other is a referenced memory location. There are separate variations that replace the accumulator or the memory location with the result. While processing rule antecedents in a fuzzy inference program, a reference value must be compared to each of the referenced fuzzy inputs, and the smallest input must end up in an accumulator. The instruction

```
EMIND 2,X+ ;process one rule antecedent
```

automates the central operations needed to process rule antecedents. The E stands for extended, so this instruction compares 16-bit operands. The D at the end of the mnemonic stands for the D accumulator, which is both the first operand for the comparison and the destination of the result. The 2,X+ is an indexed addressing specification that says X points to the second operand for the comparison and it will be post-incremented by 2 to point at the next rule antecedent

When processing rule consequents, the operand in the accumulator must remain constant (in case there is more than one consequent in the rule), and the result of the comparison must replace the referenced fuzzy output in RAM. To do this, use the instruction

```
EMAXM 2,X+ ;process one rule consequent
```

The M at the end of the mnemonic indicates that the result will replace the referenced memory operand. Again, indexed addressing is used. These two

instructions would form the working part of a 16-bit resolution fuzzy inference routine.

There are many other methods of performing inference, but none of these are as widely used as the min-max method. Since the CPU12 is a general-purpose microcontroller, the programmer has complete freedom to program any algorithm desired. A custom programmed algorithm would typically take more code space and execution time than a routine that used the built-in REV or REVW instructions.

### 9.7.3 Defuzzification Variations

Other CPU12 instructions can help with custom defuzzification routines in two main areas:

- The first case is working with operands that are more than eight bits.
- The second case involves using an entirely different approach than weighted average of singletons.

The primary part of the WAV instruction is a multiply and accumulate operation to get the numerator for the weighted average calculation. When working with operands as large as 16 bits, the EMACS instruction could at least be used to automate the multiply and accumulate function. The CPU12 has extended math capabilities, including the EMACS instruction which uses 16-bit input operands and accumulates the sum to a 32-bit memory location and 32-bit by 16-bit divide instructions.

One benefit of the WAV instruction is that both a sum of products and a sum of weights are maintained, while the fuzzy output operand is only accessed from memory once. Since memory access time is such a significant part of execution time, this provides a speed advantage compared to conventional instructions.

The weighted average of singletons is the most commonly used technique in microcontrollers because it is computationally less difficult than most other methods. The simplest method is called max defuzzification, which simply uses the largest fuzzy output as the system result. However, this approach does not take into account any other fuzzy outputs, even when they are almost as true as the chosen max output. Max defuzzification is not a good general choice because it only works for a subset of fuzzy logic applications.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 37

### Reference Manual — S12CPUV2

## Appendix A. Instruction Reference

STOP DISABLE (IGNORE STOP OPCODES)
RESET DEFAULT IS 1

### A.1 Introduction

This appendix provides quick references for the instruction set, opcode map, and encoding.

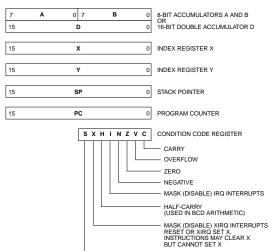


Figure A-1. Programming Model


S12CPUV2 Reference Manual, Rev. 4.0

The CPU12 is well suited for more computationally challenging algorithms than weighted average. A 32-bit by 16-bit divide instruction takes 11 or 12 25-MHz cycles for unsigned or signed variations. A 16-bit by 16-bit multiply with a 32-bit result takes only three 25-MHz cycles. The EMACS instruction uses 16-bit operands and accumulates the result in a 32-bit memory location, taking only 12 25-MHz cycles per iteration, including accessing all operands from memory and storing the result to memory.

#### S12CPUV2 Reference Manual, Rev. 4.0

374 Freescale Semiconductor

### A.2 Stack and Memory Layout

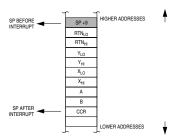

STACK UPON ENTRY TO SERVICE ROUTINE

IF S	IF SP WAS ODD BEFORE INTERRUPT					
SP +8	RTN <sub>LO</sub>		SP +9			
SP +6	Y <sub>LO</sub>	RTN <sub>HI</sub>	SP +7			
SP +4	SP +5					
SP +2	SP +3					
SP	CCR	В	SP +1			
SP -2	SP -2					

STACK UPON ENTRY TO SERVICE ROUTINE

	ii di iii de eterraei dite iii enimori.						
SP +9			SP +10				
SP +7	RTN <sub>HI</sub>	RTN <sub>LO</sub>	SP +8				
SP +5	Y <sub>HI</sub>	Y <sub>LO</sub>	SP +6				
SP +4	X <sub>HI</sub>	X <sub>LO</sub>	SP +4				
SP +1	В	Α	SP +2				
SP -1		CCR	SP				

### A.3 Interrupt Vector Locations

\$FFFE, \$FFFF	Power-On (POR) or External Reset
\$FFFC, \$FFFD	Clock Monitor Reset
\$FFFA, \$FFFB	Computer Operating Properly (COP Watchdog Reset
\$FFF8, \$FFF9	Unimplemented Opcode Trap
\$FFF6, \$FFF7	Software Interrupt Instruction (SWI)
\$FFF4, \$FFF5	XIRQ
\$FFF2, \$FFF3	IRQ
\$FFC0-\$FFF1 (M68HC12)	Device-Specific Interrupt Sources
\$FF00-\$FFF1 (HCS12)	Device-Specific Interrupt Sources

#### A.4 Notation Used in Instruction Set Summary

```
CPU Register Notation
                                                                                           Index Register Y — Y or y
Stack Pointer — SP, sp, or s
Program Counter — PC, pc, or p
                          Accumulator A — A or a
                         Accumulator B — B or b
Accumulator D — D or d
                          Index Register X — X or x
                                                                                            Condition Code Register — CCR or c
Explanation of Italic Expressions in Source Form Column
       abc — A or B or CCR
abcdxys — A or B or CCR or D or X or Y or SP. Some assemblers also allow T2 or T3.
               abd — A or B or D
          abdxys — A or B or D or X or Y or SP
              dxys — D or X or Y or SP
             msk8 — 8-bit mask, some assemblers require # symbol before value
             opr8i - 8-bit immediate value
            opr16i — 16-bit immediate value
opr8a — 8-bit address used with direct address mode opr16a — 16-bit address value

oprx0_xysp — Indexed addressing postbyte code:
oprx3_xysp — Indexed addressing postbyte code:
oprx3_xysp — Persincement X or Y or SP by 1 . . . 8
oprx3_xysp — Postdecrement X or Y or SP by 1 . . . 8
oprx3_xysp — Postdecrement X or Y or SP by 1 . . . 8
oprx5_xysp — St-bit constant offset from X or Y or SP or PC
abdx_xysp — Accumulator A or B or D offset from X or Y or SP or PC
oprx3 — Any positive integer 1 . . . 8 for pre/post increment/decrement
oprx5 — Any integer in the range −16 . . . +15
oprx16 — Any integer in the range −256 . . . . 4255
oprx16 — Any integer in the range −32,768 . . . 65,535
page — 8-bit value for PPAGE, some assemblers require # symbol before this value rall8 — Label of branch destination within −128 to +127 locations
           opr8a - 8-bit address used with direct address mode
               rel8 — Label of branch destination within –128 to +127 locations rel9 — Label of branch destination within –256 to +255 locations
       rel16 — Any label within 64K memory space trapnum — Any 8-bit integer in the range $30-$39 or $40-$FF
                xvs — X or Y or SP
               xysp — X or Y or SP or PC
Operators
   + — Addition

    Subtraction

    Logical AND
```

Continued on next page

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 377

```
qq — High-order byte of a 16-bit relative offset for long branches.
tn — Trap number $30-$39 or $40-$FF.
         Signed relative offset $80 (–128) to $7F (+127).
Offset relative to the byte following the relative offset byte, or
          low-order byte of a 16-bit relative offset for long branches
         Indexed addressing post-byte. See Table A-3 on page 397 and Table A-4 on page 398.
```

f - Free cycle, CPU doesn't use bus

+ - Logical OR (inclusive)

Each code letter except (,), and comma equals one CPU cycle. Uppercase = 16-bit operation and lowercase = 8-bit operation. For complex sequences see the CPU12 Reference Manual (CPU12RM/AD) for more detailed information.

```
{\it g}\, — Read PPAGE internally

    Read indirect pointer (indexed indirect)
    Read indirect PPAGE value (CALL indirect only)

 n — Write PPAGE internally

    O — Optional program word fetch (P) if instruction is misaligned and has an odd number of bytes of object code — otherwise, appears as a free cycle (f); Page 2 prebyte treated as a separate 1-byte instruction
 P — Program word fetch (always an aligned-word read)
 r — 8-bit data read
  R — 16-bit data read

 8-hit stack write

 s - 16-bit stack write
  w - 8-bit data write
 W - 16-bit data write
 u - 8-bit stack read
 U — 16-bit stack read

 16-bit vector fetch (always an aligned-word read)

 t — 8-bit conditional read (or free cycle)
 т — 16-bit conditional read (or free cycle)
 x - 8-bit conditional write (or free cycle)
() — Indicate a microcode loop
    - Indicates where an interrupt could be honored
```

Special Cases

S12CPUV2 Reference Manual, Rev. 4.0

 ${\tt PPP/P}\,$  — Short branch, PPP if branch taken, P if not OPPP/OPO - Long branch, OPPP if branch taken, OPO if not

Freescale Semiconductor

#### Operators (continued)

⊕ — Logical exclusive OR

× — Multiplication

+ — Division

M - Negation. One's complement (invert each bit of M) Concatenate

Example: A : B means the 16-bit value formed by concatenating 8-bit accumulator A with 8-bit accumulator B.
A is in the high-order position

Transfer

Example: (A) ⇒ M means the content of accumulator A is transferred to memory location M.

Exchange Example:  $D \Leftrightarrow X$  means exchange the contents of D with those of X.

### Address Mode Notation

INH — Inherent; no operands in object code IMM — Immediate; operand in object code

DIR — Direct; operand is the lower byte of an address from \$0000 to \$00FF

EXT — Operand is a 16-bit address

REL — Two's complement relative offset; for branch instructions

IDX — Indexed (no extension bytes); includes: 5-bit constant offset from X, Y, SP, or PC

Pre/post increment/decrement by 1 . . . 8
Accumulator A, B, or D offset

IDX1 — 9-bit signed offset from X, Y, SP, or PC; 1 extension byte

IDX2 — 16-bit signed offset from X, Y, SP, or PC; 2 extension bytes [IDX2] — Indexed-indirect; 16-bit offset from X, Y, SP, or PC
[D, IDX] — Indexed-indirect; accumulator D offset from X, Y, SP, or PC

#### Machine Coding

dd — 8-bit direct address \$0000 to \$00FF. (High byte assumed to be \$00).

ee - High-order byte of a 16-bit constant offset for indexed addressing.

eb — Exchange/Transfer post-byte. See Table A-5 on page 399.

ff — Low-order eight bits of a 9-bit signed constant offset for indexed addressing, or low-order byte of a 16-bit constant offset for indexed addressing.

hh - High-order byte of a 16-bit extended address.

ii — 8-bit immediate data value.

jj — High-order byte of a 16-bit immediate data value.

kk — Low-order byte of a 16-bit immediate data value.

1b — Loop primitive (DBNE) post-byte. See Table A-6 on page 400.

11 — Low-order byte of a 16-bit extended address.

8-bit immediate mask value for bit manipulation instructions. mm — Set bits indicate bits to be affected

pg — Program page (bank) number used in CALL instruction.

#### S12CPUV2 Reference Manual, Rev. 4.0

378 Freescale Semiconductor

### Condition Codes Columns

Status bit not affected by operation.
 Status bit cleared by operation.

Status bit set by operation.

Status bit affected by operation.
Status bit may be cleared or remain set, but is not set by operation.

Status bit may be set or remain cleared, but is not cleared by operation. Status bit may be changed by operation but the final state is not defined.

Status bit used for a special purpose.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Table A-1. Instruction Set Summary (Sheet 1 of 14)

ABA  AAA AAA (A)+(B)=A  AAA AAA AAAA AAAA AAAA AAAA								
ABX	Source Form	Operation					ѕхні	NZVC
### ABY ### Translates to LEAN BX ### Trans	ABA	(A) + (B) ⇒ A Add Accumulators A and B	INH	18 06	00	00	Δ-	ΔΔΔΔ
Translates to LEAV By   Tr	ABX	(B) + (X) ⇒ X Translates to LEAX B,X	IDX	1A E5	Pf	pp <sup>1</sup>		
## ADCA opinish ## ADCA opini	ABY		IDX	19 ED	Pf	pp <sup>1</sup>		
AGOS gorde Add with Carry to B  AGOS gorde	ADCA opr8a ADCA opr16a ADCA oprx0_xysp ADCA oprx9_xysp ADCA oprx16_xysp ADCA [D_xysp]	(A) + (M) + C $\Rightarrow$ A Add with Carry to A	DIR EXT IDX IDX1 IDX2 [D,IDX]	99 dd 89 hh 11 A9 xb A9 xb ff A9 xb ee ff A9 xb ee ff	rPf rPO rPf rPO frPP fIfrPf	rfp rop rfp rpo frpp flfrfp	Δ-	ΔΔΔΔ
ADDA opride ADDA	ADCB opr8a ADCB opr16a ADCB opr30_xysp ADCB opr30_xysp ADCB opr316_xysp ADCB (D_xysp)	(B) + (M) + C ⇒ B Add with Carry to B	DIR EXT IDX IDX1 IDX2 [D,IDX]	D9 dd F9 hh 11 E9 xb E9 xb ff E9 xb ee ff E9 xb	rPf rPO rPf rPO frPP fIfrPf	rfP rOP rfP rPO frPP fIfrfP	Δ-	ΔΔΔΔ
ADDB opride   Add without Carry to B	ADDA opr8a ADDA opr16a ADDA oprx9_xysp ADDA oprx9_xysp ADDA oprx16_xysp ADDA (D_xysp)		DIR EXT IDX IDX1 IDX2 [D,IDX]	9B dd BB hh 11 AB xb AB xb ff AB xb ee ff AB xb ee ff	rPf rPO rPf rPO frPP fIfrPf	rfp rop rfp rpo frpp flfrfp	Δ-	ΔΔΔΔ
ADOD gorfel   Adol 16-8h to D (A.B)   DiR   D3 ddd   mpt   mpt   mpt     ADOD gorfel   ADOD gorfel   DiR   D3 ddd   mpt   mpt     ADOD gorfel   DiR   D3 ddd   mpt   mpt     ADOD gorfel   Mpt   D2   Mpt     ADOD gorfel   D2   Mpt   D2   Mpt     ADOD gorfel   Mpt   Mpt     ADOD gorfel   Mpt     ADOD g	ADDB opr8a ADDB opr16a ADDB oprx0_xysp ADDB oprx9_xysp ADDB oprx16_xysp ADDB (D_xysp)	(B) + (M) ⇒ B Add without Carry to B	DIR EXT IDX IDX1 IDX2 [D,IDX]	DB dd FB hh 11 EB xb EB xb ff EB xb ee ff EB xb ee ff	rPf rPO rPf rPO frPP fIfrPf	rfp rop rfp rpo frpp flfrfp	Δ-	ΔΔΔΔ
ANDA gorde	ADDD opr8a ADDD opr16a ADDD opr00_xysp ADDD opr30_xysp ADDD opr316_xysp ADDD [D_xysp]	(A:B) + M&M+1) ⇒ A:B Add 16-Bit to D (A:B)	DIR EXT IDX IDX1 IDX2 [D,IDX]	D3 dd F3 hh 11 E3 xb E3 xb ff E3 xb ee ff E3 xb ee ff	RPf RPO RPf RPO fRPP fifRPf	RfP ROP RfP RPO fRPP flfRfP		ΔΔΔΔ
ANDB opinish	ANDA opr8a ANDA opr16a ANDA oprx9, xysp ANDA oprx9, xysp ANDA oprx16, xysp ANDA (D, xysp)		DIR EXT IDX IDX1 IDX2 [D,IDX]	94 dd B4 hh 11 A4 xb A4 xb ff A4 xb ee ff A4 xb ee ff	rPf rPO rPf rPO frPP fIfrPf	rfP rOP rfP rPO frPP fIfrfP		ΔΔ0-
Logical AND CCR with Memory	ANDB opr8a ANDB opr16a ANDB oprx9_xysp ANDB oprx9_xysp ANDB oprx16_xysp ANDB (D,xysp)		DIR EXT IDX IDX1 IDX2 [D,IDX]	D4 dd F4 hh 11 E4 xb E4 xb ff E4 xb ee ff E4 xb ee ff	rPf rPO rPf rPO frPP fIfrPf	rfp rop rfp rpo frpp flfrfp		ΔΔ0-
Note 1. Due to internal CPU requirements, the program word fetch is performed twice to the same address during this instruction.		Logical AND CCR with Memory			P	Р	nnn	TTT T

Note 1. Due to internal CPU requirements, the program word fetch is performed twice to the same address during this instruction

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 3

Table A-1. Instruction Set Summary (Sheet 3 of 14)

	Table A-1. Instruction Se					
Source Form	Operation	Addr. Mode	Machine Coding (hex)	Access Detail HCS12 M68HC12	SXHI	NZVC
BLS rel8	Branch if Lower or Same (if C + Z = 1) (unsigned)	REL	23 rr	PPP/P <sup>1</sup> PPP/P <sup>1</sup>		
BLT rel8	Branch if Less Than (if N ⊕ V = 1) (signed)	REL	2D rr	PPP/P <sup>1</sup> PPP/P <sup>1</sup>		
BMI rei8	Branch if Minus (if N = 1)	REL	2B rr	PPP/P <sup>1</sup> PPP/P <sup>1</sup>		
BNE rel8	Branch if Not Equal (if Z = 0)	REL	26 rr	PPP/P <sup>1</sup> PPP/P <sup>1</sup>		
BPL rel8	Branch if Plus (if N = 0)	REL	2A rr	PPP/P <sup>1</sup> PPP/P <sup>1</sup>		
BRA rel8	Branch Always (if 1 = 1)	REL	20 rr	PPP PPP		
BRCLR opråa, mskå, relå BRCLR opr16a, mskå, relå BRCLR oprå0_xysp, mskå, relå BRCLR oprå9.xysp, mskå, relå BRCLR oprå16,xysp, mskå, relå	Branch if (M) • (mm) = 0 (if All Selected Bit(s) Clear)	DIR EXT IDX IDX1 IDX2	4F dd mm rr 1F hh 11 mm rr 0F xb mm rr 0F xb ff mm rr 0F xb ee ff mm rr	rPPP         rPPP           rfppp         rfppp           rPPP         rPPP           rfppp         rffppp           prfppp         frpfppp		
BRN rel8	Branch Never (if 1 = 0)	REL	21 rr	P P		
BRSET opr8, msk8, rei8 BRSET opr16a, msk8, rei8 BRSET oprx0_xysp, msk8, rei8 BRSET oprx9,xysp, msk8, rei8 BRSET oprx16,xysp, msk8, rei8	Branch if (M) ◆ (mm) = 0 (if All Selected Bit(s) Set)	DIR EXT IDX IDX1 IDX2	4E dd mm rr 1E hh 11 mm rr 0E xb mm rr 0E xb ff mm rr 0E xb ee ff mm rr	rppp         rppp           rfppp         rfppp           rppp         rppp           rfppp         rffppp           prfppp         frpfppp		
BSET opr8, msk8 BSET opr16a, msk8 BSET oprx0_xysp, msk8 BSET oprx9_xysp, msk8 BSET oprx16,xysp, msk8	(M) + (mm) ⇒ M Set Bit(s) in Memory	DIR EXT IDX IDX1 IDX2	4C dd mm 1C hh 11 mm 0C xb mm 0C xb ff mm 0C xb ee ff mm	rPwO         rPow           rPwP         rPrw           rPw         rPow           rPwP         rPow           frPwPO         frPwOP		ΔΔ0-
BSR rel8	(SP) – 2 ⇒ SP; RTN <sub>H</sub> ;RTN <sub>L</sub> ⇒ M <sub>(SP)</sub> :M <sub>(SP+1)</sub> Subroutine address ⇒ PC Branch to Subroutine	REL	07 rr	SPPP PPPS		
BVC rel8	Branch if Overflow Bit Clear (if V = 0)	REL	28 rr	PPP/P <sup>1</sup> PPP/P <sup>1</sup>		
BVS rel8	Branch if Overflow Bit Set (if V = 1)	REL	29 rr	PPP/P <sup>1</sup> PPP/P <sup>1</sup>		
CALL opr16a, page CALL opr26, ysp, page CALL opr26, ysp, page CALL opr216, xysp, page CALL opr216, xysp, page CALL [D,xys] CALL [Opr216, xysp]	[SP] – 2 SP, RTN <sub>A</sub> RTN <sub>A</sub> = M <sub>607</sub> M <sub>(SP-1)</sub> [SP] – 1 SP, (PG) = M <sub>607</sub> , (PG) = M <sub>607</sub> , pg pg = PPAGE register, Program address ⇒ PC Call subroutine in extended memory (Program may be coated on another expansion memory page). Indirect modes get program address and new gry valle based on pointer.	EXT IDX IDX1 IDX2 [D,IDX] [IDX2]	4A hh 11 pg 4B xb pg 4B xb ff pg 4B xb ee ff pg 4B xb 4B xb ee ff	gnsaPPP gnfsaPPP gnsaPPP gnfsaPPP gnsaPPP gnfsaPPP fgnsaPPP ffgnsaPPP flignsaPPP flignsaPPP flignsaPPP		
CBA	(A) – (B) Compare 8-Bit Accumulators	INH	18 17	00 00		ΔΔΔΔ
CLC	0 ⇒ C Translates to ANDCC #\$FE	IMM	10 FE	P P		0
CLI	0 ⇒ I Translates to ANDCC #\$EF (enables I-bit interrupts)	IMM	10 EF	P P	0	
CLR opr16a CLR oprx0_xysp CLR oprx6_xysp CLR oprx16_xysp CLR [D_xysp] CLR [D_xysp] CLR [D_xYsp] CLRA CLRA	0 ⇒ M Clear Memory Location  0 ⇒ A Clear Accumulator A  0 ⇒ B Clear Accumulator B	EXT IDX IDX1 IDX2 [D,IDX] [IDX2] INH INH	79 hh 11 69 xb 69 xb ff 69 xb ee ff 69 xb ee ff 87 C7	PWO WOP PW PWO PWO PWO PWP PUFF PUFF PUFF PUFF O O O O		0100
CLV	0 ⇒ V Translates to ANDCC #\$FD	IMM	10 FD	P P		0-
	uction takes three cycles to refill the instruction queue if the bra					
CMPA #opr8i CMPA opr8a CMPA opr16a CMPA opr16a CMPA oprx0, xysp CMPA oprx16, xysp CMPA oprx16, xysp CMPA [D, xysp] CMPA [D, xysp] CMPA [D, xysp]	(A) – (M) Compare Accumulator A with Memory	IMM DIR EXT IDX IDX1 IDX2 [D,IDX] IIDX2	81 ii 91 dd B1 hh 11 A1 xb A1 xb ff A1 xb ee ff A1 xb ee ff A1 xb ee ff	P		ΔΔΔΔ

### S12CPUV2 Reference Manual, Rev. 4.0

### Table A-1. Instruction Set Summary (Sheet 2 of 14)

	Table A-1. Instruction	oet ou	illiliai y (Olic	2 0	· · <del>-</del> /		
Source Form	Operation	Addr. Mode	Machine Coding (hex)	HCS12	Access Detail M68HC12	ѕхні	NZVC
ASL opr16a ASL oprx0_xysp ASL oprx9_xysp ASL oprx16_xysp ASL [D_xysp] ASL [oprx16_xysp] ASLASLA ASLA	C b7 b7 b0 b0 Arithmetic Shift Left Accumulator A Arithmetic Shift Left Accumulator B	EXT IDX IDX1 IDX2 [D,IDX] [IDX2] INH INH	78 hh 11 68 xb 68 xb ff 68 xb ee ff 68 xb ee ff 68 xb ee ff 48 58	rPwO rPw rPwO frPwP fIfrPw fIPrPw O O	rOPw rPw rPow frPbw fifrPw fiprPw O		ΔΔΔΔ
ASLD	C b7 A b0 b7 B b0 Arithmetic Shift Left Double	INH	59	0	0		ΔΔΔΔ
ASR opr16a ASR opn0_xysp ASR opnx9_xysp ASR opnx16xysp ASR [D.xysp] ASR [opnx16.xysp] ASR ASRA ASRA	Arithmetic Shift Right Accumulator A Arithmetic Shift Right Accumulator A Arithmetic Shift Right Accumulator B	EXT IDX IDX1 IDX2 [D,IDX] [IDX2] INH INH	77 hh 11 67 xb 67 xb ff 67 xb ee ff 67 xb ee ff 67 xb ee ff 47 57	rPwO rPw rPwO frPwP fIfrPw fIPrPw O	rOPw rPw rPOw frPPw fifrPw fIPrPw O		ΔΔΔΔ
BCC rel8	Branch if Carry Clear (if C = 0)	REL	24 rr	PPP/P <sup>1</sup>	PPP/P <sup>1</sup>		
BCLR opr8a, msk8 BCLR opr16a, msk8 BCLR oprx0_xysp, msk8 BCLR oprx9,xysp, msk8 BCLR oprx16,xysp, msk8	(M) • (mm) ⇒ M Clear Bit(s) in Memory	DIR EXT IDX IDX1 IDX2	4D dd mm 1D hh 11 mm 0D xb mm 0D xb ff mm 0D xb ee ff mm	rPwO rPwP rPwO rPwP frPwPO	rPOw rPPw rPOw rPwP frPwOP		ΔΔ0-
BCS rel8	Branch if Carry Set (if C = 1)	REL	25 rr	PPP/P <sup>1</sup>	PPP/P <sup>1</sup>		
BEQ rel8	Branch if Equal (if Z = 1)	REL	27 rr	PPP/P <sup>1</sup>	PPP/P <sup>1</sup>		
BGE rel8	Branch if Greater Than or Equal (if N ⊕ V = 0) (signed)  Place CPU in Background Mode	REL	2C rr	PPP/P <sup>1</sup>	PPP/P <sup>1</sup> V£PPP		
BOIND	see CPU12 Reference Manual	INFI	00	VIPPP	VIPPP		
BGT rel8	Branch if Greater Than (if $Z + (N \oplus V) = 0$ ) (signed)	REL	2E rr	PPP/P <sup>1</sup>	ppp/p1		
BHI rel8	Branch if Higher (if C + Z = 0) (unsigned)	REL	22 rr	PPP/P1	PPP/P <sup>1</sup>		
BHS rel8	Branch if Higher or Same (if C = 0) (unsigned) same function as BCC	REL	24 rr	PPP/P <sup>1</sup>	PPP/P <sup>1</sup>		
BITA #opr8i BITA opr8a BITA opr8a BITA opr16a BITA opr0_xysp BITA opn0_xysp BITA opnx16_xysp BITA (pnx16_xysp BITA [D,xysp] BITA [D,xysp]	(A) = (A) Logical AND A with Memory Logical AND A with Memory Does not change Accumulator or Memory	IMM DIR EXT IDX IDX1 IDX2 [D,IDX] [IDX2]	85 ii 95 dd 85 hh 11 A5 xb A5 xb ff A5 xb ee ff A5 xb ee ff	P rPf rPO rPf rPO frPP fIfrPf fIPrPf	p rfp rOP rfp rPO frPP fIfrfp fIPrfP		ΔΔ0-
BITB #cpr8i BITB apr8a BITB apr16a BITB apr16a BITB apr02_xysp BITB apr02_xysp BITB apr02_xysp BITB apr02_xysp BITB [D,xysp] BITB [D,xysp]	(B) • (M) D with Memory Logical AND B with Memory Does not change Accumulator or Memory	IMM DIR EXT IDX IDX1 IDX2 [D,IDX] [IDX2]	C5 ii D5 dd P5 hh 11 E5 xb E5 xb ff E5 xb ee ff E5 xb E5 xb ee ff	P rPf rPO rPf rPO frPP fIfrPf fIPrPf	p rfp rop rfp rPo frpp fifrfp fIPrfp		ΔΔ0-
BLE rel8	Branch if Less Than or Equal (if $Z + (N \oplus V) = 1$ ) (signed)	REL	2F rr	PPP/P <sup>1</sup>	PPP/P <sup>1</sup>		
BLO rel8	Branch if Lower (if C = 1) (unsigned) same function as BCS	REL	25 rr	PPP/P <sup>1</sup>	PPP/P <sup>1</sup>		
N	retriction takes three quales to refill the instruction quous if the					_	_

Note 1. PPP/P indicates this instruction takes three cycles to refill the instruction queue if the branch is taken and one program fetch cycle if the branch is not taken.

### S12CPUV2 Reference Manual, Rev. 4.0

382 Freescale Semiconductor

### Table A-1. Instruction Set Summary (Sheet 4 of 14)

Source Form	Operation	Addr. Mode	Machine Coding (hex)	Access De HCS12	etail M68HC12	SXHI	NZV
CMPB #opr8i CMPB opr8a CMPB opr16a CMPB oprx0 xysp CMPB oprx9, xysp CMPB oprx9, xysp CMPB oprx16, xysp CMPB [Oprx16, xysp CMPB [Oprx16, xysp]	(B) – (M) Compare Accumulator B with Memory	IMM DIR EXT IDX IDX1 IDX2 [D,IDX] [IDX2]	C1 ii D1 dd F1 hh 11 E1 xb E1 xb ff E1 xb ee ff E1 xb E1 xb ee ff	P rPf rPO rPf rPO frpp fifrpf fiprpf	p rfP rOP rfP rPO frPP fIfrfP		ΔΔΔ
COM opr16a COM opr02,xysp COM opr02,xysp COM oprx16,xysp COM [D,xysp] COM [D,xysp] COM (oprx16,xysp) COMA COMB	(M) ⇒ M equivalent to SFF − (M) ⇒ M 1's Complement Memory Location  (Ā) ⇒ A Complement Accumulator A (B) ⇒ B Complement Accumulator B	EXT IDX IDX1 IDX2 [D,IDX] [IDX2] INH INH	71 hh 11 61 xb 61 xb ff 61 xb ee ff 61 xb ee ff 61 xb ee ff 41 51	rPwO rPw rPwO frPwP fIfrPw fIPrPw O O	rOPw rPw rPOw frPPw fifrPw fIPrPw O O		ΔΔ0
CPD #opr16i CPD opr8a CPD opr16a CPD opr16a CPD opr0, xysp CPD opr0, xysp CPD opr0, xysp CPD opr16, xysp CPD (D, xysp) CPD [0, xysp] CPD [0, xysp]	(A:B) = (MM+1) Compare D to Memory (16-Bit)	IMM DIR EXT IDX IDX1 IDX2 [D,IDX] [IDX2]	8C jj kk 9C dd BC hh 11 AC xb AC xb ff AC xb ee ff AC xb	PO RPf RPO RPf RPO fRPP fifRPf fiPRPf	OP RfP ROP RfP RPO fRPP fifRfP		ΔΔΔ
CPS #opr16i CPS opr8a CPS opr16a CPS opr16a CPS opr0, xysp CPS opr16, xysp CPS opr16, xysp CPS [0, xysp] CPS [0, xysp] CPS [0, xysp]	(SP) – 0.4.0.4-1) Compare SP to Memory (16-Bit)	IMM DIR EXT IDX IDX1 IDX2 [D,IDX] [IDX2]	8F jj kk 9F dd BF hh 11 AF xb AF xb ff AF xb ee ff AF xb ee ff	PO RPf RPO RPf RPO fRPP fifRPf fipRPf	OP RfP ROP RfP RPO fRPP fifRfP		ΔΔΔ
CPX #opr16i CPX opr8a CPX opr16a CPX opr0.2 ysp CPX opr0.2 ysp CPX opr16.xysp CPX opr16.xysp CPX [D,xysp] CPX [D,xysp] CPX [D,xysp]	(X) — (MtM+1) Compare X to Memory (16-Bit)	IMM DIR EXT IDX IDX1 IDX2 [D,IDX] [IDX2]	8E jj kk 9E dd BE hh 11 AE xb AE xb ff AE xb ee ff AE xb ee ff	PO RPf RPO RPf RPO fRPP fifRPf fipRPf	OP RfP ROP RfP RPO fRPP fIfRfP		ΔΔΔ
CPY #opr16i CPY opr8a CPY opr16a CPY opr16a CPY opr0, xysp CPY opr0, xysp CPY oprx16, xysp CPY [D, xysp] CPY [D, xysp] CPY [O, xysp] CPY [O, xysp]	(Y)(MAM+1) Compare Y to Memory (16-Bit)	IMM DIR EXT IDX IDX1 IDX2 [D,IDX] [IDX2]	8D jj kk 9D dd BD hh 11 AD xb AD xb ff AD xb ee ff AD xb	PO RPf RPO RPf RPO fRPP fifRPf fiPRPf	OP RfP ROP RfP RPO fRPP fifRfP		ΔΔΔ
DAA	Adjust Sum to BCD Decimal Adjust Accumulator A	INH	18 07	Of0	ofo		ΔΔ?.
DBEQ abdxys, rel9	(cntr) – 1 == cntr if (cntr) = 0, then Branch else Continue to next instruction Decrement Counter and Branch if = 0 (cntr = A, B, D, X, Y, or SP)	REL (9-bit)	04 lb rr	PPP (branch) PPO (no branch)	PPP		
DBNE abdxys, rel9	(ontr) $-1 \Rightarrow$ ontr if (ontr) not $= 0$ , then Branch; else Confinue to next instruction Decrement Counter and Branch if $\neq 0$ (ontr = A, B, D, X, Y, or SP)	REL (9-bit)	04 lb rr	PPP (branch) PPO (no branch)	PPP		

Table A-1. Instruction Set Summary (Sheet 5 of 14)

Source Form	Operation	Addr.	Machine	Acces	s Detail	SYHI	NZVC
Source Form	Operation	Mode	Coding (hex)	HCS12	M68HC12	3 7 111	11210
DEC opr16a	(M) - \$01 ⇒ M	EXT	73 hh 11	rPw0	rOPw		ΔΔΔ-
DEC oprx0_xysp	Decrement Memory Location	IDX	63 xb	rPw	rPw		
DEC oprx9,xysp		IDX1	63 xb ff	rPwO	rPOw		
DEC oprx16,xysp		IDX2	63 xb ee ff	frPwP	frPPw		
DEC [D,xysp]		[D,IDX]	63 xb	fIfrPw fTPrPw	fIfrPw		
DEC [oprx16,xysp]	(A) – \$01 ⇒ A Decrement A	[IDX2]	63 xb ee ff 43		fIPrPw		
DECA DECB	(A) – \$01 ⇒ A Decrement A (B) – \$01 ⇒ B Decrement B	INH	53	0	0		
DES	(SP) – \$0001 ⇒ SP Translates to LEAS –1.SP	IDX	1B 9F	Pf	PP <sup>1</sup>		
DEX	(X) - \$0001 ⇒ X	INH	09	0	0		- A
DEY	Decrement Index Register X (Y) – \$0001 ⇒ Y	INH	03	0	0		- A
	Decrement Index Register Y		**				-Δ
EDIV	(Y:D) + (X) ⇒ Y Remainder ⇒ D 32 by 16 Bit ⇒ 16 Bit Divide (unsigned)	INH	11	ffffffffff	ffffffffff		ΔΔΔΔ
EDIVS	(Y:D) + (X) ⇒ Y Remainder ⇒ D 32 by 16 Bit ⇒ 16 Bit Divide (signed)	INH	18 14	offffffffffo	Offffffffff		ΔΔΔΔ
EMACS opr16a <sup>2</sup>	$(M_{(X)}:M_{(X+1)}) \times (M_{(Y)}:M_{(Y+1)}) + (M-M+3) \Rightarrow M-M+3$	Special	18 12 hh 11	ORROfffRRfWWP	ORROfffRRfWWP		ΔΔΔΔ
	16 by 16 Bit ⇒ 32 Bit						
	Multiply and Accumulate (signed)						
EMAXD oprx0_xysp	$MAX((D), (M:M+1)) \Rightarrow D$	IDX	18 1A xb	ORPf	ORfP		ΔΔΔΔ
EMAXD oprx9,xysp	MAX of 2 Unsigned 16-Bit Values	IDX1	18 1A xb ff	ORPO	ORPO		
EMAXD oprx16,xysp		IDX2	18 1A xb ee ff	OfRPP	OfRPP		
EMAXD [D,xysp]	N, Z, V and C status bits reflect result of	[D,IDX]	18 1A xb	OfIfRPf	OfIfRfP		
EMAXD [oprx16,xysp]	internal compare ((D) – (M:M+1))	[IDX2]	18 1A xb ee ff	OfIPRPf	OfIPRfP		
EMAXM oprx0_xysp	$MAX((D), (M:M+1)) \Rightarrow M:M+1$	IDX	18 1E xb	ORPW	ORPW		ΔΔΔΔ
EMAXM oprx9,xysp	MAX of 2 Unsigned 16-Bit Values	IDX1	18 1E xb ff	ORPWO	ORPWO		
EMAXM oprx16,xysp	N 7 V and C status hits reflect result of	IDX2	18 1E xb ee ff	OfRPWP OfTfRPW	OfRPWP		
EMAXM [D,xysp]	internal compare ((D) – (M:M+1))	[D,IDX] [IDX2]	18 1E xb 18 1E xb ee ff	OfITRPW	OfIfRPW OfIPRPW		
EMAXM [oprx16,xysp]							
EMIND oprx0_xysp	$MIN((D), (M:M+1)) \Rightarrow D$	IDX	18 1B xb	ORPf	ORfP		ΔΔΔΔ
EMIND oprx9,xysp	MIN of 2 Unsigned 16-Bit Values	IDX1	18 1B xb ff	ORPO	ORPO		
EMIND oprx16,xysp	N Z V and C status hits reflect result of	IDX2	18 1B xb ee ff	OfRPP	OfRPP OfIfRfP		
EMIND [D,xysp] EMIND [oprx16,xysp]	internal compare ((D) – (M:M+1))	[D,IDX] [IDX2]	18 1B xb 18 1B xb ee ff	OfIFRPf	OfITRIP		
				1	-		
EMINM oprx0_xysp	$MIN((D), (M:M+1)) \Rightarrow M:M+1$	IDX	18 1F xb	ORPW	ORPW		ΔΔΔΔ
EMINM oprx9,xysp	MIN of 2 Unsigned 16-Bit Values	IDX1	18 1F xb ff	ORPWO OfRPWP	ORPWO OfRPWP		
EMINM oprx16,xysp EMINM [D,xysp]	N 7 V and C status hits reflect result of	IDX2 ID.IDX1	18 1F xb ee ff	OIRPWP	OffRPW		
EMINM [oprx16,xysp]	internal compare ((D) – (M:M+1))	IIDX21	18 1F xb ee ff	OfIPRPW	OfIPRPW		
EMUL	(D) × (Y) ⇒ Y:D 16 by 16 Bit Multiply (unsigned)	INH	13	ffo	ffo		ΔΔ-Δ
EMULS	(D)×(Y) ⇒ Y:D	INH	18 13	ofo	OfO		ΔΔ-Δ
	16 by 16 Bit Multiply (signed)				age 2 instruction)		
				offo	ofo		
EORA #opr8i	$(A) \oplus (M) \Rightarrow A$	IMM	88 ii	P	P		ΔΔ0-
EORA opr8a	Exclusive-OR A with Memory	DIR	98 dd	rPf	rfP	l	1
EORA opr16a		EXT	B8 hh 11	rPO	rOP	l	
EORA oprx0_xysp		IDX	A8 xb	rPf	rfP	l	
EORA oprx9,xysp EORA oprx16,xysp	1	IDX1 IDX2	A8 xb ff A8 xb ee ff	rPO frpp	rPO frPP	1	1
EORA (D,xysp)		IDX2	A8 xb ee ff A8 xb	fIfrPf	fIfrfP	l	
EORA [opix16,xysp]		[IDX2]	A8 xb ee ff	fIPrPf	fIfrfP		

1. Due to internal CPU requirements, the program word fetch is performed twice to the same address during this instruction.

	dress specification. Both X and Y point to source operands.	40010000	aring and monocour.			
	$(B) \oplus (M) \Rightarrow B$	IMM	C8 ii	P	P	 ΔΔ0-
EORB opr8a	Exclusive-OR B with Memory		D8 dd	rPf	rfP	
EORB opr16a		EXT	F8 hh 11	rPO	rOP	
EORB oprx0_xysp			E8 xb	rPf	rfP	
EORB oprx9,xysp		IDX1	E8 xb ff	rPO	rPO	
EORB oprx16,xysp		IDX2	E8 xb ee ff	frPP	frPP	
EORB [D,xysp]			E8 xb	fIfrPf	fIfrfP	
EORB [oprx16,xysp]		[IDX2]	E8 xb ee ff	fIPrPf	fIPrfP	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 385

Table A-1. Instruction Set Summary (Sheet 7 of 14)

		T		Acces	s Detail		
Source Form	Operation	Addr. Mode	Machine Coding (hex)	HCS12	M68HC12	SXHI	NZVC
LBGT rel16	Long Branch if Greater Than (if $Z + (N \oplus V) = 0$ ) (signed)	REL	18 2E qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBHI rel16	Long Branch if Higher (if C + Z = 0) (unsigned)	REL	18 22 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBHS rel16	Long Branch if Higher or Same (if C = 0) (unsigned) same function as LBCC	REL	18 24 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBLE rel16	Long Branch if Less Than or Equal (if Z + (N ⊕ V) = 1) (signed)	REL	18 2F qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBLO rel16	Long Branch if Lower (if C = 1) (unsigned) same function as LBCS	REL	18 25 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBLS rel16	Long Branch if Lower or Same (if C + Z = 1) (unsigned)	REL	18 23 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO1		
LBLT rel16	Long Branch if Less Than (if N ⊕ V = 1) (signed)	REL	18 2D qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO1		
LBMI rel16	Long Branch if Minus (if N = 1)	REL	18 2B gg rr	OPPP/OPO <sup>1</sup>	OPPP/OPO1		
LBNE rel16	Long Branch if Not Equal (if Z = 0)	REL	18 26 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO1		
LBPL rel16	Long Branch if Plus (if N = 0)	REL	18 2A qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBRA rel16	Long Branch Always (if 1=1)	REL	18 20 qq rr	OPPP	OPPP		
LBRN rel16	Long Branch Never (if 1 = 0)	REL	18 21 qq rr	OPO	OPO		
LBVC rel16	Long Branch if Overflow Bit Clear (if V=0)	REL	18 28 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBVS rel16	Long Branch if Overflow Bit Set (if V = 1)	REL	18 29 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LDAA #opr8i	(M) ⇒ A	IMM	86 ii	P P	OFFF/OFO P		ΔΔ0-
LDAA opr8a	Load Accumulator A	DIR	96 dd	rPf	rfP		
LDAA opr16a LDAA oprx0_xysp		EXT IDX	B6 hh 11	rPO rPf	rOP rfP		
LDAA oprx9,xysp		IDX1	A6 xb A6 xb ff	rPO	rPO		
LDAA oprx16,xysp		IDX2	A6 xb ee ff	frPP	frPP		
LDAA [D,xysp]		[D,IDX]	A6 xb	fIfrPf	fIfrfP		
LDAA [oprx16,xysp]		[IDX2]	A6 xb ee ff				
LDAB #opr8i LDAB opr8a	(M) ⇒ B Load Accumulator B	IMM DIR	C6 ii D6 dd	P rPf	P rfP		ΔΔ0-
LDAB opr16a	Edad Accumulator B	EXT	F6 hh 11	rPO	rOP		
LDAB oprx0_xysp		IDX	E6 xb	rPf	rfP		
LDAB oprx9,xysp		IDX1	E6 xb ff	rPO	rPO		
LDAB oprx16,xysp LDAB ID.xvspl		IDX2 ID.IDX1	E6 xb ee ff E6 xb	frPP fIfrPf	frPP fIfrfP		
LDAB [oprx16,xysp]		[IDX2]	E6 xb ee ff	fIPrPf	fIPrfP		
LDD #oor16i	(M:M±1) ⇒ A:B	IMM	CC jj kk	PO	OP		ΔΔ0-
LDD opr8a	Load Double Accumulator D (A:B)	DIR	DC dd	RPf	RfP		
LDD opr16a LDD oprx0 xvsp		EXT IDX	FC hh 11 EC xb	RPO RPf	ROP		
LDD oprx9,xysp		IDX1	EC xb ff	RPO	RPO		
LDD oprx16,xysp		IDX2	EC xb ee ff	fRPP	fRPP		
LDD [D,xysp]		[D,IDX]	EC xb	fifRPf	fifRfP		
LDD [oprx16,xysp]		[IDX2]	EC xb ee ff	fIPRPf	fIPRfP		
	this instruction takes four cycles to refill the instruction qu					_	
LDS #opr16i LDS opr8a	(M:M+1) ⇒ SP Load Stack Pointer	IMM DIB	CF jj kk DF dd	PO RPf	OP RfP		ΔΔ0-
LDS opr16a	COMO CAMON PORTIER	EXT	FF hh 11	RPO	ROP		1
LDS oprx0_xysp		IDX	EF xb	RPf	RfP		
LDS oprx9,xysp		IDX1	EF xb ff EF xb ee ff	RPO fRPP	RPO fRPP		1
LDS oprx16,xysp LDS [D,xysp]		IDX2	EF xb ee ii	fIfRPf	fIfRFP		
LDS [aprx16,xysp]		[IDX2]	EF xb ee ff	fipppf	fipRfp		
LDX #opr16i	(M:M+1) ⇒ X	IMM	CE jj kk	PO	OP		ΔΔ0-
LDX opr8a	Load Index Register X	DIR	DE dd	RPf	RfP		l í
LDX opr16a		EXT	FE hh 11	RPO	ROP		
LDX oprx0_xysp LDX oprx9.xvsp		IDX IDX1	EE xb EE xb ff	RPf RPO	RfP RPO		
LDX oprx16,xysp		IDX1	EE xb ee ff	fRPP	fRPP		1
LDX [D,xysp]		[D,IDX]	EE xb	fIfRPf	fIfRfP		
LDX [aprx16,xysp]		(IDX2)	EE xb ee ff	fIPRPf	fiprfp		1

### S12CPUV2 Reference Manual, Rev. 4.0

### Table A-1. Instruction Set Summary (Sheet 6 of 14)

		Addr.	Machine	Acces	s Detail		
Source Form	Operation	Mode	Coding (hex)	HCS12	M68HC12	SXHI	NZV
ETBL oprx0_xysp	(M:M+1)+ [(B)×((M+2:M+3) – (M:M+1))] ⇒ D 16-Bit Table Lookup and Interpolate	IDX	18 3F xb	ORRffffffp	ORRffffff		ΔΔ-
						C Bit is u	 Indofin
	Initialize B, and index before ETBL.						IC12
	<ea> points at first table entry (M:M+1) and B is fractional part of lookup value</ea>						ĺ
	(no indirect addr. modes or extensions allowed)						
EXG abodxys,abodxys	(r1) ⇔ (r2) (if r1 and r2 same size) or	INH	B7 eb	P	p		
End accompagned by	$\$00:(r1) \Rightarrow r2 \text{ (if } r1=8-\text{bit; } r2=16-\text{bit) } or \\ (r1_{low}) \Leftrightarrow (r2) \text{ (if } r1=16-\text{bit; } r2=8-\text{bit)}$		27 42				
	r1 and r2 may be A, B, CCR, D, X, Y, or SP						
FDIV	(D) + (X) ⇒ X; Remainder ⇒ D 16 by 16 Bit Fractional Divide	INH	18 11	offffffffffo	offffffffffo		- Δ Δ
IBEQ abdxys, rel9	(cntr) + 1⇒ cntr	REL	04 lb rr	PPP (branch)	PPP		
• •	If (cntr) = 0, then Branch else Continue to next instruction	(9-bit)		PPO (no			
	eise Constitution next instruction			branch)			
	Increment Counter and Branch if = 0 (cntr = A. B. D. X. Y. or SP)						
IBNE abdxys, rel9	(cntr) + 1⇒ cntr	REL	04 lb rr	PPP (branch)	ppp		
•	if (cntr) not = 0, then Branch;	(9-bit)		PPO (no			
	else Continue to next instruction			branch)			
	Increment Counter and Branch if ≠ 0 (cntr = A. B. D. X. Y. or SP)						
IDIV	$(D) + (X) \Rightarrow X$ ; Remainder $\Rightarrow D$	INH	18 10	offffffffff	offffffffff		-Δ0
IDIV	(D) + (X) ⇒ X; Hemainder ⇒ D 16 by 16 Bit Integer Divide (unsigned)	INH	18 10	01111111110	01111111110		-Δ1
IDIVS	(D) + (X) ⇒ X; Remainder ⇒ D 16 by 16 Bit Integer Divide (signed)	INH	18 15	offffffffffo	offfffffffo		ΔΔ
INC opr16a	(M) + S01 ⇒ M	EXT	72 hh 11	rPw0	rOPw		ΔΔ
INC aprx0_xysp	Increment Memory Byte	IDX	62 xb	rPw	rPw		
INC oprx9,xysp INC oprx16,xysp		IDX1 IDX2	62 xb ff 62 xb ee ff	rPw0 frPwP	rPOw frPPw		
INC (D,xysp)		[D,IDX]	62 xb ee rr	fIfrPw	fIfrPW		
INC [aprx16,xysp]		[IDX2]	62 xb ee ff	fIPrPw	fIPrPw		
INCA	(A) + \$01 ⇒ A Increment Acc. A	INH	42	0	0		
INCB INS	(B) + \$01 ⇒ B Increment Acc. B		52	-			
INS	(SP) + \$0001 ⇒ SP Translates to LEAS 1,SP	IDX	1B 81	Pf	PP <sup>1</sup>		
INX	(X) + \$0001 ⇒ X Increment Index Register X	INH	08	0	0		- A
INY	(Y) + \$0001 ⇒ Y	INH	02	0	0		- A
	Increment Index Register Y						-
JMP opr16a	Routine address ⇒ PC	EXT	06 hh 11	PPP	PPP		
JMP oprx0_xysp	Jump	IDX IDX1	05 xb 05 xb ff	PPP PPP	PPP		
JMP oprx9,xysp JMP oprx16,xysp	Jump	IDX1	05 xb ff 05 xb ee ff	fPPP	PPP fPPP		
JMP (D.xvsp)		(D.IDX)	05 xb cc 11	fIfPPP	fifppp		
JMP [oprx16,xysp]		[IDX2]	05 xb ee ff	fIfPPP	fIfPPP		
	requirements, the program word fetch is performed twice to the						
JSR opr8a JSR opr16a	(SP) – 2 ⇒ SP; RTN : RTN → Man: Man ::	DIR	17 dd 16 hh 11	SPPP	PPPS		
JSR oprx0_xysp	$RTN_H:RTN_L \Rightarrow M_{(SP)}:M_{(SP+1)};$ Subroutine address $\Rightarrow PC$	IDX	15 xb	PPPS	PPPS	l	l
JSR oprx9,xysp		IDX1	15 xb ff	PPPS	PPPS	l	l
JSR oprx16,xysp	Jump to Subroutine	IDX2	15 xb ee ff	fPPPS	fPPPS		l
JSR [D,xysp] JSR [oprx16,xysp]		[D,IDX] [IDX2]	15 xb 15 xb ee ff	fifppps fifppps	fIfPPPS fIfPPPS		
LBCC rel16	Long Branch if Carry Clear (if C = 0)	REL	18 24 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBCS rel16	Long Branch if Carry Set (if C = 1)	REI	18 25 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBEQ rel16	Long Branch if Equal (if Z = 1)	REL	18 27 qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
LBGE rel16	Long Branch Greater Than or Equal	REL	18 2C qq rr	OPPP/OPO <sup>1</sup>	OPPP/OPO <sup>1</sup>		
	(if N ⊕ V = 0) (signed)			1			L

### S12CPUV2 Reference Manual, Rev. 4.0

386 Freescale Semiconductor

Table A-1. Instruction Set Summary (Sheet 8 of 14)

Source Form	Operation	Addr. Mode	Machine Coding (hex)	Access De HCS12	tail M68HC12	SXHI	NZVC
LDY #opr16i	(M:M+1) ⇒ Y	IMM	CD jj kk	PO	OP		ΔΔ0-
LDY opr8a	Load Index Register Y	DIR	DD dd	RPf	RfP		
LDY opr16a		EXT	FD hh 11	RPO	ROP		
LDY oprx0_xysp		IDX	ED xb	RPf	RfP		
LDY oprx9,xysp		IDX1	ED xb ff	RPO	RPO		
LDY oprx16,xysp		IDX2	ED xb ee ff	fRPP	fRPP		
LDY [D,xysp]		[D,IDX]	ED xb	fIfRPf	fifRfP		
LDY [aprx16,xysp]		[IDX2]	ED xb ee ff	fIPRPf	fIPRfP		
LEAS oprx0_xysp	Effective Address ⇒ SP	IDX	1B xb	Pf	PP <sup>1</sup>		
LEAS oprx9,xysp	Load Effective Address into SP	IDX1	1B xb ff	PO	PO		
LEAS oprx16,xysp		IDX2	1B xb ee ff	PP	PP		
LEAX oprx0_xysp	Effective Address ⇒ X	IDX	1A xb	Pf	PP <sup>1</sup>		
LEAX oprx9,xysp	Load Effective Address into X	IDX1	1A xb ff	PO	PO		
LEAX oprx16,xysp		IDX2	1A xb ee ff	PP	PP		
LEAY oprx0_xvsp	Effective Address ⇒ Y	IDX	19 xb	Pf	pp1		
LEAY oprx9,xysp	Load Effective Address into Y	IDX1	19 xb ff	PO	PO		
LEAY oprx16,xysp	Edd Elicone Hadress IIIo 1	IDX1	19 xb ee ff	PP	pp		
							_
LSL opr16a LSL oprx0 xvsp	I	EXT	78 hh 11 68 xb	rPw0 rPw	rOPw rPw		ΔΔΔΔ
				rPw0			
LSL oprx9,xysp	C b7 b0 Logical Shift Left	IDX1 IDX2	68 xb ff 68 xb ee ff	rPw0 frPPw	rPOw frPPw	l	1
LSL oprx16,xysp	same function as ASL	IDX2	68 xb ee ii	fTfrPw	fIfrPw		
LSL [D,xysp] LSL [oprx16,xysp]	same function as ASL	[IDX2]	68 xb ee ff	fIPrPw	fIPrPw		
LSL [oprx10,xysp]	Logical Shift Accumulator A to Left	INH	48 XD ee II	O	TIPTPW		
LSLB	Logical Shift Accumulator B to Left	INH	58	0	0		
	Logical Still Accumulator b to Lett						
LSLD	C 57 A 50 57 B 50	INH	59	0	0		ΔΔΔΔ
	Logical Shift Left D Accumulator						
	same function as ASLD						
	Same function as ASLD						
LSR opr16a	<b> →</b>	EXT	74 hh 11	rPwO	rOPw		0 Δ Δ Δ
LSR oprx0_xysp	0	IDX	64 xb	rPw	rPw		
LSR oprx9,xysp	b7 b0 C	IDX1	64 xb ff	rPw0	rPOw		
LSR oprx16,xysp	Logical Shift Right	IDX2	64 xb ee ff	frPwP fIfrPw	frPPw fIfrPw		
LSR [D,xysp]		[D,IDX] IIDX21	64 xb 64 xb ee ff	fIPrPw	fIPrPw		
LSR [oprx16,xysp] LSRA	Logical Shift Accumulator A to Right	INH	44 XD ee II	O	TIPTPW		
LSRB	Logical Shift Accumulator B to Right	INH	54	0	0		
	Logical Shift Accomplator B to right						
LSRD	I ∘ <del>→π ΄π →π ΄π →</del> π	INH	49	0	0		0 Δ Δ Δ
	b7 A b0 b7 B b0 C						
	Logical Shift Right D Accumulator						
MAXA oprx0_xysp	$MAX((A), (M)) \Rightarrow A$	IDX	18 18 xb	OrPf	OrfP		ΔΔΔΔ
MAXA oprx9,xysp	MAX of 2 Unsigned 8-Bit Values	IDX1	18 18 xb ff	OrPO	OrPO	1	1
MAXA oprx16,xysp		IDX2	18 18 xb ee ff	OfrPP	OfrPP	1	1
MAXA [D,xysp]	N, Z, V and C status bits reflect result of	[D,IDX]	18 18 xb	OfIfrPf	OfIfrfP		
MAXA [oprx16,xysp]	internal compare ((A) – (M)).	[IDX2]	18 18 xb ee ff	OfIPrPf	OfIPrfP		
Note 1. Due to internal CPU requ	irements, the program word fetch is performed twice to the sam	ne address	during this instruction.				
MAXM oprx0_xysp	$MAX((A), (M)) \Rightarrow M$	IDX	18 1C xb	OrPw	OrPw		ΔΔΔΔ
MAXM oprxu_xysp MAXM oprx9,xysp	MAX((A), (M)) ⇒ M MAX of 2 Unsigned 8-Bit Values	IDX IDX1	18 1C xb 18 1C xb ff	OrPw0	OrPwO		
MAXM oprx16,xysp	ment of a study led orbit values	IDX1	18 1C xb ff	OfrPwP	OfrPwP	1	1
MAXM [D,xysp]	N. Z. V and C status bits reflect result of	ID.IDX1	18 1C xb ee 11	OffrPw	OfffrPw	1	1
MAXM [D,xysp] MAXM [oprx16,xysp]	internal compare ((A) – (M)).	(IDX2)	18 1C XD 18 1C XD ee ff	OfIPrPw	OfIPrPw	1	1
MFM				RRfOw	RRfOw	<b>-</b>	0007
MEM	$\mu$ (grade) $\Rightarrow$ M <sub>(Y)</sub> ; (X) + 4 $\Rightarrow$ X; (Y) + 1 $\Rightarrow$ Y; A unchanged	Special	01	RRIOW	RRIOW	?-	????
	H (A) - D4 (A) - D2 d	1	1	1		1	1
	if (A) < P1 or (A) > P2 then $\mu$ = 0, else $\mu$ = MIN[((A) - P1)×S1, (P2 - (A))×S2, \$FF]	1	1			l	1
	\( \mu = \text{MIN(((A) - P1)\times S1, (P2 - (A))\times S2, SFF)} \)   \( \text{where:} \)	1	1			l	1
		1	1			l	1
	A = current crisp input value; X points at 4-byte data structure that describes a trapezoidal	1	1			l	1
							1
			l				
	membership function (P1, P2, S1, S2);						

Table A-1. Instruction Set Summary (Sheet 9 of 14)

			illiary (One				
Source Form	Operation	Addr. Mode	Machine Coding (hex)	HCS12	Access Detail M68HC12	SXHI	NZVC
MINA oprx0_xysp	$MIN((A), (M)) \Rightarrow A$	IDX	18 19 xb	OrPf	OrfP		ΔΔΔΔ
MINA oprx9.xvsp	MIN of 2 Unsigned 8-Bit Values	IDX1	18 19 xb ff	OrPO	OrPO		
MINA oprx16,xysp		IDX2	18 19 xb ee ff	OfrPP	OfrPP		
MINA [D,xysp]	N, Z, V and C status bits reflect result of	[D,IDX]	18 19 xb	OfIfrPf	OfIfrfP		
MINA [oprx16,xysp]	internal compare ((A) – (M)).	[IDX2]	18 19 xb ee ff		OfIPrfP		
MINM oprx0_xysp	$MIN((A), (M)) \Rightarrow M$	IDX	18 1D xb	OrPw	OrPw		ΔΔΔΔ
MINM oprx9,xysp MINM oprx16,xysp	MIN of 2 Unsigned 8-Bit Values	IDX1 IDX2	18 1D xb ff 18 1D xb ee ff	OrPw0	OrPwO OfrPwP		
MINM [D,xysp]	N. Z. V and C status bits reflect result of	IDJDX1	18 1D xb ee rr	OfIfrPw	Offfrw		
MINM [oprx16,xysp]	internal compare ((A) – (M)).	IIDX21	18 1D xb ee ff	OfIPrPw	OfIPrPw		
MOVB #opr8, opr16a1	(M <sub>1</sub> ) ⇒ M <sub>2</sub>	IMM-EXT	18 OB ii hh 11	OPwP	OPwP		_
MOVB #opr8i, oprx0_xysp1	(M <sub>1</sub> ) ⇒ M <sub>2</sub> Memory to Memory Byte-Move (8-Bit)	IMM-EXT	18 08 11 nn 11	OPWD	OPWP OPWO		
MOVB opr16a, opr16a	Mellioly to Mellioly Dyte-Move (0-Dit)	EXT-EXT	18 0C hh 11 hh 11	OrPwPO	OrPwPO		
MOVB opr16a, oprx0_xysp1			18 09 xb hh 11	OPrPw	OPrPw		
MOVB oprx0_xysp, opr16a1		IDX-EXT	18 0D xb hh 11	OrPwP	OrPwP		
MOVB oprx0_xysp, oprx0_xysp1		IDX-IDX	18 OA xb xb	OrPw0	OrPwO		
MOVW #oprx16, opr16a1	(M:M+1 <sub>1</sub> ) ⇒ M:M+1 <sub>2</sub>	IMM-EXT	18 03 jj kk hh 11	OPWPO	OPWPO		
MOVW #opr16i, oprx0_xysp1	Memory to Memory Word-Move (16-Bit)	IMM-IDX	18 00 xb jj kk	OPPW	OPPW		
MOVW opr16a, opr16a1		EXT-EXT	18 04 hh 11 hh 11	ORPWPO	ORPWPO		
MOVW opr16a, oprx0_xysp1		EXT-IDX	18 01 xb hh 11	OPRPW	OPRPW		
MOVW oprx0_xysp, opr16a1		IDX-EXT	18 05 xb hh 11	ORPWP	ORPWP		
MOVW oprx0_xysp, oprx0_xysp1		IDX-IDX	18 02 xb xb	ORPWO	ORPWO		
MUL	(A) × (B) ⇒ A:B 8 by 8 Unsigned Multiply	INH	12	0	ffO		A
NEG opr16a		FXT	70 hh 11	rPw0	rOPw		ΔΔΔΔ
NEG oprx0_xysp	$0 - (M) \Rightarrow M$ equivalent to $(\overline{M}) + 1 \Rightarrow M$	IDX	60 xb	rPw	rPw		
NEG oprx9,xysp	Two's Complement Negate	IDX1	60 xb ff	rPwO	rPOw		
NEG oprx16,xysp		IDX2	60 xb ee ff	frPwP	frPPw		
NEG [D,xysp]		[D,IDX]	60 xb	fIfrPw	fIfrPw		
NEG [oprx16,xysp]		[IDX2]	60 xb ee ff	fIPrPw	fIPrPw		
NEGA	$0 - (A) \Rightarrow A \text{ equivalent to } (\overline{A}) + 1 \Rightarrow A$	INH.	40	0	0		
l	Negate Accumulator A						
NEGB	$0 - (B) \Rightarrow B \text{ equivalent to } (\overline{B}) + 1 \Rightarrow B$	INH	50	0	0		
	Negate Accumulator B						
NOP	No Operation	INH	A7	0	0		
ORAA #opr8i	$(A) + (M) \Rightarrow A$	IMM	8A ii	P	P		ΔΔ0-
ORAA opr8a	Logical OR A with Memory	DIR	9A dd	rPf	rfP		
ORAA opr16a		EXT	BA hh 11	rPO	rOP		
ORAA oprx0_xysp		IDX	AA xb	rPf rPO	rfP		
ORAA oprx9,xysp ORAA oprx16,xysp		IDX1 IDX2	AA xb ff AA xb ee ff	frPP	rPO frPP		
ORAA (D,xysp)		IDJDX1	AA xb ee rr	fIfrPf	fIfrfP		
ORAA [oprx16,xysp]		[IDX2]	AA xb ee ff	fTPrPf	fTPrfP		
	ource code statement specifies the source for the move.	[IDAL]	700 XD CC 11				
ORAB #opr8i	$I(B) + I(M) \Rightarrow B$	IMM	CA ii	р	p		ΔΔ0-
ORAB opr8a	Logical OR B with Memory	DIR	DA dd	rPf	rfP		
ORAB opr16a		EXT	FA hh 11	rPO	rOP		
ORAB oprx0_xysp		IDX	EA xb	rPf	rfP		
ORAB oprx9,xysp		IDX1	EA xb ff	rPO	rPO		
ORAB oprx16,xysp		IDX2	EA xb ee ff	frPP	frPP		
ORAB [D,xysp]		[D,IDX]	EA xb	fIfrPf	fIfrfP		
ORAB [oprx16,xysp]		[IDX2]	EA xb ee ff	fIPrPf	fIPrfP		
ORCC #opr8i	(CCR) + M ⇒ CCR Logical OR CCR with Memory	IMM	14 ii	P	P	11 - 11 11	11111
PSHA	(SP) – 1 ⇒ SP; (A) ⇒ M <sub>(SP)</sub> Push Accumulator A onto Stack	INH	36	0s	Os		
PSHB	(SP) – 1 ⇒ SP; (B) ⇒ M <sub>(SP)</sub> Push Accumulator B onto Stack	INH	37	Os	Os		
PSHC	$(SP) - 1 \Rightarrow SP; (CCR) \Rightarrow M_{(SP)}$	INH	39	Os	Os		
	Push CCR onto Stack				Os		
PSHD	(SP) – 2 ⇒ SP; (A:B) ⇒ M <sub>(SP)</sub> :M <sub>(SP+1)</sub> Push D Accumulator onto Stack	INH	3B	os	OS		
PSHX	(SP) – 2 ⇒ SP; (X <sub>H</sub> :X <sub>L</sub> ) ⇒ M <sub>(SP)</sub> :M <sub>(SP+1)</sub> Push Index Register X onto Stack	INH	34	OS	OS		

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 38

### Table A-1. Instruction Set Summary (Sheet 11 of 14)

		Addr.	Machine	Access	Detail		
Source Form	Operation	Mode	Coding (hex)	HCS12	M68HC12	SXHI	NZVC
SBA	(A) – (B) ⇒ A Subtract B from A	INH	18 16	00	00		ΔΔΔΔ
SBCA #opr8i	(A) - (M) - C ⇒ A	IMM	82 ii	P	P		ΔΔΔΔ
SBCA opr8a	Subtract with Borrow from A	DIR	92 dd	rPf	rfP		4444
SBCA opr16a	Subilata will bullow italii A	EXT	B2 hh 11	rPO	rOP		
SBCA oprx0_xysp		IDX	A2 xb	rPf	rfP		
SBCA oprx9,xysp		IDX1	A2 xb ff	rPO	rPO		
SBCA oprx16,xysp		IDX1	A2 xb ee ff	frPP	frPP		
SBCA [D,xysp]		[D,IDX]	A2 xb ee 11	fIfrPf	fIfrfP		
SBCA [aprx16,xysp]		IIDX21	A2 xb ee ff	fIPrPf	fIPrfP		
SBCB #opr8i	(B) – (M) – C ⇒ B	IMM	C2 ii	p	р		ΔΔΔΔ
SBCB opr8a	Subtract with Borrow from B	DIR	D2 dd	rPf	rfP		4444
SBCB opr16a	Subtract with Bullow Holli B	EXT	F2 hh 11	rPO	rOP		
SBCB oprx0_xysp		IDX	E2 xb	rPf	rfP		
SBCB oprx9,xysp		IDX1	E2 xb ff	rPO	rPO		
SBCB oprx16,xysp		IDX1	E2 xb rr E2 xb ee ff	frPP	frPP		
SBCB [D,xysp]		(D.IDX1	E2 xb ee 11	fIfrPf	fIfrfP		
SBCB [aprx16,xysp]		(IDX2)	E2 xb ee ff	fIPrPf	fIPrfP		
		. ,					1
SEC	1 ⇒ C Translates to ORCC #\$01	IMM	14 01	P	P		1
SEI	1 ⇒ I; (inhibit I interrupts)	IMM	14 10	P	P	1	
	Translates to ORCC #\$10		· ·				
SEV	1 ⇒ V Translates to ORCC #\$02	IMM	14 02	P	P		1-
SEX abc,dxys	\$00:(r1) => r2 if r1, bit 7 is 0 or	INH	B7 eb	P	P		
	\$FF:(r1) ⇒ r2 if r1, bit 7 is 1						
	Sign Extend 8-bit r1 to 16-bit r2						
	r1 may be A, B, or CCR						
	r2 may be D, X, Y, or SP						
	12 may be b, A, T, or SP						
	Alternate mnemonic for TFR r1, r2						
STAA opr8a	(A) ⇒ M	DIR	5A dd	Pw	Pw		ΔΔ0-
STAA opr16a	Store Accumulator A to Memory	EXT	7A hh 11	PwO	WOP		
STAA oprx0_xysp		IDX	6A xb	Pw	Pw		
STAA oprx9,xysp		IDX1	6A xb ff	PwO	PwO		
STAA oprx16,xysp		IDX2	6A xb ee ff	PwP	PwP		
STAA [D,xysp]		[D,IDX]	6A xb	PIfw	PIfPw		
STAA [oprx16,xysp]		IIDX21	6A xb ee ff	PIPW	PIPPW		
STAB opr8a	(B) ⇒ M	DIR	5B dd	Per	Pw		ΔΔ0-
STAB opr16a	Store Accumulator B to Memory	EXT	7B hh 11	PwO	WOP		ДД0-
STAB opriod STAB oprio xvsp	Sidle Accumulator B to Memory	IDX	6B xb	PW	WOP Pw		
STAB oprx9_xysp		IDX1	6B xb ff	PwO	Pw0		
		IDX1		PWP	PWO PwP		
STAB oprx16,xysp STAB ID.xvspl		IDJDX1	6B xb ee ff 6B xb	PIfw	PIfPw		
STAB [o,xysp] STAB [oprx16,xysp]		(IDX2)	6B xb ee ff	PIPW	PIPPW		
				PM		_	
STD opr8a	$(A) \Rightarrow M, (B) \Rightarrow M+1$	DIR	5C dd		PW		ΔΔ0-
STD opr16a	Store Double Accumulator		7C hh 11	PWO	WOP		
STD oprx0_xysp		IDX	6C xb	PW	PW		
STD oprx9,xysp		IDX1	6C xb ff	PWO	PWO		
STD oprx16,xysp		IDX2	6C xb ee ff	PWP	PWP		
STD [D,xysp]		[D,IDX]	6C xb	PIfW	PIfPW		
STD [oprx16,xysp]		[IDX2]	6C xb ee ff	PIPW	PIPPW		
STOP	(SP) – 2 ⇒ SP;	INH	18 3E	(entering	STOP)		
	$RTN_H:RTN_L \Rightarrow M_{(SP)}:M_{(SP+1)};$			00SSSSsf	00SSSfSs		
	$I(SP) - 2 \Rightarrow SP: (Y_{i,i}Y_{i,i}) \Rightarrow M_{inver}M_{inver,i}$	1	I		OTOD)	ł	1
	$(SP) - 2 \Rightarrow SP; (X_H; X_L) \Rightarrow M_{(SP)} M_{(SP+1)};$	1	1	(exiting		l	
	$(SP) - 2 \Rightarrow SP$ ; $(B:A) \Rightarrow M_{(SP)}:M_{(SP+1)}$ ;			fVfPPP	fVfPPP		
	$(SP) - 1 \Rightarrow SP; (CCR) \Rightarrow M_{(SP)};$	1	1	(cont	inue)	1	
	STOP All Clocks			ff	fo		
	Registers stacked to allow quicker recovery by interrupt.			(if STOP	disabled)	1	
	If S control bit = 1, the STOP instruction is disabled and acts			(IFSTOP	disabled)		
	like a two-cycle NOP.			1	- 00		

### S12CPUV2 Reference Manual, Rev. 4.0

### Table A-1. Instruction Set Summary (Sheet 10 of 14)

Source Form	Operation	Addr. Mode	Machine Coding (hex)	Access HCS12	Detail M68HC12	SXHI	NZV
PULA	(M <sub>(SP)</sub> ) ⇒ A; (SP) + 1 ⇒ SP Pull Accumulator A from Stack	INH	32	uf0	uf0		
PULB	(M <sub>(SP)</sub> ) ⇒ B; (SP) + 1 ⇒ SP Pull Accumulator B from Stack	INH	33	uf0	uf0		
PULC	(M <sub>(SP)</sub> ) ⇒ CCR; (SP) + 1 ⇒ SP Pull CCR from Stack	INH	38	uf0	uf0	Δ∜ΔΔ	ΔΔΔ
PULD	$(M_{(SP)};M_{(SP+1)}) \Rightarrow A:B; (SP) + 2 \Rightarrow SP$ Pull D from Stack	INH	3A	UfO	UfO		
PULX	$(M_{(SP)};M_{(SP+1)}) \Rightarrow X_H:X_L; (SP) + 2 \Rightarrow SP$ Pull Index Register X from Stack	INH	30	UfO	UfO		
PULY	$(M_{(SP)};M_{(SP+1)}) \Rightarrow Y_H;Y_L;(SP) + 2 \Rightarrow SP$ Pull Index Register Y from Stack	INH	31	UfO	Ufo		
REV	MNH-MAX rule evaluation Find smallest rule input MINI). Store to rule outputs unless fluzzy output is already larger (MAX). For rule weights see REVW. Each rule input is an 8-bit offset from the base address in Y. Each rule input is an 8-bit offset from the base address in Y. Each rule input is an 8-bit offset from the base address in Y. Each rule input is an 8-bit offset from the base address in Y. Each rule input is an 8-bit offset from the base address in Y. Each rule input is an 8-bit offset from the base address in Y. File expension for inputs from under outputs. SFT learningless the rule list.	Special	18 3A	Orf(t,tx)O (exit+re-entry r above if in ff + Orf(t,		?-	??∆?
REVW	IMIN-MAX rule evaluation Find amallest rule part (MINI), Store to rule outputs unless fluzzy output is already larger (MAX). Rule weights supported, optional. Each rule project is the 16-bit address of a fuzzy rignt. Each rule outputs the 16-bit address of a fuzzy output. The value SFFFE separates rule lipits from rule outputs. SFFFF terminates the rule list.	Special	18 3B	ORf(t,Tx)O (loop to read we (x,RfRf) (exit+re-entry r above if in ffff + ORf(t,	(r,RfRf) eplaces comma iterrupted)	?-	??Δ!
ROL opr16a ROL oprx0_xysp ROL oprx8_xysp ROL oprx16_xysp ROL [D,xysp] ROL [D,xysp] ROL A ROLA ROLA ROLB	C by Botale Memory Left through Carry Rotate Memory Left through Carry Rotate A Left through Carry Rotate B Left through Carry	EXT IDX IDX1 IDX2 [D,IDX] [IDX2] INH INH	75 hh 11 65 xb 65 xb ff 65 xb ee ff 65 xb 65 xb ee ff 45 55	rPwO rPw rPwO frPwP fifrPw fiPrPw 0	rOPw rPw rPOw frPPw fIfrPw fIPrPw 0 0		ΔΔΔ
ROR opr16a ROR opnd_xysp ROR opnd_xysp ROR opx16_xysp ROR [D.xysp] ROR [opx16_xysp] ROR A RORA	Rotate Memory Right through Carry  Rotate A Right through Carry  Rotate A Right through Carry	EXT IDX IDX1 IDX2 [D,IDX] [IDX2] INH INH	76 hh 11 66 xb 66 xb ff 66 xb ee ff 66 xb ee ff 66 xb ee ff 46 56	rPwO rPw rPwO frPwP fIfrPw fIPrPw O	rOPw rPw rPOw frPPw fIfrPw fIPrPw 0 0		ΔΔΔ
RTC	$ \begin{aligned} &(M_{(SP)}) \Rightarrow PPAGE; (SP) + 1 \Rightarrow SP; \\ &(M_{(SP)}M_{(SP,1)}) \Rightarrow PC_{M_{\ell}}PC_{L}; \\ &(M_{(SP)}M_{(SP,1)}) + 2 \Rightarrow SP \\ &Return from Call \end{aligned} $	INH	0A	uUnfPPP	uUnPPP		
RTI	$\begin{array}{l} (M_{(SP)})\Rightarrow CCP_c(SP)+1\Rightarrow SP\\ (M_{SP}/M_{SP,41})\Rightarrow BA, (CP)+2\Rightarrow SP\\ (M_{SP}/M_{SP,41})\Rightarrow Z_bX_c, (SP)+4\Rightarrow SP\\ (M_{SP}/M_{SP,41})\Rightarrow P_{CB}/P_{C_c}(SP)-2\Rightarrow SP\\ (M_{SP}/M_{SP,41})\Rightarrow P_{CB}/P_{C_c}(SP)-2\Rightarrow SP\\ (M_{SP}/M_{SP,41})\Rightarrow Y_b/Y_c(SP)+4\Rightarrow SP\\ Return from Interrupt \end{array}$	INH	0B	wUUUUPPP (with interru		Δ∜ΔΔ	ΔΔΔ
RTS	$(M_{(SP)}M_{(SP+1)}) \Rightarrow PC_HPC_L;$ $(SP) + 2 \Rightarrow SP$ Return from Subroutine	INH	3D	UfPPP	UfPPP		

### S12CPUV2 Reference Manual, Rev. 4.0

390 Freescale Semiconductor

### Table A-1. Instruction Set Summary (Sheet 12 of 14)

Source Form		Addr.	Machine	Access D	etail	SXHI	NZVC
Source Form	Operation	Mode	Coding (hex)	HCS12	M68HC12	SXHI	NZVC
STS opr8a	$(SP_H:SP_L) \Rightarrow M:M+1$	DIR	5F dd	PW	PW		ΔΔ0-
STS opr16a	Store Stack Pointer	EXT	7F hh 11	PWO	WOP		
STS oprx0_xysp STS oprx9_xysp		IDX IDX1	6F xb 6F xb ff	PW PWO	PW PWO		
STS oprx16,xysp		IDX1	6F xb ee ff	PWD	PWO		
STS [D,xysp]		[D,IDX]	6F xb	PIfW	PIfPW		
STS [aprx16,xysp]		[IDX2]	6F xb ee ff	PIPW	PIPPW		
STX opr8a	$(X_{\omega};X_{\varepsilon}) \Rightarrow M:M+1$	DIR	5E dd	PW	PW		ΔΔ0-
STX opr16a	Store Index Register X	EXT	7E hh 11	PWO	WOP		
STX oprx0_xysp		IDX IDX1	6E xb	PW	PW		
STX oprx9,xysp STX oprx16,xysp		IDX1	6E xb ff 6E xb ee ff	PWO PWP	PWO PWP		
STX (D.xvsp)		ID.IDX1	6E xb ee rr	PIfW	PIIPW		
STX [aprx16,xysp]		[IDX2]	6E xb ee ff	PIPW	PIPPW		
STY opr8a	$(Y_H;Y_1) \Rightarrow M:M+1$	DIR	5D dd	PW	PW		ΔΔ0-
STY opr16a	Store Index Register Y	EXT	7D hh 11	PWO	WOP		
STY oprx0_xysp		IDX	6D xb	PW	PW		
STY oprx9,xysp		IDX1 IDX2	6D xb ff 6D xb ee ff	PWO PWP	PWO		
STY oprx16,xysp STY [D,xysp]		[D,IDX]	6D xb ee ii	PWP	PWP PIfPW		
STY [D,xysp] STY [aprx16,xysp]		[IDX2]	6D xb ee ff	PIIW	PITPW		
SUBA #opr8i	(A) - (M) ⇒ A	IMM	90 ii	B	р		ΔΔΔΔ
SUBA apr8a	(A) – (M) ⇒ A Subtract Memory from Accumulator A	DIR	90 dd	rPf	rfP		ΔΔΔΔ
SUBA opr16a	Subtract Methory Iron Accumulator A	EXT	B0 hh 11	rPO	rOP		
SUBA oprx0_xysp		IDX	A0 xb	rPf	rfP		
SUBA oprx9,xysp		IDX1	A0 xb ff	rPO	rPO		
SUBA oprx16,xysp		IDX2	A0 xb ee ff	frPP	frPP		
SUBA [D,xysp] SUBA [oprx16,xysp]		[D,IDX] (IDX2)	A0 xb A0 xb ee ff	fIfrPf fIPrPf	fIfrfP fIPrfP		
	D 46 D	IMM					
SUBB #opr8i SUBB opr8a	(B) – (M) ⇒ B Subtract Memory from Accumulator B	DIR	CO ii	P rPf	P rfP		ΔΔΔΔ
SUBB opr16a	Subtract Memory Iron Accumulator 6	FXT	F0 hh 11	rPO	nOP		
SUBB oprx0_xysp		IDX	E0 xb	rPf	rfP		
SUBB oprx9,xysp		IDX1	E0 xb ff	rPO	rPO		
SUBB oprx16,xysp		IDX2	E0 xb ee ff	frPP	frPP		
SUBB [D,xysp]		[D,IDX]	E0 xb	fIfrPf fIPrPf	fIfrfP		
SUBB [aprx16,xysp]		[IDX2]	E0 xb ee ff				
SUBD #opr16i SUBD opr8a	(D) – (M:M+1) ⇒ D	IMM DIR	83 jj kk	PO RPf	OP RfP		ΔΔΔΔ
SUBD oprita	Subtract Memory from D (A:B)	EXT	93 dd B3 hh 11	RPO RPO	ROP		
SUBD oprx0_xysp		IDX	A3 xb	RPf	RfP		
SUBD oprx9,xysp		IDX1	A3 xb ff	RPO	RPO		
SUBD oprx16,xysp		IDX2	A3 xb ee ff	fRPP	fRPP		
SUBD [D,xysp]		[D,IDX]	A3 xb	fIfRPf	fifRfP		
SUBD [oprx16,xysp]		[IDX2]	A3 xb ee ff		fIPRfP		
SWI	(SP) - 2 ⇒ SP;	INH	3F	VSPSSPSsP*	VSPSSPSsP*	1	
	$RTN_H : RTN_L \Rightarrow M_{(SP)} : M_{(SP+1)}$ ; $(SP) - 2 \Rightarrow SP$ ; $(Y_H : Y_L) \Rightarrow M_{(SP)} : M_{(SP+1)}$ ;			(for Res	et)		
	$(SP) - 2 \Rightarrow SP$ ; $(X_H; X_L) \Rightarrow M_{(SP)} : M_{(SP+1)}$ ;			VfPPP	VfPPP	11-1	
	(SP) = 2 → SP: (R·A) → Mon Mon or						
	$ (SP) - 1 \Rightarrow SP; (CCR) \Rightarrow M_{(SP)}$						
	1 ⇒ I; (SWI Vector) ⇒ PC						
	Software Interrupt						
*The CPU also uses the SWI	microcode sequence for hardware interrupts and unimpleme	nted opcode trap	s. Reset uses the VfPI	P variation of this sequent	DB.		
TAB	(A) ⇒ B	INH	18 OE	00	00		ΔΔ0-
	Transfer A to B						
TAP	(A) ⇒ CCR Translates to TFR A , CCR	INH	B7 02	P	Р	Δ∜ΔΔ	ΔΔΔΔ
TBA	(B) ⇒ A Transfer B to A	INH	18 OF	00	00		ΔΔ0-
TBEQ abdkys,rel9	If (cntr) = 0, then Branch:	REL	04 lb rr	PPP (branch)	PPP		
,-,	else Continue to next instruction	(9-bit)	1	PPO (no		l	1
		1		branch)			
	Test Counter and Branch if Zero (cntr = A, B, D, X,Y, or SP)	1	1			l	1

Table A-1. Instruction Set Summary (Sheet 13 of 14)

Source Form	Operation	Addr.	Machine	Access Deta	il	SXHI	NZVC	
Source Form	Operation	Mode	Coding (hex)	HCS12	M68HC12	3 4 11	NZVC	
TBL oprx0_xysp	(M) + [(B) × ((M+1) − (M))] ⇒ A 8-Bit Table Lookup and Interpolate	IDX	18 3D xb	ORfffP	OrrffffP		ΔΔ-Δ ?	
	Initialize B, and index before TBL. -ea> points at first 8-bit table entry (M) and B is fractional part of lookup value.						undefined IC12	
	(no indirect addressing modes or extensions allowed)							
TBNE abdxys,rel9	If (ontr) not = 0, then Branch; else Continue to next instruction  Test Counter and Branch if Not Zero	REL (9-bit)	04 lb rr	PPP (branch) PPO (no branch)	PPP			
	(cntr = A, B, D, X,Y, or SP)							
TFR abcdxys,abcdxys	(r1) ⇒ r2 or \$00:(r1) ⇒ r2 or (r1[7:0]) ⇒ r2	INH	B7 eb	P	P		 or	
	Transfer Register to Register r1 and r2 may be A, B, CCR, D, X, Y, or SP					Δ∜ΔΔ	ΔΔΔΔ	
TPA	(CCR) ⇒ A Translates to TFR CCR ,A	INH	B7 20	P	P			
TRAP trapnum	$\begin{split} & (SP) - 2 = SP; \\ & RTN_{s}RTN_{s} = M_{sgp}M_{sgp,1}) \\ & (SP) - 2 = SP; (Y_{s}Y_{s}) = M_{sgp}M_{sgp,1}; \\ & (SP) - 2 = SP; (Y_{s}Y_{s}) = M_{sgp}M_{sgp,1}; \\ & (SP) - 2 = SP; (X_{s}X_{s}) = M_{sgp}M_{sgp,1}; \\ & (SP) - 2 = SP; (2A) = M_{sgp}M_{sgp,1}; \\ & (SP) - 1 = SP; (CM) = M_{sgp}M_{sgp,1}; \\ & 1 = I; (TRAP Vector) = PC \end{split}$	INH	18 tn tn = \$30-\$39 or \$40-\$FF	OVSPSSPSaP O	fVSPSSPS#P	1		
TST opr16a	Unimplemented opcode trap (M) = 0	FXT	P7 hb 11	rPO	nOP		ΔΔ00	
ISI opros TST opro2_xysp TST opro2_xysp TST opro16,xysp TST [D_xysp] TST [opro16,xysp] TSTA TSTB	(M) – U Test Memory for Zero or Minus  (A) – 0 Test A for Zero or Minus  (B) – 0 Test B for Zero or Minus	IDX IDX1 IDX2 [D,IDX] [IDX2] INH INH	F7 hh 11 E7 xb E7 xb ff E7 xb ee ff E7 xb ee ff E7 xb ee ff E7 xb ee ff 97	rPO rPf rPO frPP fIfrPf fIPrPf O	rOP rfP rPO frPP fIfrfP fIPrfP		AA00	
TSX	(SP) ⇒ X Translates to TFR SP,X	INH	B7 75	P	P			
TSY	(SP) ⇒ Y Translates to TFR SP,Y	INH	B7 76	P	P			
TXS	(X) ⇒ SP Translates to TFR X,SP	INH	B7 57	P	P			
TYS	(Y) ⇒ SP Translates to TFR Y,SP	INH	B7 67	P	P			
WAI	$\begin{split} &(SP) - 2 \Rightarrow SP; \\ &RTN_{H}RTN_{L} \Rightarrow M_{(SP)}M_{(SP_{+}1)}; \\ &(SP) - 2 \Rightarrow SP; (N_{H}Y_{L}) \Rightarrow M_{(SP)}M_{(SP_{+}1)}; \\ &(SP) - 2 \Rightarrow SP; (N_{H}X_{L}) \Rightarrow M_{(SP)}M_{(SP_{+}1)}; \\ &(SP) - 2 \Rightarrow SP; (N_{H}X_{L}) \Rightarrow M_{(SP)}M_{(SP_{+}1)}; \\ &(SP) - 2 \Rightarrow SP; (B;A) \Rightarrow M_{(SP)}M_{(SP_{+}1)}; \end{split}$	INH	3E	OSSSSsf (after interruptivfPPP)	OSSSfSaf pt) VfPPP	1	 or 	
	$(SP) - 1 \Rightarrow SP$ ; $(CCR) \Rightarrow M_{(SP)}$ ; WAIT for interrupt					-1-1		

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

'						Та	ible A-2	2. CPU	12 Opc	ode Ma	ıp (Sh	et 1 of	2)			
		00 †5 BGND IH 1	10 1 ANDCC IM 2	BRA	30 3 PULX IH 1	40 1 NEGA	50 1 NEGB	60 3-6 NEG ID 2-4	NEG	80 1 SUBA	90 3 SUBA DI 2	A0 3-6 SUBA ID 2-4	B0 3 SUBA EX 3	SUBB	DO 3 SUBB DI 2	E0 3-6 SUBB ID 2-4
		01 5 MEM IH 1	11 11 EDIV IH 1	21 1 BRN RL 2	31 3 PULY IH 1	41 1 COMA IH 1	51 1 COMB	61 3-6 COM ID 2-4	COM	CMPA	91 3 CMPA DI 2	A1 3-6 CMPA ID 2-4	B1 3 CMPA EX 3	C1 1 CMPB IM 2	D1 3 CMPB DI 2	E1 3-6 CMPB ID 2-4
		02 1 INY IH 1	12 ‡1 MUL IH 1	22 3/1 BHI RL 2	32 3 PULA IH 1	42 1 INCA IH 1	52 1 INCB	62 3-6 INC ID 2-4	INC	82 1 SBCA	92 3 SBCA DI 2	A2 3-6 SBCA ID 2-4	B2 3 SBCA EX 3	C2 1 SBCB	D2 3 SBCB DI 2	E2 3-6 SBCB ID 2-4
		03 1 DEY IH 1	13 3 EMUL IH 1	23 3/1 BLS RL 2	33 3 PULB IH 1	43 1 DECA IH 1	DECB IH 1	63 3-6 DEC ID 2-4	DEC	SUBD	93 3 SUBD DI 2	A3 3-6 SUBD ID 2-4	B3 3 SUBD EX 3	C3 2 ADDD IM 3	D3 3 ADDD DI 2	E3 3-6 ADDD ID 2-4
		loop RL 3	14 1 ORCC IM 2		34 2 PSHX IH 1	LSRA IH 1	LSRB IH 1	64 3-6 LSR ID 2-4	LSR EX 3	ANDA	94 3 ANDA DI 2	A4 3-6 ANDA ID 2-4	B4 3 ANDA EX 3	C4 1 ANDB IM 2	D4 3 ANDB DI 2	E4 3-6 ANDB ID 2-4
	SI	05 3-6 JMP ID 2-4	JSR ID 2-4	BCS RL 2	35 2 PSHY IH 1	45 1 ROLA IH 1	FOLB IH 1	65 3-6 ROL ID 2-4	ROL EX 3	BITA IM 2		A5 3-6 BITA ID 2-4	B5 3 BITA EX 3	BITB IM 2	D5 3 BITB DI 2	BITB ID 2-4
	S12CPUV2 Reference		JSR EX 3		36 2 PSHA IH 1	46 1 RORA IH 1	56 1 RORB IH 1	66 3-6 ROR ID 2-4	ROR EX 3	LDAA IM 2		A6 3-6 LDAA ID 2-4	B6 3 LDAA EX 3	LDAB IM 2	D6 3 LDAB DI 2	
	2 Refe		17 4 JSR DI 2	BEQ RL 2	37 2 PSHB IH 1	47 1 ASRA IH 1		67 3-6 ASR ID 2-4	ASR EX 3	B7 1 CLRA IH 1	97 1 TSTA IH 1		B7 1 TFR/EXG IH 2	IH 1	D7 1 TSTB IH 1	E7 3-6 TST ID 2-4
		08 1 INX IH 1	Page 2	28 3/1 BVC RL 2	PULC IH 1	48 1 ASLA IH 1	58 1 ASLB IH 1	68 3-6 ASL ID 2-4	ASL EX 3	EORA IM 2		EORA ID 2-4	B8 3 EORA EX 3	EORB IM 2	DB 3 EORB DI 2	EORB ID 2-4
	Manua	09 1 DEX IH 1	19 2 LEAY ID 2-4	BVS RL 2	PSHC IH 1	49 1 LSRD IH 1	59 1 ASLD IH 1	69 ‡2-4 CLR ID 2-4	CLR EX 3	ADCA IM 2	99 3 ADCA DI 2	ADCA ID 2-4	B9 3 ADCA EX 3	ADCB IM 2	D9 3 ADCB DI 2	E9 3-6 ADCB ID 2-4
	Manual, Rev. 4.0	OA 17 1A 2 2A 31 3A 3 4A 17 5A 2 6A 124 7A 3 8A 1 0A 3 AA 36 BA 3 CA 1 DA 3 EA 36 RTC LEAX BPL PULD CALL STAA STAA STAA ORAA ORAA ORAA ORAA ORAA ORAB ORAB IH 1 ID 24 RL 2   H 1 EX 4 DI 2 ID 24 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   M 2   DI 2   D 2 4 EX 3   D 3 4 EX 3														
	4.0	0B †8 RTI IH 1	1B 2 LEAS ID 2-4 1C 4	BMI RL 2	3B 2 PSHD IH 1 3C \$+5	4B ‡7-10 CALL ID 2-5 4C 4	5B 2 STAB DI 2 5C 2	STAB ID 2-4	STAB EX 3	ADDA IM 2		AB 3-6 ADDA ID 2-4 AC 3-6	BB 3 ADDA EX 3 BC 3	ADDB IM 2		ADDB
		BSET ID 3-5 0D 4-6	BSET EX 4	BGE RL 2	wavr SP 1	BSET DI 3	STD	STD ID 2-4	STD EX 3	CPD IM 3	CPD DI 2	CPD ID 2-4	CPD EX 3	LDD IM 3	LDD DI 2	LDD ID 2-4
		BCLR ID 3-5 0E \$4-6	BCLR EX 4	BLT RL 2	RTS IH 1 3E ‡†7	BCLR	STY DI 2	STÝ ID 2-4	STY EX 3	CPY IM 3	CPY DI 2	CPY ID 2-4	CPY EX 3 BE 3	LDY IM 3	LDY	LDY ID 2-4
		BRSET ID 4-6 0F ‡4-6	BRSET EX 5		WAI IH 1 3F 9	BRSET DI 4 4F 4	STX DI 2 5F 2				DI 2 9F 3	CPX ID 2-4 AF 3-6	CPX EX 3 BF 3			LDX ID 2-4 EF 3-6
		BRCLR ID 4-6	BRCLR EX 5	RL 2	SWI IH 1	BRCLR DI 4	STS DI 2	STS ID 2-4	STS EX 3	CPS IM 3	CPS DI 2	ID 2-4	CPS EX 3	LDS IM 3	LDS DI 2	ID 2-4
				Key	to rabit	Opcode		00 5	٦	Number o	f HCS12	cycles (‡ i	ndicates I	HC12 diffe	erent)	

### Table A-1. Instruction Set Summary (Sheet 14 of 14)

		Addr.	Machine	Access Detail	SXHI	N 7 V C
Source Form	Operation	Mode	Coding (hex)	HCS12 M68HC1:	SXHI	NZVC
WAV	В В	Special	18 3C	Of(frr,ffff)O Off(frr,fffff)	?-	?∆??
	$\sum S_i F_i \Rightarrow Y:D$ and $\sum F_i \Rightarrow X$			(add if interrupt)	1	
	i=1 i=1			SSS + UUUrr, SSSf + UUUr	-	
	Calculate Sum of Products and Sum of Weights for Weighted Average Calculation					
	Initialize B, X, and Y before WAV. B specifies number of ele- ments. X points at first element in S <sub>i</sub> list. Y points at first ele- ment in F <sub>i</sub> list.					
	All S <sub>i</sub> and F <sub>i</sub> elements are 8-bits.					
	If interrupted, six extra bytes of stack used for intermediate values					
wavr	see WAV	Special	3C	UUUrr,ffff UUUrrfffff (frr,ffff)O (frr,fffff)O		?A??
pseudo- instruction	Resume executing an interrupted WAV instruction (recover in- termediate results from stack rather than initializing them to zero)			(exit + re-entry replaces comma above if interrupted)	1	
	2009			SSS + UUUrr, SSSf + UUUrr	:	
XGDX	(D) ⇔ (X) Translates to EXG D, X	INH	B7 C5	P 1		
XGDY	(D) ⇔ (Y) Translates to EXG D, Y	INH	B7 C6	P		

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

## Table A-2. CPU12 Opcode Map (Sheet 2 of 2)

			Ta	ble A-2	. CPU	12 Opc	ode Ma	p (She	et 2 of	2)				
	00 4 10 12 MOVW IDIV	20 4 30 LBRA TRAI		50 10 TRAP	60 10 TRAP	70 10 TRAP	80 10 TRAP	90 10 TRAP	A0 10 TRAP	B0 10 TRAP	C0 10 TRAP	DO 10 TRAP	E0 10 TRAP	F0 TRAP
	IM-ID 5 IH 2	RL 4 IH	2 IH 2		IH 2	IH								
	01 5 11 12	21 3 31	10 41 10		61 10		81 10	91 10		B1 10	C1 10	D1 10		F1 :
	MOVW FDIV	LBRN TRAI		TRAP	TRAF									
	EX-ID 5 IH 2 02 5 12 13	RL 4 IH 22 4/3 32	2 IH 2 10 42 10	IH 2 52 10	IH 2 62 10	IH 2 72 10	IH 2 82 10	IH 2 92 10	IH 2 A2 10	IH 2 B2 10	IH 2 C2 10	IH 2 D2 10	IH 2 E2 10	IH F2
	MOVW EMACS	LBHI TRAI		TRAP	TRAF									
	ID-ID 4 SP 4	RL 4 IH	2 IH 2	IH 2			IH 2		IH 2	IH 2	IH 2	IH 2		IH
	03 5 13 3		10 43 10		63 10		83 10	93 10		B3 10	C3 10	D3 10	E3 10	F3
	MOVW EMULS	LBLS TRAI		TRAP	TRA									
	IM-EX 6 IH 2 04 6 14 12	RL 4 IH 24 4/3 34	2 IH 2 10 44 10		IH 2 64 10		IH 2 84 10	IH 2	IH 2 A4 10	IH 2 B4 10	IH 2 C4 10	IH 2	IH 2 E4 10	IH F4
	MOVW EDIVS	LBCC TRAI		TRAP	TRA									
	EX-EX 6 IH 2	RL 4 IH	2 IH 2		IH 2		IH 2	IH 2		IH 2	IH 2	IH 2	IH 2	IH
	05 5 15 12		10 45 10				85 10			B5 10		D5 10		F5
	MOVW IDIVS	LBCS TRAI		TRAP	TRA									
25	ID-EX 5 IH 2 06 2 16 2	RL 4 IH 26 4/3 36	2 IH 2 10 46 10	IH 2 56 10	IH 2	IH 2 76 10	IH 2 86 10	IH 2	IH 2 A6 10	IH 2 B6 10	IH 2 C6 10	IH 2 D6 10	IH 2 E6 10	IH F6
č	ABA SBA	LBNE TRA		TRAP	TRA									
ے	IH 2 IH 2	RL 4 IH	2 IH 2		IH 2		IH 2		IH 2		IH 2	IH 2	IH 2	
S12CPUV2	07 3 17 2		10 47 10		67 10		87 10	97 10		B7 10	C7 10	D7 10	E7 10	
	DAA CBA	LBEQ TRAI		TRAP	TRA									
Reference	IH 2 IH 2 08 4 18 4-7	RL 4 IH 28 4/3 38	2 IH 2 10 48 10		IH 2		IH 2 88 10	IH 2 98 10		IH 2 B8 10	IH 2 C8 10	IH 2 D8 10	IH 2 E8 10	IH F8
₫	MOVB MAXA	LBVC TRAI		TRAP	TRA									
್ದ	IM-ID 4 ID 3-5	RL 4 IH	2 IH 2	IH 2	IH 2	IH 2	IH 2	IH 2	IH 2	IH 2	IH 2	IH 2	IH 2	IH
	09 5 19 4-7		10 49 10				89 10	99 10		B9 10	C9 10	D9 10	E9 10	
=	MOVB MINA	LBVS TRAI		TRAP	TRA									
Manual,	EX-ID 5 ID 3-5 QA 5 IA 4-7	RL 4 IH 2A 4/3 3A 1	2 IH 2 3n 4A 10	IH 2 5A 10	IH 2 6A 10	IH 2 7A 10	IH 2 8A 10	IH 2 9A 10	IH 2 AA 10	IH 2 BA 10	IH 2 CA 10	IH 2 DA 10	IH 2 EA 10	IH FA
Ξ.	MOVB EMAXD	LBPL REV	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRA
Rev	ID-ID 4 ID 3-5	RL 4 SP	2 IH 2	IH 2		IH 2	IH							
	OB 4 1B 4-7	2B 4/3 3B †5n					8B 10	9B 10		BB 10	CB 10	DB 10	EB 10	
4.0	MOVB EMIND IM-EX 5 ID 3-5	RL 4 SP	/ TRAP	TRAP	TRAP	TRAP	TRAP IH 2	TRAP	TRAP	TRAP	TRAP IH 2	TRAP	TRAP	TRA
	0C 6 1C 4-7	2C 4/3 3C ±1			6C 10		8C 10	9C 10		BC 10	CC 10	DC 10	EC 10	
	MOVB MAXM	LBGE WAY	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRA
	EX-EX 6 ID 3-5	RL 4 SP	2 IH 2		IH 2		IH 2		IH 2	IH				
	0D 5 1D D4-7		‡6 4D 10		6D 10		8D 10	9D 10		BD 10	CD 10			FD
	MOVB MINM ID-EX 5 ID 3-5	RL 4 ID	TRAP	TRAP	TRAP	TRAP	TRAP IH 2	TRAP IH 2	TRAP	TRAP	TRAP IH 2	TRAP	TRAP	TRA
	0E 2 1E 4-7		\$ 4E 10				8E 10			BE 10	CE 10			FE
	TAB EMAXM	LBGT STOR		TRAP	TRA									
	IH 2 ID 3-5	RL 4 IH	2 IH 2	IH 2	IH 2		IH 2			IH 2		IH 2		IH
	OF 2 1F 4-7	2F 4/3 3F	10 4F 10		6F 10		8F 10	9F 10		BF 10	CF 10			FF
	TBA EMINM	LBLE ETBI	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRAP	TRA
	The opcode \$04 (on	RL 4 ID	3 ⊪ 2	IH 2	IH 2	IH 2	IH 2	IH 2		IH 2	IH 2		IH 2	IH

STZCFUVZ Keterence Manual, Kescale Semiconductor

39

sescale Semiconductor

399

Table A-3. Indexed Addressing Mode Postbyte Encoding (xb)

00	10	20	30	40	50	60	70	80	90	A0	B0	CO	DO	E0	FO
0,X	-16,X	1,+X	1,X+	0,Y	-16,Y	1,+Y	1,Y+	0,SP	-16,SP	1,+SP	1,SP+	0,PC	-16,PC	n,X	n,SP
5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	9b const	9b const
01 1.X	11 -15.X	21 2.+X	31 2.X+	41 1.Y	51 -15.Y	61 2.+Y	71 2.Y+	81 1.SP	91	A1 2.+SP	B1 2.SP+	C1 1.PC	-15.PC	E1	F1 -n.SP
1,X 5b const	-15,X 5b const	pre-inc	post-inc	5b const	-15,Y 5b const	pre-inc	post-inc	5b const	-15,SP 5b const	2,+SP pre-inc	2,SP+ post-inc	5b const	5b const	-n,X 9b const	9b const
02	12	22	32	42	52	62	72	82	92	A2	B2	C2	D2	E2	F2
2.X	-14.X	3.+X	3.X+	42 2.Y	-14.Y	3.+Y	3.Y+	2.SP	-14.SP	3.+SP	3.SP+	2.PC	-14,PC	n.X	n.SP
5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	16b const	16b const
03	13	23	33	43	53	63	73	83	93	A3	B3	C3	D3	E3	F3
3,X	-13,X	4,+X	4,X+	3,Y	-13,Y	4.+Y	4,Y+	3,SP	-13,SP	4,+SP	4,SP+	3,PC	-13,PC	[n,X]	[n,SP]
5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	16b indr	16b indr
04	14	24	34	44	54	64	74	84	94	A4	B4	C4	D4	E4	F4
4,X	-12,X	5,+X	5,X+	4,Y	-12,Y	5,+Y	5,Y+	4,SP	-12,SP	5,+SP	5,SP+	4,PC	-12,PC	AX	A,SP
5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	A offset	A offset
05	15	25	35	45	55	65	75	85 5.SP	95 -11.SP	A5 6.+SP	85 6.SP+	C5 5.PC	-11,PC	E5 B X	F5 B.SP
5,X 5b const	-11,X 5b const	6,+X pre-inc	6,X+ post-inc	5,Y 5b const	-11,Y 5b const	6,+Y pre-inc	6,Y+ post-inc	5,SP 5b const	-11,SP 5b const	b,+SP pre-inc	post-inc	5,PC 5b const	5b const	B offset	B offset
06	16	26	36	46	56	66	76	86	96	A6	P6	C6	D6	E6	F6
6.X	-10.X	7.+X	7.X+	6.Y	-10.Y	7.+Y	7.Y+	6.SP	-10.SP	7 ±SP	7.SP+	6 PC	-10.PC	Eo DX	D.SP
5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	D offset	D offset
07	17	27	37	47	57	67	77	87	97	A7	B7	C7	D7	E7	F7
7,X	-9,X	8,+X	8,X+	7,Y	-9,Y	8,+Y	8,Y+	7,SP	-9,SP	8,+SP	8,SP+	7,PC	-9,PC	[D,X]	[D,SP]
5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	pre-inc	post-inc	5b const	5b const	D indirect	D indirect
08	18	28	38	48	58	68	78	88	98	A8	B8	C8	D8	E8	F8
8,X	-8,X	8,-X	8,X-	8,Y	-8,Y	8,-Y	8,Y-	8,SP	-8,SP	8,-SP	8,SP-	8,PC	-8,PC	n,Y	n,PC
5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	9b const	9b const
09 9.X	19 -7.X	29 7X	39 7.X-	49 9.Y	59 -7.Y	69 7Y	79 7.Y-	9.SP	99 -7,SP	A9 7SP	89 7.SP=	9.PC	-7.PC	-n.Y	F9 -n.PC
5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	9b const	9b const
0A	1A	24	3A	4A	5A	5A	7A	84	9A	AA	BA.	CA	DA	FΔ	FΔ
10.X	-6.X	6X	6.X-	10.Y	-6.Y	6Y	6.Y-	10.SP	-6.SP	6SP	6.SP-	10.PC	-6.PC	n.Y	n.PC
5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	16b const	16b const
0B	1B	2B	3B	4B	5B	6B	7B	88	9B	AB	BB	СВ	DB	EB	FB
11,X	-5,X	5,-X	5,X-	11,Y	-5,Y	5,-Y	5,Y-	11,SP	-5,SP	5,-SP	5,SP-	11,PC	-5,PC	[n,Y]	[n,PC]
5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	16b indr	16b indr
OC	1C	2C	3C	4C	5C	6C	7C	8C	9C	AC	BC	cc	DC	EC	FC
12,X 5b const	-4,X 5b const	4,-X pre-dec	4,X- post-dec	12,Y 5b const	-4,Y 5b const	4,-Y pre-dec	4,Y- post-dec	12,SP 5b const	-4,SP 5b const	4,-SP pre-dec	4,SP- post-dec	12,PC 5b const	-4,PC 5b const	A,Y A offset	A,PC A offset
													DD COURT		
0D 13.X	1D -3.X	2D 3X	3D 3.X-	4D 13.Y	5D -3.Y	6D 3Y	7D 3.Y=	8D 13.SP	9D -3.SP	AD 3SP	BD 3.SP=	CD 13.PC	-3.PC	ED B.Y	FD B.PC
5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	B offset	B offset
0F	1F	2F	3F	4F	5F	6F	7F	8F	9F	ΔF	RF P	CF	DF	FF	FF
14.X	-2.X	2X	2.X-	14.Y	-2.Y	2Y	2.Y-	14.SP	-2.SP	2SP	2.SP-	14.PC	-2.PC	D.Y	D.PC
5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	D offset	D offset
0F	1F	2F	3F	4F	5F	6F	7F	8F	9F	AF	BF	CF	DF	EF	FF
15,X	-1,X	1,-X	1,X-	15,Y	-1,Y	1,-Y	1,Y-	15,SP	-1,SP	1,-SP	1,SP-	15,PC	-1,PC	[D,Y]	[D,PC]
5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	pre-dec	post-dec	5b const	5b const	D indirect	D indirect

Key to Table A-3

#,REG source code synt:

Table A-5. Transfer and Exchange Postbyte Encoding

	TRANSFERS												
↓LS	MS⇒	0	1	2	3	4	5	6	7				
0		$A \rightarrow A$	B ⇒ A	CCR ⇒ A	TMP3 <sub>L</sub> ⇒ A	B ⇒ A	$X_L \Rightarrow A$	$Y_L \Rightarrow A$	$SP_L \Rightarrow A$				
1		A → B	B ⇒ B	CCR ⇒ B	TMP3 <sub>L</sub> ⇒ B	B⇒B	$X_L \Rightarrow B$	$Y_L \Rightarrow B$	$SP_L \Rightarrow B$				
2		A ⇒ CCR	B ⇒ CCR	CCR ⇒ CCR	TMP3 <sub>L</sub> ⇒ CCR	B ⇒ CCR	$X_L \rightarrow CCR$	$Y_L \Rightarrow CCR$	$SP_L \Rightarrow CCR$				
3		sex:A ⇒ TMP2	sex:B ⇒ TMP2	sex:CCR ⇒ TMP2	TMP3 ⇒ TMP2	D ⇒ TMP2	X ⇒ TMP2	Y ⇒ TMP2	SP ⇒ TMP2				
4		sex:A ⇒ D SEX A,D	sex:B ⇒ D SEX B,D	sex:CCR ⇒ D SEX CCR,D	TMP3 ⇒ D	$D\toD$	$X \Rightarrow D$	$Y \Rightarrow D$	SP ⇒ D				
5		sex:A ⇒ X SEX A,X	sex:B ⇒ X SEX B,X	sex:CCR ⇒ X SEX CCR,X	TMP3 ⇒ X	$D \Rightarrow X$	X ⇒ X	$Y \to X$	$SP \Rightarrow X$				
6		sex:A ⇒ Y SEX A,Y	sex:B ⇒ Y SEX B,Y	sex:CCR ⇒ Y SEX CCR,Y	TMP3 ⇒ Y	$D \Rightarrow Y$	$X \Rightarrow Y$	$Y \to Y$	$SP \Rightarrow Y$				
7		sex:A ⇒ SP SEX A,SP	sex:B ⇒ SP SEX B,SP	sex:CCR ⇒ SP SEX CCR,SP	TMP3 ⇒ SP	D ⇒ SP	X ⇒ SP	Y ⇒ SP	SP ⇒ SP				
	EXCHANGES												
↓LS	MS⇒	8	9	A	В	С	D	E	F				
0		A oo A	B ⇔ A	CCR ⇔ A	$TMP3_L \Rightarrow A$ \$00:A $\Rightarrow TMP3$	$B \Rightarrow A$ $A \Rightarrow B$	$X_L \Rightarrow A$ \$00:A $\Rightarrow X$	$Y_L \Rightarrow A$ \$00:A $\Rightarrow Y$	$SP_L \Rightarrow A$ $$00:A \Rightarrow SP$				
1		A oo B	B ⇔ B	CCR ⇔ B	$TMP3_L \Rightarrow B$ $FF:B \Rightarrow TMP3$	$B \Rightarrow B$ \$FF $\Rightarrow A$	$X_L \Rightarrow B$ \$FF:B \Rightarrow X	$Y_L \Rightarrow B$ \$FF:B $\Rightarrow Y$	$SP_L \Rightarrow B$ $FF:B \Rightarrow SP$				
2		A co CCR	B ⇔ CCR	CCR ⇔ CCR	$TMP3_L \Rightarrow CCR$ \$FF:CCR $\Rightarrow TMP3$	$B \Rightarrow CCR$ \$FF:CCR $\Rightarrow$ D	$X_L \Rightarrow CCR$ \$FF:CCR $\Rightarrow X$	$Y_L \Rightarrow CCR$ \$FF:CCR $\Rightarrow$ Y	$SP_L \Rightarrow CCR$ \$FF:CCR $\Rightarrow$ SP				
3		$$00:A \Rightarrow TMP2$ $TMP2_L \Rightarrow A$	$$00:B \Rightarrow TMP2$ $TMP2_L \Rightarrow B$	$$00:CCR \Rightarrow TMP2$ $TMP2_L \Rightarrow CCR$	TMP3 ⇔ TMP2	D ⇔ TMP2	X oo TMP2	Y ⇔ TMP2	SP 👓 TMP2				
4		\$00:A ⇒ D	\$00:B ⇒ D	\$00:CCR ⇒ D B ⇒ CCR	TMP3 ⇔ D	D ⇔ D	X co D	Y ⇔ D	SP ⇔ D				
5		$$00:A \rightarrow X$ $X_L \rightarrow A$	$$00:B \Rightarrow X$ $X_L \Rightarrow B$	$$00:CCR \rightarrow X$ $X_L \rightarrow CCR$	TMP3 ⇔ X	D⇔X	X co X	Y ⇔ X	SP ⇔ X				
6	·	$$00:A \rightarrow Y$ $Y_L \rightarrow A$	$$00:B \Rightarrow Y$ $Y_L \Rightarrow B$	$$00:CCR \rightarrow Y$ $Y_L \rightarrow CCR$	TMP3 ⇔ Y	D ⇔ Y	X 00 Y	Y ⇔ Y	SP ⇔ Y				
7		$$00:A \Rightarrow SP$ $SP_1 \Rightarrow A$	$$00:B \Rightarrow SP$ $SP_L \Rightarrow B$	$$00:CCR \rightarrow SP$ $SP_L \rightarrow CCR$	TMP3 ⇔ SP	D ⇔ SP	X ⇔ SP	Y ⇔ SP	SP ⇔ SP				

TMP2 and TMP3 registers are for factory use only.

### Table A-4. Indexed Addressing Mode Summary

Postbyte Code (xb)	Operand Syntax	Comments
rr0nnnn	,r n,r –n,r	5-bit constant offset n = -16 to +15 rr can specify X, Y, SP, or PC
111rr0zs	n,r -n,r	Constant offset (9- or 16-bit signed) 2- 0 = 9-bit with sign in LSB of postbyte (s) 1 = 16-bit If z = s = 1, 16-bit offset indexed-indirect (see below) rr can specify X, Y, SP, or PC
rr1pnnnn	n,-r n,+r n,r- n,r+	Auto predecrement, preincrement, postdecrement, or postincrement; $p=pre-(0) \text{ or post-}(1), n=-8 \text{ to }-1, +1 \text{ to }+8 \\ \text{rr can specify X, Y, or SP (PC not a valid choice)}$
111rr1aa	A,r B,r D,r	Accumulator offset (unsigned 8-bit or 16-bit) aa - 00 = A 01 = B 10 = D (16-bit) 11 = see accumulator D offset indexed-indirect rr can specify X, Y, SP, or PC
111rr011	[n,r]	16-bit offset indexed-indirect rr can specify X, Y, SP, or PC
11111111	[D,r]	Accumulator D offset indexed-indirect rr can specify X, Y, SP, or PC

### S12CPUV2 Reference Manual, Rev. 4.0

398

Freescale Semiconductor

### Table A-6. Loop Primitive Postbyte Encoding (lb)

00 A DBEQ	10 A DBEQ	20 A DBNE	30 A DBNE	40 A TBEQ	50 A TBEQ	60 A TBNE	70 A TBNE	80 A IBEQ	90 A IBEQ	A0 A IBNE	B0 A IBNE
(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)
	11 B	21 B	31 B		51 B	61 B	71 B	81 B	91 B	A1 B	B1 B
DBEQ	DBEQ	DBNE	DBNE	TBEQ	TBEQ	TBNE	TBNE	IBEQ	IBEQ	IBNE	IBNE
(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)
02	12	22	32	42	52	62	72	82	92	A2	B2
-	_	_	_	_	_	_	_	_	_	_	_
03	13	23	33	43	53	63	73	83	93	A3	B3
-			-	· -			· -	-		-	
04 D	14 D	24 D	34 D	44 D	54 D	64 D	74 D	84 D	94 D	A4 D	B4 D
DBEQ	DBEQ	DBNE	DBNE	TBEQ	TBEQ	TBNE	TBNE	IBEQ	IBEQ	IBNE	IBNE
(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)
	15 X	25 X	35 X				75 X	85 X	95 X	A5 X	B5 X
DBEQ	DBEQ	DBNE	DBNE	TBEQ	TBEQ	TBNE	TBNE	IBEQ	IBEQ	IBNE	IBNE
(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)
	16 Y	26 Y	36 Y			66 Y	76 Y	86 Y	96 Y		B6 Y
DBEQ	DBEQ	DBNE	DBNE	TBEQ	TBEQ	TBNE	TBNE	IBEQ	IBEQ	IBNE	IBNE
(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)
	17 SP	27 SP	37 SP				77 SP	87 SP	97 SP	A7 SP	B7 SP
DBEQ	DBEQ	DBNE	DBNE	TBEQ	TBEQ	TBNE	TBNE	IBEQ	IBEQ	IBNE	IBNE
(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)	(+)	(-)
	K	Cey to Tal	ole A-6								

positbyte (hex)
(bit 3 is don't care)

B0
BEQ
branch condition

B0
BEQ
sign of 9-bit relative branch offset (lower eight bits are an extension byte following postbyte)

Table A-7. Branch/Complementary Branch

	Br	anch			Complemen	tary Branch	
Test	Mnemonic	Opcode	Boolean	Test	Mnemonic	Opcode	Comment
r>m	BGT	2E	$Z + (N \oplus V) = 0$	r≤m	BLE	2F	Signed
r≥m	BGE	2C	N ⊕ V = 0	r <m< td=""><td>BLT</td><td>2D</td><td>Signed</td></m<>	BLT	2D	Signed
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Signed
r≤m	BLE	2F	$Z + (N \oplus V) = 1$	r>m	BGT	2E	Signed
r <m< td=""><td>BLT</td><td>2D</td><td>N ⊕ V = 1</td><td>r≥m</td><td>BGE</td><td>2C</td><td>Signed</td></m<>	BLT	2D	N ⊕ V = 1	r≥m	BGE	2C	Signed
r>m	BHI	22	C + Z = 0	r≤m	BLS	23	Unsigned
r≥m	BHS/BCC	24	C = 0	r <m< td=""><td>BLO/BCS</td><td>25</td><td>Unsigned</td></m<>	BLO/BCS	25	Unsigned
r=m	BEQ	27	Z = 1	r≠m	BNE	26	Unsigned
r≤m	BLS	23	C + Z = 1	r>m	BHI	22	Unsigned
r <m< td=""><td>BLO/BCS</td><td>25</td><td>C = 1</td><td>r≥m</td><td>BHS/BCC</td><td>24</td><td>Unsigned</td></m<>	BLO/BCS	25	C = 1	r≥m	BHS/BCC	24	Unsigned
Carry	BCS	25	C = 1	No Carry	BCC	24	Simple
Negative	BMI	2B	N = 1	Plus	BPL	2A	Simple
Overflow	BVS	29	V = 1	No Overflow	BVC	28	Simple
r=0	BEQ	27	Z = 1	r≠0	BNE	26	Simple
Always	BRA	20	_	Never	BRN	21	Unconditional

For 16-bit offset long branches precede opcode with a \$18 page prebyte.

### S12CPUV2 Reference Manual, Rev. 4.0

400 Freescale Semiconductor

Table A-8. Hexadecimal to ASCII Conversion

Hex	ASCII	Hex	ASCII	Hex	ASCII	Hex	ASCII
\$00	NUL	\$20	SP space	\$40	@	\$60	grave
\$01	SOH	\$21	!	\$41	Α	\$61	а
\$02	STX	\$22	" quote	\$42	В	\$62	b
\$03	ETX	\$23	#	\$43	С	\$63	С
\$04	EOT	\$24	\$	\$44	D	\$64	d
\$05	ENQ	\$25	%	\$45	E	\$65	е
\$06	ACK	\$26	&	\$46	F	\$66	f
\$07	BEL beep	\$27	' apost.	\$47	G	\$67	g
\$08	BS back sp	\$28	(	\$48	н	\$68	h
\$09	HT tab	\$29	)	\$49	1	\$69	i
\$0A	LF linefeed	\$2A		\$4A	J	\$6A	j
\$0B	VT	\$2B	+	\$4B	K	\$6B	k
\$0C	FF	\$2C	, comma	\$4C	L	\$6C	1
\$0D	CR return	\$2D	- dash	\$4D	M	\$6D	m
\$0E	SO	\$2E	. period	\$4E	N	\$6E	n
\$0F	SI	\$2F	/	\$4F	0	\$6F	0
\$10	DLE	\$30	0	\$50	Р	\$70	р
\$11	DC1	\$31	1	\$51	Q	\$71	q
\$12	DC2	\$32	2	\$52	R	\$72	r
\$13	DC3	\$33	3	\$53	S	\$73	s
\$14	DC4	\$34	4	\$54	T	\$74	t
\$15	NAK	\$35	5	\$55	U	\$75	u
\$16	SYN	\$36	6	\$56	V	\$76	V
\$17	ETB	\$37	7	\$57	W	\$77	w
\$18	CAN	\$38	8	\$58	Х	\$78	x
\$19	EM	\$39	9	\$59	Υ	\$79	у
\$1A	SUB	\$3A	:	\$5A	Z	\$7A	z
\$1B	ESCAPE	\$3B	;	\$5B	[	\$7B	{
\$1C	FS	\$3C	<	\$5C	\	\$7C	1
\$1D	GS	\$3D	=	\$5D	]	\$7D	}
\$1E	RS	\$3E	>	\$5E	^	\$7E	~
\$1F	US	\$3F	?	\$5F	_ under	\$7F	DEL delete

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 4

### Reference Manual — S12CPUV2

### Appendix B. M68HC11 to CPU12 Upgrade Path

### **B.1 Introduction**

This appendix discusses similarities and differences between the CPU12 and the M68HC11 CPU. In general, the CPU12 is a proper superset of the M68HC11. Significant changes have been made to improve the efficiency and capabilities of the CPU12 without eliminating compatibility and familiarity for the large community of M68HC11 programmers.

### **B.2 CPU12 Design Goals**

The primary goals of the CPU12 design were:

- Absolute source code compatibility with the M68HC11
- Same programming model
- Same stacking operations
- Upgrade to 16-bit architecture
- Eliminate extra byte/extra cycle penalty for using index register Y
- Improve performance
- Improve compatibility with high-level languages

#### A.5 Hexadecimal to Decimal Conversion

To convert a hexadecimal number (up to four hexadecimal digits) to decimal, look up the decimal equivalent of each hexadecimal digit in **Table A-9**. The decimal equivalent of the original hexadecimal number is the sum of the weights found in the table for all hexadecimal digits.

Table A-9. Hexadecimal to/from Decimal Conversion

15	E	Bit	8	7	E	Bit	0
15	12	11	8	7	4	3	0
4th	Hex Digit	3rd	Hex Digit	2nd	Hex Digit	1st	Hex Digit
Hex	Decimal	Hex	Decimal	Hex	Decimal	Hex	Decimal
0	0	0	0	0	0	0	0
1	4,096	1	256	1	16	1	1
2	8,192	2	512	2	32	2	2
3	12,288	3	768	3	48	3	3
4	16,384	4	1,024	4	64	4	4
5	20,480	5	1,280	5	80	5	5
6	24,576	6	1,536	6	96	6	6
7	28,672	7	1,792	7	112	7	7
8	32,768	8	2,048	8	128	8	8
9	36,864	9	2,304	9	144	9	9
Α	40,960	A	2,560	Α	160	Α	10
В	45,056	В	2,816	В	176	В	11
С	49,152	С	3,072	С	192	С	12
D	53,248	D	3,328	D	208	D	13
E	57,344	E	3,484	E	224	E	14
F	61,440	F	3,840	F	240	F	15

#### A.6 Decimal to Hexadecimal Conversion

To convert a decimal number (up to 65,535<sub>10</sub>) to hexadecimal, find the largest decimal number in **Table A-9** that is less than or equal to the number you are converting. The corresponding hexadecimal digit is the most significant hexadecimal digit of the result. Subtract the decimal number found from the original decimal number to get the *remaining decimal value*. Repeat the procedure using the remaining decimal value for each subsequent hexadecimal digit.

S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor

### **B.3 Source Code Compatibility**

Every M68HC11 instruction mnemonic and source code statement can be assembled directly with a CPU12 assembler with no modifications.

The CPU12 supports all M68HC11 addressing modes and includes several new variations of indexed addressing mode. CPU12 instructions affect condition code bits in the same way as M68HC11 instructions.

CPU12 object code is similar to but not identical to M68HC11 object code. Some primary objectives, such as the elimination of the penalty for using Y, could not be achieved without object code differences. While the object code has been changed, the majority of the opcodes are identical to those of the M6800, which was developed more than 20 years earlier.

The CPU12 assembler automatically translates a few M68HC11 instruction mnemonics into functionally equivalent CPU12 instructions. For example, the CPU12 does not have an increment stack pointer (INS) instruction, so the INS mnemonic is translated to LEAS 1,S. The CPU12 does provide single-byte DEX, DEY, INX, and INY instructions because the LEAX and LEAY instructions do not affect the condition codes, while the M68HC11 instructions update the Z bit according to the result of the decrement or increment

Table B-1 shows M68HC11 instruction mnemonics that are automatically translated into equivalent CPU12 instructions. This translation is performed by the assembler so there is no need to modify an old M68HC11 program to assemble it for the CPU12. In fact, the M68HC11 mnemonics can be used in new CPU12 programs.

Table B-1. Translated M68HC11 Mnemonics

M68HC11 Mnemonic	Equivalent CPU12 Instruction	Comments
ABX ABY	LEAX B,X	Since CPU12 has accumulator offset indexing, ABX and ABY are rarely used in new CPU12 programs. ABX is one byte on M68HC11 but ABY is two bytes. The LEA substitutes are two bytes.

Continued on next page

Table B-1, Translated M68HC11 Mnemonics (Continued)

M68HC11 Mnemonic	Equivalent CPU12 Instruction	Comments
CLC CLI CLV SEC SEI SEV	ANDCC #\$FE ANDCC #\$EF ANDCC #\$FD ORCC #\$01 ORCC #\$10 ORCC #\$02	ANDCC and ORCC now allow more control over the CCR, including the ability to set or clear multiple bits in a single instruction. These instructions take one byte each on M68HC11 while the ANDCC and ORCC equivalents take two bytes each.
DES INS	LEAS -1,S LEAS 1,S	Unlike DEX and INX, DES and INS did not affect CCR bits in the M68HC11, so the LEAS equivalents in CPU12 duplicate the function of DES and INS. These instructions are one byte on M68HC11 and two bytes on CPU12.
TAP TPA TSX TSY TXS TYS XGDX XGDY	TFR A,CCR TFR CCR,A TFR S,Y TFR S,Y TFR X,S TFR Y,S EXG D,X EXG D,Y	The M68HC11 has a small collection of specific transfer and exchange instructions. CPU12 expanded this to allow transfer or exchange between any two CPU registers. For all but TSY and TYS (which take two bytes on either CPU), the CPU12 transfer/exchange costs one extra byte compared to the M68HC11. The substitute instructions execute in one cycle rather than two.

All of the translations produce the same amount of or slightly more object code than the original M68HC11 instructions. However, there are offsetting savings in other instructions. Y-indexed instructions in particular assemble into one byte less object code than the same M68HC11 instruction.

The CPU12 has a 2-page opcode map, rather than the 4-page M68HC11 map. This is largely due to redesign of the indexed addressing modes. Most of pages 2, 3, and 4 of the M68HC11 opcode map are required because Y-indexed instructions use different opcodes than X-indexed instructions. Approximately two-thirds of the M68HC11 page 1 opcodes are unchanged in CPU12, and some M68HC11 opcodes have been moved to page 1 of the CPU12 opcode map. Object code for each of the moved instructions is one byte smaller than object code for the equivalent M68HC11 instruction. Table B-2 shows instructions that assemble to one byte less object code on

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

### **B.4 Programmer's Model and Stacking**

The CPU12 programming model and stacking order are identical to those of the M68HC11.

### **B.5 True 16-Bit Architecture**

The M68HC11 is a direct descendant of the M6800, one of the first microprocessors, which was introduced in 1974. The M6800 was strictly an 8-bit machine, with 8-bit data buses and 8-bit instructions. As Freescale devices evolved from the M6800 to the M68HC11, a number of 16-bit instructions were added, but the data buses remained eight bits wide, so these instructions were performed as sequences of 8-bit operations. The CPU12 is a true 16-bit implementation, but it retains the ability to work with the mostly 8-bit M68HC11 instruction set. The larger arithmetic logic unit (ALU) of the CPU12 (it can perform some 20-bit operations) is used to calculate 16-bit pointers and to speed up math operations.

### **B.5.1 Bus Structures**

Freescale Semiconductor

The CPU12 is a 16-bit processor with 16-bit data paths. Typical HCS12 and M68HC12 devices have internal and external 16-bit data paths, but some derivatives incorporate operating modes that allow for an 8-bit data bus, so that a system can be built with low-cost 8-bit program memory. HCS12 and M68HC12 MCUs include an on-chip integration module that manages the external bus interface. When the CPU makes a 16-bit access to a resource that is served by an 8-bit bus, the integration module performs two 8-bit accesses, freezes the CPU clocks for part of the sequence, and assembles the data into a 16-bit word. As far as the CPU is concerned, there is no difference between this access and a 16-bit access to an internal resource via the 16-bit data bus. This is similar to the way an M68HC11 can stretch clock cycles to accommodate slow peripherals.

S12CPUV2 Reference Manual, Rev. 4.0

Table B-2. Instructions with Smaller Object Code

Instruction	Comments
DEY INY	Page 2 opcodes in M68HC11 but page 1 in CPU12
INST n,Y	For values of n less than 16 (the majority of cases). Were on page 2, now are on page 1, applies to BSET, BCLR, BRSET, BRCLR, NEG, COM, LSR, ROR, ASR, ASL, ROL, DEC, INC, TST, JMP, CLR, SUB, CMP, SBC, SUBD, ADDD, AND, BIT, LDA, STA, EOR, ADC, ORA, ADD, JSR, LDS, and STS. If X is the index reference and the offset is greater than 15 (much less frequent than offsets of 0, 1, and 2), the CPU12 instruction assembles to one byte more of object code than the equivalent M68HC11 instruction.
PSHY PULY	Were on page 2, now are on page 1
LDY STY CPY	Were on page 2, now are on page 1
CPY n,Y LDY n,Y STY n,Y	For values of n less than 16 (the majority of cases); were on page 3, now are on page 1
CPD	Was on page 2, 3, or 4, now on page 1. In the case of indexed with offset greater than 15, CPU12 and M68HC11 object code are the same size.

Instruction set changes offset each other to a certain extent. Programming style also affects the rate at which instructions appear. As a test, the BUFFALO monitor, an 8-Kbyte M68HC11 assembly code program, was reassembled for the CPU12. The resulting object code is six bytes smaller than the M68HC11 code. It is fair to conclude that M68HC11 code can be reassembled with very little change in size.

The relative size of code for M68HC11 vs. code for CPU12 has also been tested by rewriting several smaller programs from scratch. In these cases, the CPU12 code is typically about 30 percent smaller. These savings are mostly due to improved indexed addressing.

It seems useful to mention the results of size comparisons done on C programs. A C program compiled for the CPU12 is about 30 percent smaller than the same program compiled for the M68HC11. The savings are largely due to better indexing.

#### S12CPUV2 Reference Manual, Rev. 4.0

406 Freescale Semiconductor

### **B.5.2 Instruction Queue**

The CPU12 has a 2-word instruction queue and a 16-bit holding buffer, which sometimes acts as a third word for queueing program information. All program information is fetched from memory as aligned 16-bit words, even though there is no requirement for instructions to begin or end on even word boundaries. There is no penalty for misaligned instructions. If a program begins on an odd boundary (if the reset vector is an odd address), program information is fetched to fill the instruction queue, beginning with the aligned word at the next address below the misaligned reset vector. The instruction queue logic starts execution with the opcode in the low-order half of this

The instruction queue causes three bytes of program information (starting with the instruction opcode) to be directly available to the CPU at the beginning of every instruction. As it executes, each instruction performs enough additional program fetches to refill the space it took up in the queue. Alignment information is maintained by the logic in the instruction queue. The CPU provides signals that tell the queue logic when to advance a word of program information and when to toggle the alignment status.

The CPU is not aware of instruction alignment. The gueue logic includes a multiplexer that sorts out the information in the queue to present the opcode and the next two bytes of information as CPU inputs. The multiplexer determines whether the opcode is in the even or odd half of the word at the head of the queue. Alignment status is also available to the ALU for address calculations. The execution sequence for all instructions is independent of the alignment of the instruction.

The only situation where alignment can affect the number of cycles an instruction takes occurs in devices that have a narrow (8-bit) external data bus and is related to optional program fetch cycles (O type cycles). O cycles are always performed, but serve different purposes determined by instruction size and alignment.

Each instruction includes one program fetch cycle for every two bytes of object code. Instructions with an odd number of bytes can use an O cycle to fetch an extra word of object code. If the queue is aligned at the start of an instruction with an odd byte count, the last byte of object code shares a queue word with the opcode of the next instruction. Since this word holds part of the next instruction, the queue cannot advance after the odd byte executes because the first byte of the next instruction would be lost. In this case, the O cycle appears as a free cycle since the queue is not ready to accept the next word of program information. If this same instruction had

been misaligned, the queue would be ready to advance and the O cycle would be used to perform a program word fetch.

In a single-chip system or in a system with the program in 16-bit memory, both the free cycle and the program fetch cycle take one bus cycle. In a system with the program in an external 8-bit memory, the O cycle takes one bus cycle when it appears as a free cycle, but it takes two bus cycles when used to perform a program fetch. In this case, the on-chip integration module freezes the CPU clocks long enough to perform the cycle as two smaller accesses. The CPU handles only 16-bit data, and is not aware that the 16-bit program access is split into two 8-bit accesses.

To allow development systems to track events in the CPU12 instruction queue, two status signals (IPIPE[1:0]) provide information about data movement in the queue and about the start of instruction execution. A development system can use this information along with address and data information to externally reconstruct the queue. This representation of the queue can also track both the data and address buses.

#### **B.5.3 Stack Function**

Both the M68HC11 and the CPU12 stack nine bytes for interrupts. Since this is an odd number of bytes, there is no practical way to ensure that the stack will stay aligned. To ensure that instructions take a fixed number of cycles regardless of stack alignment, the internal RAM in M68HC12 MCUs is designed to allow single cycle 16-bit accesses to misaligned addresses. As long as the stack is located in this special RAM, stacking and unstacking operations take the same amount of execution time, regardless of stack alignment. If the stack is located in an external 16-bit RAM, a PSHX instruction can take two or three cycles depending on the alignment of the stack. This extra access time is transparent to the CPU because the integration module freezes the CPU clocks while it performs the extra 8-bit bus cycle required for a misaligned stack operation.

The CPU12 has a "last-used" stack rather than a "next-available" stack like the M68HC11 CPU. That is, the stack pointer points to the last 16-bit stack address used, rather than to the address of the next available stack location. This generally has very little effect, because it is very unusual to access stacked information using absolute addressing. The change allows a 16-bit word of data to be removed from the stack without changing the value of the SP twice.

To illustrate, consider the operation of a PULX instruction. With the next-available M68HC11 stack, if the SP = \$01F0 when execution begins,

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 409

The M68HC11 has one variation of indexed addressing that works from X or Y as the reference pointer. For X indexed addressing, an 8-bit unsigned offset in the instruction is added to the index pointer to arrive at the address of the operand for the instruction. A load accumulator instruction assembles into two bytes of object code, the opcode and a 1-byte offset. Using Y as the reference, the same instruction assembles into three bytes (a page prebyte, the opcode, and a 1-byte offset.) Analysis of M68HC11 source code indicates that the offset is most frequently zero and seldom greater than four.

The CPU12 indexed addressing scheme uses a postbyte plus 0, 1, or 2 extension bytes after the instruction opcode. These bytes specify which index register is used, determine whether an accumulator is used as the offset, implement automatic pre/post increment/decrement of indices, and allow a choice of 5-, 9-, or 16-bit signed offsets. This approach eliminates the differences between X and Y register use and dramatically enhances indexed addressing capabilities.

Major improvements that result from this new approach are:

- Stack pointer can be used as an index register in all indexed operations (very important for C compilers)
- Program counter can be used as index register in all but auto inc/dec modes
- Accumulator offsets allowed using A, B, or D accumulators
- Automatic pre- or post- increment or decrement by -8 to +8
- 5-bit, 9-bit, or 16-bit signed constant offsets (M68HC11 only supported positive unsigned 8-bit offsets)
- 16-bit offset indexed-indirect and accumulator D offset indexed-indirect

The change completely eliminates pages three and four of the M68HC11 opcode map and eliminates almost all instructions from page two of the opcode map. For offsets of 0 to +15 from the X index register, the object code is the same size as it was for the M68HC11. For offsets of 0 to +15 from the Y index register, the object code is one byte smaller than it was for the M68HC11.

Table A-3 and Table A-4 summarize CPU12 indexed addressing mode capabilities. Table A-6 shows how the postbyte is encoded.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 411 412 Freescale Semiconductor

the sequence of operations is: SP = SP + 1; load X from \$01F1:01F2; SP = SP + 1; and the SP ends up at \$01F2. With the last-used CPU12 stack, if the SP = \$01F0 when execution begins, the sequence is: load X from \$01F0:01F1; SP = SP + 2; and the SP again ends up at \$01F2. The second sequence requires one less stack pointer adjustment.

The stack pointer change also affects operation of the TSX and TXS instructions. In the M68HC11, TSX increments the SP by one during the transfer. This adjustment causes the X index to point to the last stack location used. The TXS instruction operates similarly, except that it decrements the SP by one during the transfer. CPU12 TSX and TXS instructions are ordinary transfers — the CPU12 stack requires no adjustment.

For ordinary use of the stack, such as pushes, pulls, and even manipulations involving TSX and TXS, there are no differences in the way the M68HC11 and the CPU12 stacks look to a programmer. However, the stack change can affect a program algorithm in two subtle ways.

The LDS #\$xxxx instruction is normally used to initialize the stack pointer at the start of a program. In the M68HC11, the address specified in the LDS instruction is the first stack location used. In the CPU12, however, the first stack location used is one address lower than the address specified in the LDS instruction. Since the stack builds downward, M68HC11 programs reassembled for the CPU12 operate normally, but the program stack is one physical address lower in memory.

In very uncommon situations, such as test programs used to verify CPU operation, a program could initialize the SP, stack data, and then read the stack via an extended mode read (it is normally improper to read stack data from an absolute extended address). To make an M68HC11 source program that contains such a sequence work on the CPU12, change either the initial LDS #\$xxxx or the absolute extended address used to read the

### **B.6 Improved Indexing**

The CPU12 has significantly improved indexed addressing capability, yet retains compatibility with the M68HC11. The one cycle and one byte cost of doing Y-related indexing in the M68HC11 has been eliminated. In addition, high-level language requirements, including stack relative indexing and the ability to perform pointer arithmetic directly in the index registers, have been accommodated.

#### S12CPUV2 Reference Manual, Rev. 4.0

410 Freescale Semiconductor

### **B.6.1 Constant Offset Indexing**

The CPU12 offers three variations of constant offset indexing to optimize the efficiency of object code generation.

The most common constant offset is 0. Offsets of 1, 2, 3, 4 are used fairly often, but with less frequency than 0.

The 5-bit constant offset variation covers the most frequent indexing requirements by including the offset in the postbyte. This reduces a load accumulator indexed instruction to two bytes of object code, and matches the object code size of the smallest M68HC11 indexed instructions, which can only use X as the index register. The CPU12 can use X, Y, SP, or PC as the index reference with no additional object code size cost.

The signed 9-bit constant offset indexing mode covers the same positive range as the M68HC11 8-bit unsigned offset. The size was increased to nine bits with the sign bit (ninth bit) included in the postbyte, and the remaining 8 bits of the offset in a single extension byte.

The 16-bit constant offset indexing mode allows indexed access to the entire normal 64-Kbyte address space. Since the address consists of 16 bits, the 16-bit offset can be regarded as a signed (–32,768 to +32,767) or unsigned (0 to 65,535) value. In 16-bit constant offset mode, the offset is supplied in two extension bytes after the opcode and postbyte.

#### **B.6.2 Auto-Increment Indexing**

The CPU12 provides greatly enhanced auto increment and decrement modes of indexed addressing. In the CPU12, the index modification may be specified for before the index is used (pre-), or after the index is used (post-), and the index can be incremented or decremented by any amount from one to eight, independent of the size of the operand that was accessed. X, Y, and SP can be used as the index reference, but this mode does not allow PC to be the index reference (this would interfere with proper program execution).

This addressing mode can be used to implement a software stack structure or to manipulate data structures in lists or tables, rather than manipulating bytes or words of data. Anywhere an M68HC11 program has an increment or decrement index register operation near an indexed mode instruction, the increment or decrement operation can be combined with the indexed instruction with no cost in object code size, as shown in the following code comparison.

18 A6 00	LDAA 0,Y		
18 08	INY	A6 71	LDAA 2,Y+
18 08	INY		

The M68HC11 object code requires seven bytes, while the CPU12 requires only two bytes to accomplish the same functions. Three bytes of M68HC11 code were due to the page prebyte for each Y-related instruction (\$18). CPU12 post-increment indexing capability allowed the two INY instructions to be absorbed into the LDAA indexed instruction. The replacement code is not identical to the original 3-instruction sequence because the Z condition code bit is affected by the M68HC11 INY instructions, while the Z bit in the CPU12 would be determined by the value loaded into A.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 4

### **B.7 Improved Performance**

The HCS12 uses a system-on-a-chip (SoC) design methodology and is normally implemented in a 0.25µ FLASH process. HCS12 devices can operate at up to 25 MHz and are designed to be migrated easily to faster, smaller silicon process technologies as they are developed.

The M68HC12 improves on M68HC11 performance in several ways. M68HC12 devices are designed using sub-micron design rules and fabricated using advanced semiconductor processing, the same methods used to manufacture the M68HC16 and M68300 Families of modular microcontrollers. M68HC12 devices have a base bus speed of 8 MHz and are designed to operate over a wide range of supply voltages.

The 16-bit wide architecture of the CPU12 also increases performance. Beyond these obvious improvements, the CPU12 uses a reduced number of cycles for many of its instructions, and a 20-bit ALU makes certain CPU12 math operations much faster.

### **B.7.1 Reduced Cycle Counts**

No M68HC11 instruction takes less than two cycles, but the CPU12 has more than 50 opcodes that take only one cycle. Some of the reduction comes from the instruction queue, which ensures that several program bytes are available at the start of each instruction. Other cycle reductions occur because the CPU12 can fetch 16 bits of information at a time, rather than eight bits at a time.

### B.7.2 Fast Math

The CPU12 has some of the fastest math ever designed into a Freescale general-purpose MCU. Much of the speed is due to a 20-bit ALU that can perform two smaller operations simultaneously. The ALU can also perform two operations in a single bus cycle in certain cases.

Table B-3 compares the speed of CPU12 and M68HC11 math instructions. The CPU12 requires fewer cycles to perform an operation, and the cycle time is considerably faster than that of the M68HC11.

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 415 416 Freescale Semiconductor

#### **B.6.3 Accumulator Offset Indexing**

This indexed addressing variation allows the programmer to use either an 8-bit accumulator (A or B) or the 16-bit D accumulator as the offset for indexed addressing. This allows for a program-generated offset, which is more difficult to achieve in the M68HC11. The following code compares the M68HC11 and CPU12 operations.

C6	05		LDAB		#\$5	[2]							
CE	10	00	LOOP	LDX	#\$1000	[3]	C6	05		LDAB	#\$5		[1]
3A			ABX			[3]	CE	10	00	LDX	#\$100	0	[2]
A6	00		LDAA		0,X	[4]	A6	E5		LOOP	LDAA	B,X	[3]
5A			DECB			[2]	04	31	FB	DBNE	B,LC	OP	[3]
26	F7		BNE		LOOP	[3]							

The CPU12 object code is only one byte smaller, but the LDX # instruction is outside the loop. It is not necessary to reload the base address in the index register on each pass through the loop because the LDAA B,X instruction does not alter the index register. This reduces the loop execution time from 15 cycles to six cycles. This reduction, combined with the 25-MHz bus speed of the HCS12 (M68HC12) Family, can have significant effects.

#### **B.6.4 Indirect Indexing**

The CPU12 allows some forms of indexed indirect addressing where the instruction points to a location in memory where the address of the operand is stored. This is an extra level of indirection compared to ordinary indexed addressing. The two forms of indexed indirect addressing are 16-bit constant offset indexed indirect and D accumulator indexed indirect. The reference index register can be X, Y, SP, or PC as in other CPU12 indexed addressing modes. PC-relative indirect addressing is one of the more common uses of indexed indirect addressing. The indirect variations of indexed addressing help in the implementation of pointers. D accumulator indexed indirect addressing can be used to implement a runtime computed GOTO function. Indirect addressing is also useful in high-level language compilers. For instance, PC-relative indirect indexing can be used to efficiently implement some C case statements.

### S12CPUV2 Reference Manual, Rev. 4.0

414 Freescale Semiconductor

Table B-3. Comparison of Math Instruction Speeds

Instruction Mnemonic	Math Operation	M68HC11 1 Cycle = 250 ns	M68HC11 With Coprocessor 1 Cycle = 250 ns	CPU12 1 Cycle = 40 ns (125 ns in M68HC12)
MUL	8 × 8 = 16 (signed)	10 cycles	_	3 cycles
EMUL	16 × 16 = 32 (unsigned)	_	20 cycles	3 cycles
EMULS	16 × 16 = 32 (signed)	_	20 cycles	3 cycles
IDIV	16 ÷ 16 = 16 (unsigned)	41 cycles	_	12 cycles
FDIV	16 ÷ 16 = 16 (fractional)	41 cycles	_	12 cycles
EDIV	32 ÷ 16 = 16 (unsigned)	_	33 cycles	11 cycles
EDIVS	32 ÷ 16 = 16 (signed)	_	37 cycles	12 cycles
IDIVS	16 ÷ 16 = 16 (signed)	_	_	12 cycles
EMACS	32 × (16 × 16) ⇒ 32 (signed MAC)	_	20 cycles	12 cycles

The IDIVS instruction is included specifically for C compilers, where word-sized operands are divided to produce a word-sized result (unlike the  $32 \div 16 = 16$  EDIV). The EMUL and EMULS instructions place the result in registers so a C compiler can choose to use only 16 bits of the 32-bit result.

### **B.7.3 Code Size Reduction**

CPU12 assembly language programs written from scratch tend to be 30 percent smaller than equivalent programs written for the M68HC11. This figure has been independently qualified by Freescale programmers and an independent C compiler vendor. The major contributors to the reduction appear to be improved indexed addressing and the universal transfer/exchange instruction.

In some specialized areas, the reduction is much greater. A fuzzy logic inference kernel requires about 250 bytes in the M68HC11, and the same program for the CPU12 requires about 50 bytes. The CPU12 fuzzy logic

instructions replace whole subroutines in the M68HC11 version. Table lookup instructions also greatly reduce code space.

Other CPU12 code space reductions are more subtle. Memory-to-memory moves are one example. The CPU12 move instruction requires almost as many bytes as an equivalent sequence of M68HC11 instructions, but the move operations themselves do not require the use of an accumulator. This means that the accumulator often need not be saved and restored, which saves instructions.

Arithmetic operations on index pointers are another example. The M68HC11 usually requires that the content of the index register be moved into accumulator D, where calculations are performed, then back to the index register before indexing can take place. In the CPU12, the LEAS, LEAX, and LEAY instructions perform arithmetic operations directly on the index pointers. The pre-/post-increment/decrement variations of indexed addressing also allow index modification to be incorporated into an existing indexed instruction rather than performing the index modification as a separate operation.

Transfer and exchange operations often allow register contents to be temporarily saved in another register rather than having to save the contents in memory. Some CPU12 instructions such as MIN and MAX combine the actions of several M68HC11 instructions into a single operation.

### **B.8 Additional Functions**

The CPU12 incorporates a number of new instructions that provide added functionality and code efficiency. Among other capabilities, these new instructions allow efficient processing for fuzzy logic applications and support subroutine processing in extended memory beyond the standard 64-Kbyte address map for M68HC12 devices incorporating this feature. Table B-4 is a summary of these new instructions. Subsequent paragraphs discuss significant enhancements.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 41

### Table B-4. New M68HC12 Instructions (Sheet 2 of 2)

Mnemonic	Addressing Modes	Brief Functional Description
LBLT	Relative	Long branch if less than zero
LBMI	Relative	Long branch if minus
LBNE	Relative	Long branch if not equal to zero
LBPL	Relative	Long branch if plus
LBRA	Relative	Long branch always
LBRN	Relative	Long branch never
LBVC	Relative	Long branch if overflow clear
LBVS	Relative	Long branch if overflow set
LEAS	Indexed	Load stack pointer with effective address
LEAX	Indexed	Load X index register with effective address
LEAY	Indexed	Load Y index register with effective address
MAXA	Indexed	Maximum of two unsigned 8-bit values
MAXM	Indexed	Maximum of two unsigned 8-bit values
MEM	Special	Determine grade of fuzzy membership
MINA	Indexed	Minimum of two unsigned 8-bit values
MINM	Indexed	Minimum of two unsigned 8-bit values
MOVB(W)	Combinations of immediate, extended, and indexed	Move data from one memory location to another
ORCC	Immediate	OR CCR with mask (replaces SEC, SEI, and SEV)
PSHC	Inherent	Push CCR onto stack
PSHD	Inherent	Push double accumulator onto stack
PULC	Inherent	Pull CCR contents from stack
PULD	Inherent	Pull double accumulator from stack
REV	Special	Fuzzy logic rule evaluation
REVW	Special	Fuzzy logic rule evaluation with weights
RTC	Inherent	Restore program page and return address from stack used with CALL instruction, allows easy access to >64-Kbyte space
SEX	Inherent	Sign extend 8-bit register into 16-bit register
TBEQ	Relative	Test and branch if equal to zero (looping primitive)
TBL	Inherent	Table lookup and interpolate (8-bit entries)
TBNE	Relative	Test register and branch if not equal to zero (looping primitive)
TFR	Inherent	Transfer register contents to another register
WAV	Special	Weighted average (fuzzy logic support)

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 419 420 Freescale Semiconductor

Table B-4. New M68HC12 Instructions (Sheet 1 of 2)

Mnemonic	Addressing Modes	Brief Functional Description
ANDCC	Immediate	AND CCR with mask (replaces CLC, CLI, and CLV)
BCLR	Extended	Bit(s) clear (added extended mode)
BGND	Inherent	Enter background debug mode, if enabled
BRCLR	Extended	Branch if bit(s) clear (added extended mode)
BRSET	Extended	Branch if bit(s) set (added extended mode)
BSET	Extended	Bit(s) set (added extended mode)
CALL	Extended, indexed	Similar to JSR except also stacks PPAGE value; with RTC instruction, allows easy access to >64-Kbyte space
CPS	Immediate, direct, extended, and indexed	Compare stack pointer
DBNE	Relative	Decrement and branch if equal to zero (looping primitive)
DBEQ	Relative	Decrement and branch if not equal to zero (looping primitive)
EDIV	Inherent	Extended divide Y:D/X = Y(Q) and D(R) (unsigned)
EDIVS	Inherent	Extended divide Y:D/X = Y(Q) and D(R) (signed)
EMACS	Special	Multiply and accumulate 16 × 16 ⇒ 32 (signed)
EMAXD	Indexed	Maximum of two unsigned 16-bit values
EMAXM	Indexed	Maximum of two unsigned 16-bit values
EMIND	Indexed	Minimum of two unsigned 16-bit values
EMINM	Indexed	Minimum of two unsigned 16-bit values
EMUL	Special	Extended multiply $16 \times 16 \Rightarrow 32$ ; M(idx) * D $\Rightarrow$ Y:D
EMULS	Special	Extended multiply $16 \times 16 \Rightarrow 32$ (signed); $M(idx) * D \Rightarrow Y:D$
ETBL	Special	Table lookup and interpolate (16-bit entries)
EXG	Inherent	Exchange register contents
IBEQ	Relative	Increment and branch if equal to zero (looping primitive)
IBNE	Relative	Increment and branch if not equal to zero (looping primitive)
IDIVS	Inherent	Signed integer divide $D/X \Rightarrow X(Q)$ and $D(R)$ (signed)
LBCC	Relative	Long branch if carry clear (same as LBHS)
LBCS	Relative	Long branch if carry set (same as LBLO)
LBEQ	Relative	Long branch if equal (Z=1)
LBGE	Relative	Long branch if greater than or equal to zero
LBGT	Relative	Long branch if greater than zero
LBHI	Relative	Long branch if higher
LBHS	Relative	Long branch if higher or same (same as LBCC)
LBLE	Relative	Long branch if less than or equal to zero
LBLO	Relative	Long branch if lower (same as LBCS)
LBLS	Relative	Long branch if lower or same

### S12CPUV2 Reference Manual, Rev. 4.0

418 Freescale Semiconductor

### B.8.1 Memory-to-Memory Moves

The CPU12 has both 8- and 16-bit variations of memory-to-memory move instructions. The source address can be specified with immediate, extended, or indexed addressing modes. The destination address can be specified by extended or indexed addressing mode. The indexed addressing mode for move instructions is limited to modes that require no extension bytes (9- and 16-bit constant offsets are not allowed), and indirect indexing is not allowed for moves. This leaves 5-bit signed constant offsets, accumulator offsets, and the automatic increment/decrement modes. The following simple loop is a block move routine capable of moving up to 256 words of information from one memory area to another.

```
LOOP MOVW 2,X+, 2,Y+; move a word and update pointers
DBNE B,LOOP; repeat B times
```

The move immediate to extended is a convenient way to initialize a register without using an accumulator or affecting condition codes.

### **B.8.2 Universal Transfer and Exchange**

The M68HC11 has only eight transfer instructions and two exchange instructions. The CPU12 has a universal transfer/exchange instruction that can be used to transfer or exchange data between any two CPU registers. The operation is obvious when the two registers are the same size, but some of the other combinations provide very useful results. For example when an 8-bit register is transferred to a 16-bit register, a sign-extend operation is performed. Other combinations can be used to perform a zero-extend operation.

These instructions are used often in CPU12 assembly language programs. Transfers can be used to make extra copies of data in another register, and exchanges can be used to temporarily save data during a call to a routine that expects data in a specific register. This is sometimes faster and produces more compact object code than saving data to memory with pushes or stores.

### B.8.3 Loop Construct

The CPU12 instruction set includes a new family of six loop primitive instructions. These instructions decrement, increment, or test a loop count in a CPU register and then branch based on a zero or non-zero test result. The CPU registers that can be used for the loop count are A, B, D, X, Y, or

SP. The branch range is a 9-bit signed value (–512 to +511) which gives these instructions twice the range of a short branch instruction.

#### **B.8.4 Long Branches**

All of the branch instructions from the M68HC11 are also available with 16-bit offsets which allows them to reach any location in the 64-Kbyte address space.

### **B.8.5 Minimum and Maximum Instructions**

Control programs often need to restrict data values within upper and lower limits. The CPU12 facilitates this function with 8- and 16-bit versions of MIN and MAX instructions. Each of these instructions has a version that stores the result in either the accumulator or in memory.

For example, in a fuzzy logic inference program, rule evaluation consists of a series of MIN and MAX operations. The min operation is used to determine the smallest rule input (the running result is held in an accumulator), and the max operation is used to store the largest rule truth value (in an accumulator) or the previous fuzzy output value (in a RAM location) to the fuzzy output in RAM. The following code demonstrates how MIN and MAX instructions can be used to evaluate a rule with four inputs and two outputs.

```
INMO OURDUS.

LDY #OUT1 ;Point at first output

LDX #IN1 ;Point at first input value

LDAA #SFF ;start with largest 8-bit number in A

MINA 1,X+ ;A-MIN(A,IN1)

MINA 1,X+ ;A-MIN(A,IN2)

MINA 1,X+ ;A-MIN(A,IN3)

MINA 1,X+ ;A-MIN(A,IN4)

MINA 1,X+ ;A-MIN(A,IN4)

MINA 1,X+ ;A-MIN(A,IN4)

MINA 1,X+ ;A-MIN(A,IN4)

MINA 1,Y+ ;OUT1=MAX(A,OUT1) and A is unchanged

MAXM 1,Y+ ;OUT1=MAX(A,OUT2) A still has min input
```

Before this sequence is executed, the fuzzy outputs must be cleared to zeros (not shown). M68HC11 MIN or MAX operations are performed by executing a compare followed by a conditional branch around a load or store operation.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 421

point left of the MSB, so each line segment is effectively divided into 256 pieces. During execution of the TBL or ETBL instruction, the difference between the end point y-value and the beginning point y-value (a signed byte for TBL or a signed word for ETBL) is multiplied by the B accumulator to get an intermediate delta-y term. The result is the y-value of the beginning point, plus this signed intermediate delta-y value.

### **B.8.8 Extended Bit Manipulation**

The M68HC11 CPU allows only direct or indexed addressing. This typically causes the programmer to dedicate an index register to point at some memory area such as the on-chip registers. The CPU12 allows all bit manipulation instructions to work with direct, extended, or indexed addressing modes.

### B.8.9 Push and Pull D and CCR

The CPU12 includes instructions to push and pull the D accumulator and the CCR. It is interesting to note that the order in which 8-bit accumulators A and B are stacked for interrupts is the opposite of what would be expected for the upper and lower bytes of the 16-bit D accumulator. The order used originated in the M6800, an 8-bit microprocessor developed long before anyone thought 16-bit single-chip devices would be made. The interrupt stacking order for accumulators A and B is retained for code compatibility.

### B.8.10 Compare SP

This instruction was added to the CPU12 instruction set to improve orthogonality and high-level language support. One of the most important requirements for C high-level language support is the ability to do arithmetic on the stack pointer for such things as allocating local variable space on the stack. The LEAS –5,SP instruction is an example of how the compiler could easily allocate five bytes on the stack for local variables. LDX 5,SP+ loads X with the value on the bottom of the stack and deallocates five bytes from the stack in a single operation that takes only two bytes of object code.

S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 423 424 Freescale Semiconductor

These instructions can also be used to limit a data value prior to using it as an input to a table lookup or other routine. Suppose a table is valid for input values between \$20 and \$7F. An arbitrary input value can be tested against these limits and be replaced by the largest legal value if it is too big, or the smallest legal value if too small using the following two CPU12 instructions.

```
HILIMIT FCB $7F ; comparison value needs to be in mem
LOWLIMIT FCB $20 ;so it can be referenced via indexed
MINA HILIMIT, PCB ;A=MMIN(A, 57P)
MAXA LOWLIMIT, PCB ;A=MAX(A, 520)
;A now within the legal range $20 to $7F
```

The ",PCR" notation is also new for the CPU12. This notation indicates the programmer wants an appropriate offset from the PC reference to the memory location (HILIMIT or LOWLIMIT in this example), and then to assemble this instruction into a PC-relative indexed MIN or MAX instruction.

#### **B.8.6 Fuzzy Logic Support**

The CPU12 includes four instructions (MEM, REV, REVW, and WAV) specifically designed to support fuzzy logic programs. These instructions have a very small impact on the size of the CPU and even less impact on the cost of a complete MCU. At the same time, these instructions dramatically reduce the object code size and execution time for a fuzzy logic inference program. A kernel written for the M68HC11 required about 250 bytes and executed in about 750 milliseconds. The CPU12 kernel uses about 50 bytes and executes in about 16 microseconds (in a 25-MHz HCS12).

### B.8.7 Table Lookup and Interpolation

The CPU12 instruction set includes two instructions (TBL and ETBL) for lookup and interpolation of compressed tables. Consecutive table values are assumed to be the x coordinates of the endpoints of a line segment. The TBL instruction uses 8-bit table entries (y-values) and returns an 8-bit result. The ETBL instruction uses 16-bit table entries (y-values) and returns a 16-bit result.

An indexed addressing mode is used to identify the effective address of the data point at the beginning of the line segment, and the data value for the end point of the line segment is the next consecutive memory location (byte for TBL and word for ETBL). In both cases, the B accumulator represents the ratio of (the x-distance from the beginning of the line segment to the lookup point) to (the x-distance from the beginning of the line segment to the end of the line segment). B is treated as an 8-bit binary fraction with radix

#### S12CPUV2 Reference Manual, Rev. 4.0

422 Freescale Semiconductor

### **B.8.11 Support for Memory Expansion**

Bank switching is a common method of expanding memory beyond the 64-Kbyte limit of a CPU with a 64-Kbyte address space, but there are some known difficulties associated with bank switching. One problem is that interrupts cannot take place during the bank switching operation. This increases worst case interrupt latency and requires extra programming space and execution time.

Some HCS12 and M68HC12 variants include a built-in bank switching scheme that eliminates many of the problems associated with external switching logic. The CPU12 includes CALL and return-from-call (RTC) instructions that manage the interface to the bank-switching system. These instructions are analogous to the JSR and RTS instructions, except that the bank page number is saved and restored automatically during execution. Since the page change operation is part of an uninterruptable instruction, many of the difficulties associated with bank switching are eliminated. On HCS12 and M68HC12 derivatives with expanded memory capability, bank numbers are specified by on-chip control registers. Since the addresses of these control registers may not be the same in all derivatives, the CPU12 has a dedicated control line to the on-chip integration module that indicates when a memory-expansion register is being read or written. This allows the CPU to access the PPAGE register without knowing the register address.

The indexed indirect versions of the CALL instruction access the address of the called routine and the destination page value indirectly. For other addressing mode variations of the CALL instruction, the destination page value is provided as immediate data in the instruction object code. CALL and RTC execute correctly in the normal 64-Kbyte address space, thus providing for portable code.

### Reference Manual — \$12CPUV2

### Appendix C. High-Level Language Support

#### C.1 Introduction

Many programmers are turning to high-level languages such as C as an alternative to coding in native assembly languages. High-level language (HLL) programming can improve productivity and produce code that is more easily maintained than assembly language programs. The most serious drawback to the use of HLL in MCUs has been the relatively large size of programs written in HLL. Larger program ROM size requirements translate into increased system costs.

This appendix identifies CPU12 instructions and addressing modes that provide improved support for high-level language. C language examples are provided to demonstrate how these features support efficient HLL structures and concepts. Since the CPU12 instruction set is a superset of the M68HC11 instruction set, some of the discussions use the M68HC11 as a basis for comparison.

### C.2 Data Types

The CPU12 supports the bit-sized data type with bit manipulation instructions which are available in extended, direct, and indexed variations. The char data type is a simple 8-bit value that is commonly used to specify variables in a small microcontroller system because it requires less memory space than a 16-bit integer (provided the variable has a range small enough to fit into eight bits). The 16-bit CPU12 can easily handle 16-bit integer types and the available set of conditional branches (including long branches) allow branching based on signed or unsigned arithmetic results. Some of the higher math functions allow for division and multiplication involving 32-bit values, although it is somewhat less common to use such long values in a microcontroller system.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 425

### C.3.2 Allocating and Deallocating Stack Space

The LEAS instruction can be used to allocate or deallocate space on the stack for temporary variables:

LEAS -10,S ;Allocate space for 5 16-bit integers
LEAS 10,S ;Deallocate space for 5 16-bit ints

The (de)allocation can even be combined with a register push or pull as in this example:

LDX 8,S+ ;Load return value and deallocate

X is loaded with the 16-bit integer value at the top of the stack, and the stack pointer is adjusted up by eight to deallocate space for eight bytes worth of temporary storage. Post-increment indexed addressing is used in this example, but all four combinations of pre/post increment/decrement are available (offsets from –8 to +8 inclusive, from X, Y, or SP). This form of indexing can often be used to get an index (or stack pointer) adjustment for free during an indexed operation (the instruction requires no more code space or cycles than a zero-offset indexed instruction).

### C.3.3 Frame Pointer

In the C language, it is common to have a frame pointer in addition to the CPU stack pointer. The frame is an area of memory within the system stack which is used for parameters and local storage of variables used within a function subroutine. The following is a description of how a frame pointer can be set up and used.

First, parameters (typically values in CPU registers) are pushed onto the system stack prior to using a JSR or CALL to get to the function subroutine. At the beginning of the called subroutine, the frame pointer of the calling program is pushed onto the stack. Typically, an index register, such as X, is used as the frame pointer, so a PSHX instruction would save the frame pointer from the calling program.

Next, the called subroutine establishes a new frame pointer by executing a TFR S,X. Space is allocated for local variables by executing an LEAS –n,S, where n is the number of bytes needed for local variables.

Notice that parameters are at positive offsets from the frame pointer while locals are at negative offsets. In the M68HC11, the indexed addressing mode uses only positive offsets, so the frame pointer always points to the lowest address of any parameter or local. After the function subroutine finishes, calculations are required to restore the stack pointer to the

### S12CPUV2 Reference Manual. Rev. 4.0

Freescale Semiconductor 427 428

The CPU12 has special sign extension instructions to allow easy type-casting from smaller data types to larger ones, such as from char to integer. This sign extension is automatically performed when an 8-bit value is transferred to a 16-bit register.

### C.3 Parameters and Variables

High-level languages make extensive use of the stack, both to pass variables and for temporary and local storage. It follows that there should be easy ways to push and pull each CPU register, stack pointer based indexing should be allowed, and that direct arithmetic manipulation of the stack pointer value should be allowed. The CPU12 instruction set provided for all of these needs with improved indexed addressing, the addition of an LEAS instruction, and the addition of push and pull instructions for the D accumulator and the CCR.

#### C.3.1 Register Pushes and Pulls

426

The M68HC11 has push and pull instructions for A, B, X, and Y, but requires separate 8-bit pushes and pulls of accumulators A and B to stack or unstack the 16-bit D accumulator (the concatenated combination of A:B). The PSHD and PULD instructions allow directly stacking the D accumulator in the expected 16-bit order.

Adding PSHC and PULC improved orthogonality by completing the set of stacking instructions so that any of the CPU registers can be pushed or pulled. These instructions are also useful for preserving the CCR value during a function call subroutine.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

mid-frame position between the locals and the parameters before returning to the calling program. The CPU12 only requires execution of TFR X,S to deallocate the local storage and return.

The concept of a frame pointer is supported in the CPU12 through a combination of improved indexed addressing, universal transfer/exchange, and the LEA instruction. These instructions work together to achieve more efficient handling of frame pointers. It is important to consider the complete instruction set as a complex system with subtle interrelationships rather than simply examining individual instructions when trying to improve an instruction set. Adding or removing a single instruction can have unexpected consequences.

### C.4 Increment and Decrement Operators

In C, the notation ++i or i--is often used to form loop counters. Within limited constraints, the CPU12 loop primitives can be used to speed up the loop count and branch function.

The CPU12 includes a set of six basic loop control instructions which decrement, increment, or test a loop count register, and then branch if it is either equal to zero or not equal to zero. The loop count register can be A, B, D, X, Y, or SP. A or B could be used if the loop count fits in an 8-bit char variable; the other choices are all 16-bit registers. The relative offset for the loop branch is a 9-bit signed value, so these instructions can be used with loops as long as 256 bytes.

In some cases, the pre- or post-increment operation can be combined with an indexed instruction to eliminate the cost of the increment operation. This is typically done by post-compile optimization because the indexed instruction that could absorb the increment/decrement operation may not be apparent at compile time.

### C.5 Higher Math Functions

In the CPU12, subtle characteristics of higher math operations such as IDIVS and EMUL are arranged so a compiler can handle inputs and outputs more efficiently.

The most apparent case is the IDIVS instruction, which divides two 16-bit signed numbers to produce a 16-bit result. While the same function can be accomplished with the EDIVS instruction (a 32 by 16 divide), doing so is

Freescale Semiconductor

much less efficient because extra steps are required to prepare inputs to the EDIVS, and because EDIVS uses the Y index register. EDIVS uses a 32-bit signed numerator and the C compiler would typically want to use a 16-bit value (the size of an integer data type). The 16-bit C value would need to be sign-extended into the upper 16 bits of the 32-bit EDIVS numerator before the divide operation.

Operand size is also a potential problem in the extended multiply operations but the difficulty can be minimized by putting the results in CPU registers. Having higher precision math instructions is not necessarily a requirement for supporting high-level language because these functions can be performed as library functions. However, if an application requires these functions, the code is much more efficient if the MCU can use native instructions instead of relatively large, slow routines.

### C.6 Conditional If Constructs

In the CPU12 instruction set, most arithmetic and data manipulation instructions automatically update the condition code register, unlike other architectures that only change condition codes during a few specific compare instructions. The CPU12 includes branch instructions that perform conditional branching based on the state of the indicators in the condition codes register. Short branches use a single byte relative offset that allows branching to a destination within about  $\pm 128$  locations from the branch. Long branches use a 16-bit relative offset that allows conditional branching to any location in the 64-Kbyte map.

#### C.7 Case and Switch Statements

Case and switch statements (and computed GOTOs) can use PC-relative indirect addressing to determine which path to take. Depending upon the situation, cases can use either the constant offset variation or the accumulator D offset variation of indirect indexed addressing.

#### C.8 Pointers

The CPU12 supports pointers by allowing direct arithmetic operations on the 16-bit index registers (LEAS, LEAX, and LEAY instructions) and by allowing indexed indirect addressing modes.

#### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 429

### C.10 Instruction Set Orthogonality

One helpful aspect of the CPU12 instruction set, orthogonality, is difficult to quantify in terms of direct benefit to an HLL compiler. Orthogonality refers to the regularity of the instruction set. A completely orthogonal instruction set would allow any instruction to operate in any addressing mode, would have identical code sizes and execution times for similar operations on different registers, and would include both signed and unsigned versions of all mathematical instructions. Greater regularity of the instruction set makes it possible to implement compilers more efficiently, because operation is more consistent, and fewer special cases must be handled.

### S12CPUV2 Reference Manual, Rev. 4.0

### Freescale Semiconductor 431 432 Freescale Semiconductor

#### C.9 Function Calls

Bank switching is a fairly common way of adapting a CPU with a 16-bit address bus to accommodate more than 64 Kbytes of program memory space. One of the most significant drawbacks of this technique has been the requirement to mask (disable) interrupts while the bank page value was being changed. Another problem is that the physical location of the bank page register can change from one MCU derivative to another (or even due to a change to mapping controls by a user program). In these situations, an operating system program has to keep track of the physical location of the page register. The CPU12 addresses both of these problems with the uninterruptible CALL and return-from-call (RTC) instructions.

The CALL instruction is similar to a JSR instruction, except that the programmer supplies a destination page value as part of the instruction. When CALL executes, the old page value is saved on the stack and the new page value is written to the bank page register. Since the CALL instruction is uninterruptible, this eliminates the need to separately mask off interrupts during the context switch.

The CPU12 has dedicated signal lines that allow the CPU to access the bank page register without having to use an address in the normal 64-Kbyte address space. This eliminates the need for the program to know where the page register is physically located.

The RTC instruction is similar to the RTS instruction, except that RTC uses the byte of information that was saved on the stack by the corresponding CALL instruction to restore the bank page register to its old value. Although a CALL/RTC pair can be used to access any function subroutine regardless of the location of the called routine (on the current bank page or a different page), it is most efficient to access some subroutines with JSR/RTS instructions when the called subroutine is on the current page or in an area of memory that is always visible in the 64-Kbyte map regardless of the bank page selection.

Push and pull instructions can be used to stack some or all the CPU registers during a function call. The CPU12 can push and pull any of the CPU registers A, B, CCR, D, X, Y, or SP.

#### S12CPUV2 Reference Manual, Rev. 4.0

430 Freescale Semiconductor

### Reference Manual — S12CPUV2

### Index

ABA instruction	100
Abbreviations for system resources	
ABX instruction	
ABY instruction	
Access details	
Accumulator offset indexed addressing mode	41
Accumulator offset indexed indirect addressing mode	40
Accumulators	22
A	21, 35
В	21, 35
D	21 . 35
ADCA instruction	
ADCB instruction	104
ADDA instruction	
ADDB instruction	
ADDD instruction	107
Addition instructions.	
ADDR mnemonic	
Addressing modes	
Direct	
Extended	
Immediate	
Indexed	
Inherent	
Relative	33
ANDA instruction	
ANDB instruction	
ANDCC instruction.	
Arithmetic shift	
ASL instruction	
ASLA instruction.	
ASLB instruction.	
ASI D instruction	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

Long	52 52 75 421
Loop primitive	
Offset values	
Offsets	34
Short	52, 53, 74
Signed	73–75
Simple	
Subroutine	
Summary of complementary branches	
Taken/not-taken cases	
Unary	
Unsigned	
Branch offset.	
BRCLR instruction	
BRN instruction.	138
BRSET instruction	139
BSET instruction.	140
BSR instruction.	50, 141
Bus cycles	
Bus structure	
BVC instruction	
BVS instruction	
Byte moves	
Byte order in memory	
Byte-sized instructions	52
С	
· ·	
C	
C status bit	
CALL instruction	
Case statements	
CBA instruction	
	143
CCR (see Condition codes register)	10. 50
Changes in execution flow	
CLC instruction	
Clear instructions	
Clear memory	
Cleared	19
CLI instruction.	147
Clock monitor reset	314
CLR instruction	
CLRA instruction	
CLRB instruction	
CLV instruction	151

### S12CPUV2 Reference Manual, Rev. 4.0

reescale Semiconductor	435

ASR instruction	 	 	 	 							 ŀ						 	. :	11	5
ASRA instruction	 	 	 	 													 	. :	11	6
ASRB instruction	 	 	 	 													 	. :	11	7
Asserted	 	 	 	 		ŀ											 		. 1	9
Auto increment	 	 	 	 		ŀ											 		. 3	9

### В

Background debug mode				
Instruction				
Base index register	 	٠.	 3′	7–4
BCC instruction.	 	٠.	 	. 11
BCD instructions.	 		 . 60	, 16
BCLR instruction	 		 	. 11
BCS instruction.	 		 	. 12
BEQ instruction.				
BGE instruction.	 		 	. 12
BGND instruction	 		 . 86.	. 12
BGT instruction.	 		 	. 12
BHI instruction				
BHS instruction.				
Binary-coded decimal instructions.				
Bit manipulation instructions				
Mask operand				
Multiple addressing modes				
Bit test instructions				
BITA instruction				
BITB instruction				
Bit-condition branches				
BLE instruction				
BLO instruction				
BLS instruction				
BLT instruction				
BMI instruction				
BNE instruction.				
Boolean logic instructions				
AND				
Complement				
Exclusive OR				
Inclusive OR				
Negate				
BPL instruction				
BRA instruction				
Branch instructions				
Branch Instructions				

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor

CMPA instruction		152
CMPB instruction		153
Code size.		416
COM instruction		154
COMA instruction		155
COMB instruction		156
Compare instructions.		
Complement instructions		
Computer operating properly (COP) watchdog		
Condition codes instructions		
Condition codes register		
C status bit		
H status bit	. 25.	161
I mask bit		
Manipulation	245.	276
N status bit		
S control bit		
V status bit.		. 26
X mask bit		
Z status bit		
Conditional 16-bit read cycle		
Conditional 8-bit read cycle	. 98.	379
Conditional 8-bit write cycle		
Conserving power85,	282,	306
Constant indirect indexed addressing mode		
Constant offset indexed addressing mode	37	7, 38
COP reset		314
CPD instruction.		157
CPS instruction		158
CPX instruction		159
CPY instruction		
Cycle code letters		
Cycle counts		
Cycle-by-cycle operation	. 94,	379
D		
DAA instruction.		
DATA mnemonic		
Data types		
DBEQ instruction		
DBNE instruction		
DEC instruction.		
DECA instruction		
DECB instruction		166

### S12CPUV2 Reference Manual, Rev. 4.0

EDIV instruction           EDIVS instruction           Effective address         29, 35, 83, 220, 221, 222, 417, 426-           EMACS instruction         71,	171 -428
EMAXD instruction.  EMAXM instruction 174,  EMIND instruction 175,	173 338
EMINM instruction EMUL instruction EMULS instruction Emabling maskable interrupts 25,	177 178
EORA instruction EORB instruction ETBL instruction	179 180 338
Exceptions	311 315 317
Priority Processing flow	312 318 314
Software interrupts         79, 289,           Unimplemented opcode trap         .311, 313,           Vectors         .311, Exchange instructions           .57, 182, 417,	317 318
Postbyte encoding  Execution cycles  Execution time  EXG instruction  Expanded memory	399 . 95 . 94 182
S12CPUV2 Reference Manual, Rev. 4.0	
<b>G</b> g-cycle (read PPAGE)	
General purpose accumulators Global interrupt mask	
H H status bit	161
H status bit	313 -431 429 429 430 425 428
I mask bit	400
I-cycle (16-bit read indirect)	379 186 428 . 31 188 189 190 . 61 417 . 81 427 7, 94 6, 94 6, 94 414
16-bit constant indirect 16-bit constant offset 5-bit constant offset 9-bit constant offset Accumulator direct	. 38 . 37 . 37
S12CPUV2 Reference Manual, Rev. 4.0	
eescale Semiconductor	439

 Decrement instructions
 61

 Defuzzification
 344, 364–368

 DES instruction
 167

 DEX instruction
 168

 DEV instruction
 169

 DEX instruction
 168

 DEY instruction
 169

 Direct addressing mode
 32

 Division instructions
 64, 428

 16-bit fractional
 183

 16-bit integer
 186, 187

 32-bit extended
 170, 171

 Double accumulator
 21, 22

Ε

Bank switching Instructions						
Page registers						
Subroutines						
Extended addressing mod						
Extended division			 	 	 	64
Extension byte			 	 	 	34
External interrupts			 	 	 	. 317
External queue reconstru						
HCS12 queue reconst						
HCS12 reconstruction						
HCS12 timing detail						
M68HC12 queue reco	nstruction		 	 	 	. 331
M68HC12 reconstruct						
M68HC12 timing deta						
External reset			 	 	 	. 314
		F				
Fast math			 	 	 	. 415
f-cycle (free cycle)			 	 	 . 95,	379
FDIV instruction						
Fractional division			 	 	 . 64,	183
Frame pointer			 	 	 427,	428
Free cycle						
Fuzzy logic			 	 	 337-	-374
Antecedents						
Consequents						
Custom programming						
Defuzzification						
Fuzzification						
Inference kernel						
Inputs			 	 	 	. 372
Instructions						
Interrupts						
Knowledge base						
Membership functions						
Outputs						
Rule evaluation						
Rules						
Sets						

### S12CPUV2 Reference Manual, Rev. 4.0

438 Freescale Semiconductor

Accumulator offset	
Auto increment/decrement indexing	
Base index register	
Extension byte	
Limitations for BIT and MOV instructions	
Postbyte	
Postbyte encoding	
Inference kernel, fuzzy logic	
Inherent addressing mode	
INS instruction	
Instruction pipe, see Instruction queue	
Instruction queue	
Buffer	
Data movement	
Debugging	
Reconstruction	
Stages	
Status registers.	
Status signals	
Instruction set	
Integer division	
Interrupts	
Enabling and disabling	
External	
I mask bit	
Instructions	
Low-power stop	
Maskable	
Non-maskable.	
Recognition	
Return	
Service routines	
Software	
Stacking order	
Vectors	
Wait instruction	
X mask bit	
INX instruction	
INY instruction	
j	
J	
JMP instruction	53 194
JSR instruction	
OOK moti doublin	· ·

	L
Lahol	91
LBHS instruction.	
	208
	213
LDX instruction	218
	219
	vord
	91
	tructions53, 77, 400, 420, 428
Offset values.	77
	S12CPUV2 Reference Manual, Rev. 4.0
onductor	441
ionadolor	
16-bit	uctions
16-bit	
16-bit	
16-bit 8-bit. Multiply and accur	
N status bitn-cycle (write PPA	
16-bit 8-bit Nultiply and accur  N status bit Necycle (write PPANEG instruction Negate instruction Negate instruction Negate instruction Negate instruction	
16-bit 8-bit Nultiply and accur  N status bit n-cycle (write PP/NEG instruction NEGA instruction Negate instruction Negated Ne	
16-bit 8-bit Multiply and accur N status bit n-cycle (write PPA NEG instruction NEGA instruction Negate instruction Negate instruction Negate instruction Negate instruction Negative integers	
N status bit	
16-bit 8-bit	
N status bit	
16-bit	
N status bit	
16-bit 8-bit	
N status bit n-cycle (write PP/ NEG instruction Negate instruction Negate instruction Negate instruction Negate instruction Negate instruction Non-maskable int NOP instruction Notation Branch taken/r Changes in CC Cycle-by-cycle Memory and a Object code Operators Source forms. System resour Null operation inst Numeric range of Object code notat O-cycle (optional) Odd bytes Offset Branch Index Opcode map Operators. Optional cycles	
N status bit	
N status bit	
N status bit	
16-bit 8-bit	177, 17. 23i mulate instructions 71, 172, 307, 37.  N  N  (GE)

Postbyte encoding			40
Low-power stop			
LSL instruction			
LSLA instruction			,
LSLB instruction			
LSLD instruction			
LSR instruction			
LSRA instruction			
LSRB instruction.			
LSRD instruction			
LSRD instruction			23
M			
M68HC11 compatibility		29	403-42
M68HC11 instruction mnemonics			
Maskable interrupts			
MAXA instruction			
Maximum instructions			
16-bit			
8-bit.			
MAXM instruction			
MEM instruction			
Membership functions			
Memory and addressing symbols			
MINA instruction			
16-bit			
8-bit.			
MINM instruction			
Misaligned instructions			
Mnemonic			
Most significant byte			
Most significant word			
MOVB instruction			
Move instructions			
Destination			
Multiple addressing modes			
PC relative addressing			
Reference index register			
Source			
MOVW instruction			
MUL instruction			23
Multiple addressing modes			
Bit manipulation instructions			
Move instructions			4
S12CPUV2 Reference Manual. Rev. 4.0			
512GF GV2 Neierence manual, NeV. 4.0	_		
	Frees	cale Ser	niconduct

.

Page 2 prebyte	52, 96, 39
P-cycle (program word fetch)	
Pipeline	
Pointer calculation instructions	83, 220, 221, 22
Pointers	
Postbyte encoding	
Exchange instructions	182, 39
Indexed addressing instructions	
Indexed addressing modes	
Loop primitive instructions	
Transfer instructions	
Post-decrement indexed addressing mode	
Post-increment indexed addressing mode	
Power conservation	
Power-on reset	
Prebyte	
Pre-decrement indexed addressing mode	
Pre-increment indexed addressing mode	
Priority, exception.	
Program counter	
Program word access cycle	
Programming model	
PSHA instruction	
PSHB instruction	
PSHC instruction	
PSHD instruction	
PSHX instruction	
PSHY instruction	
PULA instruction	
PULB instruction	
PULC instruction	
PULD instruction	
Pull instructions	43
PULX instruction.	25
PULY instruction	25
Push instructions	43
Q	
<del>-</del>	
Queue reconstruction	
HCS12 queue reconstruction	
	2.2

S12CPUV2 Reference Manual, Rev. 4.0

HCS12 timing detail		s-cycle (8-bit stack write)	
M68HC12 queue reconstruction		SEC instruction	
M68HC12 reconstruction algorithm		SEI instruction.	
M68HC12 timing detail	325	Service routine	
		Set	
R		Setting memory bits	
••		SEV instruction	
-cycle (16-bit data read)	97. 379	SEX instruction	
cycle (8-bit data read)		Shift instructions	
ead 16-bit data cycle		Arithmetic	
Read 8-bit data cycle		Sign extension instruction	
		Signed branches	
Read indirect pointer cycle			
Read indirect PPAGE value cycle		Signed integers	
Read PPAGE cycle	95, 379	Signed multiplication	
Register designators	91	Simple branches	
Relative addressing mode	33	Software interrupts	
Relative offset		Source code compatibility	
Resets	311 313	Source form notation	
Clock monitor		STAA instruction	
COP		STAB instruction.	
		Stack	
External		Stack 16-bit data cycle	
Power-on			
Return from call		Stack 8-bit data cycle	
Return from interrupt		Stack operation instructions	
Return from subroutine	271	Stack pointer	
REV instruction	67, 258–259, 337, 342, 353–358, 372	Compatibility with HC11	
REVW instruction		Initialization	
ROL instruction.		Manipulation	
		Stacking order	
ROLA instruction		Stack pointer instructions	
ROLB instruction		Standard CPU12 address space	
ROR instruction			
RORA instruction		STD instruction	
RORB instruction		STOP continue	
Rotate instructions		STOP disable	
RTC instruction.		STOP instruction	
RTI instruction.		Store instructions	
		STS instruction	
RTS instruction		STX instruction	
		STY instruction	
S			
		SUBA instruction	
S control bit		SUBB instruction	
SBA instruction		SUBD instruction	
SBCA instruction		Subroutine instructions	
		Subroutines	
SBCB instruction		Expanded memory	
S-cycle (16-bit stack write)	Rev. 4.0 445	\$12CPUV2 Reference Manual,	
S12CPUV2 Reference Manual,			
S12CPUV2 Reference Manual,			
S12CPUV2 Reference Manual,	445	446	Freescale Semi
S12CPUV2 Reference Manual, inductor		Fuzzy logic	Freescale Semi
S12CPUV2 Reference Manual, inductor  Instructions		Fuzzy logic	Freescale Semi
S12CPUV2 Reference Manual, Inductor  Instructions Return Subtraction instructions		Fuzzy logic	Freescale Semi
S12CPUV2 Reference Manual, Inductor  Instructions Return Subtraction instructions. SWI instruction		Fuzzy logic	Freescale Semi
Instructions Return Subtraction instructions Swil instructions Swil instruction Switch statements		Fuzzy logic	Freescale Semin
Instructions Return Subtraction instructions Swil instructions Swil instruction Switch statements		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives	Freescale Semi
Instructions Return Subtraction instructions Swil instructions Swil instruction Switch statements		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum	Freescale Semin
Instructions Return Subtraction instructions SWI instruction Switch statements Symbols and notation		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move	Freescale Semi
Instructions Return Subtraction instructions Swil instructions Swil instruction Switch statements		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move. Multiplication and division.	Freescale Semi
Instructions Return Subtraction instructions SwV instruction Switch statements Symbols and notation		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move	Freescale Semi
Instructions Return Subtraction instructions SWI instruction Switch statements Symbols and notation  T TAB instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move. Multiplication and division.	Freescale Semi
Instructions Return Subtraction instructions SWI instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation	Freescale Semin
Instructions Return Subtraction instructions Swil instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions Tabular membership functions.		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate	Freescale Semi
Instructions Return Subtraction instructions SWI instruction Symbols and notation  T TAB instruction Table interpolation instructions TAP instruction TAP instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension	Freescale Semi
Instructions Return Subtraction instructions SWI instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions. TAP instruction TBA instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking.	Freescale Semin
Instructions Return Subtraction instructions Swil instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions. TAP instruction TBA instruction TBEQ instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait	Freescale Semin
Instructions Return Subtraction instructions Swil instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions Tabular membership functions Tap instruction TBEA instruction TBEQ instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation	Freescale Semic
Instructions Return Subtraction instructions Switch statements Symbols and notation T  TAB instruction Table interpolation instructions Table interpolation instructions Table interpolation instructions Table interpolation instructions Table instruction TBA instruction TBEQ instruction TBEQ instruction TBEQ instruction TBEQ instruction TBEQ instruction TBEQ instruction TBEI In		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait	Freescale Semic
Instructions Return Subtraction instructions Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions. TAP instruction TBA instruction TBA instruction TBL instruction TBL instruction TBL instruction TBL instruction TBNE instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation	Freescale Semic
Instructions Return Subtraction instructions Swil instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions Tap instruction TBA instruction TBA instruction TBI instruction TGI instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move. Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange	Freescale Semic
Instructions Return Subtraction instructions Syminatruction Syminatruction Syminatruction Syminatruction Syminatruction Syminatruction Table interpolation instructions Table interpolation instructions Tabular membership functions Table instruction TBA instruction TBEQ instruction TBISEQ instruction TBISE instruction TBISE instruction TBISE instruction TBISE instruction TCycle (16-bit conditional read)cycle (8-bit conditional read)cycle (8-bit conditional read)		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction	Freescale Semic
Instructions Return Subtraction instructions SWI instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions TAP instruction TEAL instruction TEBL instruction TEL instruction TENE instruction TENE instruction TENE instruction TENE instruction Texpcle (16-bit conditional read) Termination of interrupt service routines		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move. Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange	Freescale Semin
Instructions Return Subtraction instructions Swil instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions TAP instruction TBE instruction TBE instruction TBC instruction TBC instruction TESH instruction TC-cycle (16-bit conditional read) Lecycle (8-bit conditional read) Lecycle (8-bit conditional read) Termination of interrupt service routines Termination of subroutines		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction	Freescale Semin
Instructions Return Subtraction instructions SWI instruction Swhich statements Symbols and notation  TAB instruction Table interpolation instructions Table interpolation instructions Table instruction TBA instruction TBEQ instruction TBEI instruction TBIE instruction TBIE instruction TBUIC instruction TBUIC instruction TBUIC instruction TBUIC instruction TESI instruction TEVEL (16-bit conditional read) Tecycle (16-bit conditional read) Termination of interrupt service routines Termination of subroutines Test instructions		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U U-cycle (16-bit stack read)	Freescale Semin
Instructions Return Subtraction instructions Swit instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions Table interpolation instructions Table interpolation instructions Table instruction Table instruction Table instruction TBA instruction TBEQ instruction TBEA instruction TBL instruction TBL instruction TBL instruction Teycle (16-bit conditional read) -cycle (8-bit conditional read) Termination of unterrupt service routines Termination of subroutines Test instruction TEST instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U U-cycle (16-bit stack read) U-cycle (8-bit stack read)	Freescale Semic
Instructions Return Subtraction instructions Switch statements Symbols and notation  TAB instruction Table interpolation instructions Table instruction TBE instruction TBL instruction TBL instruction Telse instruction T-cycle (16-bit conditional read) -cycle (8-bit conditional read) -cycle (8-bit conditional read) -cycle (8-bit struction subroutines rest instructions Termination of interrupt service routines Test instructions TER instruction TPA instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U U-cycle (16-bit stack read) Unary branches	Freescale Semic
Instructions Return Subtraction instructions Switch statements Symbols and notation  TAB instruction Table interpolation instructions Table instruction TBE instruction TBL instruction TBL instruction Telse instruction T-cycle (16-bit conditional read) -cycle (8-bit conditional read) -cycle (8-bit conditional read) -cycle (8-bit struction subroutines rest instructions Termination of interrupt service routines Test instructions TER instruction TPA instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U U-cycle (16-bit stack read) U-cycle (8-bit stack read)	Freescale Semic
Instructions Return Subtraction instructions Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions TAP instruction TEBC instruction TBEQ instruction TBI instruction TBI instruction TBUE instruction TEST instruction TFA instruction TFA instruction TFA instruction Transfer instructions		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U U-cycle (16-bit stack read) U-crycle (8-bit stack read) Unary branches Unimplemented opcode trap	Freescale Semin
Instructions Return Subtraction instructions Swit instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions TAP instruction TBA instruction TBEQ instruction TBEQ instruction TBEQ instruction TBEQ instruction TBIC instruction TENE instruction Terwination of interrupt service routines Termination of subroutines Test instructions TFR instruction TPA instruction TPA instruction Transfer instructions Postbyte encoding		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) Unary branches Unimplemented opcode trap Unsigned branches	Freescale Semin
Instructions Return Subtraction instructions Swit instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions Tabular membership functions Tabular membership functions TaP instruction TBE instruction TBE instruction TBI instruction TBI instruction Tense instruction Tense instruction Tense instruction Terycle (16-bit conditional read) -cycle (8-bit conditional read) Termination of interrupt service routines		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move. Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking. Stop and wait Table interpolation Transfer and exchange TYS instruction  U U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication.	Freescale Semin
Instructions Return Subtraction instructions Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions Tab instruction TBA instruction TBA instruction TBA instruction TBA instruction TBC instruction TBC instruction TBC instruction TBC instruction TBNE instruction TBNE instruction TFS instruction Termination of interrupt service routines Termination of subroutines Ters instruction TFR instruction TFR instruction TFR instruction TFR instruction TRAP instruction TRAP instruction TRAP instruction TRAP instruction TST instruction TST instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) Unary branches Unimplemented opcode trap Unsigned multiplication Unstack 16-bit data cycle	Freescale Semi
Instructions Return Subtraction instructions SWI instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions TAP instruction TBA instruction TBA instruction TBEQ instruction TBEQ instruction TBI instruction TBI instruction TENE instruction TENE instruction TENE instruction TENE instruction TENE instruction Teyple (16-bit conditional read) -cycle (16-bit conditional read) -cycle (8-bit conditional read) Termination of interrupt service routines Termination of subroutines Test instruction Test instruction TPA instruction TPA instruction TPA instruction TST instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle	Freescale Semi
Instructions Return Subtraction instructions SWI instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions TAP instruction TBA instruction TBA instruction TBEQ instruction TBEQ instruction TBI instruction TBI instruction TENE instruction TENE instruction TENE instruction TENE instruction TENE instruction Teyple (16-bit conditional read) -cycle (16-bit conditional read) -cycle (8-bit conditional read) Termination of interrupt service routines Termination of subroutines Test instruction Test instruction TPA instruction TPA instruction TPA instruction TST instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) Unary branches Unimplemented opcode trap Unsigned multiplication Unstack 16-bit data cycle	Freescale Semi
Instructions Return Subtraction instructions Swil instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions TaP instruction TBE instruction TBE instruction TBI instruction TENE instruction TENE instruction Tenen in the properties of the propertie		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle	Freescale Semin
Instructions Return Subtraction instructions Swil instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions Tab instruction TBA instruction TBA instruction TBA instruction TBA instruction TEL instruction TEL instruction TENE instruction TENE instruction TENE instruction TENE instruction TENE instruction TFNE instruction TFNE instruction TFNE instruction TFRI instruction TFRI instruction TFRI instruction TFRI instruction TFRI instruction TFRI instruction TTRAP instruction TTRAP instruction TSTA instruction TSTA instruction TSTB instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unweighted rule evaluation	Freescale Semi
Instructions Return Subtraction instructions SWI instruction SWI instruction Symbols and notation  T TAB instruction Table interpolation instructions TAP instruction TBA instruction TBA instruction TBC instruction TCA instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle	Freescale Semi
Instructions Return Subtraction instructions Swil instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions Table interpolation instructions Table interpolation instructions Table interpolation instructions Table instruction TBA instruction TBL instruction TBL instruction TBL instruction TENE instruction TENE instruction Teneniation of interrupt service routines Termination of interrupt service routine		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-cycle (8-bit stack read) Unary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation	Freescale Semin
Instructions Return Subtraction instructions Swit instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Tabular membership functions Tab instruction Tab instruction Tab instruction Tab instruction Tab instruction Tab instruction Tel instruction Tel instruction Tel instruction Tel instruction Tel instruction Ten instruction Ten instruction Ten instruction Termination of interrupt service routines Termination of subroutines Terminatio		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation  V	Freescale Semic
Instructions Return Subtraction instructions SWI instruction SWI instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Table interpolation instructions Table instruction TBA instruction TBA instruction TBA instruction TBCQ instruction TBCQ instruction TBL instruction TBL instruction TBNE instruction TCycle (16-bit conditional read) -cycle (8-bit conditional read) -cycle (8-bit conditional read) -TCYCLE (16-bit conditional read) -TC		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-cycle (8-bit stack read) Unary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation	Freescale Semic
Instructions Return Subtraction instructions Swit instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions Table interpolation TBL instruction TBL instruction TBL instruction TBL instruction TBL instruction Tensive interpolation of interput service routines Termination of interrupt service routines Termination Terminat		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation  V	Freescale Semic
Instructions Return Subtraction instructions SWI instruction SWI instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Table interpolation instructions Table instruction TBA instruction TBA instruction TBA instruction TBCQ instruction TBCQ instruction TBL instruction TBL instruction TBNE instruction TCycle (16-bit conditional read) -cycle (8-bit conditional read) -cycle (8-bit conditional read) -TCYCLE (16-bit conditional read) -TC		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unstack 8-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation  V  V status bit V-cycle (vector fetch) Vector fetch cycle	Freescale Semic
Instructions Return Subtraction instructions SWI instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Table instruction TBA instruction TBL instruction TBL instruction Tell instruction Tell instruction Terpole (16-bit conditional read) -cycle (8-bit conditional read) -cycle (16-bit conditi		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking. Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation  V  V status bit V-cycle (vector fetch)	Freescale Semic
Instructions Return Subtraction instructions Switch statements Symbols and notation  Table interpolation instructions Table interpolation instructions Table interpolation instructions Table interpolation instructions Table instruction TBA instruction TBA instruction TBA instruction TBCQ instruction TBCQ instruction TBNE instruction TBNE instruction TBNE instruction TBNE instruction Texple (16-bit conditional read) -cycle (8-bit conditional read) -cycle (8-bit conditional read) -cycle (8-bit conditional read) -cycle (8-bit conditional read) -cycle instruction TFRAP instruction TFRAF instruction TFRA instruction TFRAF instruction TSTA instruction TSTA instruction TSTB instruction		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) u-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation  V  V status bit V-cycle (vector fetch) Vector fetch cycle Vectors, exception	Freescale Semic
Instructions Return Subtraction instructions Swit instruction instructions Swit instruction Switch statements Symbols and notation Transfer instruction Instructions Instruction Instructi		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-cycle (8-bit stack read) U-ary branches Unimplemented opcode trap Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unstack 8-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation  V  V status bit V-cycle (vector fetch) Vector fetch cycle	Freescale Semic
Instructions Return SWI instruction instructions SWI instruction SWI i		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) u-cycle (8-bit stack read) Unary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unstack 8-bit data cycle Unstack 8-bit data cycle Unstack 16-bit qualter Unweighted rule evaluation  V  V status bit V-cycle (vector fetch) Vector fetch cycle Vectors, exception	Freescale Semic  79, 298, 311, 3
Instructions Return Subtraction instructions Will instruction Switch statements Symbols and notation  T TAB instruction Table interpolation instructions Table interpolation instructions Table interpolation instructions Table instruction Table instruction Table instruction Table instruction TBL instruction TBL instruction TBL instruction TBL instruction TCycle (16-bit conditional read) TCycle (8-bit conditional read) TCYCle (8-bit conditional read) TCYCle (8-bit conditional read) TCYCle (8-bit conditional read) TCYCle (16-bit conditional read) TCYCle (16-b		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-cycle (8-bit stack read) Unary branches Unsigned branches Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation  V  V status bit V-cycle (vector fetch) Vector fetch cycle Vectors, exception  W  WAI instruction	Freescale Semic
Instructions		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) u-cycle (8-bit stack read) Unary branches Unimplemented opcode trap Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unstack 8-bit data cycle Unstack 8-bit data cycle Unstack 16-bit qualter Unweighted rule evaluation  V  V status bit V-cycle (vector fetch) Vector fetch cycle Vectors, exception	79, 298, 311, 3
Instructions Return Subtraction instructions SWI instruction Switch statements Symbols and notation  TA  TAB instruction Table interpolation instructions Table instruction TBA instruction TBA instruction TBC instruction TBNE instruction Tensive instruction Tensive instruction Termination of interrupt service routines Termination of subroutines Termination of subroutines Test instruction TFR instruction TFR instruction TFR instruction TST instruction TS		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-cycle (8-bit stack read) Unary branches Unsigned branches Unsigned branches Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation  V  V status bit V-cycle (vector fetch) Vector fetch cycle Vectors, exception  W  WAI instruction	Freescale Semic
Instructions Return Subtraction instructions Swit instruction Switch statements Symbols and notation  TAB instruction Table interpolation instructions Table interpolation Table instruction TBL instruction TBL instruction TBNE instruction T-cycle (16-bit conditional read) -cycle (8-bit conditional read) -cycle (8-		Fuzzy logic Index manipulation Interrupt Jump and subroutine Load and store Loop primitives Maximum and minimum Move Multiplication and division Multiply and accumulate Pointer and index calculation Shift and rotate Sign extension Stacking Stop and wait Table interpolation Transfer and exchange TYS instruction  U  U-cycle (16-bit stack read) U-cycle (8-bit stack read) U-cycle (8-bit stack read) Unary branches Unimplemented opcode trap Unsigned multiplication Unstack 16-bit data cycle Unstack 8-bit data cycle Unstack 8-bit data cycle Unweighted rule evaluation  V  V status bit V-cycle (vector fetch) Vector fetch cycle Vectors, exception  W  WAI instruction Wait instruction Wait instruction	Freescale Semic

S12CPUV2 Reference Manual, Rev. 4.0 S12CPUV2 Reference Manual, Rev. 4.0 448 Freescale Semiconductor 447 Freescale Semiconductor

HCS12	366
M68HC12	
wavr pseudo-instruction	
HCS12	
M68HC12	
	97, 379
	260–262, 342, 353–355, 359–363, 372
,	x
X mask bit	25, 182, 254, 270, 282, 291, 296, 306
x-cycle (8-bit conditional write)	98, 379
	Z
Z status bit	26, 121, 134
Zero-page addressing	

### S12CPUV2 Reference Manual, Rev. 4.0

Freescale Semiconductor 449

## S12CPUV2 Reference Manual, Rev. 4.0

450 Freescale Semiconductor

### How to Reach Us:

Home Page: www.freescale.com

E-mail: support@freescale.com

USA/Europe or Locations Not Listed: Freescale Semiconductor Technical Information Center, CH370 1300 N. Alma School Road Chandler, Arizona 85224 +1-800-521-6274 or +1-480-768-2130 support@freescale.com

supportisfreescale.com

Europe, Middle East, and Africa:
Freescale Hableter Deutschland GmbH
Technical Information Center
Schatzbogen Center
Schatzbogen Center
Schatzbogen Center
Schatzbogen Schatzbogen (Serman)
448 85200080 (English)
449 892103 559 (German)
433 16 93 548 44 (French)
supportisfreescale.com

Japan: Freescale Semiconductor Japan Ltd. Headquarters ARCO Tower 15-4-1, Shimo-Meguro, Meguro-ku, Tokyo 153-0064 or 181 3 5437 9125 support.japan@freescale.com

Asia/Pacific
Freescale Semiconductor Hong Kong Ltd.
Freescale Semiconductor Hong Kong Ltd.
Technical Information Center
2 Dai King Street
Tai Po Industrial Estate
Tai Po I, N.T., Hong Kong
+800 2666 8080
support.asia@freescale.com

For Literature Requests Only:
Freescale Semiconductor Literature Distribution Center
PO, Box 5469
Denver, Colorado 80217
1-000-441-247 pt 303-675-2140
EDCForFreescaleSemiconductor@hibbertgroup.com
LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without initiation consequential or incidental damages. "Pipical parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary different applications and actual performance may very over time. All operation if a parameters, including "typicales", must be wildistated for each customer application under its gatent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or there applications intended to support or sustain life, or for any other applications intended applications. Buyer and informerly and hot fire-research semiconductor product outder reast earlies without the semiconductor products for any such unintended or unauthorized applications. Buyer and informerly and hot off-research semiconductor and is difficust, emptycess, subsidiaries, affiliaties, and distributors harmiess against all directly or inforticy, any claim of personal injury or death associated with such current of a contraction of the personal injury or death associated with such unintended or unauthorized upon any and intended product out on the same and any and any any and any any and any and any any any and any any and any any and any any any and any any any and any any any and any any and any any any and any any any any and any any any and any any and any a

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© Freescale Semiconductor, Inc. 2004. All rights reserved.



<size-12> Rev. 4.0, 03/2006