

Sheetname: CPU

CPU MC68000
CLOCK 16MHZ
DATA AND ADDRESS BUFFERS
HALT AND RESET
DTACK GLUE LOGIC
INTERRUPT

Sheetname: MEMORY

ROM 16kBytes
RAM 1MBytes

Sheetname: FOUR UARTS

TG16C554
4 UARTS.

Arquivo: fourUarts.kicad_sch


Sheetname: cpuNoBuffer

CPU MC68000
CLOCK 16MHZ
HALT AND RESET
DTACK GLUE LOGIC
INTERRUPT

Arquivo: cpuNoBuffer.kicad_sch



UART CONTROL

Arquivo: uart_control.kicad_sch

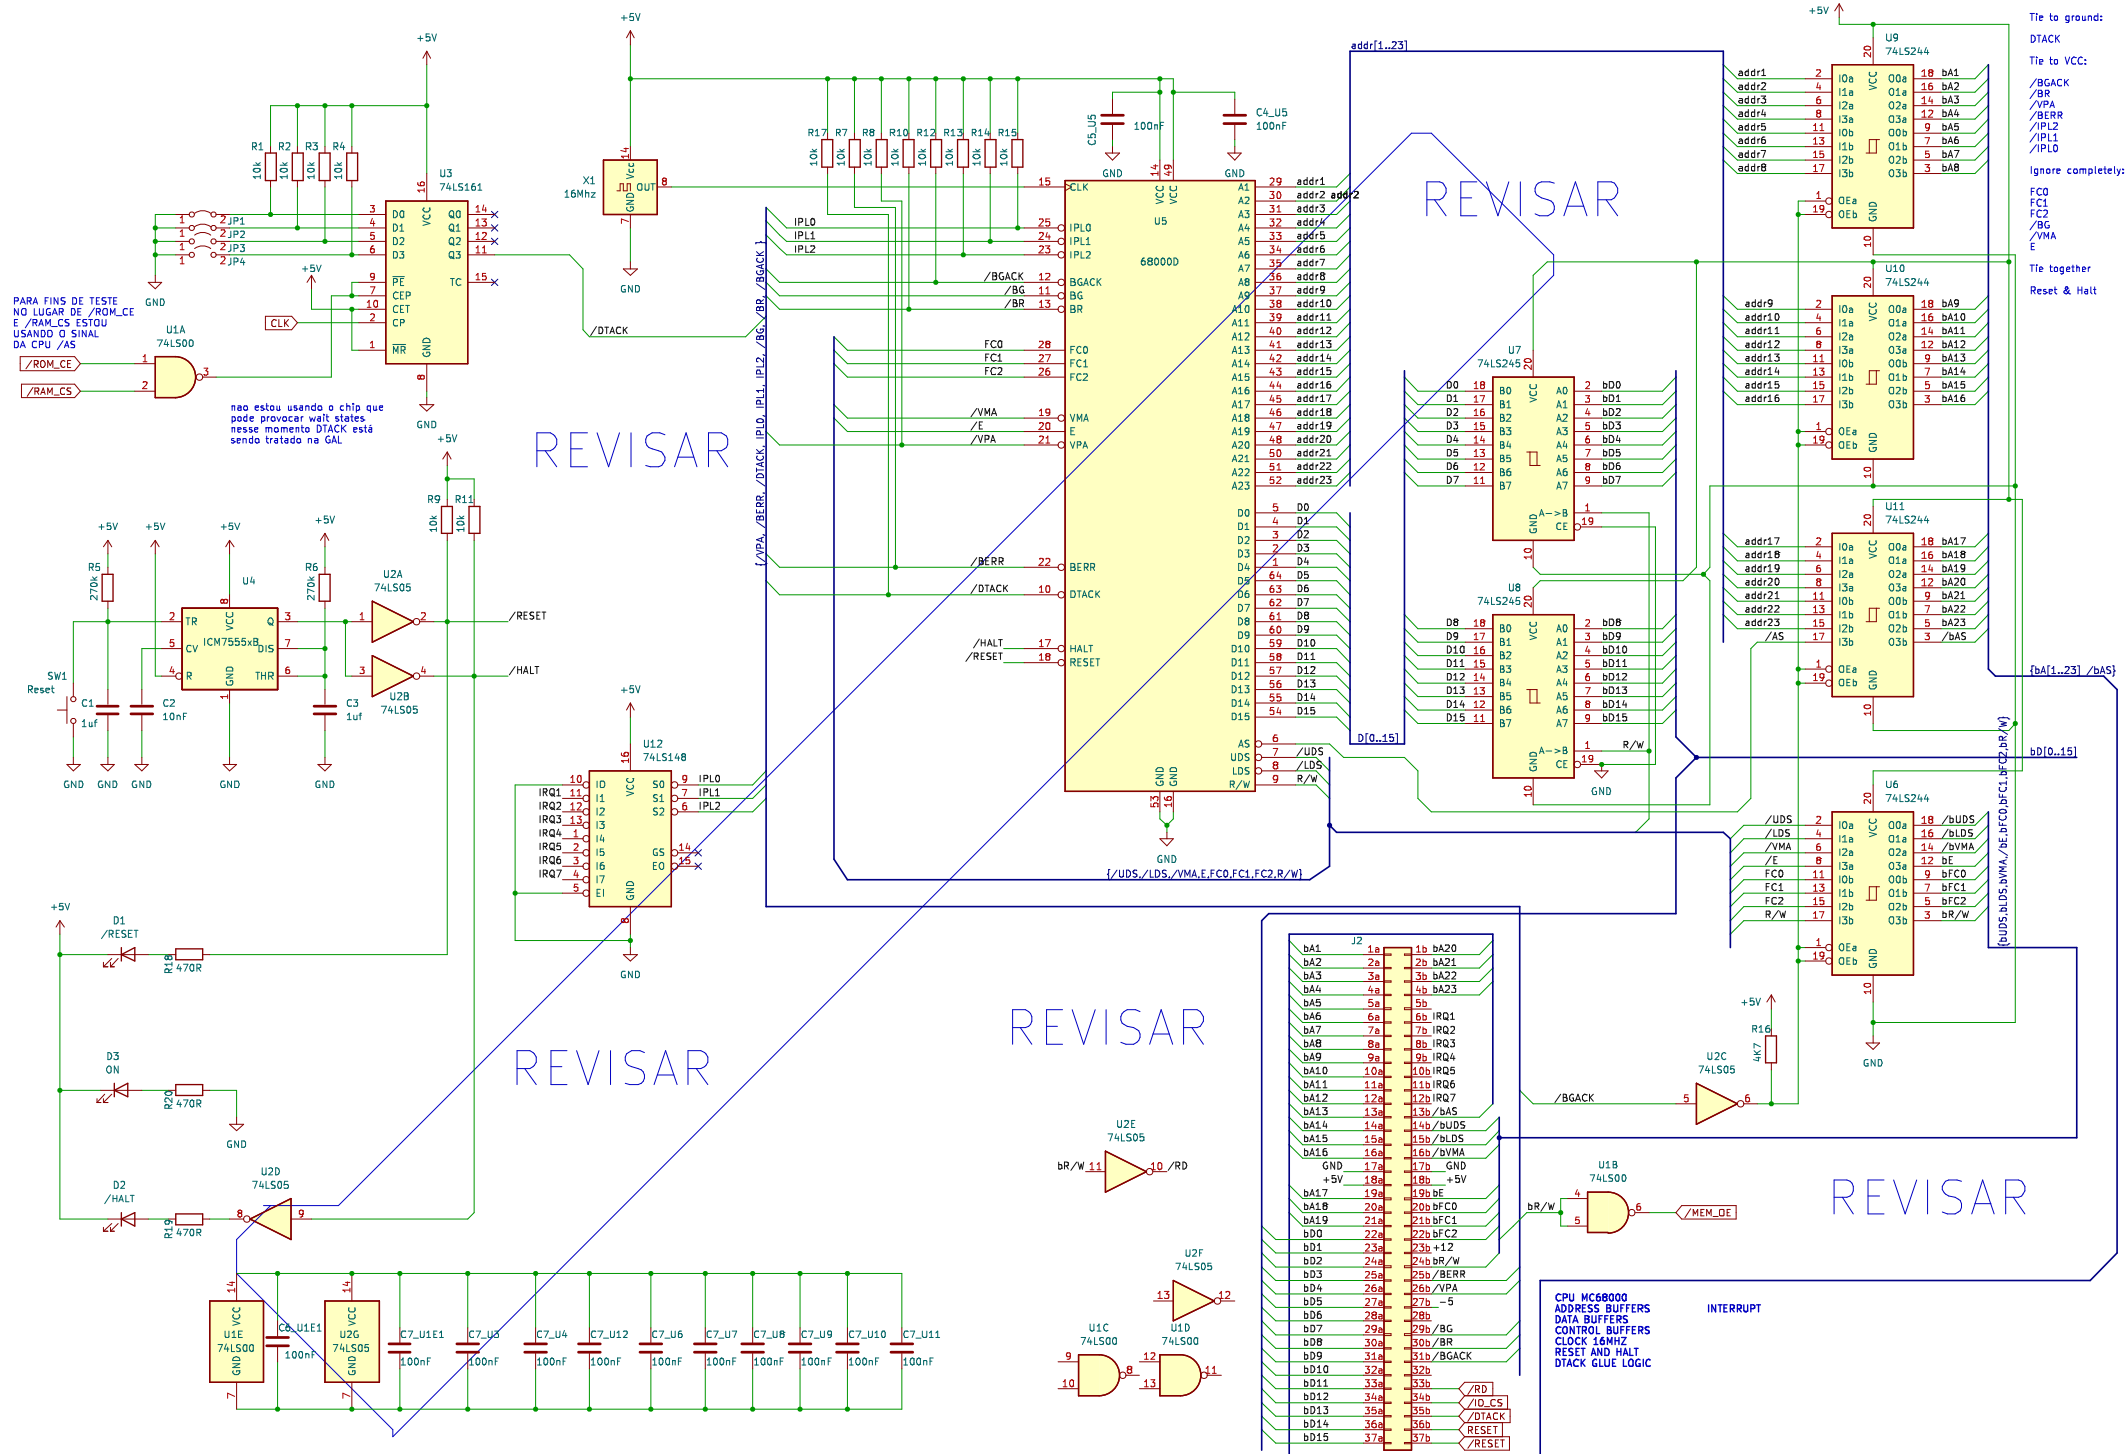


: PINOS DE ENTRADA
A13 PIN 1 : Barramento de endereço
A15 PIN 3
A16 PIN 4
A17 PIN 5
A18 PIN 6
A19 PIN 7
A20 PIN 8
IAS PIN 9 : Address Strobe


: PINOS DE SAÍDA
IROM_CS PIN 19 : ROM (0x00000-0x01FFF)
IO_CS PIN 18 : I/O (0x02000-0x03FFF)
IRAMA_CS PIN 17 : RAM1 (0x004000-0x07FFFF)
IRAM1_CS PIN 16 : RAM2 (0x080000-0x0FFFFFF)
IRAM2_CS PIN 16 : RAM2 (0x100000-0x17FFFF)
IRAM3_CS PIN 16 : RAM2 (0x180000-0x1FFFFFF)
: EQUAÇÕES
IROM_CS = IAS & IA20 & IA19 & IA18 & IA17 & IA16 & IA15 & IA14 & IA13 : 0x0000-0x1FFF (8 KB)
IO_CS = IAS & IA20 & IA19 & IA18 & IA17 & IA16 & IA15 & IA14 & A13 : 0x2000-0x3FFF (8 KB)
IRAMA_CS = IAS & IA20 & IA19 : 0x004000-0x07FFFF (20=0 e A19=0, exceto ROM e I/O)
IRAM1_CS = IAS & IA20 & A19 : 0x080000-0x0FFFFFF (20=0 e A19=1)
IRAM2_CS = IAS & A20 & IA19 : 0x100000-0x17FFFF (20=1 e A19=0)
IRAM3_CS = IAS & A20 & A19 : 0x180000-0x1FFFFFF (20=1 e A19=1)

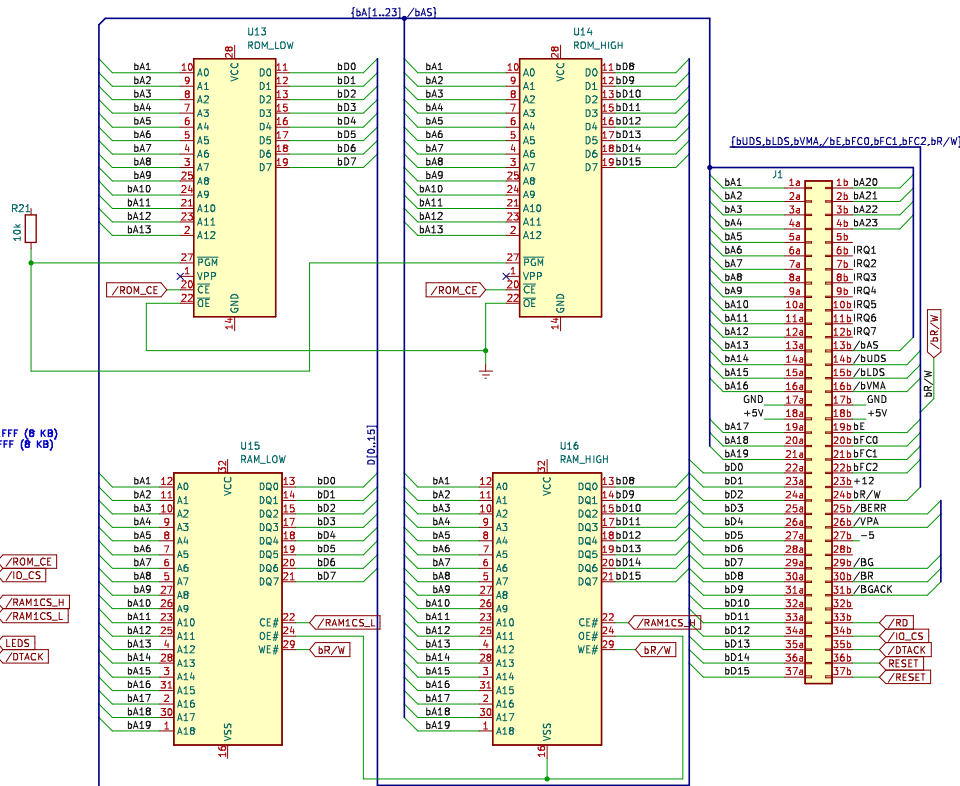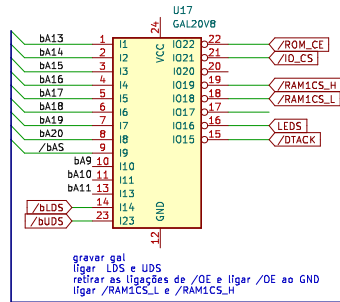











MEMORY CARD
16KB ROM
1MB RAM

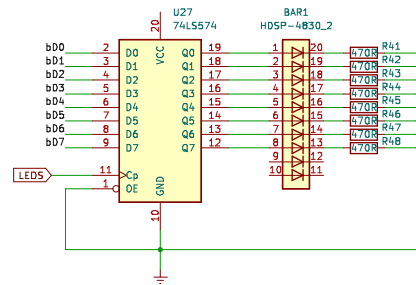

Release A: CS único para as memórias SRAM
Release B: CSH e CSL para as memórias SRAM

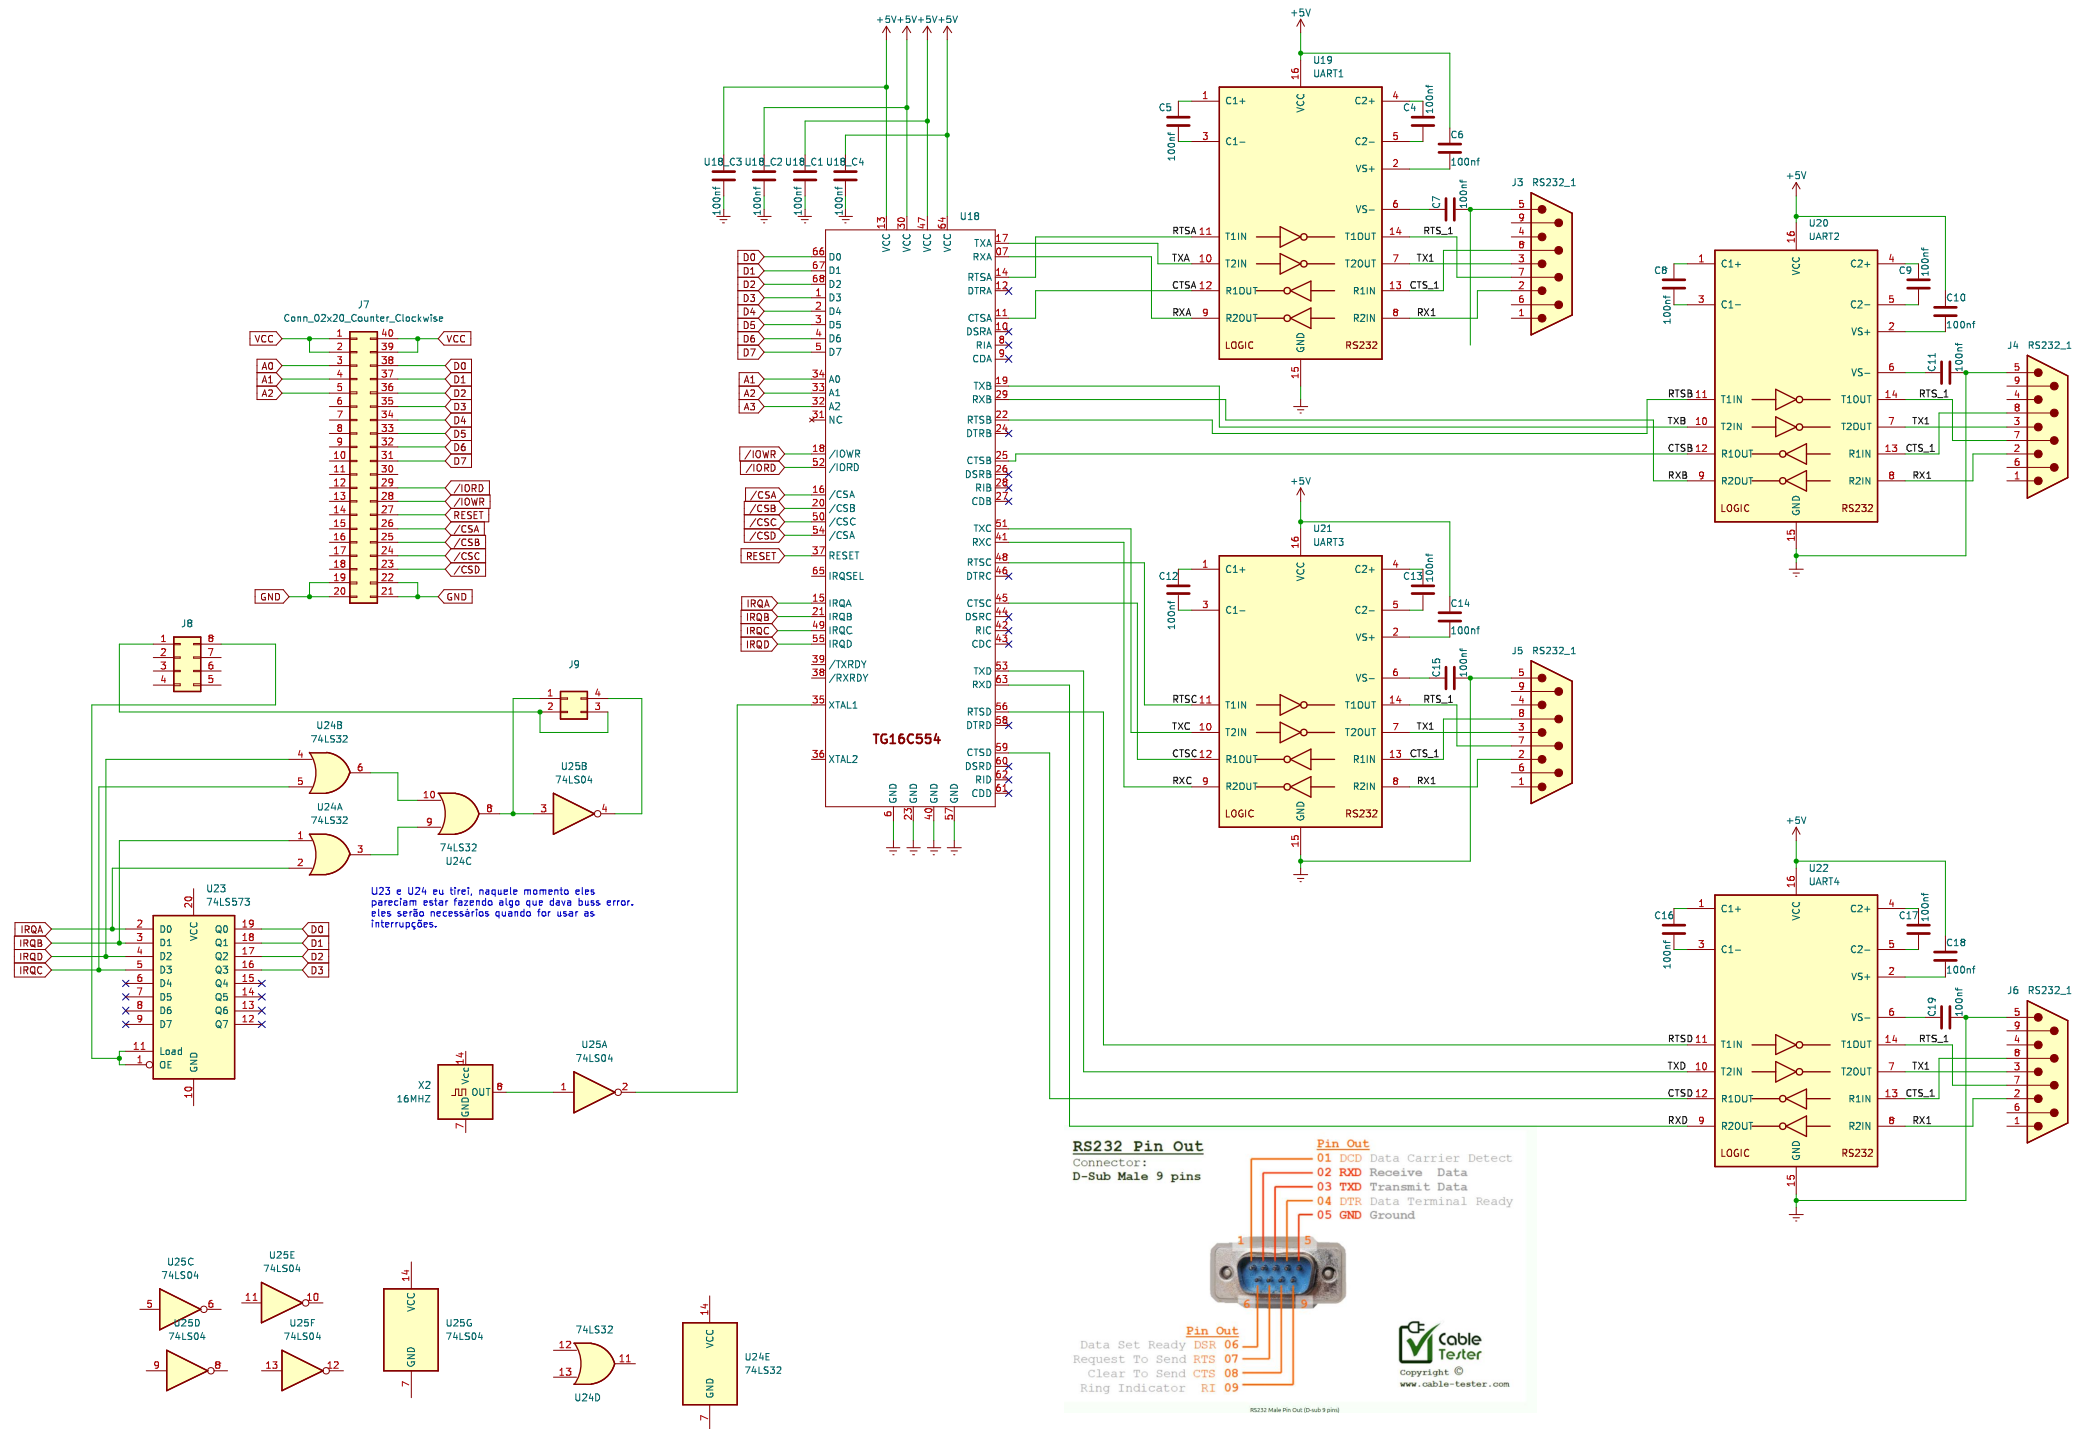

- 0 - por o soquete do ci Intrq
- 1 - por todos os capacitores 100nF
- 2 - por todos os terras
- 3 - por todos os vccs
- 4 - por todos os pullups com opção de pulldown
- 5 - por o oscilador
- 6 - por o ci Intrq
- 7 - ligar o clock
- 8 - ligar a cpu ao halt reset
- 9 - ligar os leds

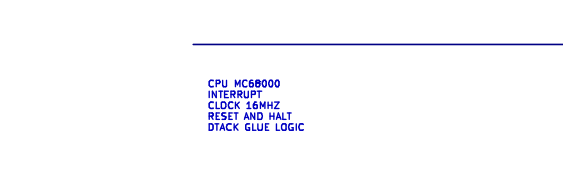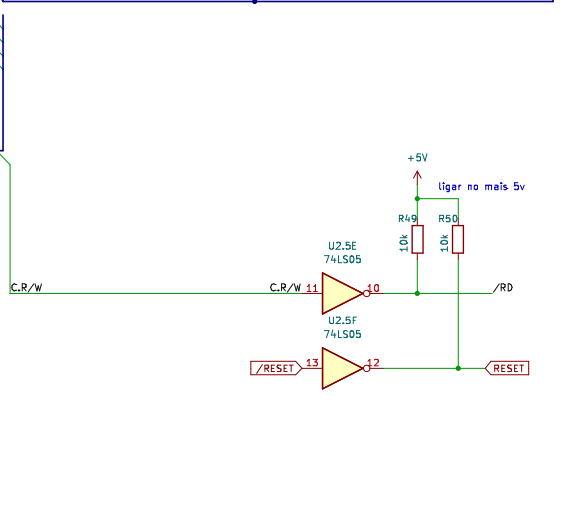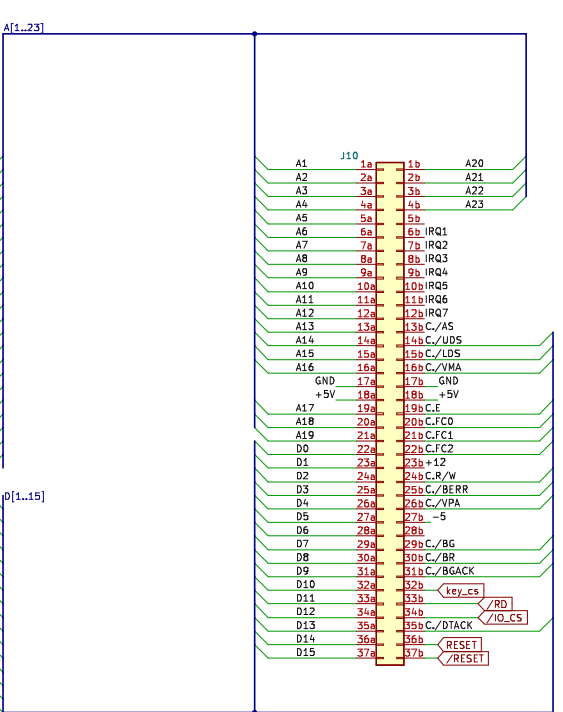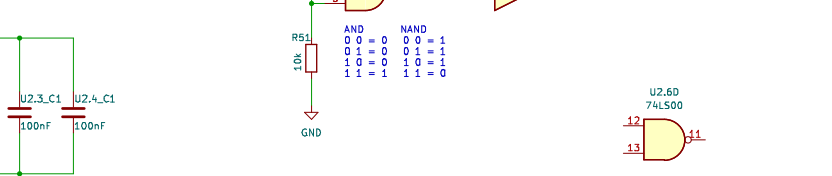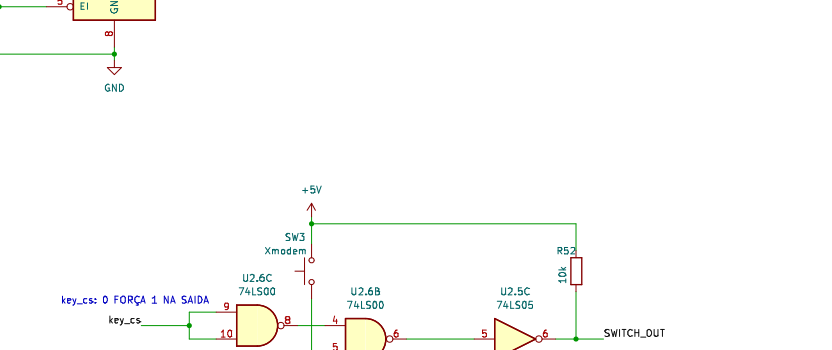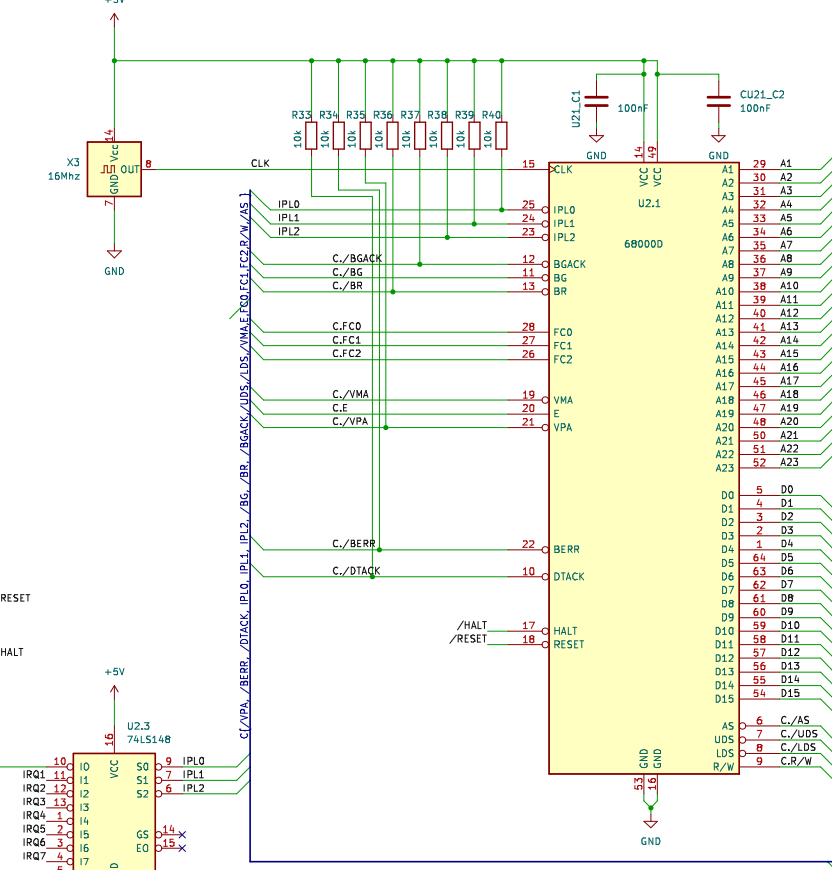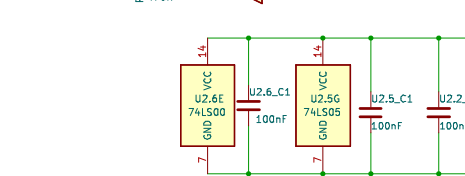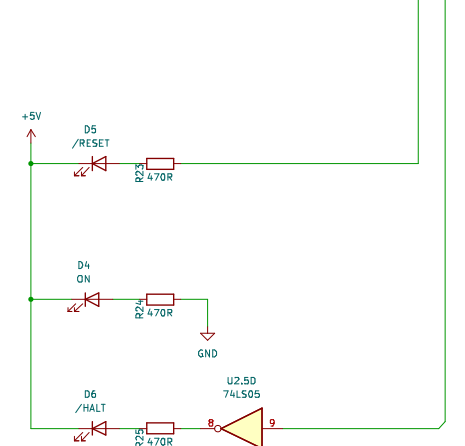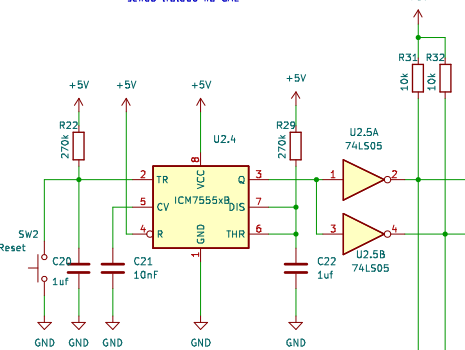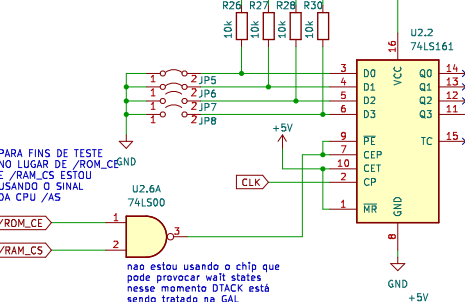

CPU MC68000
INTERRUPT
CLOCK 16MHZ
RESET AND HALT
DTACK GLUE LOGIC

UART1 - 0x4000 até 0x20FF = UART_CS1
UART2 - 0x4100 até 0x21FF = UART_CS2
UART3 - 0x4200 até 0x22FF = UART_CS3
UART4 - 0x4300 até 0x23FF = UART_CS4
key - 0x4400 até 0x44ff = key_cs na leitura
Led - 0x4400 até 0x44ff = LED_CS na escrita

