# MSP430 Timers: PWM (Compare Mode), Capture Mode, Frequency Measurement, and Applications

Embedded Systems Lab Report

September 22, 2025

## Contents

1	Overview					
2	1. Compare mode (PWM) vs Capture mode — concept and quick checks  2.1 Compare (PWM) mode	<b>3</b> 3 3				
3	2. DC motor speed control by varying DC voltage using timer-generated					
	PWM	5				
	3.1 (a) Name of technique	5				
	3.2 (b) Additional components required to obtain DC voltage	5				
	3.3 (c) Can CCR0 alone generate the required signal?	5				
	3.4 Counts required to get V0/4 and 3V0/4	6				
	(PWM hardware)	6				
	3.6 (d) Use both TA0CCR0 and TA0CCR1 to create V0/4 — alternative hardware technique	8				
4	3. Frequency generation and measurement	9				
	4.1 Batch tasks: generate and measure	9				
	4.1.1 Measurement approach (reciprocal capture)	9				
	frequency in variable)	9				
	4.2 Accuracy and how to improve it	11				
5	4. Generate an aperiodic waveform of $x$ cycles then zero	12				
	5.1 Approach	12 12				
	5.2 Minimum number of cycles $x$ for DMM to recognize frequency	13				
6	5. Stopwatch (pushbutton start/stop using capture) — full code	14				
7	Appendix: Practical tips and checklist	17				
Q	8 References					

### Overview

This document presents solutions and code for the lab tasks involving MSP430 timers:

- 1. Compare mode (PWM) and Capture mode tests and understanding.
- 2. Generating a DC average voltage using PWM (technique, components, calculations).
- 3. Frequency generation and measurement (reciprocal capture).
- 4. Generating an aperiodic burst of x square cycles.
- 5. Stopwatch using pushbutton + capture (P2.7 wired to P1.2 / TA0.CCI2A).

Assumptions made consistently in the examples:

- Default SMCLK = 1 MHz (as provided in your course material).
- Timer\_A is 16-bit: maximum count 65535.
- Timer in **Up mode**: counts from 0 to TAxCCR0 inclusive; period ticks = TAxCCR0+1.
- Digital output high voltage during PWM is  $V_{HIGH} = V_0$  (so average  $V_{avg} = \text{duty} \times V_0$ ).

### 1. Compare mode (PWM) vs Capture mode — concept and quick checks

#### 2.1 Compare (PWM) mode

- Timer run in up mode with TAxCCR0 = period (counts).
- TAxCCRn (n;=1) configured with an output mode (e.g. OUTMOD\_7 = Reset/Set) produces PWM on the associated TAx.n pin.
- Duty cycle =  $\frac{\text{TAxCCRn}}{\text{TAxCCR0} + 1}$  (if TAxCCRn is the compare count at which output changes).
- Use a DMM in DC mode (measuring voltage average) or an oscilloscope to measure waveform and duty. DMM will read average voltage roughly  $V_{avq} = duty \times V_{HIGH}$ .

#### 2.2 Capture mode

- Timer capture input (TAx.CCIyA) latches current timer value into TAxCCRy on an edge (rising/falling/both).
- Useful to measure time differences: differences of consecutive captures give period (or high/low durations).
- To measure an unknown frequency, route the signal to a capture pin; on two risingedge captures:

$$\Delta = \text{capture2} - \text{capture1}$$
 (with overflow handling)

frequency  $f = \frac{f_{timer}}{\Delta}$  where  $f_{timer}$  is the timer tick rate (e.g. SMCLK).

#### 2.3 How to check on your board

• Run PWM code (compare): measure average voltage using DMM (DC mode). Compare to expected  $V_{avg}$ .

from captured delta	Geed the PWM sas. Compare to	expected fre	quency.	1	

# 2. DC motor speed control by varying DC voltage using timer-generated PWM

#### 3.1 (a) Name of technique

The technique is called **Pulse Width Modulation (PWM)** followed by low-pass filtering (or the motor inductance acting as a low-pass) to obtain an effective DC voltage (average voltage). For motors specifically, PWM is frequently used (the motor driver behave as an electrical low-pass, producing an effective torque proportional to the average voltage/current).

# 3.2 (b) Additional components required to obtain DC voltage

To convert the PWM waveform to a smoother DC voltage you typically need:

- A low-pass filter (simple RC or better LC filter) to average the PWM into voltage: resistor + capacitor (or in practice an inductor + capacitor for motor drive).
- A power stage / driver (e.g. MOSFET or transistor driver or H-bridge) capable of supplying motor current. The MSP430 PWM pin cannot drive motor current directly.
- Flyback diode or proper motor driver (for DC motor inductive load) if not using an H-bridge that handles it.
- Optional: LC filter, smoothing capacitor, buffer (op amp) depending on quality of DC required.

# 3.3 (c) Can CCR0 alone generate the required signal?

• Short answer: No, not for arbitrary duty ratios. TAxCCR0 determines the PWM period in up mode. To produce arbitrary duty you normally need another compare

register (TAxCCR1 or TAxCCRn) to set the compare time when the pin toggles (or set/reset).

• You can produce 50% duty with clever toggling using CCR0 only (toggle output on CCR0, use interrupts or toggle mode) but arbitrary duty (25%, 75%) requires a second compare (CCR1) or software interrupts to toggle at the desired moment — software toggling increases jitter and CPU load.

#### 3.4 Counts required to get V0/4 and 3V0/4

We choose an example PWM frequency for clarity. You can change frequency by adjusting TA0CCR0.

**Example:** choose PWM frequency  $f_{PWM} = 1 \,\text{kHz}$ . With SMCLK = 1 MHz:

Period counts = 
$$\frac{f_{timer}}{f_{PWM}} = \frac{1,000,000}{1,000} = 1000$$
 ticks.

In up mode TA0CCR0 = period - 1 = 999 (since counts are 0..999 inclusive).

• For  $V_{avg} = V_0/4$ : required duty = 0.25. Compare count for CCR1:

$$TA0CCR1 \approx 0.25 \times 1000 = 250.$$

So set TAOCCR1 = 250 (or 249 depending on +1 indexing). Using formula:

$$TA0CCR1 = round(duty \cdot (TA0CCR0 + 1)).$$

• For  $V_{avg} = 3V_0/4$ : duty = 0.75:

$$TA0CCR1 \approx 0.75 \times 1000 = 750.$$

If you choose a different PWM frequency simply compute:

$$TA0CCR0 = \frac{f_{timer}}{f_{PWM}} - 1, \qquad TA0CCR1 = duty \cdot (TA0CCR0 + 1).$$

#### If SMCLK is divided

If you enable timer input divider, use effective timer tick frequency  $f_{timer} = \frac{SMCLK}{\text{divider}}$ .

# 3.5 (c) Code to generate V0/4 and 3V0/4 using TA0CCR0 + TA0CCR1 (PWM hardware)

Below are two example codes. Both assume SMCLK=1 MHz, Up mode, and PWM on TA0.1 pin (output mapped to the appropriate MSP430 pin). Adjust pin selections to your board's TA0.1 physical pin.

#### (i) PWM code: configure CCR0 for 1 kHz and CCR1 for duty

```
/* PWM using Timer_AO: TAOCCRO = period, TAOCCR1 = duty
      Example: SMCLK = 1 MHz, PWM = 1 kHz
2
      TAO.1 outputs PWM (use the proper port mapping for TAO.1 on
3
         your board)
4
  #include <msp430.h>
5
  void main(void) {
       WDTCTL = WDTPW | WDTHOLD;
       PM5CTLO &= ~LOCKLPM5; // enable GPIO
9
10
       // Example: assume TAO.1 is mapped to P1.2 (check device-
11
          specific pinout)
       // Set peripheral function for that pin (adjust to actual pin
12
       P1SELO |= BIT2;
                         // example; change depending on board
13
       P1SEL1 &= ~BIT2;
14
15
       // TimerAO: SMCLK, Up mode, clear TAR
16
       TAOCTL = TASSEL__SMCLK | MC__UP | TACLR;
17
18
       // Choose PWM frequency 1 kHz
19
                                    // Period = 1000 ticks (0..999)
       TAOCCRO = 999;
20
       TAOCCTL1 = OUTMOD_7;
                                    // Reset/Set output mode for CCR1
21
22
       // For V0/4 (25%):
23
                       // 250/1000 -> 25%
       TAOCCR1 = 250;
24
25
       // To get 3V0/4 (75%) change TAOCCR1=750
26
27
       __bis_SR_register(GIE);
28
       while(1) {
29
           __no_operation();
30
       }
31
  }
```

# (ii) Using CCR0-only + software toggling (not recommended for precise duty)

You could use CCR0 with interrupts to toggle the output to create arbitrary duty but jitter and CPU load increase. Example outline:

- Set timer in continuous mode.
- Use TA0CCR0 interrupt: on compare 1 toggle pin, reprogram TA0CCR0 to next toggle time.

(This approach is shown below in another example where both CCR0 and CCR1 are used for manual set/reset.)

# 3.6 (d) Use both TA0CCR0 and TA0CCR1 to create V0/4 — alternative hardware technique

One method: configure Timer in continuous mode and use CCR0 and CCR1 compares to **set and reset** output using software (or output modes). But best is using OUTMOD on CCR1 with CCR0 as period. If the requirement specifically wants both registers used to define edges (e.g. CCR0 used to reset and CCR1 used to set), an approach is:

- Set TA0 in continuous mode (counts up to 0xFFFF) and use CCR0 and CCR1 compare interrupts to set/reset a GPIO (or to control TA0.1 OUT with appropriate OUTMOD and toggles).
- For V0/4 with period counts = 1000 ticks, arrange toggles at times: t=0 set high (use CCR1), t=250 reset (use CCR0 at absolute time 250) then next cycle wrap at 1000 etc.

A simpler hardware solution: Up mode with TA0CCR0 = 999 (period), TA0CCR1 = 250 (duty) and TA0CCTL1 = OUTMOD\_7 is sufficient. But requested example using both CCR0 and CCR1 (explicit) is shown in code below: CCR0 is used as period (TA0CCR0) and CCR1 for duty (TA0CCR1) and using OUTMODs — this is functionally identical to (c) but explicitly references both registers.

```
/* Alternative: use CCRO as period and CCR1 as compare; CCRO and
     CCR1 both active.
     Set CCR0=999, CCR1=250 for 25% duty. Uses hardware OUTMOD.
2
3
  #include <msp430.h>
  void main(void) {
      WDTCTL = WDTPW | WDTHOLD;
6
      PM5CTLO &= ~LOCKLPM5;
      // Map TAO.1 to port pin (adjust to your board)
      P1SELO |= BIT2; P1SEL1 &= "BIT2;
9
10
      TAOCTL = TASSEL__SMCLK | MC__UP | TACLR;
11
      TAOCCRO = 999;
                             // period
12
      TAOCCTL1 = OUTMOD_7; // reset/set on CCR1
13
      TAOCCR1 = 250;
                             // duty 25%
14
      while(1) __no_operation();
15
  }
```

**Summary:** Use CCR0 for period and CCR1 for duty is standard and recommended. Setting CCR1 to 250 gives V0/4 (25%) if VHIGH = V0.

# 3. Frequency generation and measurement

#### 4.1 Batch tasks: generate and measure

- Batch-1 generate signal at frequency x kHz using Timer compare/PWM.
- Batch-2 measure the frequency generated by Batch-1 using Timer capture mode.
- Then switch tasks and repeat.

#### 4.1.1 Measurement approach (reciprocal capture)

Assume input signal is connected to capture pin TA0.CCI2A (mapped to P1.2 in your setup). Configure TA0 in continuous mode with SMCLK ticks. Capture on rising edge twice, compute difference (handle wraps), and compute frequency as:

$$f = \frac{f_{timer}}{\Delta}$$

where  $f_{timer} = 1 \,\mathrm{MHz}$ .

# 4.1.2 Code: generate a test PWM and measure it via capture (stores frequency in variable)

This single program toggles between generator and measurement modes (comment/uncomment as needed). Below is the measurement code that stores measured frequency in the variable measured\_freq.

```
/* Frequency measurement using Timer_A capture.
Assumes input signal connected to TAO.CCI2A (P1.2) or adjust
pin mapping.

SMCLK = 1MHz used as timer clock.

*/

#include <msp430.h>
volatile unsigned int cap1=0, cap2=0;
volatile unsigned char captured=0;
volatile float measured_freq=0.0;
```

```
volatile unsigned int overflow_count = 0;
  // Use TIMERO_A1_VECTOR for CCR1/CCR2 and overflow (TAOIV)
12
  #pragma vector = TIMERO_A1_VECTOR
13
  __interrupt void TimerO_A1 (void)
14
15
       switch (TAOIV) {
16
           case TAOIV_TACCR1: break;
17
           case TAOIV_TACCR2:
18
                if (captured==0) {
19
                    cap1 = TAOCCR2;
20
                    captured = 1;
21
                } else {
22
                    cap2 = TAOCCR2;
23
                    // compute delta with timer wrap handling (timer
24
                       in continuous)
                    unsigned long delta;
25
                    if (cap2 >= cap1) delta = (unsigned long)(cap2 -
26
                       cap1);
                    else delta = (unsigned long)(0x10000u + cap2 -
                       cap1); // wrap (16-bit)
                    // If using divider or overflow counting, include
28
                        that.
                    // Timer tick rate:
29
                    const float f_timer = 1000000.0f; // 1 MHz
                    if (delta>0) measured_freq = f_timer / (float)
31
                       delta;
                    else measured_freq = 0.0f;
32
                    // prepare for next measurement
33
                    cap1 = cap2;
34
                    captured = 1; // let next capture overwrite cap2
35
                }
36
                break;
37
           case TAOIV_TACCRO: break;
38
           default: break;
39
       }
40
  }
41
42
  int main(void) {
43
       WDTCTL = WDTPW | WDTHOLD;
44
       PM5CTLO &= ~LOCKLPM5;
45
46
       // Configure P1.2 as TAO.CCI2A input (if device pin mapping
47
          requires P1SEL)
       P1SELO |= BIT2; P1SEL1 &= ~BIT2;
48
49
       // TimerA in continuous mode so capture times increase
50
          monotonically
       TAOCTL = TASSEL_SMCLK | MC_CONTINUOUS | TACLR;
52
       // Capture on rising edge, CCI2A, enable interrupt
53
```

```
TAOCCTL2 = CM_1 | CCIS_0 | CAP | CCIE; // Capture rising
54
          edges only
55
       __bis_SR_register(GIE);
56
57
       while(1) {
58
           // measured_freq contains the latest frequency in Hz
59
           __no_operation();
           // you can use measured_freq in app code or send via UART
61
       }
62
  }
63
```

#### 4.2 Accuracy and how to improve it

- Sources of error:
  - Timer clock stability (if DCO is 1 MHz but not calibrated it may vary).
  - Resolution limited by timer tick period  $(1 \mu s \text{ for } 1 \text{ MHz})$ .
  - Jitter triggers (noise on input edges).
  - Quantization: when measuring high frequencies the delta can be small (few ticks) so percentage error increases.
- Improvements:
  - Use a higher-stability clock source (external crystal) or increase SMCLK frequency.
  - Average multiple period measurements (take N measurements and average).
  - Use capture of multiple cycles (count multiple periods N and measure combined delta; frequency=f\_timer/(delta/N) reduces quantization).
  - Use input conditioning (Schmitt trigger, buffering) to reduce jitter and false triggers.
  - Use prescalers carefully so delta fits range and resolution is adequate.
- Programmatic improvement example: measure time for 100 cycles and divide:

$$f \approx \frac{f_{timer} \times 100}{\Delta_{100cycles}}$$

That reduces relative quantization error by factor 100.

# 4. Generate an aperiodic waveform of x cycles then zero

#### 5.1 Approach

Generate x cycles of square wave and then stop the timer output. Implementation idea:

- Use PWM in hardware and count the number of period interrupts (TAx CCR0 interrupts) in an ISR.
- After x periods, disable the timer output or set output pin to 0.

#### 5.1.1 Code: generate x cycles

```
/* Generate x cycles of square PWM and then stop output */
  #include <msp430.h>
  volatile unsigned int cycle_count = 0;
  const unsigned int X = 50; // choose x cycles here
  #pragma vector = TIMERO_AO_VECTOR
   __interrupt void TimerO_AO_ISR(void)
       cycle_count++;
9
       if (cycle_count >= X) {
10
           // turn off PWM output: clear OUTMOD or set output low
11
           TAOCCTL1 &= "OUTMOD_7; // disable reset/set
12
           // Optional: set pin low as GPIO
13
           // P10UT &= ~BIT2;
           // P1DIR |= BIT2; // make it GPIO
15
           TAOCTL &= ~MC__UP; // stop timer
16
       }
17
  }
18
  int main(void) {
20
       WDTCTL = WDTPW | WDTHOLD;
21
       PM5CTLO &= ~LOCKLPM5;
22
       // Setup PWM similar to earlier example
23
       P1SELO |= BIT2; P1SEL1 &= "BIT2; // map TAO.1
```

```
TAOCTL = TASSEL__SMCLK | MC__UP | TACLR;
TAOCCRO = 999; TAOCCTL1 = OUTMOD_7; TAOCCR1 = 500; // 50%
example
// TAOCCRO interrupt enable for counting cycles
TAOCCTLO |= CCIE;
__bis_SR_register(GIE);
while(1) __no_operation();
}
```

# 5.2 Minimum number of cycles x for DMM to recognize frequency

- There is no single universal number it depends on the DMM's measurement integration time and algorithm.
- Practical guidance:
  - Many DMMs sample over a time window (e.g., 100 ms to 1 s). If your burst duration is much shorter than the DMM's integration window, the meter may show zero or an inaccurate reading.
  - To be safe, ensure the burst duration is at least ~100-500 ms so DMM can stabilize and display frequency. For high frequencies this means many cycles; for low frequencies, fewer cycles might suffice.
  - As a heuristic: generate at least 50–100 cycles or make sure the burst lasts at least 0.1 s. This usually lets the DMM produce a stable reading.
- Conclusion: pick X so that  $X/f \ge 0.1$  s where f is waveform frequency.

# 5. Stopwatch (pushbutton start/stop using capture) — full code

This uses the hardware configuration you specified:


- Pushbutton: P2.7 (user switch).
- Jumper P2.7  $\rightarrow$  P1.2 (TA0.CCI2A) so pushing the button provides capture input.
- LED1 (red): P1.0 ON when timer running (start).
- LED2 (green): P6.6 ON when timer stops (stop).

```
/* Stopwatch using pushbutton P2.7 connected to P1.2 (TAO.CCI2A)
     Light P1.0 (red) when running, P6.6 (green) when stopped
  #include <msp430.h>
  volatile unsigned int start_time = 0;
  volatile unsigned int stop_time = 0;
  volatile unsigned long elapsed_us = 0;
  volatile unsigned char running = 0;
  #pragma vector = TIMERO_A1_VECTOR
10
  __interrupt void TimerO_A1_ISR(void)
11
12
      if (TAOIV == TAOIV_TACCR2) {
13
           // Capture occurred on TAOCCR2
14
           // Read button state via P2IN to distinguish press vs
15
              release
           if (P2IN & BIT7) {
16
               // Button is HIGH: treat as not pressed (depends on
17
                  switch wiring)
               // If your hardware has active-low button, invert
                  logic accordingly.
               // Here we treat rising edge as button release.
19
               stop_time = TAOCCR2;
20
               // compute elapsed (handle wrap)
21
               if (stop_time >= start_time) elapsed_us = stop_time -
                   start_time;
```

```
else elapsed_us = (unsigned long)(0x10000u +
23
                   stop_time - start_time);
                running = 0;
24
                P6OUT |= BIT6;
                                // green ON (stopped)
25
                P10UT &= "BIT0; // red OFF
26
           } else {
27
                // Button pressed (falling edge)
28
                start_time = TAOCCR2;
                running = 1;
30
                P10UT |= BIT0;
                                // red ON (running)
31
                P60UT &= "BIT6; // green OFF
32
           }
33
       }
34
  }
35
36
   int main(void) {
37
       WDTCTL = WDTPW | WDTHOLD;
38
       PM5CTLO &= ~LOCKLPM5;
39
40
       // Configure LEDs
41
       P1DIR |= BITO; P1OUT &= "BITO; // Red LED (P1.0)
42
       P6DIR |= BIT6; P6OUT &= "BIT6; // Green LED (P6.6)
43
44
       // Configure P1.2 as TAO.CCI2A input
45
       P1SELO |= BIT2; P1SEL1 &= "BIT2;
46
       // Configure TimerAO continuous mode
48
       TAOCTL = TASSEL__SMCLK | MC__CONTINUOUS | TACLR;
49
50
       // Capture on both edges, CCI2A, enable interrupt
51
       TAOCCTL2 = CM_3 | CCIS_0 | CAP | CCIE;
52
53
       // Configure P2.7 as button input (with pull-up or as per
54
          board)
       P2DIR &= ~BIT7;
55
       P2REN |= BIT7;
56
       P20UT |= BIT7; // pull-up
57
58
       __bis_SR_register(GIE);
59
       while(1) {
60
           // elapsed_us holds time in timer ticks (1 tick = 1 us if
61
                SMCLK=1MHz)
           // convert to microseconds if needed and use elsewhere
           __no_operation();
63
       }
64
  }
65
```

#### Notes:

• If your pushbutton is active-low (most on LaunchPad are), the code expects that pressing pulls the line low. Adjust logic if your board uses opposite wiring.

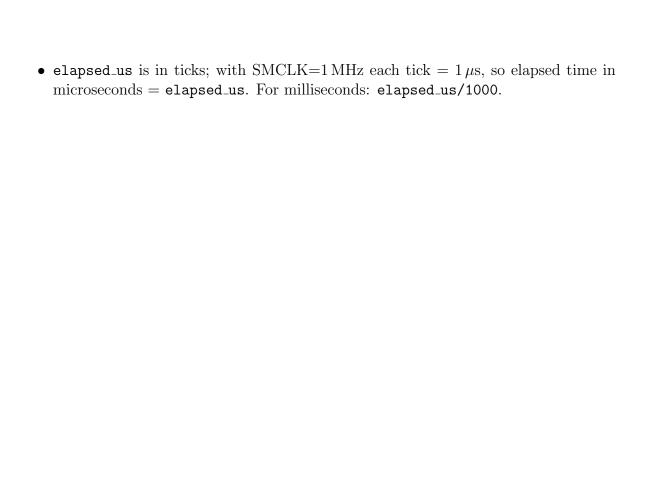

# Appendix: Practical tips and checklist

- Always verify actual SMCLK with a scope or by toggling a pin and measuring the DCO may not be exactly 1 MHz.
- Inspect device datasheet for exact pin mapping of TA0 channels and configure port function (PSEL) accordingly.
- Use hardware PWM (OUTMOD) when possible; it is far more accurate and has less jitter than software toggling.
- Use input debouncing for mechanical buttons if you rely on button edges (or use capture on both edges but filter).
- For DC motor drive use a proper driver (MOSFET) and consider current limiting and thermal aspects.

### References

- $\bullet$  MSP430FR2433 Family Datasheet and User Guide (use your course links).
- Lecture materials and code samples you provided.
- Electronics tutorials for 7-segment and LCD (as previously referenced).