SETTING WIFI PDA

1. Cara Reset PDA




1.Reset PDA

Tekan tombol yg diberi panah warna merah secara bersamaan


localhost:8501 1/7

>

2. SETTING WIFI PDA POINT MOBILE

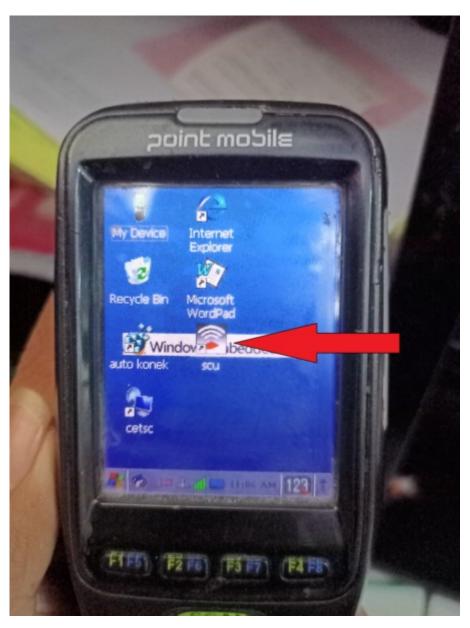


2. SCU

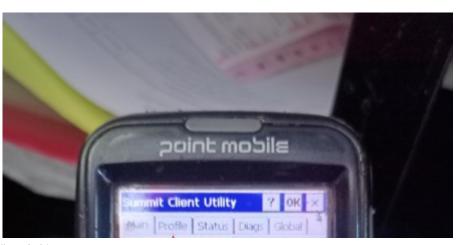


localhost:8501 2/7




3. Main

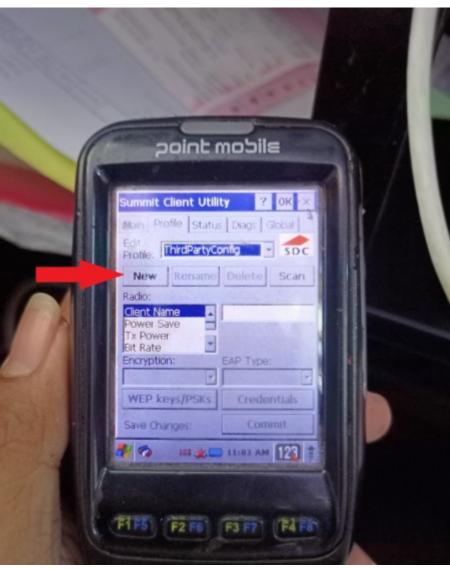

10/22/22, 6:05 AM PANDUAN PDA KWG




4. Profil

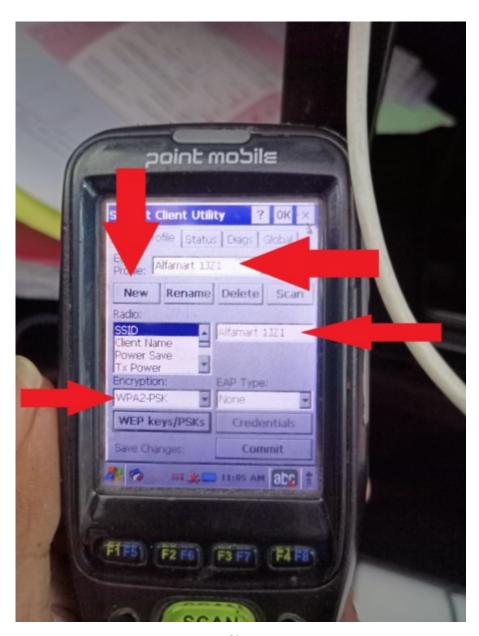


5.Profile Name

Isi dengan nama wifi toko masing-masing (lihat pada bagian cek nama wifi).

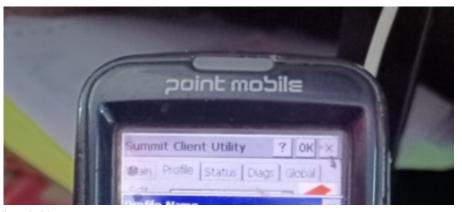


localhost:8501 4/7

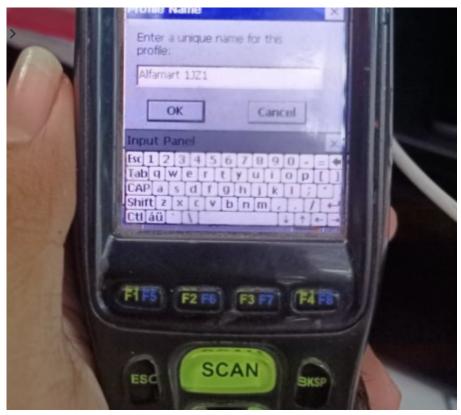

6. Nama WiFi

Computer: 10.234.234.1

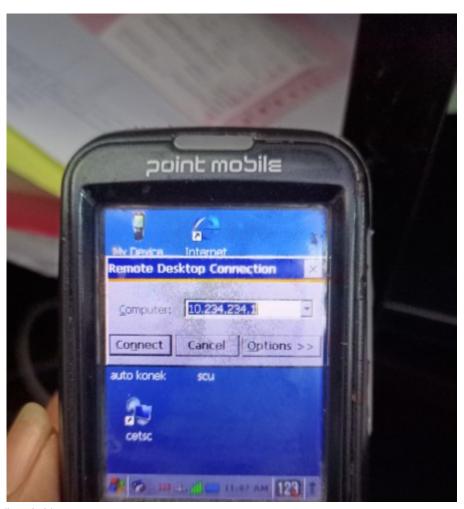


localhost:8501 5/7

10/22/22, 6:05 AM PANDUAN PDA KWG



7. IP Remote

Username: PDA1KODETOKO dan Password: SAT

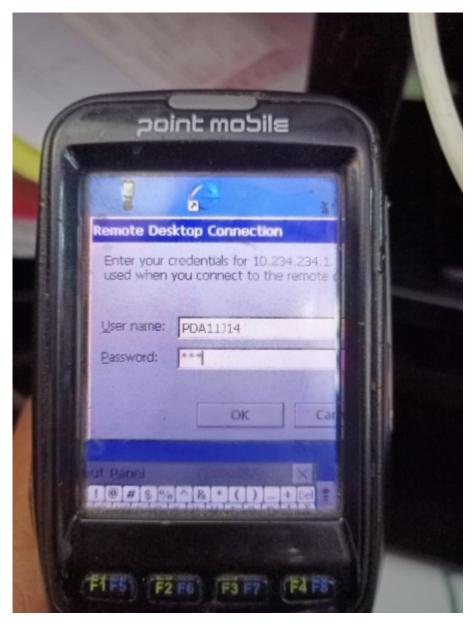

8. User PDA

Selesai.

localhost:8501