


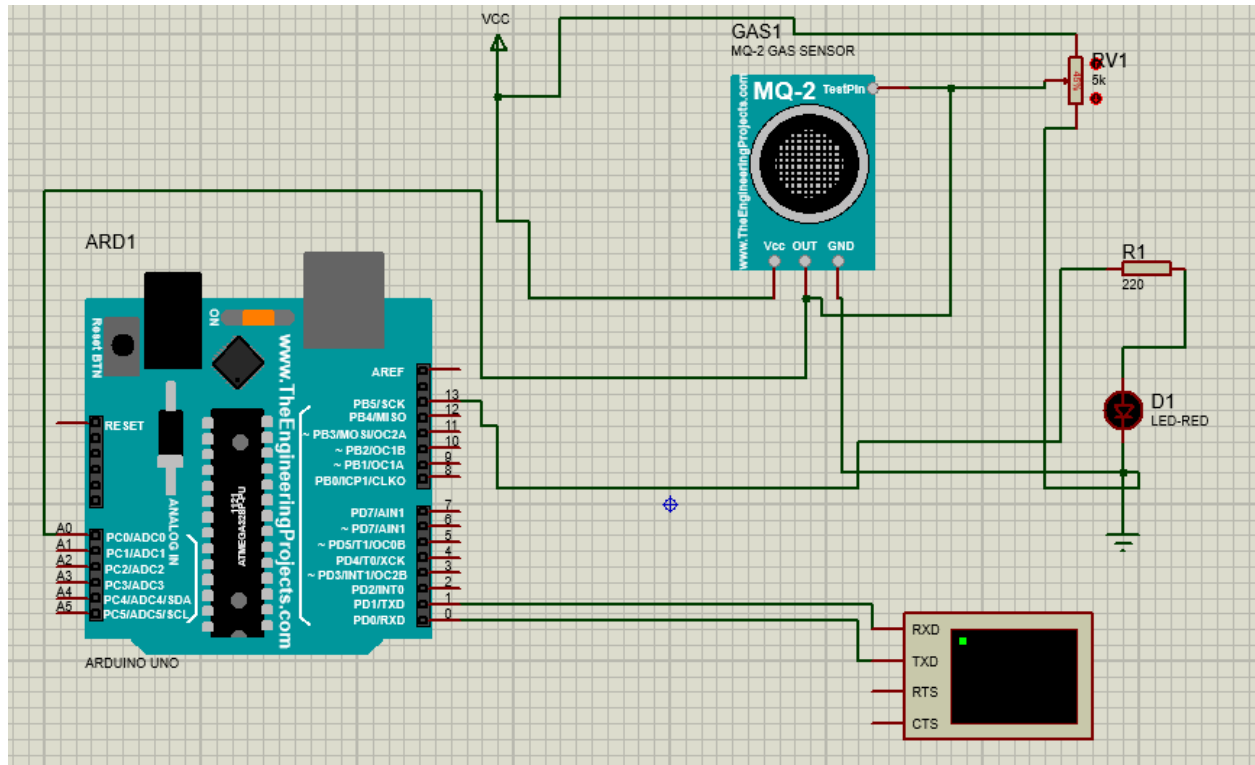

Virtual Terminal

```
MQ-2 Gas Sensor Simulation
-----
Gas Value = 76
Status : Safe
-----
Gas Value = 1023
Status : Gas Detected
-----
Gas Value = 1016
Status : Gas Detected
-----
Gas Value = 1002
Status : Gas Detected
-----
```

Arduino code:

```
// Gas Sensor Simulation using Potentiometer
// Potentiometer Middle Pin -> A0
// LED -> D13

const int gasPin = A0;
const int ledPin = 13;

void setup()
{
```

```
pinMode(ledPin, OUTPUT);

Serial.begin(9600);

Serial.println("MQ-2 Gas Sensor Simulation");
Serial.println("-----");
}

void loop()
{
    int gasValue = analogRead(gasPin);

    Serial.print("Gas Value = ");
    Serial.println(gasValue);

    if (gasValue >= 400)
    {
        digitalWrite(ledPin, HIGH);
        Serial.println("Status : Gas Detected");
    }
    else
    {
        digitalWrite(ledPin, LOW);
        Serial.println("Status : Safe");
    }

    Serial.println("-----");

    delay(500);
}
```