



Before Interrupt:

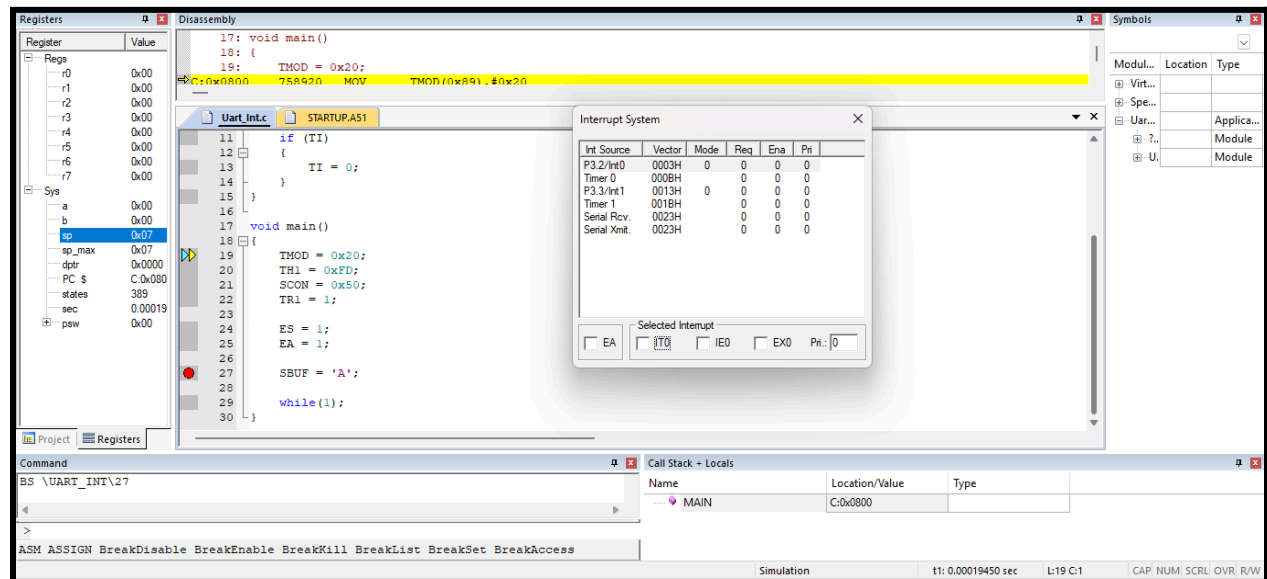

After Interrupt:

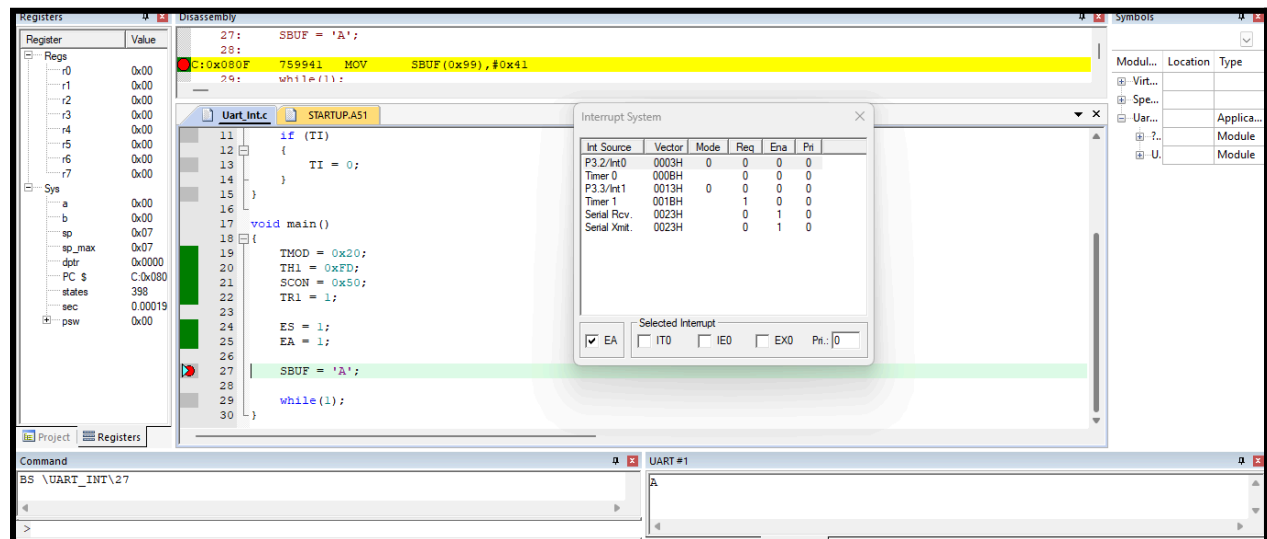

C Program:

```
#include <reg51.h>

void UART_ISR(void) interrupt 4
{
    if (RI)
    {
        RI = 0;
        SBUF = SBUF;
    }
}
```

```
    }  
  
    if (TI)  
    {  
        TI = 0;  
    }  
}  
  
void main()  
{  
    TMOD = 0x20;  
    TH1 = 0xFD;  
    SCON = 0x50;  
    TR1 = 1;  
  
    ES = 1;  
    EA = 1;  
  
    SBUF = 'A';  
  
    while(1);  
}
```