Jar Tower: thread test

One screw-in bottom (pink here) and three mouths (purple), at the jars' real 72 mm size.

1 What's in the print




- **The spigot: a jar's threaded bottom, with a cone above its thread.**
- **Three mouths: a jar's threaded top. The notches on each rim say how loose its thread is:**
- 1 notch = 0.2 mm (snug), 2 notches = 0.3, 3 notches = 0.4 (easy).

2 Screw the spigot into a mouth



- Teeth down, into the mouth. Turn it clockwise.
- It stops when its cone lands in the mouth's countersink: don't force it past that.

3 Screwed home

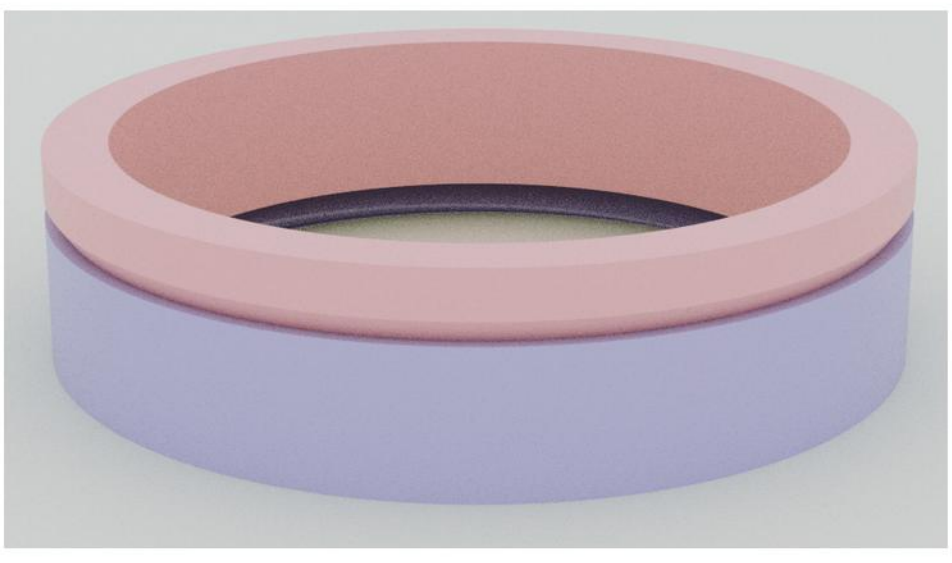

- The cone pulls the seam shut, the same on every mouth.
- Cut in half below: the teeth engaged, and the cone seated on the countersink.

4 Inside the joint



Design-review renders of the real parts, not photos. Colours are only to tell the parts apart.

Jar Tower: test it

Try the spigot in all three mouths.

1 For each mouth

- **Screw it on: does it go all the way by hand and stop on the cone?**
- Screwed home, wiggle it: is there play?
- Tug it straight up: it must hold.
- Start it a little crooked: it should find the thread, not jam.

Good

- Screws on by hand, smooth, all the way to the stop.
- No wobble when it's home.
- Finds the thread even if you start it crooked.

Tell me

- which mouth felt best (1, 2 or 3 notches);
- if any bound, or jammed crooked;
- if any wobbled when screwed home.

Design-review renders of the real parts, not photos. Colours are only to tell the parts apart.