
Fold Stand v3: put the test piece together


Three pieces, no pins, nothing to force. Every part just drops into place.

1 The three pieces

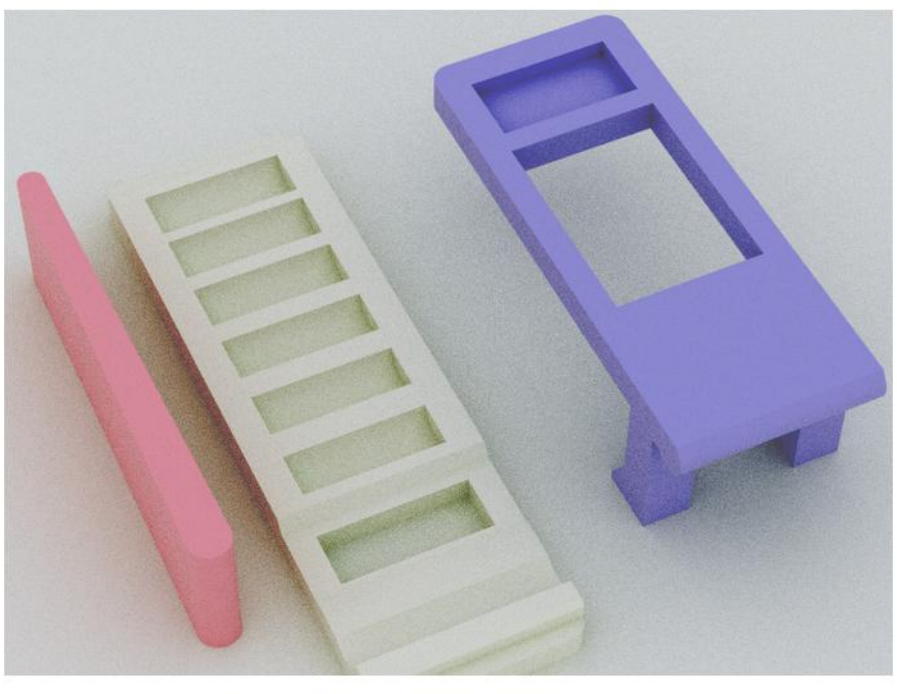


- **Base (white here): a round groove at one end, six round notches along the middle.**
- **Plate (purple), shown upside down: the phone shelf is at one end, the pocket on its back.**
- **Prop (pink): one end thick (the foot), one end thin (the top).**
- The big open windows in the base and the plate only save plastic on this test piece. The pocket is the small one near the plate's end.

2 Drop the plate into the groove

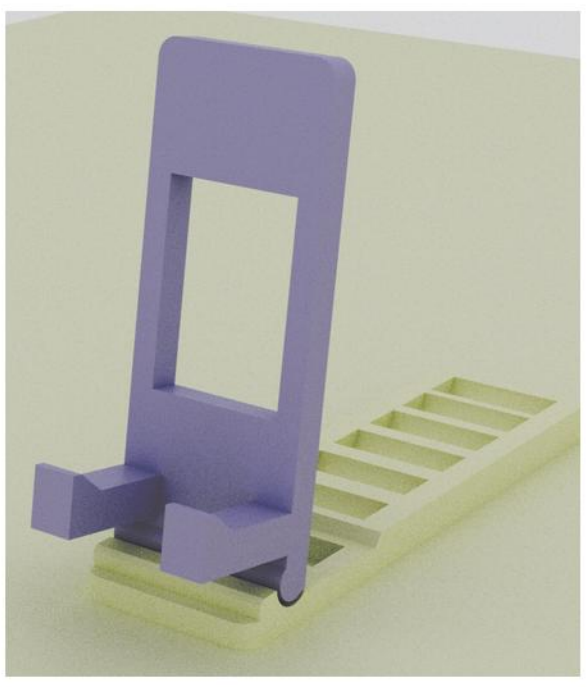

- Groove nearest you, notches running away from you.
- The plate's round bottom edge (beside the shelf) goes in the groove, shelf facing you.
- **Tip it back and forth: it should rock freely, not bind and not flop out.**

3 Put the prop in

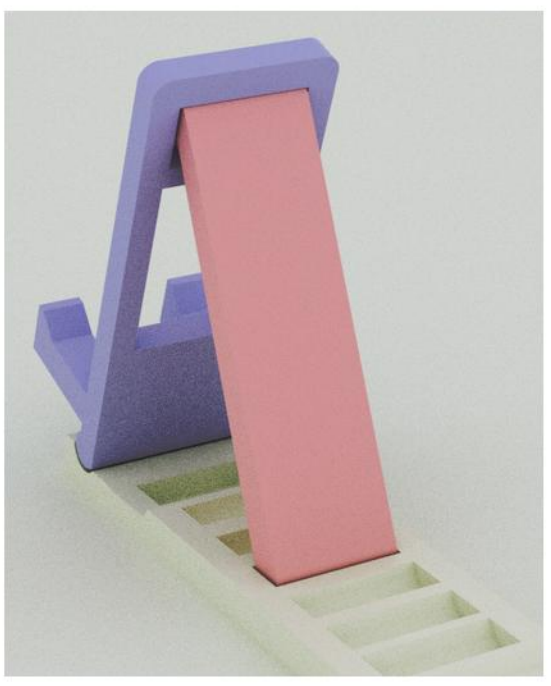

- Lean the plate back. Push the prop's thin end up into the pocket on the plate's back.
- Drop the thick end into a notch. Seen here from behind.
- **Nearest notch = steepest (80 deg). Each notch further back lays it 5 deg flatter, to 55.**

4 Stand your phone on the shelf




- Its bottom edge on the shelf, its back against the plate.

Design-review renders of the real test-print parts, not photos. Colours are only to tell the parts apart.


Fold Stand v3: test it

Six notches, six angles. Try each one with your phone on it.


1 Each notch, with your phone on

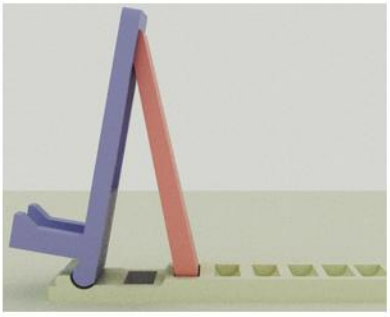


notch 1: 80 deg

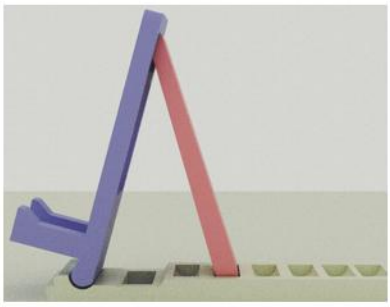


notch 2: 75 deg

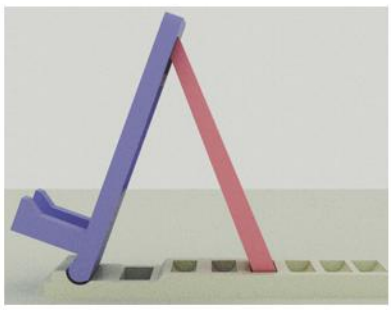


notch 3: 70 deg

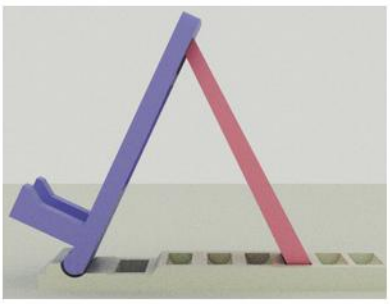

notch 4: 65 deg

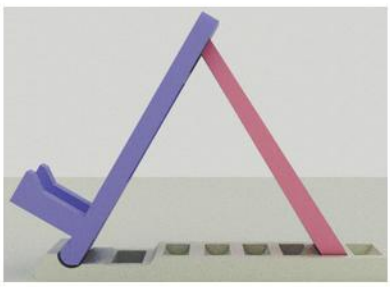

notch 5: 60 deg

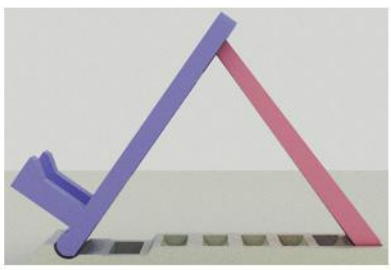

notch 6: 55 deg

- **Tap the screen like normal: the angle must not change.**
- Lift the phone, move the prop to the next notch, put the phone back. It should be easy.
- It is only 30 mm wide, so it can rock side to side; the real stand is 76 wide. What matters is that the angle holds.

Good

- The plate drops into the groove and rocks freely.
- The thin end sits snug up in the top of the pocket.
- The thick end drops into each notch and stays there.
- No angle slips when you tap the screen.

Tell me if

- the plate binds in the groove, or is sloppy there;
- the thin end won't stay up in the pocket;
- the thick end rides out of a notch, or sits between two;
- any angle slips under a normal tap, or the stand slides on your desk.

Design-review renders of the real test-print parts, not photos. Colours are only to tell the parts apart.