
Alfa Laval

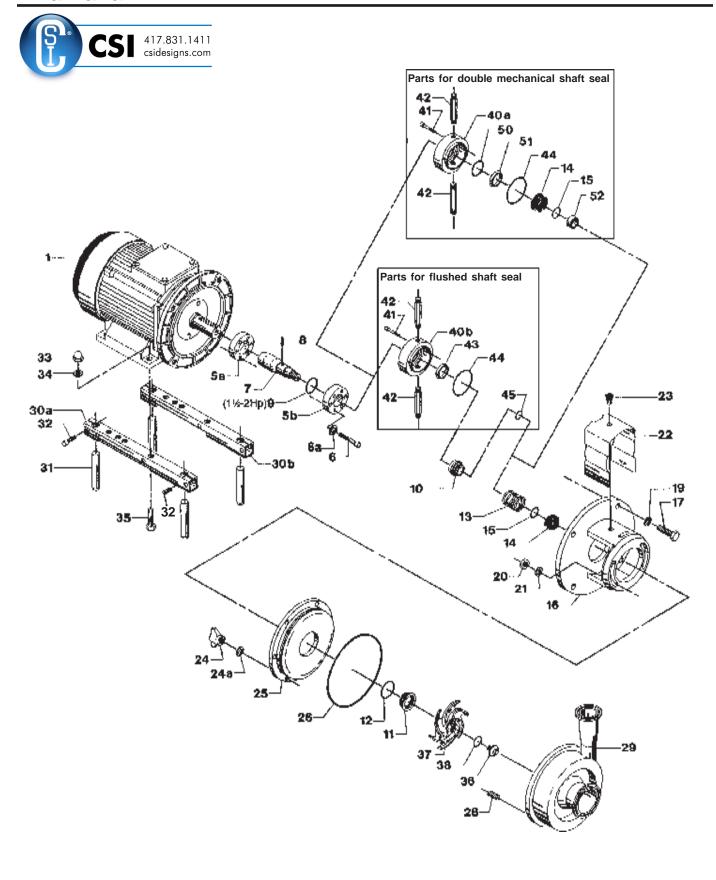

Pos.	Qty.	Description	1.5-2 Hp Part No.	3-5 Hp Part No.	7.5-10 Hp Part No.
1	1	Motor			
1 5a	1 1	Motor Compression ring with thread	0612-13-3601	9612-13-3602	9612-13-3606
5a 5b	1	Compression ring without thread		9612-13-3702	9612-13-3706
6	6	Screw	9611-99-3196	9611-99-3196	9611-99-3197
6a	6	Washer		9611-99-3199	9611-99-3199
7	1	Stub shaft		9612-13-3102	9612-13-3202
8	1	Connex pin		961199-0622	9611-99-0622
9	1	Retaining ring		N/A	N/A
10	1	Drive ring - single shaft seal		9612-13-7701	9612-13-7701
	1	Drive ring - flush shaft seal	9612-13-9701	9612-13-9701	9612-13-9701
11→> ♦ □ ○ ❖	1	Stationary seal ring, SC		9612-13-7901	9612-13-7901
12→>♦□○◆	1	Stationary O-ring, EPDM (standard)	9611-99-2149	9611-99-2149	9611-99-2149
	1	Stationary O-ring, FPM	9611-99-2150	9611-99-2150	9611-99-2150
	1	Stationary O-ring, NBR	9611-99-2151	9611-99-2151	9611-99-2151
	1	Stationary O-ring, PTFE		9611-99-2152	9611-99-2152
13→> ♦ □ ○ ♦	1	Spring		9612-13-7601	9612-13-7601
14→>□○	1	Rotating seal ring, Carbon		9612-13-6401	9612-13-6401
	1	Rotating seal ring, SC		9612-13-6402	9612-13-6402
♦ ♦	2	Rotating seal ring, Carbon		9612-13-6401	9612-13-6401
15 50	2	Rotating seal ring, SC		9612-13-6402	9612-13-6402
15→>□ ○	1 1	Rotating O-ring, EPDM (standard)		9611-99-2145	9611-99-2145
	1	Rotating O-ring, FPMRotating O-ring, NBR		9611-99-2146 9611-99-2147	9611-99-2146 9611-99-2147
	1	Rotating O-ring, PTFE		9611-99-2148	9611-99-2148
• •	2	Rotating O-ring, FPDM (standard)		9611-99-2145	9611-99-2145
••	2	Rotating O-ring, FPM		9611-99-2146	9611-99-2146
	2	Rotating O-ring, NBR		9611-99-2147	9611-99-2147
	2	Rotating O-ring, PTFE	9611-99-2148	9611-99-2148	9611-99-2148
16	1	Adaptor		9612-13-5911	9612-13-5912
17	4	Adaptor screw		180148	180148
19	4	Adaptor spring washer		189971	189971
20	2	Adaptor nut	9611-99-0353	9611-99-0353	9611-99-0353
21	2	Washer		9611-99-2559	9611-99-2559
22	1	Safety guard		9612-13-1106	9612-13-1110
23	1	Safety guard screw		9611-99-2544	9611-99-2544
24	6	Wingnuts		9611-41-6891	9611-41-6891
24a	6	Spring washer		9611-99-1888	9611-99-1888
25	1	Back plate polished		9612-13-8416 9611-99-2137	9612-13-8416
26□ •	1 1	Joint ring, EPDM (standard)		9611-99-2138	9611-99-2137
	1	Joint ring, FPM Joint ring, NBR		9611-99-2139	9611-99-2138 9611-99-2139
	1	Joint ring, NBR		9611-99-2140	9611-99-2140
28□ • +	6	Stud bolt		9611-99-2168	9611-99-2168
29	1	Pump casing		883-39447	883-39447
30a-35	1	Leg assembly		481661	481663
36	1	Impeller screw		9612-13-9603	9612-13-9603
37	1	Impeller polished, full		9612431413	9612431413
38	1	Impeller O-ring, EPDM (standard)		9611-99-2145	9611-99-2145
	1	Impeller O-ring, FPM	9611-99-2146	9611-99-2146	9611-99-2146
	1	Impeller O-ring, NBR		9611-99-2147	9611-99-2147
	1	Impeller O-ring, PTFE		9611-99-2148	9611-99-2148
40a	1	Seal housing - double mechanical		9612-13-3902	9612-13-3902
40b	1	Seal housing - flushed		9612-13-3901	9612-13-3901
41	2	Screw for seal housing		9611-99-0203	9611-99-0203
42	2	Water flush pipe		9612-35-8901	9612-35-8901
43≻ O	1	Lip seal	31446-0088-2	31446-0088-2	31446-0088-2
44≻♦○♦	1	Seal housing o-ring		9611-99-2153	9611-99-2153
45≽O	1	Drive ring o-ring		9611-99-2145	9611-99-2145
50♦ ♦ 51 ♦ ♦	1 1	O-ringSec. stationary seal ring, SC	9011-99-Z130	9611-99-2156 9612-13-8302	9611-99-2156
51♦♦	1	Spacer		9612-13-6302	9612-13-8302 9612-30-8901
J∠ ▼ ∵	1	Opace:	3012-30-0901	3012-30-0901	3012-30-0301

Parts marked with →, >, ♦ are included in the seal kits.

Parts marked with \Rightarrow , \triangleright , \blacklozenge , \square , O, \diamondsuit are included in the service kits.

Alfa Laval


Alfa Laval

Description Part No.				1-40 Hp					
Seal Kit for Single Shaft Seal 1 C/SC seal kit, FPDM	Pos.	Qty.	Description						
1	_		·						
1 C/SC seal kit, FPM 9512-1296-10 1 SC/SC seal kit, FPM 9512-1296-10 1 SC/SC seal kit, FPM 9512-1296-06 1 Seal kit, FPM 9512-1296-07 Seal Kit for Flushed Shaft Seal 1 C/SC seal kit, EPDM 9512-1296-07 Seal Kit for Flushed Shaft Seal 1 C/SC seal kit, FPM 9512-1296-27 1 C/SC seal kit, FPM 9512-1296-27 1 C/SC seal kit, FPM 9512-1296-27 1 SC/SC seal kit, FPM 9512-1296-29 1 SC/SC seal kit, FPM 9512-1296-30 1 SC/SC seal kit, FPM 9512-1296-30 1 SC/SC seal kit, FPM 9512-1296-30 1 C/SC seal kit, FPM 9512-1296-30 1 C/SC seal kit, FPM 9512-1296-13 1 SC/SC seal kit, FPM 9512-1296-15 1 SC/SC seal kit, FPM 9512-1296-15 1 SC/SC seal kit, FPM 9512-1296-18 1 SC/SC seal kit, FPM 9512-1296-18 1 SC/SC seal kit, FPM 9512-1296-18 1 SC/SC seal kit, FPM 9512-1296-19 2 Service Kit for Single Shaft Seal 1 Scrice kit, FPM 9511-92-1115 2 Service Kit for Single Shaft Seal 2 Service Kit for Flushed Shaft Seal 3 Service kit, FPM 9511-92-2115 3 Service kit, FPM 9511-92-2116 3 Service kit, FPM 9511-92-2119 3 Service kit, FPM 9511-92-2159 3 Service kit, FPM 9511-92-2559				0040 4000 00					
1 C/SC seal kit, FPM		-	,						
1 SC/SC seal kit, FPM		-	,						
1 Seal kit, NBR. 9612-1296-08 1 CSG seal kit, EPDM. 9612-1296-27 Seal Kit for Flushed Shaft Seal 1 C/SC seal kit, NBR. 9612-1296-28 1 1 C/SC seal kit, NBR. 9612-1296-28 1 1 C/SC seal kit, NBR. 9612-1296-29 1 1 SC/SC seal kit, NBR. 9612-1296-30 1 1 SC/SC seal kit, NBR. 9612-1296-30 1 1 SC/SC seal kit, NBR. 9612-1296-30 2 1 SC/SC seal kit, NBR. 9612-1296-31 Seal Kit for Duble Mechanical Shaft Seal 1 C/SC seal kit, EPDM. 9612-1296-31 2 1 SC/SC seal kit, NBR. 9612-129613 2 1 C/SC seal kit, NBR. 9612-129615 2 1 SC/SC seal kit, NBR. 9612-129619 Parts marked with →, →, ♦ are included in the seal kits. Service Kit for Single Shaft Seal 2 1 Service kit, NBR. 9611-92-2114 3 1 SC/SC seal kit, FPM. 9611-92-2553 3 1 Service kit, NBR. 9611-92-2155 3 1 Service kit, NBR. 9611-92-216 3 1 Service kit, NBR. 9611-92-216 3 1 Service kit, NBR. 9611-92-2553 3 1 Service kit, NBR. 9611-92-216 3 1 Service kit, NBR. 9611-92-217 3 1 Service kit, NBR. 9611-92-217 4 1 Service kit, NBR. 9611-92-217 5 1 Service kit, PTE 9611-92-217 5 1 Service kit, PTE 9611-92-217 5 1 Service kit, PTE 9611-92-21	→	1	C/SC seal kit, FPM	9612-1296-11					
1 Seal kit, NBR. 9612-1296-08 1 CSG seal kit, EPDM. 9612-1296-27 Seal Kit for Flushed Shaft Seal 1 C/SC seal kit, NBR. 9612-1296-28 1 1 C/SC seal kit, NBR. 9612-1296-28 1 1 C/SC seal kit, NBR. 9612-1296-29 1 1 SC/SC seal kit, NBR. 9612-1296-30 1 1 SC/SC seal kit, NBR. 9612-1296-30 1 1 SC/SC seal kit, NBR. 9612-1296-30 2 1 SC/SC seal kit, NBR. 9612-1296-31 Seal Kit for Duble Mechanical Shaft Seal 1 C/SC seal kit, EPDM. 9612-1296-31 2 1 SC/SC seal kit, NBR. 9612-129613 2 1 C/SC seal kit, NBR. 9612-129615 2 1 SC/SC seal kit, NBR. 9612-129619 Parts marked with →, →, ♦ are included in the seal kits. Service Kit for Single Shaft Seal 2 1 Service kit, NBR. 9611-92-2114 3 1 SC/SC seal kit, FPM. 9611-92-2553 3 1 Service kit, NBR. 9611-92-2155 3 1 Service kit, NBR. 9611-92-216 3 1 Service kit, NBR. 9611-92-216 3 1 Service kit, NBR. 9611-92-2553 3 1 Service kit, NBR. 9611-92-216 3 1 Service kit, NBR. 9611-92-217 3 1 Service kit, NBR. 9611-92-217 4 1 Service kit, NBR. 9611-92-217 5 1 Service kit, PTE 9611-92-217 5 1 Service kit, PTE 9611-92-217 5 1 Service kit, PTE 9611-92-21	→	1	SC/SC seal kit, EPDM	9612-1296-05					
Carlo Carlo Seal	→	1							
1 C/SC seal kit, EPDM 9612-1296-26 1 C/SC seal kit, PBM 9612-1296-27 1 SC/SC seal kit, PBM 9612-1296-30 1 SC/SC seal kit, PBM 9612-1296-30 2 SC/SC seal kit, PBM 9612-1296-30 3 SC/SC seal kit, PBM 9612-1296-31 Seal Kit for Double Mechanical Shaft Seal 1 C/SC seal kit, EPDM 9612-1296-31 1 C/SC seal kit, EPDM 9612-1296-31 1 SC/SC seal kit, EPDM 9612-1296-31 1 SC/SC seal kit, PBM 9612-1296-31 1 SC/SC seal kit, PBM 9612-1296-31 SC/SC seal kit, PBM 9612-1296-31 SC/SC seal kit, PBM 9612-1296-31 SC/SC seal kit, FBM 9611-92-2114 SC/SC seal kit, FBM 9611-92-255 1 Service Kit for Single Shaft Seal C/SC SC/SC SC	→	1	Seal kit, FPM	9612-1296-07					
1 C/SC seal kit, EPDM 9612-1296-26 1 C/SC seal kit, PBM 9612-1296-27 1 SC/SC seal kit, PBM 9612-1296-30 1 SC/SC seal kit, PBM 9612-1296-30 2 SC/SC seal kit, PBM 9612-1296-30 3 SC/SC seal kit, PBM 9612-1296-31 Seal Kit for Double Mechanical Shaft Seal 1 C/SC seal kit, EPDM 9612-1296-31 1 C/SC seal kit, EPDM 9612-1296-31 1 SC/SC seal kit, EPDM 9612-1296-31 1 SC/SC seal kit, PBM 9612-1296-31 1 SC/SC seal kit, PBM 9612-1296-31 SC/SC seal kit, PBM 9612-1296-31 SC/SC seal kit, PBM 9612-1296-31 SC/SC seal kit, FBM 9611-92-2114 SC/SC seal kit, FBM 9611-92-255 1 Service Kit for Single Shaft Seal C/SC SC/SC SC									
1 C/SC seal kit, FPM 9612-1296-27 > 1 SC/SC seal kit, FPM 9612-1296-27 > 1 SC/SC seal kit, EPDM 9612-1296-30 > 1 SC/SC seal kit, FPM 9612-1296-31 Seal Kit for Double Mechanical Shaft Seal • 1 C/SC seal kit, FPM 9612-129613 • 1 C/SC seal kit, FPM 9612-129614 • 1 C/SC seal kit, FPM 9612-129615 • 1 C/SC seal kit, FPM 9612-129615 • 1 SC/SC seal kit, FPM 9612-129615 • 1 SC/SC seal kit, FPM 9612-129618 • 1 SC/SC seal kit, FPM 9612-129618 • 1 SC/SC seal kit, FPM 9612-129619 Parts marked with →, →, ♦ are included in the seal kits. Service Kit for Single Shaft Seal □ 1 Service kit, FPM 9611-92-2119 □ 1 Service kit, FPM 9611-92-2119 □ 1 Service kit, FPM 9611-92-2550 □ 1 Service kit, FPM 9611-92-2551 □ 1 Service kit, FPM 9611-92-2552 □ 1 Service kit, FPM 9611-92-2119 □ 1 Service kit, FPM 9611-92-2109 □ 1 Service kit, FPM 9611-92-210	Seal F	Kit for Fl							
1	>	1	C/SC seal kit, EPDM	9612-1296-25					
1 SC/SC seal kit, EPDM 9612-1296-29 1 SC/SC seal kit, NBR 9612-1296-31 Seal Kit for Double Mechanical Shaft Seal 1 C/SC seal kit, EPDM 9612-12-9613 1 C/SC seal kit, EPDM 9612-12-9614 1 C/SC seal kit, EPDM 9612-12-9615 1 C/SC seal kit, EPDM 9612-12-9615 1 SC/SC seal kit, EPDM 9612-12-9616 1 SC/SC seal kit, EPDM 9612-12-9619 Parts marked with ⇒, ▶ ◆ are included in the seal kits. Service Kit for Single Shaft Seal 1 Service kit, EPDM 9611-92-2114 9611-92-2550 1 Service kit, EPDM 9611-92-2115 9611-92-2551 1 Service kit, FPM 9611-92-2115 9611-92-2551 1 Service kit, FPM 9611-92-2115 9611-92-2552 1 Service kit, FPM 9611-92-2119 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC 1 Service kit, EPDM 9611-92-2119 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC 1 Service kit, EPDM 9611-92-2119 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC 1 Service kit, EPDM 9611-92-2119 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC 1 Service kit, EPDM 9611-92-2119 9611-92-2559 1 Service kit, EPDM 9611-92-2119 9611-92-2560 1 Service kit, FPM 9611-92-2119 9611-92-2560 1 Service kit, FPM 9611-92-2120 9611-92-2560 1 Service kit, FPM 9611-92-2120 9611-92-2560 1 Service kit, FPM 9611-92-2121 9611-92-2566 2 1 Service kit, FPM 9611-92-2121 9611-92-2566 3 1 Service kit, FPM 9611-92-2121 9611-92-2566 3 1 Service kit, FPM 9611-92-2121 9611-92-2566 4 1 Service kit, FPM 9611-92-2121 9611-92-2566 5 1 Service kit, FPM 9611-92-2121 9611-92-2566 5 1 Service kit, FPM 9611-92-2121 9611-92-2566 5 1 Service kit, FPM 9611-92-2121 9611-92-2566	>	1	C/SC seal kit, NBR	9612-1296-26					
1 SC/SC seal kit, NBR 9612-1296-31 SC/SC seal kit, FPM 9612-1296-31 Scal Kit for Double Mechanical Shaft Seal 1 C/SC seal kit, EPDM 9612-12-9613 1 C/SC seal kit, EPDM 9612-12-9615 1 C/SC seal kit, EPDM 9612-12-9617 1 SC/SC seal kit, EPDM 9612-12-9617 1 SC/SC seal kit, EPDM 9612-12-9619 Parts marked with →, ▶ ♦ are included in the seal kits. Service Kit for Single Shaft Seal 1 Service kit, EPDM 9611-92-2114 9611-92-2550 1 Service kit, EPDM 9611-92-2115 9611-92-2551 1 Service kit, FPM 9611-92-2116 9611-92-2552 1 Service Kit for Flushed Shaft Seal 2 C/S/C 1 Service kit, FPF 9611-92-2553 Service Kit for Flushed Shaft Seal 3 Service kit, FPM 9611-92-2117 9611-92-2553 Service Kit for Flushed Shaft Seal 3 Service kit, FPM 9611-92-2119 9611-92-2559 3 Service kit, FPM 9611-92-2119 9611-92-2559 3 Service kit, FPM 9611-92-2119 9611-92-2559 3 Service kit, FPM 9611-92-2119 9611-92-2569 4 Service kit, FPM 9611-92-2121 9611-92-2569 5 Service Kit for Double Mechanical Shaft Seal C/S/C Service Kit for Double Mechanical Shaft Seal C/S/C Service Kit, FPM 9611-92-2121 9611-92-2569 Parts marked with →, ▶, ♠, □, □, ♦ are included in the service kits. Conversion Kits 1 Service kit, FPM 9611-92-2113 9611-92-2569 Parts marked with →, ▶, ♠, □, □, ♦ are included in the service kits. Conversion Kits 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 40, 41, 42, 43, 44, 45) 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 40, 40, 50, 51, 52) Accessories	>	1	C/SC seal kit, FPM	9612-1296-27					
1 SC/SC seal kit, NBR 9612-1296-31 Scal Kit for Double Mechanical Shaft Seal 1 C/SC seal kit, EPDM 9612-12-9613 1 C/SC seal kit, EPDM 9612-12-9614 1 C/SC seal kit, EPDM 9612-12-9615 1 C/SC seal kit, EPDM 9612-12-9617 1 SC/SC seal kit, EPDM 9612-12-9617 1 SC/SC seal kit, EPDM 9612-12-9619 Parts marked with →, ▶ ♦ are included in the seal kits. Service Kit for Single Shaft Seal 1 Service kit, EPDM 9611-92-2114 9611-92-2550 1 Service kit, EPDM 9611-92-2115 9611-92-2551 1 Service kit, FFM 9611-92-2117 9611-92-2552 1 Service Kit for Flushed Shaft Seal 2 C/S/C 3 Service Kit for Flushed Shaft Seal 3 Service Kit for Flushed Shaft Seal 4 Service kit, EPDM 9611-92-2117 9611-92-2553 Service Kit for Flushed Shaft Seal 5 Service Kit for Flushed Shaft Seal 6 Service kit, EPDM 9611-92-2119 9611-92-2559 1 Service kit, EPDM 9611-92-2119 9611-92-2559 2 1 Service kit, FFM 9611-92-2119 9611-92-2560 3 Service Kit for Double Mechanical Shaft Seal 5 Service Kit for Double Mechanical Shaft Seal 6 C/S/C 8 Service Kit, FFM 9611-92-2121 9611-92-2569 2 Service Kit, EPDM 9611-92-2121 9611-92-2569 3 Service Kit, EPDM 9611-92-2121 9611-92-2569 Parts marked with →, ▶, ♠, □, □, ♦ are included in the service kits. Conversion Kits 1 Service kit, EPDM 9611-92-213 9611-92-2569 Parts marked with →, ▶, ♠, □, □, ♦ are included in the service kits. Conversion Kits 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 43, 44, 45) 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) Accessories	_	1	SC/SC soal kit FPDM	9612-1296-29					
Seal Kit for Double Mechanical Shaft Seal ↑ 1 C/SC seal kit, EPDM 9612-12-9613 ↑ 1 C/SC seal kit, EPDM 9612-12-9614 ↑ 1 C/SC seal kit, EPDM 9612-12-9615 ↑ 1 SC/SC seal kit, EPDM 9612-12-9617 ↑ 1 SC/SC seal kit, EPDM 9612-12-9618 ↑ 1 SC/SC seal kit, EPDM 9612-12-9619 Parts marked with →, → ↑ are included in the seal kits. Service Kit for Single Shaft Seal C/SIC SIC/SIC 9611-92-2550 □ 1 Service kit, EPDM 9611-92-2511 9611-92-2551 □ 1 Service kit, EPDM 9611-92-2552 □ 1 Service kit, FPM 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC		•	•						
Seal Kit for Double Mechanical Shaft Seal		-	•						
 ↑ 1 C/SC seal kit, EPDM 9612-12-9613 ↑ 1 C/SC seal kit, BRR 9612-12-9615 ↑ 1 C/SC seal kit, FPM 9612-12-9615 ↑ 1 SC/SC seal kit, EPDM 9612-12-9617 ↑ 1 SC/SC seal kit, NBR 9612-12-9618 ↑ 1 SC/SC seal kit, NBR 9612-12-9618 ↑ 1 SC/SC seal kit, NBR 9612-12-9619 Parts marked with →, >, ◆ are included in the seal kits. Service Kit for Single Shaft Seal C/SIC Seal kit, FPM 9611-92-2114 9611-92-2550 □ 1 Service kit, EPDM 9611-92-2115 9611-92-2551 □ 1 Service kit, FPM 9611-92-2155 □ 1 Service kit, FPM 9611-92-2117 9611-92-2552 □ 1 Service kit, FPM 9611-92-2117 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC ○ 1 Service kit, EPDM 9611-92-2118 9611-92-2559 ○ 1 Service kit, FPM 9611-92-2159 ○ 1 Service kit, FPM 9611-92-2119 9611-92-2559 ○ 1 Service kit, FPM 9611-92-2119 9611-92-2559 ○ 1 Service kit, FPM 9611-92-2119 9611-92-2560 ○ 1 Service kit, FPM 9611-92-2119 9611-92-2561 Service Kit for Double Mechanical Shaft Seal C/SIC SIC/SIC ★ 1 Service kit, EPDM 9611-92-211 9611-92-2561 ★ 1 Service kit, FPM 9611-92-211 9611-92-2566 ★ 1 Service kit, FPM 9611-92-211 9611-92-2566 ★ 1 Service kit, FPM 9611-92-211 9611-92-2569 Parts marked with →, >, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 40a, 40, 41, 42, 43, 44, 45) 1 Flushed to double mechanical shaft seal 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) Accessories 	•	•	30/30 Sear Kit, 11 M	9012-1290-31					
♦ 1 C/SC seal kit, NBR	Seal Kit for Double Mechanical Shaft Seal								
♦ 1 C/SC seal kit, FPM 9612-12-9615 ♦ 1 SC/SC seal kit, EPDM 9612-12-9618 • 1 SC/SC seal kit, NBR 9612-12-9618 • 1 SC/SC seal kit, FPM 9612-12-9619 Parts marked with →, ▶, ◆ are included in the seal kits. Service Kit for Single Shaft Seal C/SIC SIC/SIC □ 1 Service kit, EPDM 9611-92-2114 9611-92-2550 □ 1 Service kit, EPDM 9611-92-2115 9611-92-2551 □ 1 Service kit, FPM 9611-92-2117 9611-92-2552 □ 1 Service kit, EPDM 9611-92-2118 9611-92-2553 Service kit, FPT Flushed Shaft Seal C/SIC SIC/SIC ○ 1 Service kit, EPDM 9611-92-2118 9611-92-2559 ○ 1 Service kit, FPM 9611-92-2129 9611-92-2560 ○ 1 Service kit, FPM 9611-92-2121 9611-92-2561 Service kit for Double Mechanical Shaft Seal C/SIC SIC/SIC 4 1 Service kit, FPM	•	1	C/SC seal kit, EPDM	9612-12-9613					
♦ 1 C/SC seal kit, FPM 9612-12-9615 ♦ 1 SC/SC seal kit, EPDM 9612-12-9618 • 1 SC/SC seal kit, NBR 9612-12-9618 • 1 SC/SC seal kit, FPM 9612-12-9619 Parts marked with →, ▶, ◆ are included in the seal kits. Service Kit for Single Shaft Seal C/SIC SIC/SIC □ 1 Service kit, EPDM 9611-92-2114 9611-92-2550 □ 1 Service kit, EPDM 9611-92-2115 9611-92-2551 □ 1 Service kit, FPM 9611-92-2117 9611-92-2552 □ 1 Service kit, EPDM 9611-92-2118 9611-92-2553 Service kit, FPT Flushed Shaft Seal C/SIC SIC/SIC ○ 1 Service kit, EPDM 9611-92-2118 9611-92-2559 ○ 1 Service kit, FPM 9611-92-2129 9611-92-2560 ○ 1 Service kit, FPM 9611-92-2121 9611-92-2561 Service kit for Double Mechanical Shaft Seal C/SIC SIC/SIC 4 1 Service kit, FPM	•	1	C/SC seal kit, NBR	9612-12-9614					
♦ 1 SC/SC seal kit, EPDM 9612-12-9617 ♦ 1 SC/SC seal kit, NBR 9612-12-9618 ♦ 1 SC/SC seal kit, NBR 9612-12-9619 Parts marked with →, ▶, ♦ are included in the seal kits. Service Kit for Single Shaft Seal C/SIC SIC/SIC □ 1 Service kit, EPDM 9611-92-2114 9611-92-2551 □ 1 Service kit, NBR 9611-92-2115 9611-92-2551 □ 1 Service kit, FPM 9611-92-2116 9611-92-2552 □ 1 Service kit, FPM 9611-92-2117 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC ○ 1 Service kit, EPDM 9611-92-2118 9611-92-2558 ○ 1 Service kit, FPM 9611-92-2120 9611-92-2560 ○ 1 Service kit, FPM 9611-92-2121 9611-92-2121 ○ 1 Service kit, FPM 9611-92-2121 9611-92-266 ♦ 1 Service kit, FPM 9611-92-2121 9611-92-266 ♦ 1 Service kit, FPM 9611-92-2211	•		•						
♦ 1 SC/SC seal kit, NBR 9612-12-9619 Parts marked with →, ➤, ♦ are included in the seal kits. Service Kit for Single Shaft Seal C/SIC SIC/SIC 9611-92-2550 9611-92-2119 9611-92-2551 9611-92-2551 9611-92-2551 9611-92-2551 9611-92-2552 9611-92-2552 9611-92-2552 9611-92-2552 9611-92-2553 9611-92-2117 9611-92-2553 9611-92-2117 9611-92-2553 9611-92-2553 9611-92-2117 9611-92-2553 9611-92-2117 9611-92-2553 9611-92-2117 9611-92-2553 9611-92-2117 9611-92-2553 9611-92-2118 9611-92-2119 9611-92-2553 9611-92-2119 9611-92-2119 9611-92-2559 9611-92-2119 9611-92-2559 9611-92-2119 9611-92-2559 9611-92-2119 9611-92-2559 9611-92-2119 9611-92-2560 9611-92-2119 9611-92-2560 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2119 9611-92-2561 9611-92-2561 9611-92-2119 9611-92-2561 961			CC/CC and let EDDM	0040 40 0047					
♦ 1 SC/SC seal kit, FPM	•								
Parts marked with →, >, ◆ are included in the seal kits. Service Kit for Single Shaft Seal □ 1 Service kit, EPDM	•								
Service Kit for Single Shaft Seal	•	1	SC/SC Seal Kit, FPM	9612-12-9619					
1 Service kit, EPDM 9611-92-2114 9611-92-2550 □ 1 Service kit, NBR 9611-92-2116 9611-92-2551 □ 1 Service kit, PFM 9611-92-2116 9611-92-2552 □ 1 Service kit, PFF 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC ○ 1 Service kit, EPDM 9611-92-2118 9611-92-2558 ○ 1 Service kit, NBR 9611-92-2118 9611-92-2559 ○ 1 Service kit, NBR 9611-92-2119 9611-92-2559 ○ 1 Service kit, FPM 9611-92-210 9611-92-2560 ○ 1 Service kit, FPM 9611-92-211 9611-92-2560 ○ 1 Service kit, FPM 9611-92-211 9611-92-2561 Service Kit for Double Mechanical Shaft Seal C/SIC SIC/SIC ♦ 1 Service kit, EPDM 9611-92-211 9611-92-2561 Service Kit for Double Mechanical Shaft Seal 9611-92-211 9611-92-2566 ♦ 1 Service kit, NBR 9611-92-211 9611-92-2567 ♦ 1 Service kit, FPM 9611-92-2567 ♦ 1 Service kit, FPM 9611-92-2569 Parts marked with →, >, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-215 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) Accessories	Parts	marked	with →, >, ♦ are included in the seal kits.						
□ 1 Service kit, NBR 9611-92-2115 9611-92-2551 □ 1 Service kit, FPM 9611-92-2117 9611-92-2552 □ 1 Service kit, PTFE 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC ○ 1 Service kit, EPDM 9611-92-2118 9611-92-2558 ○ 1 Service kit, NBR 9611-92-2559 ○ 1 Service kit, FPM 9611-92-2120 9611-92-2559 ○ 1 Service kit, FPM 9611-92-2120 9611-92-2560 ○ 1 Service kit, FPM 9611-92-2121 9611-92-2561 Service Kit for Double Mechanical Shaft Seal C/SIC SIC/SIC ◆ 1 Service kit, EPDM 9611-92-2212 9611-92-2561 Service Kit for Double Mechanical Shaft Seal C/SIC SIC/SIC ◆ 1 Service kit, EPDM 9611-92-2210 9611-92-2567 ◆ 1 Service kit, FPM 9611-92-2210 9611-92-2567 ★ 1 Service kit, FPM 9611-92-2210 9611-92-2567 ★ 1 Service kit, FPM 9611-92-2210 9611-92-2567 ★ 1 Service kit, FPM 9611-92-2213 9611-92-2567 ★ 1 Service kit, FPM 9611-92-2213 9611-92-2569 Parts marked with →, ▶, ♠, □, O, → are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2175 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 1 Flushed to double mechanical shaft seal 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52)	Servic	e Kit for	r Single Shaft Seal	C/SIC	SIC/SIC				
□ 1 Service kit, FPM 9611-92-2116 9611-92-2552 □ 1 Service kit, PTFE 9611-92-2553 Service Kit for Flushed Shaft Seal C/SIC SIC/SIC ○ 1 Service kit, BPDM 9611-92-2118 9611-92-2558 ○ 1 Service kit, BRR 9611-92-2119 9611-92-2559 ○ 1 Service kit, FPM 9611-92-2119 9611-92-2550 ○ 1 Service kit, FPM 9611-92-2119 9611-92-2560 ○ 1 Service kit, PTFE 9611-92-2561 Service Kit for Double Mechanical Shaft Seal C/SIC SIC/SIC ◆ 1 Service kit, PTFE 9611-92-2561 Service kit, FPM 9611-92-211 9611-92-2561 ★ 1 Service kit, FPM 9611-92-2210 9611-92-2566 ◆ 1 Service kit, FPM 9611-92-2211 9611-92-2567 ◆ 1 Service kit, FPM 9611-92-2211 9611-92-2567 ◆ 1 Service kit, FPM 9611-92-2212 9611-92-2568 ◆ 1 Service kit, FPM 9611-92-2213 9611-92-2569 Parts marked with →, >, •, •, □, ○, → are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 1 Flushed to double mechanical shaft seal 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52)		1	Service kit, EPDM	9611-92-2114	9611-92-2550				
□ 1 Service kit, PTFE		1	Service kit, NBR	9611-92-2115	9611-92-2551				
Service Kit for Flushed Shaft Seal C/SIC SIC/SIC 0 1 Service kit, EPDM 9611-92-2118 9611-92-2558 0 1 Service kit, NBR 9611-92-2119 9611-92-2559 0 1 Service kit, FPM 9611-92-2120 9611-92-2560 0 1 Service kit, PTFE 9611-92-2121 9611-92-2561 Service Kit for Double Mechanical Shaft Seal C/SIC SIC/SIC 4 1 Service kit, NBR 9611-92-2210 9611-92-2566 4 1 Service kit, NBR 9611-92-2211 9611-92-2567 4 1 Service kit, FPM 9611-92-2212 9611-92-2568 4 1 Service kit, PTFE 9611-92-2213 9611-92-2569 Parts marked with →, ▶, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 1 Flushed to double mechanical shaft seal 9611-92-2176<		1	Service kit, FPM	9611-92-2116	9611-92-2552				
O 1 Service kit, EPDM		1	Service kit, PTFE	9611-92-2117	9611-92-2553				
O 1 Service kit, EPDM									
O 1 Service kit, NBR	Servic			-,					
O 1 Service kit, FPM	0		Service kit, EPDM	9611-92-2118	9611-92-2558				
O 1 Service kit, PTFE 9611-92-2121 9611-92-2561 Service Kit for Double Mechanical Shaft Seal C/SIC SIC/SIC ♦ 1 Service kit, EPDM 9611-92-2210 9611-92-2567 ♦ 1 Service kit, FPM 9611-92-2212 9611-92-2568 ♦ 1 Sevice kit, PTFE 9611-92-2213 9611-92-2569 Parts marked with →, ➤, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 9611-92-2175 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 9611-92-2176 1 Flushed to double mechanical shaft seal 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176 Accessories	0	•	•		9611-92-2559				
Service Kit for Double Mechanical Shaft Seal C/SIC SIC/SIC ♦ 1 Service kit, NBR 9611-92-2210 9611-92-2566 ♦ 1 Service kit, FPM 9611-92-2211 9611-92-2567 ♦ 1 Sevice kit, FPM 9611-92-2212 9611-92-2568 ♦ 1 Sevice kit, PTFE 9611-92-2213 9611-92-2569 Parts marked with →, ➤, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 9611-92-2176 1 Flushed to double mechanical shaft seal 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176	0	-	Service kit, FPM	9611-92-2120	9611-92-2560				
♦ 1 Service kit, EPDM 9611-92-2210 9611-92-2566 ♦ 1 Service kit, NBR 9611-92-2211 9611-92-2567 ♦ 1 Service kit, FPM 9611-92-2212 9611-92-2568 ♦ 1 Sevice kit, PTFE 9611-92-2213 9611-92-2569 Parts marked with →, ➤, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176	0	1	Service kit, PTFE	9611-92-2121	9611-92-2561				
♦ 1 Service kit, EPDM 9611-92-2210 9611-92-2566 ♦ 1 Service kit, NBR 9611-92-2211 9611-92-2567 ♦ 1 Service kit, FPM 9611-92-2212 9611-92-2568 ♦ 1 Sevice kit, PTFE 9611-92-2213 9611-92-2569 Parts marked with →, ➤, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176	C	- Kirt	" Davida Machanical Chatt Coal	0/0/0	SIO/SIO				
♦ 1 Service kit, NBR 9611-92-2211 9611-92-2212 9611-92-22567 ♦ 1 Service kit, PTFE 9611-92-2213 9611-92-22569 Parts marked with →, ▶, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 9611-92-2175 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 9611-92-2176 1 Flushed to double mechanical shaft seal 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176									
♦ 1 Service kit, FPM 9611-92-2212 9611-92-2213 9611-92-22568 ♦ 1 Sevice kit, PTFE 9611-92-2213 9611-92-2569 Parts marked with →, ▶, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 9611-92-2176 1 Flushed to double mechanical shaft seal 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176	•	-							
♦ 1 Sevice kit, PTFE 9611-92-2213 9611-92-2213 9611-92-2569 Parts marked with →, ▶, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 9611-92-2175 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 9611-92-2176 1 Flushed to double mechanical shaft seal 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176	-		- 1 11 The second secon						
Parts marked with →, ▶, ♠, □, O, ♦ are included in the service kits. Conversion Kits 1 Single to flushed shaft seal			•						
Conversion Kits 9611-92-2042 (The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 9611-92-2175 1 Single to double mechanical shaft seal 9611-92-2175 (The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 9611-92-2176 1 Flushed to double mechanical shaft seal 9611-92-2176 (The conversion kit contains Pos. 14, 40a, 50, 51, 52) 9611-92-2176	*	1	Sevice Kif, PTFE	9611-92-2213	9011-92-2009				
1 Single to flushed shaft seal	Parts	marked	with →, >, ♦, □, O, ♦ are included in the service kits.						
1 Single to flushed shaft seal	Conv	orsian l	Cito.						
(The conversion kit contains Pos. 10, 40, 41, 42, 43, 44, 45) 1 Single to double mechanical shaft seal	Conve			0611-02 2042					
1 Single to double mechanical shaft seal		1		9011-92-2042					
(The conversion kit contains Pos. 14, 15, 40a, 41, 42, 44, 50, 51, 52) 1 Flushed to double mechanical shaft seal		4		0644 00 0475					
1 Flushed to double mechanical shaft seal		1		9011-92-21/5					
(The conversion kit contains Pos. 14, 40a, 50, 51, 52)				0044 00 04==					
Accessories		1							
			(The conversion kit contains Pos. 14, 40a, 50, 51, 52)						
	1000	2001:25							
1 1001 Complete	ACCES		Tool complete	0612-0026-04					
		'	Tool complete	3012-3030-01					


Recommended Spare Parts: Service kits



Single Shaft Seal



Flushed Shaft Seal

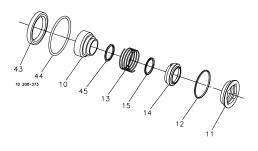

Double Mechanical Shaft Seal

