
spirax sarco

IM-S60-18

ST Issue 9

Fig 7, 33, 34, 34HP, 36, 36HP, 37, 3616 and Fig 3716 Flanged Strainers Installation and Maintenance Instructions

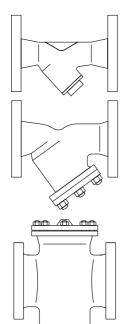

- Safety information
- 2. General product information
- Installation 3.
- 4. Commissioning
- Operation
- 6. Fault finding
- Maintenance
- Spare parts

1. Safety information

Safe operation of these products can only be guaranteed if they are properly installed, commissioned, used and maintained by qualified personnel (see Section 1.11) in compliance with the operating instructions. General installation and safety instructions for pipeline and plant construction, as well as the proper use of tools and safety equipment must also be complied with.

1.1 Intended use

Referring to the Installation and Maintenance Instructions, name-plate and Technical Information Sheet, check that the product is suitable for the intended use/application. The products listed below comply with the requirements of the European Pressure Equipment Directive 97/23/EC and carry the (mark when so required. The products fall within the following Pressure Equipment Directive categories:

	Product		Group 1 Gases	Group 2 Gases	Group 1 Liquids	Group 2 Liquids
					-	-
	PN16	DN200	2	2	2	SEP
Fig 7	ig 7	DN250	3	2	2	SEP
	ASME 150	DN200 - DN250	3	2	2	SEP
		DN15 - DN25	SEP	SEP	SEP	SEP
Eig 22	AII	DN32 - DN50	1	SEP	SEP	SEP
Fig 33	connections	DN65 - DN125	2	1	SEP	SEP
		DN150 - DN200	2	1	2	SEP
		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32	2	SEP	SEP	SEP
		DN40 - DN50	2	1	SEP	SEP
	PN16	DN65 - DN125	2	1	SEP	SEP
		DN150 - DN200	2	1	2	SEP
		DN250 - DN300	3	2	2	SEP
		DN350 - DN400	3	3	2	1
Fig 34		DN200	3	2	2	SEP
and	PN25	DN250	3	2	2	1
Fig 36		DN300 - DN400	3	3	2	1
		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32	2	SEP	SEP	SEP
		DN40 - DN50	2	1	SEP	SEP
	PN40	DN65 - DN100	2	1	2	SEP
		DN125 - DN200	3	2	2	SEP
		DN250	3	2	2	1
		DN300 - DN400	3	3	2	1

	Product		Group 1 Gases	Group 2 Gases	Group 1 Liquids	Group 2 Liquids
		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32 - DN50	1	SEP	SEP	SEP
	10115 450	DN65 - DN100	2	1	SEP	SEP
	ASME 150	DN125 - DN150	2	1	2	SEP
		DN200 - DN250	3	2	2	SEP
		DN300 - DN400	3	3	2	1
		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32	2	SEP	SEP	SEP
		DN40 - DN50 Stainless steel	2	1	SEP	SEP
	ASME 300	DN40 - DN50 Carbon steel	2	1	2	SEP
		DN65 - DN100	2	1	2	SEP
Eig 24		DN125 - DN200	3	2	2	SEP
Fig 34		DN250	3	2	2	1
Fig 36		DN300 - DN400	3	3	2	1
1.9 00		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32 - DN65	1	SEP	SEP	SEP
	JIS/KS 10	DN80 - DN125	2	1	SEP	SEP
		DN150 - DN250	2	1	2	SEP
		DN300 - DN350	3	2	2	SEP
		DN400	3	3	2	1
		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32	2	SEP	SEP	SEP
		DN40 - DN50	2	1	SEP	SEP
	JIS/KS 20	DN65 - DN100	2	1	2	SEP
		DN125 - DN200	3	2	2	SEP
		DN250	3	2	2	1
		DN300 - DN400	3	3	2	1
Fig 34HP		DN15 - DN25	SEP	SEP	SEP	SEP
and	All connections	DN40 - DN100	2	SEP	2	SEP
Fig 36HP		DN150 - DN200	3	2	2	SEP

	Product		Group 1 Gases	Group 2 Gases	Group 1 Liquids	Group 2 Liquids
		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32	2	SEP	SEP	SEP
	PN16	DN40 - DN50	2	1	SEP	SEP
		DN65 - DN125	2	1	SEP	SEP
		DN150 - DN200	2	1	2	SEP
	PN25	DN200	3	2	2	SEP
		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32	2	SEP	SEP	SEP
	PN40	DN40 - DN50	2	1	SEP	SEP
		DN65 - DN100	2	1	2	SEP
		DN125 - DN150	3	2	2	SEP
Fig 37	ASME 150	DN15 - DN25	SEP	SEP	SEP	SEP
Fig 31		DN32 - DN50	1	SEP	SEP	SEP
		DN65 - DN100	2	1	SEP	SEP
		DN125 - DN200	2	1	2	SEP
		DN15 - DN25	SEP	SEP	SEP	SEP
	JIS/KS 10	DN32 - DN65	1	SEP	SEP	SEP
	3137 K3 10	DN80 - DN125	2	1	SEP	SEP
		DN150 - DN200	2	1	2	SEP
		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32	1	SEP	SEP	SEP
	JIS/KS 20	DN40 - DN65	2	1	SEP	SEP
		DN80 - DN125	2	1	2	SEP
		DN150 - DN200	3	2	2	SEP

	Product		Group 1 Gases	Group 2 Gases	Group 1 Liquids	Group 2 Liquids
		DN15 - DN25	SEP	SEP	SEP	SEP
	DNIAC	DN32 - DN50	1	SEP	SEP	SEP
	PN16	DN65 - DN125	2	1	SEP	SEP
		DN150 - DN200	2	1	2	SEP
		DN15 - DN25	SEP	SEP	SEP	SEP
		DN32 - DN50	1	SEP	SEP	SEP
Fig 3616	ASME 150	DN65 - DN100	2	1	SEP	SEP
		DN125 - DN150	2	1	2	SEP
		DN200	3	2	2	SEP
	JIS/KS 10	DN15 - DN25	SEP	SEP	SEP	SEP
		DN32 - DN65	1	SEP	SEP	SEP
		DN80 - DN125	2	1	SEP	SEP
		DN150 - DN200	2	1	2	SEP
	PN16	DN15 - DN25	SEP	SEP	SEP	SEP
		DN32 - DN50	1	SEP	SEP	SEP
		DN65 - DN125	2	1	SEP	SEP
		DN150 - DN200	2	1	2	SEP
		DN15 - DN25	SEP	SEP	SEP	SEP
Fig. 2746	ASME 150	DN32 - DN50	1	SEP	SEP	SEP
Fig 3716	ASIVIE 150	DN65 - DN100	2	1	SEP	SEP
		DN125 - DN200	2	1	2	SEP
		DN15 - DN25	SEP	SEP	SEP	SEP
	JIS/KS 10	DN32 - DN65	1	SEP	SEP	SEP
	313/N3 10	DN80 - DN125	2	1	SEP	SEP
		DN150 - DN200	2	1	2	SEP

- i) These products have been specifically designed for use on steam, air or water / condensate as stated in Groups 1 and 2 of the above mentioned Pressure Equipment Directive. The products' use on other fluids may be possible but, if this is contemplated, Spirax Sarco should be contacted to confirm the suitability of the product for the application being considered.
- ii) Check material suitability, pressure and temperature and their maximum and minimum values. If the maximum operating limits of the product are lower than those of the system in which it is being fitted, or if malfunction of the product could result in a dangerous overpressure or overtemperature occurrence, ensure a safety device is included in the system to prevent such over-limit situations.
- iii) Determine the correct installation situation and direction of fluid flow.
- iv) Spirax Sarco products are not intended to withstand external stresses that may be induced by any system to which they are fitted. It is the responsibility of the installer to consider these stresses and take adequate precautions to minimise them.
- v) Remove protection covers from all connections and protective film from all nameplates, where appropriate, before installation on steam or other high temperature applications.

1.2 Access

Ensure safe access and if necessary a safe working platform (suitably guarded) before attempting to work on the product. Arrange suitable lifting gear if required.

1.3 Lighting

Ensure adequate lighting, particularly where detailed or intricate work is required.

1.4 Hazardous liquids or gases in the pipeline

Consider what is in the pipeline or what may have been in the pipeline at some previous time. Consider: flammable materials, substances hazardous to health, extremes of temperature.

1.5 Hazardous environment around the product

Consider: explosion risk areas, lack of oxygen (e.g. tanks, pits), dangerous gases, extremes of temperature, hot surfaces, fire hazard (e.g. during welding), excessive noise, moving machinery.

1.6 The system

Consider the effect on the complete system of the work proposed. Will any proposed action (e.g. closing isolation valves, electrical isolation) put any other part of the system or any personnel at risk?

Dangers might include isolation of vents or protective devices or the rendering ineffective of controls or alarms. Ensure isolation valves are turned on and off in a gradual way to avoid system shocks.

7

1.7 Pressure systems

Ensure that any pressure is isolated and safely vented to atmospheric pressure. Consider double isolation (double block and bleed) and the locking or labelling of closed valves. Do not assume that the system has depressurised even when the pressure gauge indicates zero.

1.8 Temperature

Allow time for temperature to normalise after isolation to avoid danger of burns.

1.9 Tools and consumables

Before starting work ensure that you have suitable tools and/or consumables available. Use only genuine Spirax Sarco replacement parts.

1.10 Protective clothing

Consider whether you and/or others in the vicinity require any protective clothing to protect against the hazards of, for example, chemicals, high/low temperature, radiation, noise, falling objects, and dangers to eyes and face.

1.11 Permits to work

All work must be carried out or be supervised by a suitably competent person. Installation and operating personnel should be trained in the correct use of the product according to the Installation and Maintenance Instructions.

Where a formal 'permit to work' system is in force it must be complied with. Where there is no such system, it is recommended that a responsible person should know what work is going on and, where necessary, arrange to have an assistant whose primary responsibility is safety.

Post 'warning notices' if necessary.

1.12 Handling

Manual handling of large and/or heavy products may present a risk of injury. Lifting, pushing, pulling, carrying or supporting a load by bodily force can cause injury particularly to the back. You are advised to assess the risks taking into account the task, the individual, the load and the working environment and use the appropriate handling method depending on the circumstances of the work being done.

1.13 Residual hazards

In normal use the external surface of the product may be very hot. If used at the maximum permitted operating conditions the surface temperature of some products may reach temperatures of 538°C (1000°F).

Many products are not self-draining. Take due care when dismantling or removing the product from an installation (refer to 'Maintenance instructions').

1.14 Freezing

Provision must be made to protect products which are not self-draining against frost damage in environments where they may be exposed to temperatures below freezing point.

1.15 Disposal

Unless otherwise stated in the Installation and Maintenance Instructions, this product is recyclable and no ecological hazard is anticipated with its disposal providing due care is taken.

1.16 Returning products

Customers and stockists are reminded that under EC Health, Safety and Environment Law, when returning products to Spirax Sarco they must provide information on any hazards and the precautions to be taken due to contamination residues or mechanical damage which may present a health, safety or environmental risk. This information must be provided in writing including Health and Safety data sheets relating to any substances identified as hazardous or potentially hazardous.

9


2. General product information —

2.1 General description

The products detailed below are all strainers with flanged connections. They are used to protect other pipeline items from damage due to debris and dirt in the system. The Fig 7 strainer is a pot type design - all the others are Y-type designs. As standard, most Y-type strainers are fitted with stainless steel screens with 0.8 mm perforations. The Fig 7 is fitted with 3.2 mm perforations only (no optional extras are available for the Fig 7). Optional screens are available for the Y-type strainers only, see Section 2.2.

Note: For additional information see the following Technical Information Sheets:

Strainer	Body material	Body rating	Size	TI reference
Fig 7	Carbon steel	PN16 - ASME 150	DN200 - DN250 only	TI-P063-03
Fig 33	Cast iron	PN16 - ASME 150 DN15 - DN200		TI-S60-03
Fig 34 (DIN)	Carbon steel	PN40 DN15 - DN200		TI-P064-01
Fig 34 (ASTM)	Carbon steel	ASME 300	DN15 - DN200	TI-P064-02
Fig 34	Carbon steel	PN40 - ASME 300	DN250 - DN400	TI-P168-07
Fig 34HP	Carbon steel	PN100 - ASME 600	DN15 - DN200	TI-P168-01
Fig 36	Austenitic stainless steel	PN40 - ASME 300	DN15 - DN200	TI-P160-02
Fig 36HP	Austenitic stainless steel	PN100 - ASME 600	DN15 - DN200	TI-P160-11
Fig 37	SG iron	PN40 - ASME 150	DN15 - DN150	TI-P081-01
Fig 37	36 11011	PN25 - ASME 150	DN200	TI-P081-01
Fig 3616 (DIN)	Austenitic stainless steel	PN16	DN15 - DN200	TI-P160-05
Fig 3616 (ASTM)	Austenitic stainless steel	ASME 150	DN15 - DN200	TI-P160-04
Fig 3716	SG iron	PN16	DN15 - DN200	TI-P081-03

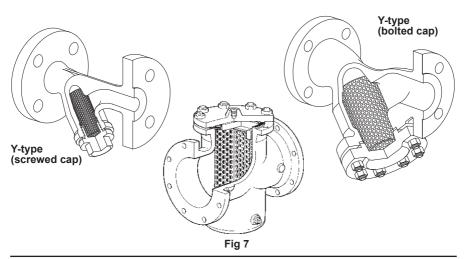

2.2 Optional extras

Strainer screens	Stainless steel screen	Perforations	1.6, 3 mm
	Stanness steer screen	Mesh	40, 100, 200
	Monel screen	Perforations	0.8, 3 mm
	(Not available for the Fig 3716)	Mesh	100

Blowdown or drain valve connections

The cap can be drilled and tapped to the following sizes to enable a blowdown or drain valve to be fitted.

Strainer	Size	Blowdown valve	Drain valve
	DN15	1/4"	1/4"
Fig 33	DN20 - DN25	1/2"	1/2"
Fig 33 Fig 34	DN32 - DN40	1"	3/4"
rig 34	DN50 - DN125	11/4"	3/4"
	DN150 - DN200	2"	3/4"
	DN250 - DN400	2"	2"
	DN15	3/8"	3/8"
	DN20	1/2"	3/8"
	DN25	3/4"	1/2"
	DN40	1"	1/2"
Fig 34HP	DN50	1"	3/4"
Fig 36HP	DN65	11/4"	3/4"
	DN80	1½"	3/4"
	DN100	1½"	1"
	DN150	2"	1"
	DN200	2"	11/2"
	DN15	1/4"	1/4"
Fig 36	DN20 - DN25	1/2"	1/2"
Fig 37	DN32 - DN40	1"	3/4"
1 19 37	DN50 - DN125	11/4"	3/4"
	DN150 - DN200	2"	3/4"
	DN15 - DN20	3/8"	3/8"
Fig 3616	DN25 - DN32	1/2"	1/2"
Fig 3716	DN40 - DN80	3/4"	3/4"
	DN100 - DN200	1"	3/4"


^{*}Note: The Fig 3616 and Fig 3716 can be supplied with ¼" tappings for pressure monitoring (upstream and downstream) of the strainer screen.

2.3 Pressure / temperature limits (ISO 6552)

Note: Values for PMA and TMA are not concurrent for exact operating limits.

Fig 7


Body design conditions		PN16
PMA - Maximum allowable pressure	16 bar g	(232 psi g)
TMA - Maximum allowable temperature	300°C	(572°F)
Minimum operating temperature	0°C	(32°F)
Designed for a maximum cold hydraulic test pressure of:	28 bar g	(406 psi g)

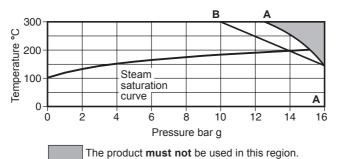

A - A Flanged EN 1092 PN16 B - A Flanged ASME 150

Fig 33

Body design conditions		PN16
PMA - Maximum allowable pressure	16 bar g	(232 psi g)
TMA - Maximum allowable temperature	300°C	(572°F)
Minimum operating temperature	0°C	(32°F)
Designed for a maximum cold hydraulic test pressure of:	24 bar g	(348 psi g)

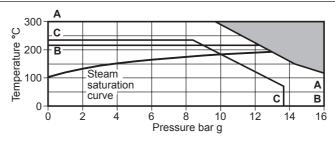

The product **must not** be used in this region.

A - A Flanged EN 1092 PN16


B - B Flanged AS 2129 Table F

C - C Flanged ASME 125 (including DN15, DN20 flanged ASME 150)

Fig 34 (DIN and JIS/KS)

Body design conditions			PN40
	PN40	40 bar g @ 50°C	(580 psi g @ 122°F)
	PN25	25 bar g @ 50°C	(362 psi g @ 122°F)
PMA - Maximum allowable pressure	PN16	16 bar g @ 50°C	(232 psi g @ 122°F)
	JIS/KS 20	34 bar g @ 120°C	(493 psi g @ 248°F)
	JIS/KS 10	14 bar g @ 120°C	(203 psi g @ 248°F)
	PN40	400°C @ 23.8 bar g	(752°F @ 345 psi g)
	PN25	400°C @ 14.8 bar g	(752°F @ 214 psi g)
TMA - Maximum	PN16	400°C @ 9.5 bar g	(752°F @ 138 psi g)
allowable temperature	JIS/KS 20	425°C @ 20 bar g	(797°F @ 290 psi g)
	JIS/KS 10	300°C @ 10 bar g	(572°F @ 145 psi g)
Minimum operating temperature		-29°C	(-20°F)

Designed for a maximum cold hydraulic test pressure of 1.5 x PMA of the connection of choice

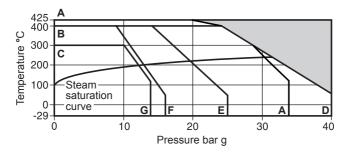

The product **must not** be used in this region.

A - A Flanged JIS/KS 20

B - D Flanged EN 1092 PN40

B - E Flanged EN 1092 PN25


B-F Flanged EN 1092 PN16

C - G Flanged JIS/KS 10

Fig 34 (ASTM)

Body design conditions			ASME 300
PMA - Maximum	ASME 150	19.6 bar g @ 38°C	(284 psi g @ 100°F)
allowable pressure	ASME 300	51.1 bar g @ 38°C	(741 psi g @ 100°F)
TMA - Maximum	ASME 150	425°C @ 5.5 bar g	(797°F @ 80 psi g)
allowable temperature	ASME 300	425°C @ 28.8 bar g	(797°F @ 418 psi g)
Minimum operating temperature		-29°C	(-20°F)

Designed for a maximum cold hydraulic test pressure of 1.5 x PMA of the connection of choice

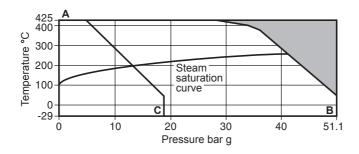


The product must not be used in this region.

Flanged ASME 300 Flanged ASME 150 A - B

A - C

Fig 34HP (DIN)

		PN63 and PN100
PN63	63 bar g @ 50°C	(914 psi g @ 122°F)
PN100	100 bar g @ 50°C	(1 450 psi g @ 122°F)
PN63	400°C @ 37.5 bar g	(752°F @ 544 psi g)
PN100	400°C @ 59.5 bar g	(752°F @ 863 psi g)
	-29°C	(-20°F)
PN63	95 bar g	(1 378 psi g)
PN100	150 bar g	(2 176 psi g)
	PN100 PN63 PN100 PN63	PN100 100 bar g @ 50°C PN63 400°C @ 37.5 bar g PN100 400°C @ 59.5 bar g -29°C PN63 95 bar g

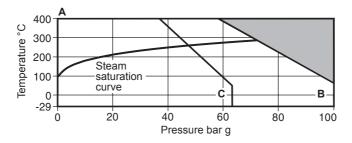


The product **must not** be used in this region.

A - B Flanged PN100 A - C Flanged PN63


Fig 34HP (ASTM)

Body design conditions		ASME 600
PMA - Maximum allowable pressure	102 bar g @ 38°C	(1480 psi g @ 100°F)
TMA - Maximum allowable temperature	425°C @ 57.5 bar g	(797°F @ 833 psi g)
Minimum operating temperature	-29°C	(-20°F)
Designed for a maximum cold hydraulic test pressu	ure of: 152 bar g	(2 204 psi g)

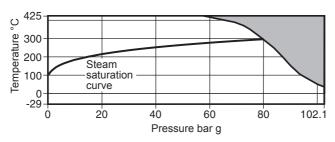

The product **must not** be used in this region.

Fig 36HP

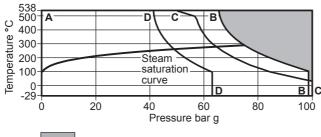

The product **must not** be used in this region.

A - B Flanged ASME B16.5 Class 600, ASME 600 RTJ, Screwed NPT, Socket weld ASME B16.11 Class 3000 and Butt weld ASME B 16.25 Schedule 40 and Schedule 80

Body design conditions		ASME 600
PMA - Maximum allowable pressure	99.3 bar g	(1440 psi g)
TMA - Maximum allowable temperature	538°C	(1000°F)
Minimum operating temperature	-29°C	(-20°F)
Designed for a maximum cold hydraulic test pressure of:	153 bar g	(2219 psi g)

A - C Flanged EN 1092 PN100 and Screwed BSP


Body design conditions		PN100
PMA - Maximum allowable pressure	100 bar g	(1450 psi g)
TMA - Maximum allowable temperature	538°C	(1000°F)
Minimum operating temperature	-29°C	(-20°F)
Designed for a maximum cold hydraulic test pressure of:	150 bar g	(2 175 psi g)

A - D Flanged EN 1092 PN63

Body design conditions		PN63
PMA - Maximum allowable pressure	63 bar g	(913 psi g)
TMA - Maximum allowable temperature	538°C	(1000°F)
Minimum operating temperature	-29°C	(-20°F)
Designed for a maximum cold hydraulic test pressure of:	95 bar g	(1377 psi g)

Fig 36

Body design conditions	ASME	300 or PN50
PMA - Maximum allowable pressure	41 bar g	(595 psi g)
TMA - Maximum allowable temperature	450°C	(842°F)
Minimum operating temperature	-29°C	(-20°F)
Designed for a maximum cold hydraulic test pressure of:	76 bar g	(1 102 psi g)

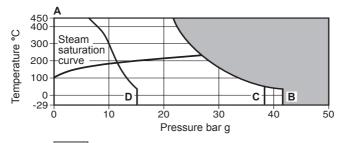


The product **must not** be used in this region.

A - B Flanged ASME/ANSI 300 A - C Flanged EN 1092 PN40 C - D Flanged ASME/ANSI 150

Fig 37

			PN40
Body design conditions			PN25
PMA - Maximum allowable pressure		40 bar g	(580 psi g)
		25 bar g	(363 psi g)
ature		350°C	(662°F)
		-10°C	(14°F)
	DN65 and above	0°C	(32°F)
PN40		60 bar g	(870 psi g)
PN25	DN200 only	38 bar g	(551 psi g)
	eture PN40	DN200 only ature DN65 and above PN40	e

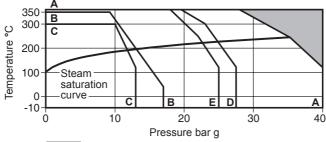

This product **must not** be used in this region.


 A - A
 Flanged EN 1092 PN40
 A - D
 Flanged JIS/KS 20K

 B - B
 Flanged ASME 150
 A - E
 Flanged EN 1092 PN25

 C - C
 Flanged JIS/KS 10K

Fig 3616 (DIN)


Body design conditions		PN16
PMA - Maximum allowable pressure	16 bar g	(217.5 psi g)
TMA - Maximum allowable temperature	400°C	(572°F)
Minimum operating temperature	-29°C	(14°F)
Designed for a maximum cold hydraulic test pressure of:	24 bar g	(348 psi g)

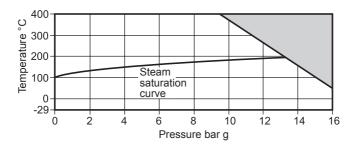

The product **must not** be used in this region.

Fig 3616 (ASTM)


Body design conditions		ASME 150
PMA - Maximum allowable pressure	19 bar g	(275.5 psi g)
TMA - Maximum allowable temperature	400°C	(752°F)
Minimum operating temperature	-29°C	(-20°F)
Designed for a maximum cold hydraulic test pressure of:	30 bar g	(435 psi g)

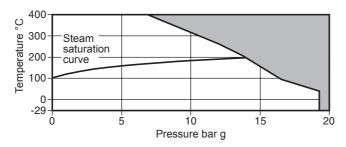


The product **must not** be used in this region.

Fig 3716 (DIN)


Body design conditions		PN16
PMA - Maximum allowable pressure	16 bar g	(232 psi g)
TMA - Maximum allowable temperature	300°C	(662°F)
Minimum operating temperature	-10°C	(14°F)
Designed for a maximum cold hydraulic test pressure of:	24 bar g	(348 psi g)

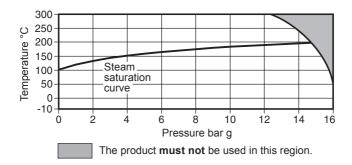

2.4 Body marking information

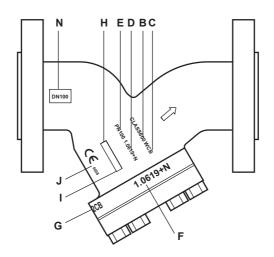

	Material				1		
Part			Body				ver
	Α	В	С	D	E	F	G
Fig 7	Fig 7	A216 WCB					
Fig 33	Fig 33		GG 20		PN16		
Fig 34HP	Fig 34HP or 34HP	ASME 600	WCB	1.0619+N	PN100	1.0619+N	WCB
Fig 34HP UE	Fig 34HP or 34HP	ASME 600	WCB	1.0619+N	PN100	1.0460	A105N
E: 04 A 0ME 450	F1: 04	10ME 450	MOD			C22.8	A105N
Fig 34 ASME 150	Fig 34	ASME 150	WCB			1.0619+N	WCB
F: 24 A CMF 200	F:- 04	ACME 200	WOD			C22.8	A105N
Fig 34 ASME 300	Fig 34	ASME 300	WCB			1.0619+N	WCB
Fig. 24 EN	Fig 24			4.0040.11	PN40	C22.8	A105N
Fig 34 EN	Fig 34			1.0619+N	PN40	1.0619+N	WCB
Fi- 20	F:- 20	4045 000	05014	4 4404	PN40		316L
Fig 36	Fig 36	ASME 300	CF3M	1.4404	PN40		CF3M
F: 07	F: 07		000.40		PN40	C22.8	A105N
Fig 37	Fig 37		GGG.40		PN25	1.0619+N	WCB
Fig 3616 ASTM	Fig 3616	ASME 150	CF8M			4 4 4 0 4	0401
Fig 3616 EN	Fig 3616			1.4408	PN16	1.4401	316L
Fig 3716	Fig 3716		GGG.40		PN16	GGG	G.40

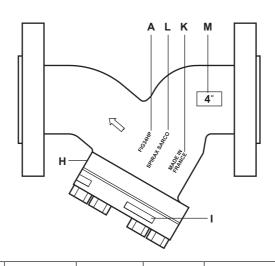

Foundry identification	Melt number	CE marking if necessary	CE0038	Made in France	SPIRAX SARCO or SXS or SPIRAX	DN
Н	I	J		К	L	М
•	•		DN200 to DN250	•	•	•
•	•	DN32 to DN50	DN65 to DN200	•	•	•
•	•		DN25 to	•	•	•
•	•		DN200	•	•	•
•	•			•	•	•
•	•			•	•	•
•	•			•	•	•
•	•			•	•	•
•	•		DN32 to	•	•	•
•	•		DN200	•	•	•
•	•			•	•	•
•	•			•	•	•
•	•			•	•	•
•	•			•	•	•
•	•			•	•	•
•	•	DN32 to DN50	DN65 to DN200	•	•	•
•	•			•	•	•

3. Installation

Note: Before actioning any installation observe the 'Safety information' in Section 1.

Referring to the installation and Maintenance Instructions, name-plate and Technical Information Sheet, check that the product is suitable for the intended installation:

- 3.1 Check materials, pressure and temperature and their maximum values. If the maximum operating limit of the product is lower than that of the system in which it is being fitted, ensure that a safety device is included in the system to prevent overpressurisation.
- **3.2** Determine the correct installation situation and the direction of fluid flow.
- **3.3** Remove protection covers from all connections and protective film from all name-plates, where appropriate, before installation on steam or other high temperature applications.
- 3.4 Strainers can be fitted on liquid or steam/gas systems in either horizontal pipework or vertical pipework where the flow is downward. In a horizontal line on steam/gases the strainer pocket should be in the horizontal plane as this reduces the possibility of waterhammer. On liquid systems the strainer pocket should point downwards.
- **3.5** The strainers may be lagged if required.

4. Commissioning


After installation or maintenance ensure that the system is fully functional. Carry out tests on any alarms or protective devices.

5. Operation

Strainers are passive items and will prevent the onward movement of dirt and debris, which is larger than the holes in the screen. The pressure drop across the strainer will increase as the screen becomes blocked. Regular cleaning / blowdown is recommended to keep the screen clean.

6. Fault finding

Symptom	Possible cause	Remedy
No flow through strainer	Blocked screen	Clean or replace screen See Section 7.2
-	System is isolated	Check isolation valves
Increased pressure drop across strainer	Screen is blocked up	Clean or replace screen See Section 7.2

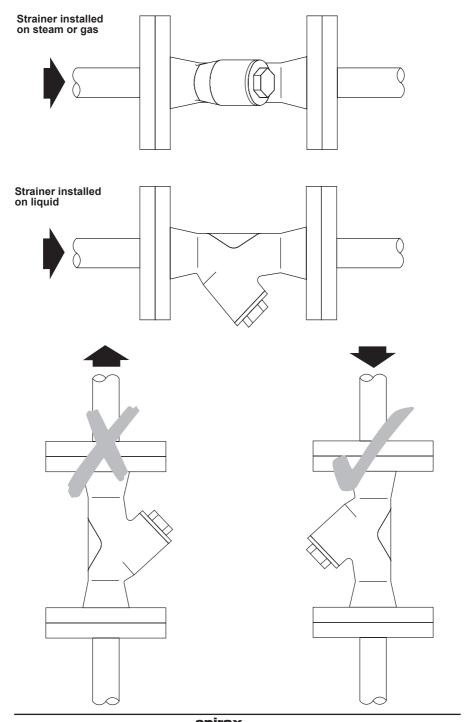

7. Maintenance

Note: Before actioning any maintenance programme observe the 'Safety information' in Section 1.

Warning

The cover gasket contains a thin stainless steel support ring which may cause physical injury if not handled and disposed of carefully.

7.1 General information

Before undertaking any maintenance on the strainer, it must be isolated from both the supply line and return line and any pressure allowed to safely normalise to atmosphere. The trap should then be allowed to cool. When reassembling, ensure that all joint faces are clean.

7.2 How to clean or replace the strainer screen:

For identification of parts refer to Section 8 'Spare parts'

- Remove the strainer cap.
- On most sizes up to DN25 the cap is simply unscrewed.
- On all other sizes the cap is retained by bolts/nuts. The number of bolts/nuts used will depend
 - on the strainer size, material of construction and design rating.
- Once the cap is removed the strainer screen can be taken out.
- Clean the screen or replace with a new one.
- Reassemble the screen into the cap by pushing the end into the recess.
- Always fit a new strainer cap gasket ensuring the jointing faces are clean.
- Refit the strainer cap or bolts/nuts using 'Neverseize' compound and tighten to the recommended torque (refer to the relevant Table, pages 25 to 27).
- Ensure that the nuts are tightened equally before final torque is applied.
- Check for leaks

Fig 7 strainer - Recommended tightening torques

Item	Qty	Size		or mm	*	N m	(lbf ft)
6	8 10	DN200 DN250	(¾ UNC) to BS 1769			80 - 90 110 - 120	(59 - 66) (81 - 88)
7	1 1	DN200 DN250			³ ⁄ ₄ " BSP 1" BSP	50 - 55 50 - 55	(37 - 40) (37 - 40)

Fig 33 strainer - Recommended tightening torques

Item	Qty	Size		or mm		N m	(lbf ft)
2	1 1 1 1 1	DN15 DN20 DN25 DN32 DN40 DN50	22 A/F 27 A/F 27 A/F 41 A/F 41 A/F 55 A/F		M28 M32 M42 M56 M60 M72	50 - 55 60 - 66 100 - 110 150 - 165 170 - 185 190 - 210	(37 - 40) (44 - 49) (74 - 81) (110 - 121) (125 - 136) (140 - 154)
5	8 8 8 8 8 12	DN65 DN80 DN100 DN125 DN150 DN200	19 A/F 19 A/F 24 A/F 24 A/F 30 A/F 30 A/F		M12 x 40 M12 x 40 M16 x 50 M16 x 50 M20 x 60 M20 x 70	20 - 24 30 - 35 70 - 77 80 - 88 100 - 110 90 - 100	(15 - 18) (22 - 26) (51 - 57) (59 - 65) (74 - 81) (66 - 74)

Fig 34 strainer - Recommended tightening torques

	<u> </u>								
Item	Qty	Size		or mm	*	N m	(lbf ft)		
2	1 1 1	DN15 DN20 DN25	22 A/F 27 A/F 27 A/F		M28 M32 M42	50 - 55 60 - 66 100 - 110	(37 - 40) (44 - 49) (74 - 87)		
5	4 4 6 8 8 8 8 8 8	DN32 DN40 DN50 DN65 DN80 DN100 DN125 DN150 DN200	19 A/F 19 A/F 19 A/F 19 A/F 19 A/F 24 A/F 30 A/F 30 A/F 36 A/F		M12 x 30 M12 x 30 M12 x 35 M12 x 35 M12 x 35 M16 x 45 M20 x 50 M20 x 55 M24 x 65	20 - 24 20 - 24 20 - 24 20 - 24 30 - 35 50 - 55 70 - 77 80 - 88 120 - 130	(15 - 18) (15 - 18) (15 - 18) (15 - 18) (15 - 18) (22 - 26) (37 - 40) (51 - 57) (59 - 65) (88 - 96)		
	16	DN250 EN and 10" ASME 150	11/4"		¾" - 10UNC	160 - 180	(119 - 132)		
	16	10" ASME 300	1 ⁷ / ₁₆ "		%" - 9UNC	180 - 200	(132 - 147)		
	16	DN300 EN and 12" ASME 150	11/4"		3/4" - 10UNC	200 - 220	(147 - 162)		
	18	12" ASME 300	1 ⁷ / ₁₆ "		%" - 9UNC	210 - 230	(155 - 170)		
6	20	DN350 EN and 14" ASME 150	11/4"		3/4" - 10UNC	220 - 240	(162 - 177)		
	22	14" ASME 300	17/16"		%" - 9UNC	230 - 250	(170 - 184)		
	22	DN400 EN and 16" ASME 150	17/16"		7⁄8" - 9UNC	330 - 350	(244 - 258)		
	16	16" ASME 300	1 ¹³ / ₁₆ "		11/8" - 7UNC	380 - 400	(281 - 295)		

Fig 34HP strainer - Recommended tightening torques

Item	Qty	Size		or 🙀	N m	(lbf ft)
	4	DN15	3/4" A/F	1/2" - 13 UNC	20 - 30	(15 - 20)
	4	DN20	3/4" A/F	1/2" - 13 UNC	20 - 30	(15 - 20)
	4	DN25	3/4" A/F	1/2" - 13 UNC	20 - 30	(15 - 20)
	8	DN40	3/4" A/F	1/2" - 13 UNC	30 - 40	(22 - 29)
5	8	DN50	3⁄4" A/F	1/2" - 13 UNC	30 - 40	(22 - 29)
	8	DN65	11/16" A/F	5⁄8" - 11 UNC	50 - 60	(37 - 44)
	8	DN80	11/16" A/F	5⁄8" - 11 UNC	50 - 60	(37 - 44)
	8	DN100	11/4" A/F	3/4" - 10 UNC	80 - 90	(59 - 66)
	8	DN150	17⁄16"A/F	7⁄8" - 9 UNC	100 - 110	(74 - 81)
	12	DN200	1 ¹³ / ₁₆ " A/F	11/8" - 7 UNC	180 - 190	(133 - 140)

Fig 36 strainer - Recommended tightening torques

Item	Qty	Size		or mm		N m	(lbf ft)
	4	DN15 and DN20	17 A/F		M10 x 25	22 - 25	(16 - 18)
	4	DN25	17 A/F		M10 x 25	22 - 25	(16 - 18)
	4	DN32 and DN40	19 A/F		M12 x 35	40 - 45	(29 - 33)
	8	DN50	19 A/F		M12 x 35	40 - 45	(29 - 33)
5	8	DN65	19 A/F		M12 x 45	40 - 45	(29 - 33)
э	8	DN80	19 A/F		M12 x 50	40 - 45	(29 - 33)
	8	DN100	24 A/F		M16 x 50	100 - 110	(73 - 80)
	8	DN125	30 A/F		M20 x 60	160 - 170	(117 - 125)
	8	DN150	30 A/F		M20 x 65	210 - 230	(154 - 169)
	8	DN200	36 A/F		M20 x 75	210 - 230	(154 - 169)

Fig 36HP strainer - Recommended tightening torques

Item	Qty	Size		or 🙀	N m	(lbf ft)
	4	DN15	3/4" A/F	1/2" - 13 UNC	20 - 30	(15 - 20)
	4	DN20	3/4" A/F	1/2" - 13 UNC	20 - 30	(15 - 20)
	4	DN25	3/4" A/F	1/2" - 13 UNC	20 - 30	(15 - 20)
	6	DN40	3/4" A/F	1/2" - 13 UNC	30 - 40	(22 - 29)
5	6	DN50	3/4" A/F	1/2" - 13 UNC	30 - 40	(22 - 29)
	6	DN65	11/16" A/F	5⁄8" - 11 UNC	50 - 60	(37 - 44)
	6	DN80	11/16" A/F	5⁄8" - 11 UNC	50 - 60	(37 - 44)
	6	DN100	11/4" A/F	3/4" - 10 UNC	80 - 90	(59 - 66)
	8	DN150	17⁄16"A/F	%" - 9 UNC	100 - 110	(74 - 81)
	8	DN200	1 ¹³ / ₁₆ " A/F	11/8" - 7 UNC	180 - 190	(133 - 140)

Fig 37 strainer - Recommended tightening torques

Item	Qty	Size		or mm		N m	(lbf ft)
	1	DN15	22 A/F		M28	50 - 55	(37 - 40)
	1	DN20	27 A/F		M32	60 - 66	(44 - 49)
2	1	DN25	27 A/F		M42	100 - 110	(74 - 81)
	1	DN32	46 A/F		M56	250 - 275	(184 - 202)
	1	DN40	50 A/F		M60	250 - 275	(184 - 202)
	1	DN50	60 A/F		M72	310 - 340	(228 - 250)
	8	DN65	19 A/F		M12 x 35	20 - 24	(15 - 18)
	8	DN80	19 A/F		M12 x 35	30 - 35	(19 - 26)
5	8	DN100	24 A/F		M16 x 45	50 - 55	(37 - 40)
3	8	DN125	30 A/F		M20 x 50	80 - 88	(59 - 65)
	8	DN150	30 A/F		M20 x 55	100 - 110	(74 - 81)
	12	DN200	36 A/F		M24 x 65	90 - 100	(66 - 74)

Fig 3616 strainer - Recommended tightening torques

Item	Qty	Size		or mm		N m	(lbf ft)
	4	DN15 and DN20	13 A/F		M8 x 20	15 - 20	(11 - 15)
	4	DN25	13 A/F		M8 x 20	15 - 20	(11 - 15)
	4	DN32 and DN40	13 A/F		M8 x 20	15 - 20	(11 - 15)
	4	DN50	17 A/F		M10 x 25	22 - 25	(16 - 18)
5	4	DN65	17 A/F		M10 x 30	22 - 25	(16 - 18)
	6	DN80	17 A/F		M10 x 30	22 - 25	(16 - 18)
	6	DN100	19 A/F		M12 x 35	50 - 60	(37 - 44)
	8	DN125	19 A/F		M12 x 40	50 - 60	(37 - 44)
	8	DN150	19 A/F		M12 x 40	50 - 60	(37 - 44)
	8	DN200	24 A/F		M16 x 50	100 - 110	(74 - 81)

Fig 3716 strainer - Recommended tightening torques

Item	Qty	Size		or mm	*	N m	(lbf ft)
	4	DN15 and DN20	13 A/F		M8 x 20	15 - 20	(11 - 15)
	4	DN25	13 A/F		M8 x 20	15 - 20	(11 - 15)
	4	DN32 and DN40	13 A/F		M8 x 20	15 - 20	(11 - 15)
	4	DN50	17 A/F		M10 x 25	22 - 25	(16 - 18)
5	4	DN65	17 A/F		M10 x 30	22 - 25	(16 - 18)
	6	DN80	17 A/F		M10 x 30	22 - 25	(16 - 18)
	6	DN100	19 A/F		M12 x 35	50 - 60	(37 - 44)
	8	DN125	19 A/F		M12 x 40	50 - 60	(37 - 44)
	8	DN150	19 A/F		M12 x 40	50 - 60	(37 - 44)
	8	DN200	24 A/F		M16 x 50	100 - 110	(74 - 81)

8. Spare parts


The only parts that are available as spares are detailed in the table below.

Available spares

Strainer screen (state material, mesh, perforation and size of strainer)

Note: The Fig 7 pot type is only available with 3.2 mm perforated stainless steel

Cap gasket (packet of three) 3

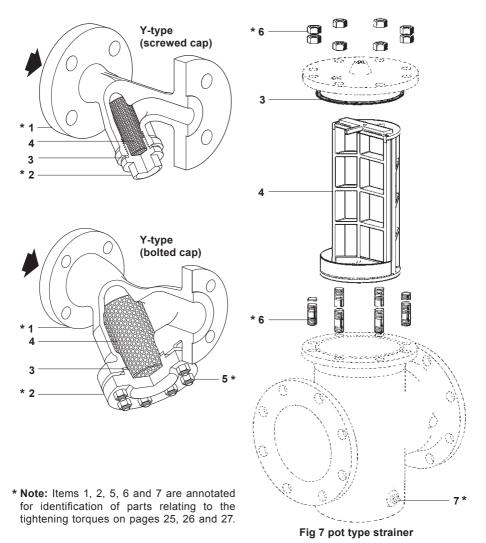

How to order spares

Always order spares by using the description given in the column headed 'Available spares' and state the size, model no. and pressure rating of the trap.

Example: 1 off 100 mesh stainless steel screen for a DN100 Fig 34 steel strainer.