Version 0x2


DISCLAIMER: I AM NOT RESPONCIBLE FOR: BRICKED PHONES, DEAD SD CARDS, THERMONUCLEAR WAR AND BROKEN HARDWARE.
YOU ARE DOING EVERYTHING ON YOUR OWN RISK!

IF YOU READ THE DISCLAIMER YOU MAY CONTINUE FOLLOWING THE GUIDE.

In this guide im gonna tell you how to unlock the bootloader on ZE520KL/ZE552KL (haven't tested this on the ZE552KL)
what you gonna need:
Linux pc/wsl
edl
usb c cable with data

to unlock the bootloader you gonna need to boot the phone into edl mode. If you know how to boot it into edl without the further steps, you can skip them.

In my situation I used test point to boot the phone into edl.
So you gonna neeed to dismantle the phone

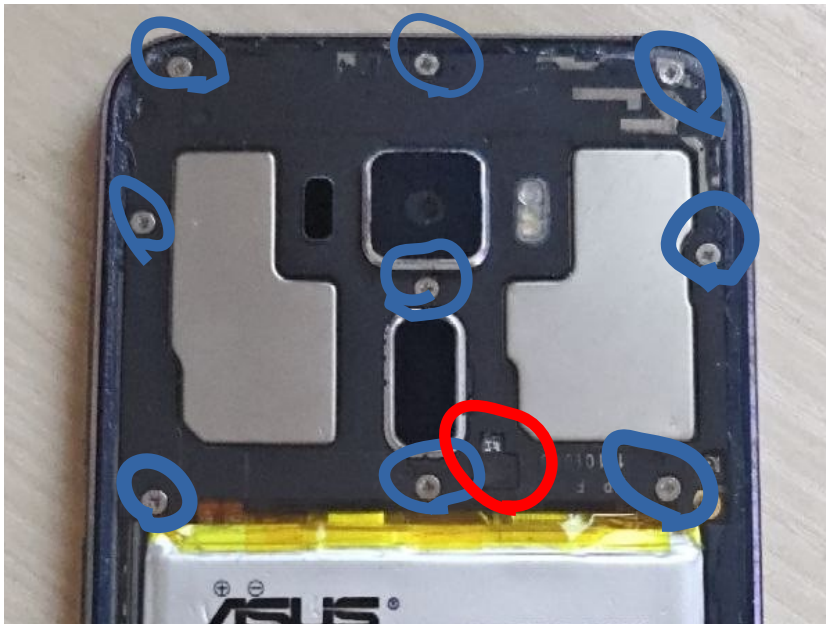

unscrew all of the screws you see in this photo (blue) and CAREFULLY disconnect the finger print connector (red).
Then take off the protective cover.



Now the most important thing.
Disconnect the battery before you do anything else.
In the image these are test points, to boot the phone into edl you gotta short them with whatever you'd like: Dupont wires, tweezers or some wire AND HOLD IT.
When you are holding the test points shorted, connect the battery and plug the phone into the pc. If it worked the phone should show up as QUSB__BULK. After this leave the phone as is, now it's software time.

So firstly you gonna need a specific tool
git clone --depth 1 https://github.com/bkerler/edl.git
cd edl
to verify that the phone is connected to the pc properly run this command.
python edl.py printgpt
if it answers something like this:
main – Trying with no loader given …
main – Waiting for the device
main – device detected :)
then you are ok.

Now the important step

download the engineering aboot and the patched config from the repo

backup the stock aboot and config if something goes wrong
python edl.py r aboot aboot_backup.bin
python edl.py r config config_backup.bin

write the engineering aboot and patched config
python edl.py w aboot aboot_engineering.bin
python edl.py w config config_unlock.bin

after it wrote succesfully you need to reboot it in fastboot mode
python edl.py reset

after it powers off hold the power button and volume up button, you are gonna end up in fastboot mode.

Then when you are in fastboot run these commands
fastboot oem unlock-go
fastboot oem device-info

if the unlock is succesful the fastboot oem device-info should output the device info and you gotta search for this string:
(bootloader) Device unlocked: true
if it says unlocked then you're all set! The bootloader is unlocked, now you can flash custom roms onto it. Btw if you need twrp for this device you can also download it in the repo.