

Sep 09, 2021

# © FindingNemo in OneDay: Ultra-Long ONT Library Preparation from Cell to Flowcell in One Day

Inswasti Cahyani<sup>1</sup>, John Tyson<sup>2</sup>, Nadine Holmes<sup>1</sup>, Josh Quick<sup>3</sup>, Nicholas Loman<sup>3</sup>, Matthew Loose<sup>1</sup>


<sup>1</sup>University of Nottingham; <sup>2</sup>University of British Columbia; <sup>3</sup>University of Birmingham

1	Works for me		& (	Share
dx.doi.	.org/10.17504/proto	ocols.ic	o.bxh:	xpj7n
_ ~	J Read Club support email: <b>n.j.loman</b>	@bham.	.ac.uk	
	Inswasti Cahyan			

#### ABSTRACT

This protocol is focussed on the isolation of ultra-high molecular weight (UHMW) DNA, library preparation and clean up ready for sequencing on the Oxford Nanopore Technology (ONT) platforms, all within **one working day**. This protocol is optimised for human cell lines.

# Summary of the workflow:

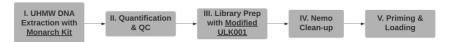

DOI

# dx.doi.org/10.17504/protocols.io.bxhxpj7n

#### PROTOCOL CITATION

Inswasti Cahyani, John Tyson, Nadine Holmes, Josh Quick, Nicholas Loman, Matthew Loose 2021. FindingNemo in OneDay: Ultra-Long ONT Library Preparation from Cell to Flowcell in One Day. **protocols.io** https://dx.doi.org/10.17504/protocols.io.bxhxpj7n

# KEYWORDS

ultra-long sequencing, cohex, glass bead, nanopore, MinION, UHMW DNA, Monarch, GM12878, ULK001

#### LICENSE

This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

CREATED

Aug 19, 2021

LAST MODIFIED

Sep 09, 2021

PROTOCOL INTEGER ID

52503

#### **Acknowledgements**

This protocol was developed by Inswasti Cahyani for the Long Read Club with significant contributions from John Tyson and Nadine Holmes, also Josh Quick, and continuous discussion and support of Matt Loose and Nick Loman. We would also like to thank Giron Koetsier (NEB) and Kelvin Liu (Circulomics) for lending their expertise and advance product trials.

Please follow on Twitter for latest updates and results:

@NininUoN

@mattloose

#### Sample Results:

Input cell number: 2 millions (around 13 μg DNA)

Load amount: ~3.4 µg
 Active channels: 498
 Mean read length: 37,671.4
 Mean read quality: 11.0
 Median read length: 5,994
 Median read quality: 11.8
 Number of reads: 73,641
 Read length N50: 132,133
 Total bases: 2,774,156,337
 Longest read: 1,917,218 (13.6)

MATERIALS TEXT

#### Chemicals/Compounds

Aesar Catalog #A15470

**⊠** Tris-HCl pH 8.0 **Thermo** 

Scientific Catalog #J22638-AE

**⊠** Jurkat Genomic DNA **Thermo** 

■ Fisher Catalog #SD1111

⋈ NaCl (5 M) RNase-free Thermo Fisher

Scientific Catalog #AM9759

₩ 40% Polyethylene Glycol MW 8000 Sigma -

Aldrich Catalog #P1458

**⊠** Isopropanol Absolute **Fisher** 

Scientific Catalog #P/7500/15

**⊠**1X Phosphate Buffer Saline **Fisher** 

Scientific Catalog #15453819

Biolabs Catalog #M0303S

■ Water Thermofisher Catalog #AM9920

■ ⊠ Calcium Chloride Contributed by users

Magnesium Chloride Fisher

Scientific Catalog #AC223210010

protocols.io
2
09/09/2021

**XHEPES Fisher** ■ Scientific Catalog #BP310 Made-up Buffers PEGW Buffer ■ 10% PEG-8000 0.5M NaCl Nuclease Flush Buffer (NFB) 300mM KCl 2mM CaCl<sub>2</sub> ■ 10mM MgCl<sub>2</sub> 15mM HEPES pH 8.0 Kits Monarch HMW DNA Extraction Kit for Cells & Blood New England ■ Biolabs Catalog #T3050S ⊠ Ultra-Long DNA Sequencing Kit (SQK-ULK001) Oxford Nanopore ■ Technologies Catalog #SQK-ULK001 ■ Scientific Catalog #Q32850 **◯** Qubit RNA BR Assay Kit **Thermo Fisher**  Scientific Catalog #Q10211 (optional) **⊠** ONT Flow Cell Wash Kit **Oxford Nanopore**  Technologies Catalog #EXP-WSH004 (optional) for multiple loadings and storage on one flow cell) **Disposables ⊠** DNA LoBind Tubes, 1.5 mL Eppendorf Catalog #0030108051 **⊠ DNA LoBind 2.0ml PCR Clean Eppendorf** ■ Tubes Eppendorf Catalog #0030 108.078 **⊠** Glass Beads 3 mm Scientific Laboratory Supplies Ltd Catalog #DD68501 <u>OR</u> Monarch DNA Capture Beads New England Biolabs Catalog #T3005L 

Scientific Catalog #12194142

cut tube 2-3 mm from the bottom to make a bead retainer

 Monarch Bead Retainers New England

OR Biolabs Catalog #T3004L

Monarch Collection Tubes II - 100 tubes New England

■ Biolabs Catalog #T2018L

(optional)

or use any 1.5 ml centrifuge tube as a collection tube

■ Wide-bore (or cut off) P1000 and P200 tips

# SAFETY WARNINGS

When handling phenol always wear PPE, keep a solution of 50% (w/v) PEG-400 nearby to treat the burn in the case of accidental splashes.

BEFORE STARTING

#### Things to observe at all times:

- Excessive and vigorous pipetting and vortexing should be avoided as these may shear the DNA.
- Make up buffers with nuclease-free water to avoid introducing nucleases to solutions.
- Avoid unnecessary heating and freezing; isolated DNA should be stable for storage in the fridge for months.

## Monarch UHMW DNA Extraction Kit

1 We have obtained optimal DNA extractions using the NEB Monarch kit. This combines speed with high quality UHMW DNA. Follow the manufacturer's instructions as described <a href="here">here</a>, BUT incorporate the following changes as described helow

Our most homogeneous extracted DNA samples were obtained by lysis at 600-700 rpm speed using the Monarch Kit. This is one area that can be optimised depending on the input sample.

2 To complete in one day, start early!

One million human cells are sufficient for a single library load on the MinION. At least two million human cells are required for a single load on the PromethION. Other samples can be scaled according to total amount of DNA recovered. So for a 1 gigabase genome you would require 3 million cells etc.

- 3 Dilute the eluted DNA with 150 μl of NEB Elution Buffer II.
  - This is following the NEB UHMW Monarch kit protocol where DNA is first eluted with 100 μl elution buffer. After this step, sample volume will be 250 μl total.
  - Quantification of very viscous UHMW DNA is problematic and will not produce accurate results, hence the dilution.
  - Gradual dilution is recommended to achieve a homogeneous final concentration of 50-100 ng/μl.
- 4 Incubate the eluted DNA at 37°C for 2-3 hours with regular pipette mixing.

8 37 °C ( 03:00:00 max (2-3 hours)

During mixing, observe by eye that the viscous DNA 'blob' has been more or less dissolved to the different parts of the tube (*i.e.*, less heterogeneous). This is usually observed after 2 hours of incubation. Otherwise, continue the incubation to 3 hours and proceed to the next step.

5 Quantify the DNA as per "**UHMW DNA QC**" (steps 6-10 below) and check homogeneity by calculating %CV values. If the DNA is not sufficiently homogeneous (*i.e.*, %CV ≥ 100%) incubate the DNA for longer.

#### UHMW DNA QC

Two nucleic acid quantification methods, *i.e.*, fluorometric (Qubit) and spectrophotometric (Nanodrop), can be used in parallel to assess both the quantity and purity of the extracted DNA. The quantification follows the published protocol by <u>Koetsier and Cantor</u> with slight modifications as follows.

An accurate measurement of DNA concentration is important as this will determine the optimum ratio of transposase to DNA molecules at the library prep step. Also, the viscous nature of UHMW DNA requires that sample measurement

Citation: Inswasti Cahyani, John Tyson, Nadine Holmes, Josh Quick, Nicholas Loman, Matthew Loose (09/09/2021). FindingNemo in OneDay: Ultra-Long ONT Library Preparation from Cell to Flowcell in One Day. <a href="https://dx.doi.org/10.17504/protocols.io.bxhxpj7n">https://dx.doi.org/10.17504/protocols.io.bxhxpj7n</a>

3h

represents all parts of the DNA solution.

A total of 10 µl DNA is sampled from four different locations in the tube:

- 1. top
- 2. upper-middle
- 3. lower-middle
- 4. bottom

Each sample should be 2.5  $\mu$ l and combined into a single 2 ml tube.

- Use a cut P10 tip to aspirate the DNA sample and, if too viscous, cut the DNA thread by pushing the tip against the bottom of the tube.
- When available, a positive displacement pipette can also be used to ensure more accurate liquid aspiration.
- 7 Add a glass bead and pulse vortex at full speed for one minute.
  - **△2400 rpm, 00:01:00 vortex max speed**
- 8 Quantify and calculate %CV as described in this paper by Koetsier and Cantor.

Typically we take three measurements of 1  $\mu$ l each on Nanodrop and one measurement of 3  $\mu$ l using the Qubit DNA BR kit (standardized by the Jurkat genomic DNA).

Scientific Catalog #Q32850

Fisher Catalog #SD1111

9 (\*\*

Next quantify any RNA carry-over using the Qubit RNA Broad Range kit (optional).

This step is to confirm that the RNA content is low to ensure maximum amount of DNA. It should be less than 50% of the DNA concentration measured with Qubit.

10

Wherever possible, the quality of extracted DNA sample should be analysed by method(s) that enable visual inspection of molecule length distribution such as:

- Regular agarose gel electrophoresis
- Pulsed-Field Gel Electrophoresis, e.g., using Pippin Pulse (Sage Science)
- Agilent Bioanalyzer DNA
- Agilent TapeStation DNA

**UL Library Prep** 

protocols.io
6
09/09/2021

11 For library preparation, follow the "**Modified ULK001**" library prep protocol (modified from Oxford Nanopore Technologies SQK-ULK001) as linked below:



11.1 Extracted UHMW DNA is often difficult to quantify due to its viscosity. However, accurate measurement of DNA concentration is crucial for calculating optimum ratio of the transposase enzyme to the DNA molecules. We provide a protocol section for quantifying UHMW DNA in our 'FindingNemo' protocol master file. Properly quantified DNA can then be processed for this library prep.

Both cell number and DNA concentration/amount are used to calculate the amount of transposase (FRA) and adapter (RAP-F).

We follow the original SQK-ULK001 protocol for the optimum ratio of transposase amount to human genomic DNA:

6 μl FRA to 6 million human cells (or around 40 μg DNA)

For other species, the genome size has to be taken into account and the FRA to DNA ratio optimised, *e.g.*, we had optimised a non-human cell line of **6.2 Gb genome** at:

2.5 µl FRA to 1 million non-human cell (around 12-15 µg DNA)

# 11.2

In a 2 ml tube, dilute UHMW DNA to a concentration of around 50 ng/ $\mu$ l in a total volume of 750  $\mu$ l (with water or elution buffer if required).

Mix well with a P1000 wide-bore tip.

- DNA concentration can still range from 20-50 ng/μl to have optimum tagmentation reaction.
- If input DNA amount is less than 20  $\mu$ g (1-3 million cells used), halve all the reaction volumes, *i.e.*, 375  $\mu$ l total DNA volume instead of 750  $\mu$ l as in the table below.
- It is important to have as homogeneous DNA as possible at this step so the transposase can access and cut the DNA solution with an even distribution. It is OK to pipette thoroughly but gently.

Α	В	С	D	E
Cell No. (million)	Approx. DNA amount (μg)	Total DNA volume (μl)	DNA concentration (ng/µl)	Total reaction volume (µI)
6	>20-40	750	20-50	1000
5				
4				
3	5-20	375		500
2				
1				

11.3 In a 1.5 ml tube, dilute the corresponding amount of transposase (FRA) with the dilution buffer (FDB) to a total volume

 of 250  $\mu$ l (or 125  $\mu$ l if doing half-reaction). More details in the table below.

Α	В	С	D	E
Cell No. (million)	Approx. DNA amount (μg)	FRA (μl)	FDB (µl)	Total reaction volume (µl)
6	>20-40	6	244	1000
5		5	245	
4		4	246	
3	5-20	3	122	500
2		2	123	
1		1	124	

- 11.4 Mix the diluted FRA by vortexing for 2-3 seconds.
- 11.5 Using a P1000 wide-bore tip, add the diluted FRA to the DNA sample.
  Stir the reaction with the pipette tip whilst expelling the diluted FRA to ensure an even distribution.
  Mix thoroughly by gentle pipetting.
  - § On ice

11.6 🥂

25m

Incubate the reaction as follows:

- 8 23 °C © 00:10:00
- 8 70 °C © 00:05:00
- & Room temperature  $\,\, \, \bigcirc \,$  00:10:00 at least

It is important that the room temperature at the fragmentation step (first incubation step) does not fall below  $20^{\circ}$ C to ensure optimum reaction condition. The use of a water bath or heating block is recommended.

11.7 Add the corresponding volume of sequencing adapter (RAP-F) as in the table below.

Α	В	С	D	E
Cell No. (million)	Approx. DNA amount (μg)	FRA (μl)	RAP-F (μl)	Total reaction volume (µI)
6	>20-40	6	5	1000
5		5	4.2	
4		4	3.3	
3	5-20	3	2.5	500
2		2	1.7	
1		1	0.8	

**i** protocols.io 8 09/09/2021

- Use a P1000 wide-bore tip to pipette mix. Visually check to ensure the reaction is thoroughly mixed.
- Tube inversion can be used to aid mixing.

30m

5m

11.8 Incubate for 30 minutes at 23°C.

8 23 °C © 00:30:00

# NEMO Library Clean-up

14

12 This section provides an alcohol-free purification of a nanopore DNA sequencing library from an UL protocol.

For 5-40  $\mu g$  of input UHMW DNA (corresponding to DNA extracted from 1-6 million human cells), add **3** clean glass beads into the sample in a 2 ml tube.

- For DNA amounts less than 5 µg, 2 glass beads can be used (see table at step 23). Two slightly larger glass beads from New England Biolabs (NEB; see Materials) can also be used per reaction.
- Glass beads can be washed following an acid-, bleach-, or SDS-wash protocol then sterilized. Sterilization can be by autoclaving or just storing the beads in 70% Ethanol.
- 13 Add a 1:1 volume of 10 mM Hexamminecobalt(III) Chloride (CoHex) into the DNA solution.

When the clean-up follows ONT ultra-long library preparation (SQK-ULK001), volumes can typically range from  $500-1000 \mu l$ .

Rotate the tube with a vertical rotator at 9 rpm for 5-10 minutes.

△9 rpm vertical rotator 
○ 00:05:00 10m max

- Rotate for 5 minutes if the DNA amount is less than 5 μg and adjust the time when more DNA is used, up to 10 minutes for 40 μg DNA.
- If a rotator is not available, hand inversion for 30-40 repeats can be used. Invert the tube slowly by hand such that each full cycle takes around 5 seconds.
- 15 Invert the tube 3 times more by hand to ensure DNA has precipitated and is tightly bound to the beads.
- 16 Discard the supernatant. Take care not to disturb the DNA precipitated onto the beads.

protocols.io
9
09/09/2021

- 17 Wash the glass beads by gently adding 1 ml of PEGW buffer and gently invert 3 times. Incubate for 3 minutes at room temperature.
  - § Room temperature © 00:03:00
- 18 Discard most of the supernatant, again taking care not to disturb the DNA precipitate.
- 19 Repeat step 17 with 500  $\mu$ l of the PEGW buffer.
- Discard the supernatant, taking care not to disturb the DNA precipitate. It isn't necessary to remove everything, a small volume of liquid can be left behind.
- 21 Insert a bead retainer into a collection tube.
- Pour the beads from step 20 into the bead retainer and pulse-spin for 1 second in a mini centrifuge (or the shortest time possible) to remove any residual wash buffer. Keep the bead retainer.

#### **Omitting Dry-spin Step**

When working with large amounts of DNA, this dry-spin step can be omitted to prevent DNA loss from spinning. Follow steps below:

- Remove the supernatant after the second wash as much as possible, pulse-spin the tube for 1 second and remove last traces of buffer from under the glass beads with a fine pipette tip.
- Proceed to the elution step.

# 23 /

Quickly pour the beads into a new 2 ml low-bind tube and immediately add the corresponding volume of elution buffer (ONT-EB or 10 mM Tris-HCl pH 8.0) per the table below.

Α	В	С
DNA Input Amount	No. of glass	Elution Buffer Volume
(µg)	beads (3-mm diameter)	(μl)
. 20. 40	,	205
>30-40	3	225
>20-30	3	180
>5-20	3	120
>2-5	2	90
1-2	1	50

- Do not lot the heads with DNA dry out, as it will make DNA homogenization into colution more difficul

- DO HOUSEL THE DEGUS WITH DINA GLY OUT, AS IT WIII THAKE DINA HOTHOGENIZATION INTO SOIGTION HIGH GITHICUIT.
- As an alternative, the elution buffer can be aliquoted into a 2 ml tube prior to this step. The beads can then just be poured into the buffer.

30m

24 Incubate the library at 37°C for 30 min. Gently aspirate and dispense the eluate over the glass beads at regular intervals with a wide-bore P200 tip to aid elution.

§ 37 °C © 00:30:00 mix per 10 min

25 Insert the bead retainer from step 22 into a clean 1.5 ml tube. Pour the beads from step 24 into the bead retainer and centrifuge at 12,000 x g for one minute.

**\$\text{(3)} 12000** rpm, Room temperature , 00:01:00

26 Incubate for at least 30 minutes at room temperature with regular pipette mixing.

30m

§ Room temperature © 00:30:00 at least

Now - you have found Nemo!





Store the library at 4°C or continue loading it to a flowcell.

§ 4 °C for storage

Load at least 1 µg for MinION sequencing (or all of the library for input cells of 1 million).

# Flowcell Priming & Library Loading

- 28 Prime the flow cell as per the MinION or PromethION protocol. YouTube Video: Priming A MinION Flowcell
- Quantify 2-3  $\mu$ l of the library sample using fluorometric method (Qubit DNA BR kit) or alternatively the spectophotometric method (Nanodrop).
- 30 Mix 38-40 μl library (or at least 1 μg) with the same volume of sequencing buffer (SQB) from the SQK-ULK001 kit or SQK-RAD004, mix and incubate at room temperature for 30 minutes.
  - § Room temperature © 00:30:00
- 31 Load the library per <u>SQK-ULK001 protocol</u> and let it tether for another 30 minutes before starting the run.

30m

© 00:30:00 tethering

protocols.io
11
09/09/2021

32	Select the correct UL sequencing script based on the sequencing kit used (default mux scan should already be set to every 6 hours).
Home-b	rew Flowcell Wash/Flush (Optional) 1h
33	This section can be used to reload library on the same flowcell.  Add 2 µl DNase I to 398 µl nuclease flush buffer (NFB), vortex to mix.
34	After opening the priming port of the flow cell, check for a small bubble under the cover. Draw back a small volume to remove any bubble:
	34.1 Set a P1000 pipette to 200 μl
	34.2 Insert the tip into the priming port
	Turn the wheel until the dial shows 220-230 $\mu$ l, or until a small volume of buffer is seen entering the pipette tip
35	Using a P1000 pipette, load 400 $\mu l$ of the NFB plus DNase I into the flow cell priming port.
36	Close the flow cell priming port and incubate the flow cell <i>in situ</i> for at least 1 hour.  © 01:00:00 at least
37	Reprime the flow cell as in step 28.
38	Reload the library as in step 30-32  • go to step #30 • go to step #31 • go to step #32