

VERSION 1 APR 09, 2024

OPEN ACCESS



DOI: dx.doi.org/10.17504/pro

 $\begin{array}{l} dx. doi. org/10.17504/protocols. io. \\ dm6gpbb31lzp/v1 \end{array}$

Protocol Citation: Jim Huang, August Luc, Sarah Kane, Rose Nash, Susan De Long, Carol Wilusz 2024. Concentration, extraction and quantification of SARS-CoV-2 in wastewater via droplet digital PCR. protocols.io https://dx.doi.org/10.17504/protoc ols.io.dm6gpbb31lzp/v1Version created by Carol Wilusz

License: This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

Concentration, extraction and quantification of SARS-CoV-2 in wastewater via droplet digital PCR V.1

Jim Huang¹, August Luc¹, Sarah Kane², Rose Nash³, Susan De Long⁴, Carol Wilusz⁵

¹Department of Microbiology, Immunology & Pathology, Colorado State University;

- ²GT Molecular, Fort Collins, CO; ³Burst Diagnostics, Fort Collins, CO;
- ⁴Department of Civil and Environmental Engineering, Colorado State University;
- ⁵Colorado State University



Carol Wilusz
Colorado State University

DISCLAIMER

DISCLAIMER - FOR INFORMATIONAL PURPOSES ONLY; USE AT YOUR OWN RISK

The protocol content here is for informational purposes only and does not constitute legal, medical, clinical, or safety advice, or otherwise; content added to protocols.io is not peer reviewed and may not have undergone a formal approval of any kind. Information presented in this protocol should not substitute for independent professional judgment, advice, diagnosis, or treatment. Any action you take or refrain from taking using or relying upon the information presented here is strictly at your own risk. You agree that neither the Company nor any of the authors, contributors, administrators, or anyone else associated with protocols.io, can be held responsible for your use of the information contained in or linked to this protocol or any of our Sites/Apps and Services.

ABSTRACT

This protocol describes the method used at Colorado State University to extract and quantify SARS-CoV-2 in wastewater collected from sewers and at wastewater treatment plants. The method relies on concentration via ultrafiltration, silica column based purification, and quantification via digital droplet reverse transcription PCR. Endogenous and exogenous controls are described.

Protocol status: Working
We used this protocol from Aug
2020 through July 2023 to test
samples from treatment plants
and manholes in Colorado.

Created: May 24, 2022

Last Modified: Apr 09, 2024

PROTOCOL integer ID: 63162

Keywords: wastewater, SARS-CoV-2, droplet digital PCR, ultrafiltration

Funders Acknowledgement:

Colorado Department of Public Health & Environment Grant ID: x

Office of the Vice President for Research, Colorado State University

Grant ID: n/a

MATERIALS

Reagents

- Bovilis Coronavirus Intranasal Vaccine (Merck) Valley Vet Supply Catalog #43817
- SARS-Related Coronavirus 2 Isolate USA-WA1/2020 Heat Inactivated BEI Resources Catalog #NR-52286
- Tween 20 Research Products International (rpi) Catalog #P20370-0.5
- One-Step RT-ddPCR Advanced Kit for Probes **BioRad**Sciences Catalog #1864022
- Automated Droplet Generation Oil for Probes **BioRad Sciences Catalog #**1864110
- Ø ddPCR Buffer Control for Probes BioRad Sciences Catalog #1863052
- Buffer AVL (w/o carrier RNA 155 ml) Qiagen Catalog #19089
- Buffer AW1 (concentrate 242 ml) Qiagen Catalog #19081
- Buffer AW2 (concentrate 324 ml) Qiagen Catalog #19072

Primers and Probes

A	В	С	D	E
Target	Forward Primer	Reverse Primer	Probe	Citation
SARS- CoV-2 CDC-N1	GAC CCC AAA ATC AGC GAA AT	TCT GGT TAC TGC CAG TTG AAT CTG	FAM-ACC CCG CAT /ZEN/ TAC GTT TGG TGG ACC-3IABkFQ	Lu et al (2020)
BCoV	CTG GAA GTT GGT GGA GTT	ATT ATC GGC CTA ACA TAC ATC	FAM-CCT TCA TAT /ZEN/CTA TAC ACA TCA AGT TGT T- 3IABkFQ	Decaro et al (2008)
PMMoV	GAGTGGTTTGA CCTTAACGTTT GA	TTGTCGGTTGC AATGCAAGT	HEX - CC+T+ACCGA+AG+C A+AA+TG-3IABkFQ	Haramoto et al (2013)
F+ coliphage	TCT ATG TAT GGA TCG CAC TCG	GTA GGC AAG TCC ATC AAA GTC	FAM-TGC TGT CCG /ZEN/ATT TCA CGT CTA TCT TCA -3IABkFQ	Wolf et al (2008)

Primers and Probes were synthesized by Integrated DNA Technologies. The PMMoV probe was synthesized with Affinity Plus (+) LNA modifications.

Consumables

- Ultrafiltration PS Hollow Fiber Concentrating Pipette Tips Unirradiated 200pk Innovaprep Catalog #CC08004-200
- Stericup Quick Release Millipore 0.22uM PES Filters **Sigma Aldrich Catalog #**S2GPU01RE
- TempAssure 0.2ml PCR 8-tube strips and optical caps USA Scientific Catalog #1402-2500
- **⊠** ddPCR™ 96-Well Plates **BioRad Sciences Catalog #**12001925
- DG8™ Cartridges for QX200™/QX100™ Droplet Generator **BioRad**Sciences Catalog #1864008
- DG8[™] Gaskets for QX200[™]/QX100[™] Droplet Generator **BioRad**Sciences Catalog #1863009
- Econospin Mini Spin Column 250ct **Epoch Life Science Catalog #**1920-250

Equipment

Clinical Centrifuge (centrifuge protocol only)
Microcentrifuge
BSL2 level Biosafety Cabinet with Vacuum System
Multi-channel pipetter

Equipment

Concentrating Pipette Select

NAME

Ultrafiltration Device

TYPE

Innovaprep

BRAND

CP Select

SKU

 $https://www.innovaprep.com/store\#!/Concentrating-Pipette-Select-*Contact-for-\ _{NK}^{LI} \\ quote*/p/70397045/category=20718430$

Equipment

QX200 Droplet Digital PCR System

NAME

Digital PCR Device

TYPE

BioRad

BRAND

1864001

SKU

 $https://www.bio-rad.com/en-us/life-science/digital-pcr/qx200-droplet-digital-pcr- {}_{K}^{LIN} \\ system$

Equipment

C1000 Touch™ Thermal Cycler with 96-Deep Well Reaction Module

TYPE

NAME

Thermal Cycler

BRAND

1851197

BioRad

SKU

https://www.bio-rad.com/en-us/sku/1851197-c1000-touch-thermal-cycler-with-96-ndash-deep-well-reaction-module?ID=1851197

LI NK

References:

Decaro N, Elia G, Campolo M, Desario C, Mari V, Radogna A, Colaianni ML, Cirone F, Tempesta M, Buonavoglia C. (2008) Detection of bovine coronavirus using a TaqManbased real-time RT-PCR assay. *J Virol Methods*. 151(2):167-171

Haramoto E, Kitajima M, Kishida N, et al. (2013) Occurrence of pepper mild mottle virus in drinking water sources in Japan. *Appl Environ Microbiol.* 79(23):7413-7418.

Lu, X., Wang, L., Sakthivel, S. K., Whitaker, B., Murray, J., Kamili, S., Lynch, B., Malapati, L., Burke, S. A., Harcourt, J., Tamin, A., Thornburg, N. J., Villanueva, J. M., & Lindstrom, S. (2020). US CDC Real-Time Reverse Transcription PCR Panel for Detection of Severe Acute Respiratory Syndrome Coronavirus 2. *Emerging infectious diseases*, *26*(8), 1654–1665.

Wolf S, Hewitt J, Rivera-Aban M, Greening GE. (2008) Detection and characterization of F+ RNA bacteriophages in water and shellfish: application of a multiplex real-time reverse transcription PCR. *J Virol Methods*.149(1):123-8

PROTOCOL MATERIALS

Ø ddPCR Buffer Control for Probes Bio-Rad Laboratories Catalog #1863052

Materials

Econospin Mini Spin Column 250ct Epoch Life Science Catalog #1920-250

Materials

Ultrafiltration PS Hollow Fiber Concentrating Pipette Tips - Unirradiated - 200pk Innovaprep Catalog #CC08004-200

Materials, Step 6

Automated Droplet Generation Oil for Probes **Bio-Rad**Laboratories Catalog #1864110

Materials

Quick Extract DNA Extraction Solution Lucigen Catalog #QE0905T Step 7

SARS-Related Coronavirus 2 Isolate USA-WA1/2020 Heat Inactivated **BEI Resources Catalog #**NR-52286

Step 9

SARS-Related Coronavirus 2 Isolate USA-WA1/2020 Heat Inactivated **BEI Resources Catalog #**NR-52286

Materials

Buffer AW2 (concentrate 324 ml) Qiagen Catalog #19072

Materials

Stericup Quick Release Millipore 0.22uM PES Filters Merck MilliporeSigma

(Sigma-Aldrich) Catalog #S2GPU01RE

Materials

DG8[™] Gaskets for QX200[™]/QX100[™] Droplet Generator **Bio-Rad**Laboratories Catalog #1863009

Materials

DG8™ Cartridges for QX200™/QX100™ Droplet Generator **Bio-Rad**Laboratories Catalog #1864008

Materials

Bovilis Coronavirus Intranasal Vaccine (Merck) Valley Vet Supply Catalog #43817

Materials

Stericup Quick Release-GP Sterile Vacuum Filtration System **Merck MilliporeSigma**(Sigma-Aldrich) Catalog #S2GPU02RE

Step 5

Step 9

One-Step RT-ddPCR Advanced Kit for Probes Bio-Rad Laboratories Catalog #1864022				
Materials				
Buffer AVL (w/o carrier RNA 155 ml) Qiagen Catalog #19089 Materials				
₩ Buffer AW1 (concentrate 242 ml) Qiagen Catalog #19081 Materials				
TempAssure 0.2ml PCR 8-tube strips and optical caps USA Scientific Catalog #1402-2500				
Materials				
Bovilis Coronavirus Intranasal Vaccine (Merck) Valley Vet Supply Catalog #43817				
Step 3				
Materials				
Materials				

Preparation

1 Sample Description and Treatment

This protocol is designed for use with untreated influent from wastewater treatment plants. Samples should be provided in 50ml conical tubes with ~40ml of influent in each tube. Optimally, the samples should be flow proportional, collected over a 24 hour time period, and stored at ~4°C for transport to the laboratory for processing. The protocol is also appropriate for grab samples and for flow/time proportional samples collected from sewers.

Safety information

Wastewater contains infectious human pathogens, including SARS-CoV-2, Hepatitis A, Hepatitis B and noroviruses. It should be handled only under BSL2+ conditions with both medical or K95 mask, and face shield.

Note

Up to 80 ml of wastewater can be processed using a single Innovaprep tip to increase sensitivity.

2 Work Area Set Up

15m

- Wipe down Biosafety Cabinet (BSC) with 70% ethanol
- Thaw sufficient BCoV spike for the number of samples [(N+2)x 14.5µl] store on ice
- Perform Start Up Procedure on Innovaprep and insert effluent tube into beaker containing 10% bleach
- Ensure sufficient Elution Fluid, Ultrafiltration Tips etc are available to complete the run

Safety information

If processing 10 or more samples, the BSC will be crowded. Be careful to ensure the air flow is not blocked and that you remove any unnecessary items.

3

30m

Bovine Coronavirus Spike-In

Bovilis Coronavirus Intranasal Vaccine (Merck) Sigma Aldrich Catalog #43817

- Lyophilized BCoV (10 dose) is reconstituted in 5 ml PBS, 0.01% Tween 20 and stored in aliquots at -80°C
- A working stock at 1:500 dilution in PBS, 0.01% Tween 20 is prepared and stored in 500 μl aliquots at -80°C
- The concentration of the working stock should be in the range of 3000 genome copies per μl

Safety information

Bovilis is a LIVE viral vaccine for cattle and should be handled with care as it has some ability to infect humans.

Clarification and Concentration of Wastewater

4 Sample Pre-Treatment

Addition of BCoV allows virus recovery and inhibition of PCR due to the wastewater matrix to be detected. Tween-20 is added as recommended by Innovaprep. Perform this step on ice.

- Thaw the BCoV aliquot on ice
- Vortex and centrifuge at 16,000g for 5 minutes
- Transfer the supernatant to a fresh tube. This is to ensure the viral particles are evenly distributed.
- Adjust the volume of each wastewater sample to 40 ml
- Add 400 µl of 10% Tween 20

- Add 14.3 µl of BCoV spike (~30-50,000 genome copies)
- Mix well by inverting
- Store remaining BCoV spike on ice until Step 6 is complete

5 Filtration to remove particulates

Stericup Quick Release-GP Sterile Vacuum Filtration System Sigma Aldrich Catalog #S2GPU02RE

Clarification of the sample is necessary to avoid clogging at the ultrafiltration step. This protocol uses filtration but centrifugation can also be employed and is cheaper.

Pass each sample through a 0.22µM PES filter (diameter >8 cm)

6 Innovaprep Ultrafiltration

Witrafiltration PS Hollow Fiber Concentrating Pipette Tips - Unirradiated - 200pk **Sigma**Aldrich Catalog #CC08004-200

- Insert a fresh ultrafiltration tip into the device
- Insert the tip into the sample
- Start Run (see note for program details)
- If run stops before all liquid is aspirated, Press Return and Start Run again. This is more likely to happen with turbid samples, or if the tip is faulty.
- Remove the empty sample bottle and replace with a 15 ml conical tube
- Press Elute
- Store the eluate on ice until all samples have been concentrated
- Transfer 140 μl of eluate to a fresh tube containing 560 μl of Qiagen AVL buffer and mix well before proceeding to Step 8
- The remaining eluate can be stored at -80°C

Expected result

The eluate volume is usually in the range of 200-800 μ l (50-100 fold concentration) The volume should be estimated by drawing the eluate up into a 1ml pipette tip and recorded as it is needed to calculate the final viral load.

Note

Innovaprep Program Details

Valve	Pulse	Foam	Valve	Flow	Flow End	Flow Min	Ext Delay	Pump %	Ext Pump
Open		Factor	Closed	Start		Start			Delay
570	2	10	100	3.0	0.2	40	3	100	1

These settings should allow efficient aspiration and elution without interruption using the ultrafiltration tips on wastewwater that has been passed through a 0.22uM pre-filter.

Required Enter eluate volume for Sample 1		
Enter eluate volume for Sample 2		

Spike Lysis

7 Spike Lysis

Quick Extract DNA Extraction Solution Sigma Aldrich Catalog #QE0905T

- Add 5µl Quick Extract DNA Extraction Solution to 10µl BCoV Spike from Step 5
- Heat in thermocycler at 65°C for 15 min then 98°C for 2 min, then 4°C forever
- Add 85 μl H₂O and store on ice for use in ddPCR
- Can store at -80°C for reference

Note

Altenative Lysis Protocol using GT Molecular Lysis Buffer

Extraction of RNA

8 QiaAMP Viral RNA Extraction Protocol

Safety information

Wear gloves, labcoat and goggles or glasses.

Virus is inactivated upon 10 minute incubation with AVL and can be removed from the Biosafety Cabinet at that point.

NEVER mix Qiagen reagents that contain guanidinium with bleach as it results in toxic fumes!

- After 10 min incubation, briefly spin down the AVL/Eluate mix
- Add 560 ul 100% ethanol
- Vortex for 15 sec
- Apply 630 µl to Epoch column in a 2ml collection tube
- Centrifuge 6,000xg for 1 minute.
- Decant the filtrate
- Load the remaining sample onto the column
- Centrifuge 6,000xg for 1 minute
- Add 500µl of AW1 and spin 1 minute at 6,000xg for 1 minute
- Add 500µl of AW2 and spin at max speed for 3 minutes
- Place the column in a fresh 2mL collection tube and spin again for 1 minute at max speed
- Place the column in a fresh, labeled 1.5ml tube and add 60µl of RNase free water to each column
- Incubate for 1 minute
- Spin at 6,000xg for 3 minutes
- Store samples on ice (if using immediately) or at -80°C for long term storage

Expected result

By this stage there is generally very little RNA, so quality control via nanodrop is not informative. If samples are frozen before processing then more RNA is recovered, presumably because freezing lyses cells and microbes and releases nucleic acids.

Note

Double volume of eluate can be loaded onto a single Epoch column to increase sensitivity. In this case, double volumes of ethanol and AVL must also be used.

Preparation for ddPCR

9 SARS-CoV-2 Positive Control

This reagent is used as a positive control for ddPCR detection of SARS-CoV-2. The variant listed below works well with the primer set described here, other variants may or may not be detected.

SARS-Related Coronavirus 2 Isolate USA-WA1/2020 Heat Inactivated **Sigma**Aldrich Catalog #NR-52286

QuickExtract DNA Extraction Solution Sigma Aldrich Catalog #QE09050

- Add 5µl Quick Extract DNA Extraction Solution to 10µl heat-inactivated virus
- Heat in thermocycler at 65°C for 15 min then 98°C for 2 min, then 4°C forever
- Add 85 μl H₂O
- Dilute to desired concentration, aliquot and store at -80°C

Expected result

The resulting solution will be at around 10^5 copies per μ l. We recommend further dilution to between 10 and 100 copies per μ l for use as a positive control in RT-ddPCR.

10 Primer / Probe Mixes

See Materials for Sequences.

Primer/probe mixes are made as described below, aliquoted, and stored at -20°C in the dark. After thawing on ice, aliquots are stored at 4°C.

100 μM Forward Primer 100 μl 100 μM Reverse Primer 100 μl 100 μM Probe 25 μl H_2O 1275 μl

One-Step Reverse Transcription Droplet Digital PCR

11 Reaction Set Up

- Thaw all required reagents on ice:
- > Reverse Transcriptase
- > 300mM DTT
- > Primer Probe Mixes
- > BioRad 1-step RT-ddPCR supermix for probes
- > Wastewater RNA
- > Positive controls

SARS-CoV-2 /BCoV Reactions

- Create a mastermix sufficient for all reactions adding reagents in the order shown
- Include 1-2 safety reactions to ensure there is enough mastermix i.e. if you have 10 reactions make a mastermix for 11-12 reactions

A	В
Reagent	Volume per reaction (µI)
Nuclease free H2O	0.9
SARS-CoV-2 N1 primer/probe mix	1.65
BCoV primer/probe mix	1.65
1-step supermix	5.5
300 mM DTT	1.1
Reverse Transcriptase	2.2
Template RNA	9.0
Final Volume	22.0

Table: Reaction mixture for RT-ddPCR.

- Pipette each template RNA into one well of an 8-tube strip.
- Add 13µl mastermix to each well
- Vortex briefly and spin to the bottom of the tube

F+ / PMMoV Reactions

- Dilute template RNA 1:100 for F+ and PMMoV reactions add 3 μ l RNA to 273 μ l H₂O
- Create a mastermix sufficient for all reactions adding reagents in the order shown
- Include 1-2 safety reactions to ensure there is enough mastermix i.e. if you have 10 reactions make a mastermix for 11-12 reactions

А	В
Reagent	Volume per reaction (µI)
Nuclease free H2O	0.9
F+ primer/probe mix	1.65
PMMoV primer/probe mix	1.65
1-step supermix	5.5
300 mM DTT	1.1
Reverse Transcriptase	2.2

A	В
Template RNA (1:100 diluted)	9.0
Final Volume	22.0

Table: Reaction mixture for RT-ddPCR.

- Pipette each diluted template RNA into one well of an 8-tube strip.
- Add 13µl mastermix to each well
- Add ddPCR buffer control for probes to any empty wells in the 8 tube strip
- Mix and spin to the bottom of the tube

It is important to include both positive and negative controls. The negative control should contain $\rm H_2O$ instead of RNA template.

12 Droplet Generation

Place a DG8 cartridge in the holder and click to close

- Using a multi-channel pipette, transfer 20 μl of each reaction to the "Sample" row
- Dispense 70 μl AutoDG* (droplet generator) oil for probes in the "Oil" row
- Seal with a clean gasket, insert into droplet generator and press Start
- Using a p200 gently transfer the droplets to a 96-well plate
- Repeat until all samples are in the 96-well plate
- Turn on the plate sealer.
- Place a foil seal on top of the plate. Seal at 180 °C for 5 sec
- * We find that Auto-DG oil reproducibly gives a higher droplet count than Manual-DG oil, even when using a manual droplet generator.

13 Thermocycling

Using a BioRad C1000 Touch deep-well device:

- 50°C for 1 hr (reverse transcription step)
- 95°C for 10 min
- [94°C for 30 sec; 55°C for 1 min] x 44;
- 98°C for 10 min
- 4°C forever

14 Droplet Reading

Follow the manufacturer's instructions for using the QX200 reader Allow 2.5 min per sample plus 10-15 minutes for set up



- Open the reader, insert the plate, lock in the metal grid on top and close the device
- Open the Quantasoft program
- For each well, select ABS (for Absolute Quantification), Ch1 FAM (SARS-CoV-2 or F+), Ch2 HEX (BCoV or PMMoV) and 1-step RT-ddPCR kit for probes.
- Click RUN

Data Analysis

15 **Setting Thresholds in Quantasoft Analysis Pro**

Follow the manufacturer's instructions for using the software

On the Droplets tab, select all wells. Verify that the droplet count is over 10,000 in all wells

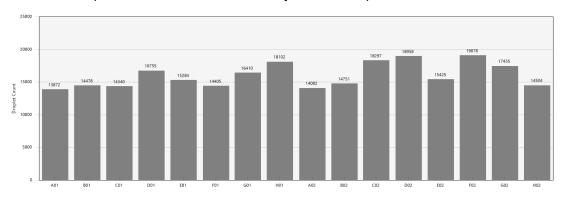


Figure: Droplet counts should be over 10,000. They generally fall within the 12,000-19,000 range.

- In the 2D Amplitude view, select all wells containing the SARS/BCoV probes
- Position the thresholds (pink +) such that they fall between positive and negative droplets

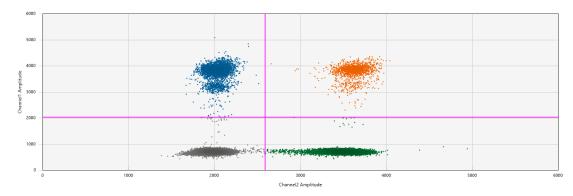


Figure: F+ or SARS-N1 positive droplets are blue, PMMoV or BCoV positive droplets are green, negative droplets are grey. Droplets that are positive for both F+ and PMMoV, or BCoV and SARS-N1 are orange.

 Check on the 1D Amplitude view that the threshold in both channels lies above all the droplets in the no template control.

 Set the thresholds for the F+/PMMoV wells in the same way (but not at the same time because the correct position will be different).

16 Exporting Data from Quantasoft Manager Pro to MS Excel

- On 1D or 2D Amplitude view, select all the wells
- On the Well Data panel menu select "Export to Excel"
- While you can select all the data, the values required for downstream calculations or reporting to the NWSS/CDC are:
- > Well
- > Sample
- > Target
- > Copies/20 ul
- > Accepted [# droplets]
- > PoissonConfMax
- > PoissonConfMin

17 Calculating SARS-CoV-2 Genome Copies per L

The following values are required to convert the copies per 20µl [C] into copies per L:

- > Volume of wastewater sample [**W**=40ml]
- > Total volume of eluate from innovaprep [**Ip** = ranges from 200-900 μl]
- > Volume of eluate used in RNA extraction [I_E = 140µI]
- > Total volume of RNA eluted after extraction [\mathbf{R}_{T} = 60 μ l]
- > Volume of RNA used in reaction [\mathbf{R}_{IJ} = 8.2 μ I]

$$Genomes/L = C(R_T/R_U)(1000/W)(I_P/I_E)$$

Using the protocol described above:

$$Genomes/L = 1.3066C * I_P$$

Expected result

The LOD for this assay is \sim 3-5 copies per reaction which represents \sim 3,000-5,000 copies per L The LOQ for this assay is \sim 15 copies per reaction which represents \sim 13,000-15,000 copies per L

The LOD and LOQ are specific to each sample because the eluate from the Innovaprep step is different for each sample.

18 Calculating Genome Copies per L for Endogenous Controls

The same calculation is used as above, but should be multiplied by 100 to take into account that the RNA template for the PMMoV and F+ reaction is diluted 100 fold.

Expected result

The endogenous controls reflect the amount of fecal matter in a sample. WWTPs tend to have a characteristic level of F+ and PMMoV which depends on the flow rate, population served etc. PMMoV falls in the 10^8-10^9 copies per L range.

F+ coliphage is less abundant, in the 10⁷-10⁸ copies per L range.

$$Genomes/L = C(R_T/R_U)(1000/W)(I_P/I_E)*100$$

Using the protocol described above:

$$Genomes/L = 130.66C * I_P$$

19 Determining BCoV Recovery

Calculate the copies of BCoV that were added at the start of the protocol:

 Use the copies per 20µl in the BCoV positive control reaction to determine how many copies of BCoV were added to each sample at the beginning.

$$BCoVcopies_{in} = BCoVcopies_{20\mu l} * BCoVvol_{WW} * dilution/BCoVvol_{rxn} \ BCoVcopies_{in} = BCoVcopies_{20\mu l} * 14.3\mu l * 10/8.2\mu l \ BCoVcopies_{in} = BCoVcopies_{20\mu l} * 17.439$$

■ Then calculate the number of copies of BCoV that would have been recovered if you had processed the entire 40ml of wastewater and express as a percentage of the copies that were added.

$$BCoVrecovery = 100*BCoVcopies_{20ul}*(R_T/R_U)/BCoVcopies_{in}*I_E/I_P$$

Expected result

BCoV recovery should fall in the 15-25% range

Recovery below 5% could indicate degradation of the RNA, degradation of the positive control spike, or inhibition of the reverse transcription step.

Apr 9 2024



20 Quality Controls and Troubleshooting

One possible use of the controls is for normalization. In our experience with Colorado WWTPs normalization to either exogenous (BCoV) or endogenous controls (PMMoV, F+) did not improve correlations with community infection rate or reduce variability.

The controls can also be used to detect failure of reactions due to inhibitors and to distinguish between inhibition and degradation:

Both the reverse transcription step and the PCR step can be inhibited by compounds that carry through the extraction step (either reagents such as phenol or guanidine, or contaminants such as humic acids). Inhibition of the RT step will generally result in fewer positive droplets (because there will be less cDNA produced) and confounds accurate quantification. Inhibition of the PCR step can result in reduced fluorescence amplitude i.e. poor separation of the positive and negative droplets, because each cycle will produce fewer copies of the cDNA template). This may not affect quantification if the separation remains adequate for threshold setting. Inhibition is not template specific - all targets in a reaction mix will be affected. Low BCoV recovery (<5%) can indicate inhibition of the RT step. Importantly, inhibition can often be abrogated by using less of the RNA containing the inhibitor. Therefore the PMMoV/F+ reaction will generally give good results even when inhibitors are present because it uses a 100 fold diluted RNA template. If BCoV recovery fails QC, it is helpful to rerun the reaction with half or quarter the amount of RNA template (assuming the SARS-N1 levels are high enough to still be detected).

In contrast, degradation of the RNA sample will result in fewer positive droplets for all four targets (i.e. Low BCOV recovery and low PMMoV/F+). This problem can only be remedied by repeating the extraction to make fresh RNA.

RNA quality cannot be easily evaluated prior to the ddPCR assay because even good quality RNA is generally very low abundance (too low for nanodrop), partially degraded and represents a mixture of nucleic acids from a variety of microbes, viruses and human cells (confounds Tapestation/Bioanalyzer). Fluorescent measurements (such as Qubit) may be informative but add time and expense.