

DEC 21, 2023

OPEN ACCESS



DOI:

dx.doi.org/10.17504/protocol s.io.4r3l22bz4l1y/v1

Protocol Citation: Ralitsa R Madsen 2023. Processing of fixed spheroids for TOBis barcoding, enzyme-free dissociation and antibody staining for CyTOF.

protocols.io

https://dx.doi.org/10.17504/protocols.io.4r3l22bz4l1y/v1

License: This is an open access protocol distributed under the terms of the Creative Commons
Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

Protocol status: Working We use this protocol and it's working

Created: Nov 25, 2023

Processing of fixed spheroids for TOBis barcoding, enzyme-free dissociation and antibody staining for CyTOF

Ralitsa R Madsen¹

¹UCL Cancer Institute, UCL, London



Ralitsa R Madsen MRC PPU, University of Dundee

ABSTRACT

This protocol is an adaptation and extension of the original work on single-cell signalling in organoids by the Tape Lab at UCL. In this adaptation, I have optimised a new approach for non-enzymatic single-cell dissociation of fixed, scaffold-free spheroids. The adapted protocol is also shorter and uses less material throughout.

Its development would not have been possible without the initial help provided by the Tape Lab in 2021-2022, particularly by Jahangir Sufi. For their original protocol, please refer to the following publication: Sufi, J., Qin, X., Rodriguez, F.C. *et al.* Multiplexed single-cell analysis of organoid signaling networks. *Nat Protoc* **16**, 4897–4918 (2021). https://doi.org/10.1038/s41596-021-00603-4

Oct 21 2023

Last Modified: Dec 21,

2023

PROTOCOL integer ID:

91419

Funders Acknowledgement:

Wellcome Trust Grant ID: 220464/Z/20/Z

CLOVES Syndrome Community Grant ID: NA

MATERIALS

Staining and acquisition reagents

- Ca²⁺- and Mq²⁺-free PBS from Sigma or Gibco (Thermo Fisher Scientific)
- Formaldehyde, 16 %, methanol-free, Ultra Pure (Polysciences, 18814-20)
- Triton-X100 (Sigma Aldrich, VWR, Fisher Scientific or equivalent)
- L-Glutathione (reduced; Sigma Aldrich #G6529-5G)
- Methanol (Sigma Aldrich, VWR, Fisher Scientific or equivalent)
- EDTA 0.5 M stock solution, pH = 8 (Sigma #03690-100ml)
- Cell-IDTM Intercalator-Ir (Fluidigm # 201192A)
- Maxpar Cell Staining Buffer (Fluidigm # 201068)
- Maxpar Water (Fluidigm # 201069)
- Maxpar PBS (Fluidigm, Cat# 201058)
- Maxpar Cell Acquisition Solution + CyTOF XT (Fluidigm #201244)
- Fix & Perm buffer (Fluidigm #201067)
- EQ Six Element Calibration Beads (Fluidigm, Cat# 201245)
- Experiment-dependent: rare earth metal-conjugated extracellular and intracellular target antibodies of interest

Special equipment

- Tissue Grinder Unit (Fast Forward Discoveries)
- Tissue Grinder Dissociation Tubes with 40 µm strainer (Fast Forward Discoveries)

Other

- Haemocytometer
- Eppendorf tubes
- FACS tubes with 0.35 µm cell strainer
- Pipette tips
- Stripettes
- Single- and multichannel pipettes
- Pipetboy
- Benchtop centrifuge
- Swinging bucket centrifuge

Spheroid collection

1h 10m

- 1 Generate spheroids in Elplasia plates (96-well or 24-well plate format) according to the following protocol: dx.doi.org/10.17504/protocols.io.3byl4bnrrvo5/v1
- 2 At the end of your experiment, add 16 % formaldehyde straight to the culture medium for a final dilution 5m

to 4 % (e.g., for 96-well plate - add \square 50 μ L 16 % formaldehyde to \square 150 μ L medium solution; for 24-well plate - add \square 500 μ L 16 % formaldehyde to \square 1.5 mL medium).

NB: I recommend using an electronic multichannel pipette at low dispensing speed.

- 1h
- 4 Using non-filter aspiration tips, remove the fix solution and add $200 \, \mu$ L PBS to each well in a 96-v 5m Elplasia plate or $200 \, \mu$ L to wells in a 24-well plate.


NB: if working with 24-well Elplasia plates, to avoid aspirating the spheroids, I recommend using non-filter, gel-loading tips.

4.1 It is possible to parafilm the plate at this point and store in the fridge for further processing. I have tested this for plates stored up to 4 months with successful results. Longer storage periods may also work but have not been tested by me or members of my lab.

TOBis barcoding

- 1d
- Depending on the number of samples to be multiplexed, thaw either the 35-plex or 126-plex barcodes 15m room temperature just before use. Mix and short-centrifuge to pull contents to the bottom of the tubes.
- 6 Remove the old PBS from the wells, and replenish with Δ 72 μL (96-well) or Δ 270 μL (24-well) 5m MaxPar PBS.
- 7 Add \pm 8 μ L (96-well) or \pm 30 μ L (24-well) of each barcode solution to the respective wells.

NB: make sure to have a pre-printed code assignment sheet as per the attached example.

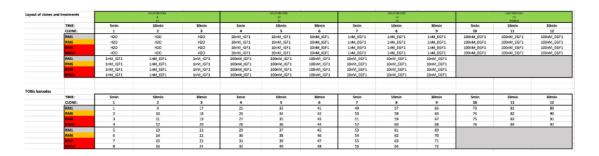

Well-barcode assignment example

8 Parafilm the plate and leave on a rocker Overnight at 4 °C

1d

Excess barcode neutralisation with glutathione (GSH)

1h 5m

- Once the incubation period is complete and just before you need it, make up 'x' ml of 2 mM Glutathio (GSH) in MaxPar CSB (Cell Staining Buffer), for example: 49.2 mg of GSH to 80 ml of CSB, dissolve at room temperature by shaking for 10-20 minutes.
 - NB: adjust the amount depending on the total number of plates being processed and total volume that will be needed
- Remove the barcode solution from each well, then wash with 200 µL (for 96-well plate) or 2 1 mL (for 24-well plate) of 2 mM GSH in CSB. Incubate for 10 minutes, then repeat the wash/incubation another 2 times for a total of 3 times.

NB: continue to use gel tips for aspiration of solutions in 24-well plate.

Next, wash with Z 200 µL (for 96-well plate) or Z 1 mL (for 24-well plate) of PBS. Incubate for 10 minutes, then repeat the wash/incubation once more for a total of 2 times.

NB: continue to use gel tips for aspiration of solutions in 24-well plate.

TissueGrinder single-cell dissociation of barcoded spheroids 59m

Pre-coat a TissueGrinder tube with A 10 mL CSB, making sure to invert the tube to cover all parts, including the blades. Reuse the coating solution to coat an additional 50 ml Falcon for spheroid collection.

- NB: for up to 126 conditions with unique barcoding, a single Tissue Grinder tube is needed for dissociation. Increase as needed for multiple independent experiments.
- Spin the spheroids down at 800 x g, Room temperature, 00:05:00, deceleration break = 5, (this is 8m very important, otherwise the spheroids will dislodge when the centrifuge stops).

NB: if the spheroids have not pelleted properly, remove as much of the supernatant as possible without touching the spheroids, then use **CSB pre-coated tips** to transfer the spheroids to **CSB pre-coated** 1.5 ml Eppendorf tubes (use several if necessary) and repeat the centrifugation using a benchtop centrifuge at 800 x g, Room temperature, 00:03:00

Alternative to spin: you can also let the spheroids settle under gravity. Leave unperturbed for 5 minutes.

- Remove as much of the supernatant as possible, then use a **CSB pre-coated tip** to resuspend the spheroids in MaxPar PBS supplemented with 2 mM EDTA for a final volume of approximately (taking into account the volume taken up by the spheroids).
- Keeping the TissueGrinder tube lid inverted on a flat surface and using a **CSB pre-coated tip**, transfer spheroid suspension into the lid, fitting it between the blades, then screw on the tube in inverted orientation.
- Proceed with dissociation using the standard TissueGrinder protocol "Harsh" (00:03:00).
- Spin down the TissueGrinder tube with single cells at

 800 x q, Room temperature, 00:05:00 , deceleration break = 5 .
- Without removing the supernatant, wash the blades/strainer with another 2 mL CSB to retrieve a cells that may have been left behind. Repeat centrifugation at

300 x g, Room temperature, 00:05:00 , deceleration break = 5

- Gently, remove the supernatant and use a **CSB pre-coated** tip to resuspend the pellet in followed by transfer of the suspension to a **CSB pre-coated** 1.5 ml Eppendorf tube.
- Count the cells using a haemocytometer (I have found that this is more reliable for fixed, dissociated cells compared to automated counters; if the suspension is dense, dilute a small aliquot up to 1:10 in PBS for counting).

Calculate how many cells will be needed for staining (up to \sim 4 million cells can be used per staining round).

NB: the dissociated cells can be stored in CSB for up to 4 weeks at [4 °C

Extracellular antibody staining


44m

Prepare the extracellular antibody staining cocktail. This requires individual antibody optimisation and titration. An example is provided below, with emphasis on the use of non-overlapping metals (also, checks against intracellular targets). The final volume should be 50 µL, with CSB as the diluent.

Antigen	Clone	Metal	Volume (µL) – 1X reaction
MUC1 (CD227)	16A	159-Tb	0.5 (0.53 ug)
ANPEP (CD13)	WM15	162-Dy	2 (0.61 ug)
CD49f	GoH3	170-Er	2 (0.64 ug)
Cell Staining Buffer		be .	45.5
TOTAL		e:	50

Remember extra metals: 191-ir, 193-ir

Example table for preparation of the extracellular antibody staining cocktail

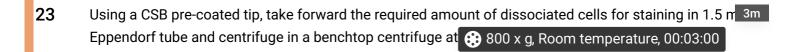

- 24 Discard the supernatant and proceed with addition of the 🔼 50 µL extracellular antibody cocktail.
- Incubate for 00:30:00 with continuous vortexing at low speed (use tape to secure the tube in ar upright position on the vortex).

Discard the supernatant.

5m

Permeabilisation

51m

- Resuspend the cell pellet in 200 µL of 0.1 % Triton X-100 (diluted in MaxPar PBS), gently vortex, 30m incubate at room temperature for 00:30:00 under low-speed vortexing (use tape to secure the tube in an upright position on the vortex).
- 27.1 In the meantime, prepare the intracellular antibody staining cocktail. This requires individual antibody optimisation and titration. An example is provided below, with emphasis on the use of non-overlapping metals (also, checks against intracellular targets). The final volume should be with CSB as the diluent.

Antigen	Clone	Metal	Volume (μL) – 1X
pHistone H3 [S28] (v6)	HTA28	089-Y	1.5 (1 ug)
Total S6	54D2	141-Pr	2 (0.32 ug)
cCaspase 3 [D175] (v4)	D3E9	142-Nd	1 (0.59 ug)
Geminin – v4	Polyclonal	143-Nd	1.50 (1.56 ug)
pRB [S807/811] - v7	J112-906	150-Nd	1 (0.70 ug)
pNDRG1 [T346]	D98G11	151-Eu	2 (0.56 ug)
pAKT [S473] (2)	M8961	155-Gd	16 (4 ug)
CK14	LL01	157-Gd	2 (0.44 ug)
Total AKT	C67E7	166-Er	2 (0.58 ug)
pERK1/2 [T202/Y204] (v3)	20A	167-Er	0.75 (0.09 ug)
pSMAD2 [S465/467] /pSMAD3 [S423/425] (v6)	D27F4	168-Er	1 (0.60 ug)
PLK1 (v3)	35-206	169-Tm	1.44 (0.23 ug)
pS6 [S240/S244]	D68F8	173-Yb	2 (0.46 ug)
Cyclin B1 (v7)	GNS-11	176-Yb	2 (1.72 ug)
CSB			13.8
			Total: 50

Example table for preparation of the intracellular antibody staining cocktail

Once the previous step has completed, add 1 mL CSB to the suspension and centrifuge in a benchtop centrifuge at 1500 x g, Room temperature, 00:05:00

Discard the supernatant and place the cells on ice 0°C for 00:01:00

30 Resuspend the cells in A 200 µL ice-cold 50% methanol (diluted in MaxPar PBS and stored at 10m f -20 °C until use), gently vortex and incubate for ♦ 00:10:00 at 31 5m Once the previous step has completed, add A 1 mL CSB to the suspension and centrifuge in a benchtop centrifuge at 1500 x g, Room temperature, 00:05:00 32 Discard the supernatant and repeat the previous step, taking care to discard all the supernatant afterwards (NB: residual supernatant can affect the subsequent intracellular antibody staining). 41m Intracellular antibody staining 33 1m Add the A 50 µL intracellular antibody cocktail to the cell pellet. Incubate for 00:30:00 with continuous vortexing at low speed (use tape to secure the tube in ar 30m 34 upright position on the vortex) 35 5m Once the previous step has completed, add A 1 mL , CSB to the suspension and centrifuge in a benchtop centrifuge at 1500 x g, Room temperature, 00:05:00 36 Discard the supernatant and repeat the previous step. Remove the supernatant. 36.1 During the centrifugation, prepare a fresh 1.6% formaldehyde solution with MaxPar PBS as the diluent.

1h 15m **Antibody fixation & Intercalation** 37 Gently vortex the cell pellet, then add A 200 µL fresh 1.6 % fresh formaldehyde solution, vortex ge 10m and incubate for (5) 00:10:00 at room temperature. NB: including this fix step increases debar coding efficiency and stained cells can be kept in the fridge for up to 2 weeks and no longer. 38 5m Once the previous step has completed, add A 1 mL , CSB to the suspension and centrifuge in a benchtop centrifuge at 2000 x g, Room temperature, 00:05:00 NB: the higher centrifugation speed is needed at this point as pelleting is not as efficient after the previous step. 38.1 During the centrifugation, dilute A 1 yl Intercalator (191-lr & 193-lr) in A 1 ml Fix & Perm Buffer. 39 Discard the supernatant and resuspend the cell pellet in 🔼 500 µL of diluted Intercalator, gently v 3d 1h and incubate for (5) 01:00:00 at room temperature or leave overnight in the fridge at 4C (close lid tightly!). NB: cells can be left at 4C in the Intercalator for up to 72:00:00 , however, staining intensity may decrease. 2h 13m Prepare for acquisition 40 Without removing the supernatant, add A 1 mL CSB to the cell-Intercalator suspension and centrifu 5m in a benchtop centrifuge at 😯 2000 x g, Room temperature, 00:05:00 41 Remove the supernatant, taking care not to dislodge the pellet (repeat centrifugation if that is the case 5m and 5m are 10m). then add 2x A 500 uL MaxPar CAS+ supplemented with EDTA for 2 mM final concentration (e.g.

42

to a FACS tube with a 0.35 µm cell strainer lid.

Д 4 µL of 0.5 M EDTA to Д 1 mL CAS+ solution); in rounds of 2x Д 500 µL transfer the solution

Thoroughly vortex the EQ6 Beads, then add 1:5 beads to cell suspension solution (e.g., A 250 µL

F(3m

beads to 🔼 1 mL cell suspension solution).

Proceed with sample acquisition on the XT, taking care to specify the correct combination of metals in the template.