

Sep 16, 2021

© iBlot2--CHEM 584


Ken Christensen¹

¹Brigham Young University





dx.doi.org/10.17504/protocols.io.bybdpsi6

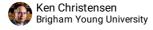

ABSTRACT

Transferring your proteins from your SDS-PAGE gel to a nitrocellulose membrane for western blot is quick and straightforward.

DOI

dx.doi.org/10.17504/protocols.io.bybdpsi6

PROTOCOL CITATION

Ken Christensen 2021. iBlot2--CHEM 584. **protocols.io** https://dx.doi.org/10.17504/protocols.io.bybdpsi6

LICENSE

This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

CREATED

Sep 16, 2021

LAST MODIFIED

Sep 16, 2021

PROTOCOL INTEGER ID

53317

GUIDELINES

You should not touch your gel or membrane without gloves to avoid transferring protein from your fingers to your gel or blot.

MATERIALS TEXT

iBlot2 stack

iBlot2 transfer instrument

SAFETY WARNINGS

Standard lab safety guidelines should be followed.

BEFORE STARTING

Watch the video from the protocol.

iBlot2 Transfer

1 Watch the video about setting up and running your transfer to nitrocellulose at the following link: https://videos.thermofisher.com/detail/video/6059971760001/how-to-perform-a-western-blot-dry-transfer-using-the-invitrogen-iblot-2-dry-blotting-system

Citation: Ken Christensen (09/16/2021). iBlot2-CHEM 584. https://dx.doi.org/10.17504/protocols.io.bybdpsi6

