

OCT 12, 2023

## Nanopore Sequencing with Flongle Flow Cells

### NUS iGEM1

<sup>1</sup>National University of Singapore

### NUS iGEM 2023



### **NUS IGEM**

National University of Singapore

### **ABSTRACT**

The 2023 NUS-Singapore iGEM Team followed this protocol to sequence their STAR oligo variants. The original protocol was released by Oxford Nanopore Technologies, but due to the use of a new type of flow cell in the experiment, some minor modifications to the steps were made to tailor it to our project.

### PROTOCOL MATERIALS

# NEB Blunt/TA Ligase Master Mix Contributed by users Catalog #M0367

Step 21

Quick T4 DNA Ligase New England
Biolabs Catalog #E7180S

In 2 steps

NEBNext Ultra II End Repair/dA-Tailing Module - 24 rxns New England Biolabs Catalog #E7546S

Step 2

NEBNext Ultra II End Prep Enzyme Mix New England Biolabs Catalog #E7646

Step 2

NEBNext Ultra II End Prep Reaction Buffer New England Biolabs Catalog #E7647

Step 2

X AMPure XP Beads Contributed by users

In <u>7 steps</u>

### SAFETY WARNINGS

Proper lab PPE must be worn at all times.

## OPEN BACCESS



#### DOI:

dx.doi.org/10.17504/protocol s.io.j8nlko3mwv5r/v1

**Protocol Citation:** NUS iGEM 2023. Nanopore Sequencing with Flongle Flow Cells. **protocols.io** https://dx.doi.org/10.17504/protocols.io.j8nlko3mwv5r/v1

### **MANUSCRIPT CITATION:**

Oxford Nanopore
Technologies. (n.d.). Ligation
sequencing amplicons Native Barcoding Kit 24 V14
(SQK-NBD114.24). Retrieved
October 12, 2023, from
https://community.nanoporet
ech.com/docs/prepare/library
\_prep\_protocols/ligationsequencing-ampliconsnative-barcoding-v14-sqknbd11424/v/nba\_9168\_v114\_revk\_15
sep2022

License: This is an open access protocol distributed under the terms of the Creative Commons
Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

**Protocol status:** Working We use this protocol and it's

working


Created: Oct 08, 2023

Last Modified: Oct 12, 2023

### **PROTOCOL** integer ID:

88973

**Keywords:** Nanopore, Flongle, Flongle Flow Cells, Sequencing, Oligo Variants, Variation, Mutagenesis

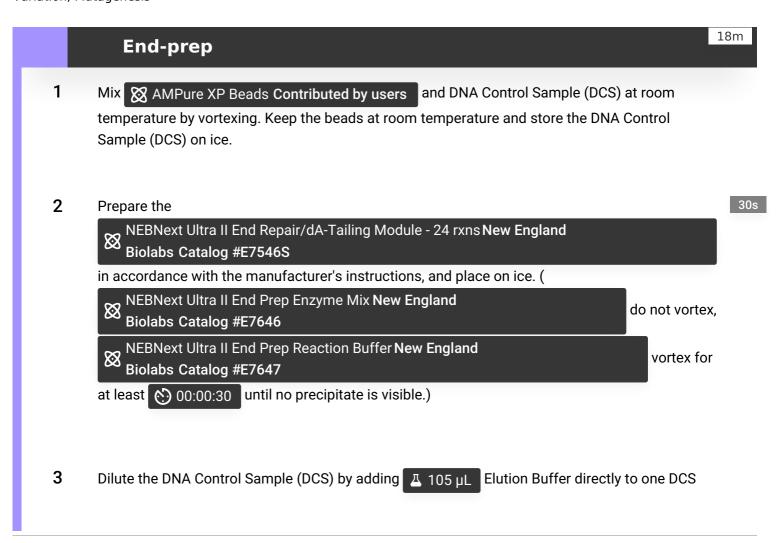

- Combine the following components per tube/well:

  Between each addition, pipette mix 10 20 times.

  Recommend to prepare a master mix and add 2.5 µL to each well.

Item	Volume
200 fmol (130 ng for 1 kb amplicons) amplicon DNA	11.5µL
Diluted DNA Control Sample (DCS)	1μL
Ultra II End-prep Reaction Buffer	1.75µL
Ultra II End-prep Enzyme Mix	0.75μL

- 7 Ensure the components are thoroughly mixed by pipetting and spin down in a centrifuge.
- Using a thermal cycler, incubate at 20 °C for 00:05:00 and 65 °C for 00:05:00.

**9** Transfer each sample into a clean 1.5 ml Eppendorf DNA LoBind tube.

Oct 12 2023

10m

3

- Resuspend AMPure XP Beads Contributed by users by vortexing.
- 12 Incubate on a Hula mixer (rotator mixer) for 00:05:00 at room temperature.

- Prepare Δ 500 μL of fresh 80% ethanol in nuclease-free water.
- Spin down the samples and pellet the beads on a magnet until the eluate is clear and colourless. Keep the tubes on the magnet and pipette off the supernatant.
- 15 Keep the tube on the magnet and wash the beads with Δ 200 μL of freshly prepared 80% ethanol without disturbing the pellet. Remove the ethanol using a pipette and discard.
- **16** Repeat step 15.
- Briefly spin down and place the tubes back on the magnet for the beads to pellet. Pipette off any residual ethanol. Allow to dry for 00:00:30, but do not dry the pellets to the point of cracking.
- Remove the tubes from the magnetic rack and resuspend the pellet in 10  $\mu$ l nuclease-free water.

30s

Spin down and incubate for 00:02:00 at room temperature.

- 19 Pellet the beads on a magnet until the eluate is clear and colourless.

## **Native Barcode Ligation**

47m 40s

Prepare NEB Blunt/TA Ligase Master Mix Contributed by users Catalog #M0367

according to the manufacturer's instructions, and place on ice.

- Thaw the EDTA at room temperature and mix by vortexing. Then spin down and place on ice.
- Thaw the Native Barcodes (NB01-24) required for the number of samples at room temperature. Individually mix the barcodes by pipetting, spin down, and place them on ice.
- Select a unique barcode for each sample to be run together on the same flow cell. Up to 24 samples can be barcoded and combined in one experiment. (only use one barcode per sample)
- In clean 0.2 ml PCR-tubes or a 96-well plate, add the reagents in the following order per well:

Item	Volume
End-prepped DNA	7.5µL
Native Barcode (NB01-24)	2.5µL

Item	Volume
Blunt/TA Ligase Master Mix	10μL

- 26 Ensure the reaction is thoroughly mixed by gently pipetting and spin down briefly.
- 27 Incubate for 00:20:00 at room temperature.

20m

- 29 Pool all the barcoded samples in a 1.5 ml Eppendorf DNA LoBind tube; 🔼 22 µL per sample
- Resuspend AMPure XP Beads Contributed by users by vortexing.
- Add  $\triangle$  9 µL  $\bigotimes$  AMPure XP Beads Contributed by users per sample to the pooled reaction, and mix by pipetting for a 0.4X clean.
- 32 Incubate on a Hula mixer (rotator mixer) for 00:10:00 at room temperature.

10m

Prepare 2 mL of fresh 80% ethanol in nuclease-free water.

- Spin down the sample and pellet on a magnet for 00:05:00. Keep the plate on the magnetic rack until the eluate is clear and colourless, and pipette off the supernatant.
- Keep the tube on the magnetic rack and wash the beads with Δ 700 μL of freshly prepared 80% ethanol without disturbing the pellet. Remove the ethanol using a pipette and discard.
- 36 Repeat step 35.
- Spin down and place the tube back on the magnetic rack. Pipette off any residual ethanol. Allow the pellet to dry for 00:00:30, but do not dry the pellet to the point of cracking.

5m

- Incubate for 00:10:00 at 37 °C. Every 00:02:00, agitate the sample by gently flicking for 00:00:10 to encourage DNA elution.
- Pellet the beads on a magnetic rack until the eluate is clear and colourless. Remove and retain  $\pm$  35  $\mu$ L of eluate into a clean 1.5 ml Eppendorf DNA LoBind tube.

## **Adaptor Ligation and Clean-up**

43m 10s

Prepare the NEBNext Quick Ligation Reaction Module according to the manufacturer's instructions, and place on ice. (Do NOT vortex

Ø	Quick T4 DNA Ligase <b>New England</b>	
	Quick T4 DNA Ligase <b>New England Biolabs Catalog #E7180S</b>	ľ

42 Spin down the Native Adapter (NA) and



, pipette mix and place on ice.

- Thaw Elution Buffer at room temperature and mix by vortexing. Then spin down and place on ice.
- Thaw either Long Fragment Buffer (LFB) >3kb or Short Fragment Buffer (SFB) <3kb at room temperature and mix by vortexing. Then spin down and place on ice.

45 In a 1.5 ml Eppendorf LoBind tube, mix in the following order:

Item	Volume
Pooled barcoded sample	30μL
Native Adapter (NA)	5μL
NEBNext Quick Ligation Reaction Buffer(5X)	10μL
Quick T4 DNA Ligase	5μL

- 46 Ensure the reaction is thoroughly mixed by gently pipetting and spin down briefly.
- 47 Incubate the reaction for 00:20:00 at room temperature.

20m

Resuspend AMPure XP Beads Contributed by users by vortexing.

- Add  $\Delta$  20  $\mu L$  of resuspended  $\boxtimes$  AMPure XP Beads Contributed by users to the reaction and mix by pipetting.
- Incubate on a Hula mixer (rotator mixer) for 00:10:00 at room temperature.

10m

- 51 Spin down the sample and pellet on the magnetic rack. Keep the tube on the magnet and pipette off the supernatant.
- **53** Repeat Step 52.
- 54 Spin down and place the tube back on the magnet. Pipette off any residual supernatant.
- Remove the tube from the magnetic rack and resuspend pellet in A 7 µL Elution Buffer (EB).
- Spin down and incubate for 00:10:00 at 37 °C. Every 00:02:00, agitate the sample by gently flicking for 00:00:10 to encourage DNA elution.

12m 10s



- 58 Remove and retain A 7 µL of EB containing the DNA library into a clean 1.5 ml Eppendorf SNA LoBind tubes.
- 59 Quantify  $\bot$  1  $\mu$ L of eluted sample using Nanodrop.
- 60 Make up the library to  $\mathbb{Z}_{5\mu L}$  at 5-10 fmol.

### **Loading the Flongle Flow Cell**

- 61 Thaw the Sequencing Buffer(SB), Library Beads(LIB), Flow Cell Tether(FCT) and one tube of Flow Cell Flush(FCF) at room temperature before mixing by vortexing. Then spin down and store on ice.
- 62 In a fresh 1.5 ml Eppendorf DNA LoBind tube, mix 🔼 117 µL of Flow Cell Flush(FCF) with  $\Lambda$  3  $\mu$ L of Flow Cell Tether(FCT) and mix by pipetting.
- 63 Place the Flongle adaptor into the MinION or one of the five GridION positions.
- 64 Place the flow cell into Flonge adapter, and press the flow cell down until hearing a click.

- Peel back the seal tab from the Flongle flow cell, up to a point where the sample port is exposed. Lift up the seal tab, pull the seal tab to open access to the sample port, then hold the seal tab open by using adhesive on the tab to stick to the MinION Mk1B lid.
- To prime the flow cell with the mix of Flow Cell Flush(FSF) and Flow Cell Tether(FCT) that was prepared earlier, ensure that there is no air gap in the sample port or the pipette tip.

  Place the P200 pipette tip inside the sample port and slowly dispense the priming fluid into the Flonge flow cell by slowly pipetting down. Recommend twisting the pipette plunger down to avoid flushing the flow cell too vigorously.
- Vortex the vial of Library Beads(LIB). Immediately prepare the sequencing Mix in a fresh 1.5 ml Eppendorf DNA LoBind tube for loading the Flongle as follows:

Item	Volume
Sequencing Buffer(SB)	15μL
Library Beads(LIB) mixed immediately before use	10μL
DNA Library	5μL

To add the sequencing mix to the flow cell, ensure that there is no air gap in the sample port or the

pipette tip.

Place the P200 tip inside the sample port and slowly dispense the sequencing mix into the flow cell by slowly pipetting down. Recommend twisting the pipette plunger down to avoid flushing the flow cell too vigorously.

- Seal the Flonge flow cell using the adhesive on the seal tab: stick the transparent adhesive tape to the sample port, replace the top(wheel icon section) of the seal tab to its original position.
- **70** Replace the sequencing platform lid and start sequencing.