

•



Version 1 ▼

© Concentrate viruses from sewage using HA filters V.1

Adélaïde Roguet¹


¹UWM

In Development

This protocol is published without a DOI.

Nov 07, 2020

mclellan lab

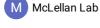

PROTOCOL CITATION

Adélaïde Roguet 2020. Concentrate viruses from sewage using HA filters. protocols.io https://protocols.io/view/concentrate-viruses-from-sewage-using-ha-filters-bmmyk47w

LICENSE

This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

CREATED

Sep 22, 2020

LAST MODIFIED

Nov 07, 2020

PROTOCOL INTEGER ID

42392

GUIDELINES

Each sewage samples is processed in triplicate: two technical duplicates and one archive.

MATERIALS TEXT

Bovine coronavirus solution prepared according to

⊠ Bovine

coronavirus Zoetis Catalog #CALF-GUARD

⊠ Cellulose esters filters 0.8 μm 47 mm diameter **Emd**

Millipore Catalog #AAWP04700

Kit Qiagen Catalog #26000-50

☑ ZR BashingBead Lysis Tubes (2mm) Zymo

Research Catalog #S6003-50

SAFETY WARNINGS

The filtration has to be performed in a biosafety cabinet to avoid any contact with raw sewage.

BEFORE STARTING

Before starting the filtration:

1. Clean the working area and all equipments: wipe down with 10% bleach and let stand for 10 min, then rinse with water and dry. Next, wipe down using 70% ethanol and let dry.

- 2. Verify that the carboy to receive filtration waste is not full or near to be full.
- 3. Keep forceps sterile by placing them in a small beaker containing 70% ethanol.
- 4. Prepare an ice bucket.
- 5. Thaw the bovine coronavirus (BCoV) recovery control on ice. Do not thaw the same aliquot more than twice.
- 6. Add MgCl₂ stock solution in 50-mL tubes for a final concentration of 25 mM.
- 7. Warm Solution PM1 (provided in RNeasy PowerMicrobiome kit) at 55° C for at least 10 min prior to dissolve precipitates. Shake to mix before transferring 650 μ L into each 2-mL bead beating tubes (3 tubes needed per sample).

When work is completed, remove equipments and supplies from the cabinet. Wipe the work area with 10% bleach, let stand for 10 min, rinse with water, then with 70% ethanol. Finally, turn on the UV lamp for 15 minutes. Empty the carboy.

tration of the sewage samples (in the biosafety cabinet)			
1	Take the sample out from the refrigerator.		
2	Homogenize the sample thoroughly, avoiding foaming.		
3	Use a pipette controller, transfer 25 mL of the sample into a 50-mL tube (where MgCl ₂ has been previously added [M]25 Milimolar (mM) final concentration). Repeat for each replicate. Save the rest of sample at 4°C for archive or until decontamination and disposal.		
4	Spike in each replicate 5 μ L of Bovine Coronavirus recovery control (~100,000 cp/uL), prepared as Bovine coronavirus solution prepared according to		
5	Put the 50-mL tubes on ice until further processing.		
6	Filter the samples in the 50-mL tubes:		
	6.1 Rinse the clean filtration funnel with sterile deionized water.		
	Make sure some water is still on the porous plate.		

6.2

⊠ Cellulose esters filters 0.8 µm 47 mm diameter Emd

Millipore Catalog #AAWP04700

filter




Make sure the filter gets wet due to the residual water on the porous plate.

- $6.3 \quad \text{Homogenize the sample in the 50-mL tube. Avoid as much as possible the liquid to touch the lid.}$
- Filter the content in the 50-mL tube through a 0.80 μ m 47mm cellulose ester filter at low vacuum pressure (~50 mmHg VAC).
- 6.5

As soon as the filtration is complete, transfer the filter to a 2-mL ZR BashingBead Lysis Tubes containing 650 μ L of PM1 buffer solution (previously added).

Kit Qiagen Catalog #26000-50



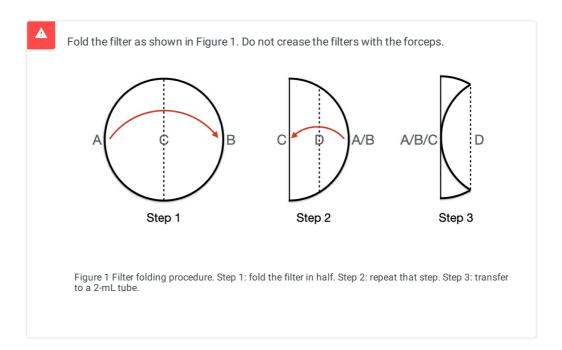

Research Catalog #S6003-50

- 6.6 Put the 2-mL tubes on ice until further processing.
- 6.7 Repeat Steps 6 for the other replicates. go to step #6.1
- 7 Store filters at -20°C until all samples are processed

8

Store filters at -80°C for a minimum of 2h or overnight prior to the nucleic acid extraction. Archive filters at -80°C.

Nucleic acid extraction

9



9.1 For **HA filter** extractions, Add $6.5 \,\mu\text{L}$ of beta-Mercaptoethanol to each of the 2-mL tubes.


For **direct extraction** of raw sewage, homogenize the sewage sample (avoid foaming) and take 150 μ L into a 2-mL tube (provided in the RNeasy PowerMicrobiome kit). Add 4 μ L of beta-Mercaptoethanol and 400 μ L of Solution PM1. Also add 5 μ L of 1:10 diluted BCoV solution.



Add the beta-Mercaptoethanol while the HA sample still frozen. Let thaw at room temperature.

9.2

If you extract from **HA filters**, place the 2-mL tubes in the bead beater. Skip step 2 if you do **direct extraction**.

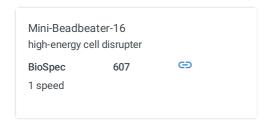

9.2.1 Bead beat for **© 00:02:30**

2m



Start the head heating when the heads start to be loose in the tubes


5m

9.2.2 Cooldown the samples on ice for \bigcirc **00:05:00**.

9.2.3 Repeat Steps 9.1 and 9.2 once 🐧 .

- 9.3 Centrifuge at maximum speed for 1 min at room temperature. **(3)150000 rpm, Room temperature**, **00:01:00**
- 9.4 To extract from **HA filters**, transfer 450 μL of supernatant to a Collection Tube (provided in the RNeasy PowerMicrobiome kit). Transfer all supernatant for **direct extraction**.
- 9.5 To extract from **HA filters**, add 150 μ L of Solution IRS and vortex briefly to mix. For **direct extraction**, add 100 μ L of Solution IRS. Incubate at 2–8°C for 5 min.
- 9.6 Centrifuge at maximum speed for 1 min **150000 rpm, Room temperature**, **00:01:00**. Avoiding the pellet and transfer the supernatant to a new Collection Tube.
- 9.7 Add 650 μ L each of Solution PM3 and Solution PM4. Vortex briefly to mix.
- 9.8 Load 650 μL of the mixture into an MB Spin Column.
- 9.9 Centrifuge at max speed for 1 min **3150000 rpm, Room temperature**, **00:01:00**. Discard the flow-through and repeat until all the mixture has been loaded onto the MB Spin Column.
- 9.10 Shake to mix Solution PM5 and add 650 μL to the MB Spin Column.
- 9.11 Centrifuge at max speed for 1 min **3150000 rpm, Room temperature, 00:01:00**.
- 9.12 Discard flow-through. Add 600 μL of Solution PM4.
- 9.13 Centrifuge at max speed for 1 min **3150000 rpm, Room temperature**, **00:01:00**.

- 9.14 Discard flow-through and centrifuge filter at max speed for an additional 2 min **3.150000 rpm, Room temperature , 00:02:00** .
- 9.15 Place the MB Spin Column in a clean 2-ml Collection Tube (provided in the RNeasy PowerMicrobiome kit).
- 9.16 Add 60 μL of RNase-Free Water (warmed to 55°C) to the center of the MB Spin Column membrane. Incubate at room temperature for at least 1 min © **00:01:00** .
- 9.17 Centrifuge at max speed for 1 min **3150000 rpm, Room temperature**, **00:01:00**. Discard the MB Spin Column.

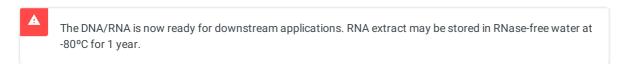

Quantification

10



10.1 When all reagents are thawed on ice, vortex Supermix, Reverse transcriptase and DTT throughly for 30 seconds. Vortex to mix primers and probes stocks.

10.2 Prepare the reaction matrix (for one well, beside sample RNA) according to the table below. Prepare Use a low-binding tube of appropriate volume to mix all the components according to the reaction numbers. Always include extra wells when setting up reaction to avoid potential volume shortage caused by pipetting.

Component	Volume per reaction, uL	Final
		concentra
		tion
Supermix	5.5	1x
Reverse transcriptase	2.2	20 U/uL
300 mM DTT	1.1	15 mM
Primer mix (forwad + reverse)	1.1	900 nM
Probe	1.1	250 nM
RNase-free water*	5.5	/
Total	16.5	/

^{*} Note: Water volume can be replaced accordingly by another assay (e.g., duplex assay), or another RNA template (e.g., inhibition test).