

6



© ONT Flongle Flowcell Loading with Q20+ (V12) Chemistry V.3

In 3 collections

Stephen Douglas Russell¹

¹The Hoosier Mushroom Society

1 Works for me Share

dx.doi.org/10.17504/protocols.io.ewov1nm5pgr2/v3

The Hoosier Mushroom Society

Stephen Douglas Russell

ABSTRACT

Overview: This protocol describes the steps used to load a Flongle flowcell utilizing the Q20+ (V12) Ligation Sequencing Kit from ONT.

This protocol has been tested with Flongle R9.4.1 flowcells.

Time required: 10 minutes

DOI

dx.doi.org/10.17504/protocols.io.ewov1nm5pgr2/v3

PROTOCOL CITATION

Stephen Douglas Russell 2022. ONT Flongle Flowcell Loading with Q20+ (V12) Chemistry. **protocols.io**

https://protocols.io/view/ont-flongle-flowcell-loading-with-q20-v12-chemistr-cghqtt5w Version created by Stephen Douglas Russell

COLLECTIONS (i)

- ONT DNA Barcoding Fungal Amplicons w/ MinION & Dongle
- ONT DNA Barcoding Fungal Amplicons w/ MinION & Dongle
- ONT DNA Barcoding Fungal Amplicons w/ MinION & Dongle

LICENSE

This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

CREATED

Sep 13, 2022



1

Citation: Stephen Douglas Russell ONT Flongle Flowcell Loading with Q20+ (V12) Chemistry https://dx.doi.org/10.17504/protocols.io.ewov1nm5pqr2/v3

LAST MODIFIED

Sep 13, 2022

PROTOCOL INTEGER ID

69904

PARENT PROTOCOLS

Part of collection

ONT DNA Barcoding Fungal Amplicons w/ MinION & DNA Barcoding Fungal

MATERIALS TEXT

Reagents and Consumables

Technologies Catalog #SQK-LSK112 Step 4

⊠ Flongle Sequencing Expansion **Oxford Nanopore**

Technologies Catalog #EXP-FSE001 Step 4

100-200uL pipette tips10uL pipette tips1.5uL Eppendorf LoBind tubes

Equipment

10uL pipette 100uL pipette Mini centrifuge

Flongle Starter Pack: \$1,460.00 MinION Mk1B Starter Pack: \$1000.00

Software

MinKNOW

Starting out

1 Before starting, watch the first 13 minutes of this video: https://vimeo.com/651243660


It covers all of the vital aspects of this protocol.

2 Begin by restarting your computer. This will help to ensure there are no performance issues during your run or other programs running that may conflict with the software.

Attach the USB cable from the computer to the MinION device. Place the Flongle module with the white configuration cell into the MinION device. The top portion of the Flongle should slide underneath the clip and it should gently sit on the top of the device.



Open MinKNOW on the computer and perform a hardware check on the configuration cell. (Start -> Hardware Check) The hardware check should pass. You can validate this on the "System Messages" tab.

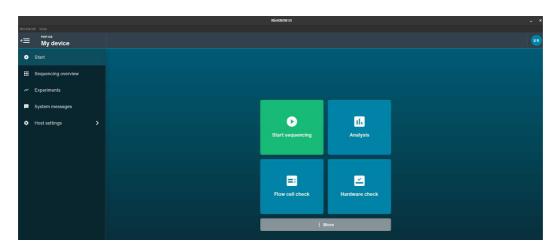

The primary screen within MinKNOW.

Wearing gloves, remove a flowcell from the fridge and remove the outer packaging. Remove the configuration cell and place the flowcell into the Flongle device on the MinION. Be sure not to touch any of the electrodes on the back of the cell or the contact pads on the top of the Flongle. It should snap into place with a click. Place the configuration module into the empty pouch from the Flongle until the run is completed. Run a flowcell check within the MinKNOW software. (Start -> Flow cell check) There should be at least 60 useable pores.

My first flowcell test had 87 useable pores. Future tests up to 6 weeks after receipt still passed with 70+ useable pores.



The Sequencing Overview screen should show the number of pores that are active and ready for sequencing.

Prepare the loading solution

4 Thaw the Sequencing Buffer II (SBII), Loading Beads (LBII), Flush Buffer (FB), and Flush Tether (FLT) at room temperature.

FLT is found in the

Technologies Catalog #SQK-LSK112

All of the remainder are in the

Technologies Catalog #EXP-FSE001

Original full Ligation Sequencing Kit (Q20+) protocol can be found here:

@ amplicons-by-ligation-sqk-lsk112-ACDE_9142_v112_revE_01Dec2021-minion.pdf

- 5 Mix the Sequencing Buffer II (SBII), Flush Buffer (FB) and Flush Tether (FLT) tubes by vortexing and spin down at room temperature.
- 6 In a 1.5uL tube, mix 117uL of the Flush Buffer (FB) with 3uL of the Flush Tether (FLT) and mix by pipetting.
- Peel back the seal tab from the Flongle flow cell to the point where the sample port is exposed and hold the seal tab open by using the adhesive on the tab to stick it to the lid of the MinION.

Video of the process: https://youtu.be/zlkTfRf8g7l (2 minutes)

- 8 Using a 200uL pipette, bring up the FB/FLT mix into the tip. This is your priming solution.
 - VERY IMPORTANT: there should be NO air bubble in the tip of the pipette. Introducing any air bubbles will destroy any nanopores that the air bubble contacts.
 - If there is any air in the tip, turn the dial of the pipette clockwise (towards 0) to move the air bubble out of the tip.
- 9 Place the tip of the pipette securely into the sample port. Turn the dial of the pipette clockwise a time or two and you should see a small amount of yellow-green fluid come into the tip. This helps to ensure there are no air bubbles present.
 - Once confirmed, slowly dispense the priming fluid into the flowcell by slowly turning the dial of the pipette clockwise (towards 0). Do not push down on the plunger to eject the fluid.

You should be able to see the storage liquid entering the waste port as you enter it into the flowcell.

STOP LOADING before the liquid in the tip reaches the bottom. You do not want to push any air into the flowcell

Prepare Library

10 In a new 1.5uL tube, add the reagents below in the order they are listed.

Note: The LBII settles quickly, so mix it thoroughly before removing it from the tube.

Reagent	Volume
Sequencing Buffer II (SBII)	13.5uL
Loading Beads II (LBII)	11uL
3 - 20 fMol of the DNA library	5.5uL
Total	30uL

Mix the solution by gently pipetting up and down.

11 Bring the entire volume into the tip of a pipette.

VERY IMPORTANT: Once again make sure there are no air gaps.

Insert the tip of the pipette into the sample port and slowly dispense the library into the flowcell by slowly turning the dial of the pipette clockwise (towards 0). Do not push down on the plunger to eject the fluid.

STOP LOADING before the liquid in the tip reaches the bottom. You do not want to push any air into the flowcell

- 12 Seal the Flongle cell be folding the tab back down, using the adhesive on the seal tab. Ensure that the wheel section covers the loading port and the two dots cover each waste port. Gently press over the tab to ensure a good seal. (Do not do a wiping press, just an up-and-down press.)
- 13 Close the MinION lid and start your sequencing run.

Start -> Start Sequencing

Run Name: Ex - SeventhRun Flow cell type: FLO-FLG001

Step 1: Positions

Flow cell ID: Ex - ONT07 Sample ID: Ex - SDR007 Continue to kit selection >



Step 1: Positions



Step 2: Kit

Sample Type: DNA PCR-free: PCR Multiplexing: Yes These three options just filter the kits to select from.

Select: Ligation Sequencing Kit (LSK-110) Continue to run options >



Step 2: Kit

Step 3: Run options

(All should be at defaults) Run Duration: 24 hours

Minimun read length: 200 base pairs

Active Channel Selection: On

Time between pore scans: 1.5 hours

Reserve pores: off Continue to analysis >



Step 3: Run options

Step 4: Analysis Basecalling: Off



Step 4: Analysis

Step 5: Output

(All should be defaults)

Output location: /var/lib/minknow/data/.

Output format: fast5 Output bulk file: on

Continue >





Step 5: Output

