



Dec 17, 2020

# Lloviu cuevavirus sequencing protocol

Forked from nCoV-2019 sequencing protocol v2 (Gunlt)

Gábor Tóth<sup>1</sup>, Gabor Kemenesi<sup>1</sup>

<sup>1</sup>National Laboratory of Virology (Hungary)

*In Development* This pr

This protocol is published without a DOI.

Szentagothai Research Centre Virology

Gábor Tóth

ABSTRACT

ARTIC-like amplicon sequencing protocol for MinION for Lloviu cuevavirus

The increasing risk of emerging infectious diseases (EIDs) for humanity is a constantly growing problem. Next-generation sequencing rapidly increased the discovery of distant filovirus species worldwide. Lloviu virus is currently the only known member of Filoviridae family found in Europe. We prepared and tested this protocol on Hungarian Lloviu positive native samples found in our laboratory. We are aware of the extreme rarity of LLOV, we provide this protocol to facilitate research attempts and widen the possibilities of future studies.

Basic literature of the virus:

https://www.ncbi.nlm.nih.gov/pmc/articles/PMC3197594/https://www.ncbi.nlm.nih.gov/pmc/articles/PMC5906664/https://www.ncbi.nlm.nih.gov/pmc/articles/PMC6521100/https://en.wikipedia.org/wiki/Lloviu\_virus

PROTOCOL CITATION

Gábor Tóth, Gabor Kemenesi 2020. Lloviu cuevavirus sequencing protocol. **protocols.io** https://protocols.io/view/lloviu-cuevavirus-sequencing-protocol-bmz3k78n

FORK NOTE

FORK FROM

Forked from nCoV-2019 sequencing protocol v2 (GunIt), Josh Quick

LICENSE

This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

CREATED

Oct 05, 2020

LAST MODIFIED

Dec 17, 2020

PROTOCOL INTEGER ID

42779

#### MATERIALS TEXT

Primers 25nm, desalted, ideally LabReady formulation from IDT nCoV-2019/V2

Extraction kits; Zymo Quick-RNA Viral Kit Zymo R1034 or QIAamp Viral RNA Mini Qiagen 52904 SuperScript IV (50 rxn) Thermo 18090050 dNTP mix (10 mM each) Thermo R0192 Random Hexamers (50 µM) Thermo N8080127 RNase OUT (125 rxn) Thermo 10777019 Q5 Hot Start HF Polymerase NFB M0493S NEBNext Ultra II End-prep NFB F7546S NEB NEBNext Quick Ligation Module E6056S Native Barcoding Expansion Kit 1-12 Nanopore EXP-NBD104 Native Barcoding Expansion Kit 13-24 Nanopore EXP-NBD114 Sequencing Auxiliary Vials Nanopore EXP-AUX001 Short Fragment Buffer Expansion kit Nanopore EXP-SFB001 Flow Cell Priming Kit Nanopore EXP-FLP002 R9.4.1 flow cells Nanopore FLO-MIN106

#### ABSTRACT

ARTIC-like amplicon sequencing protocol for MinION for Lloviu cuevavirus

The increasing risk of emerging infectious diseases (EIDs) for humanity is a constantly growing problem. Next-generation sequencing rapidly increased the discovery of distant filovirus species worldwide. Lloviu virus is currently the only known member of Filoviridae family found in Europe. We prepared and tested this protocol on Hungarian Lloviu positive native samples found in our laboratory. We are aware of the extreme rarity of LLOV, we provide this protocol to facilitate research attempts and widen the possibilities of future studies.

Basic literature of the virus:

https://www.ncbi.nlm.nih.gov/pmc/articles/PMC3197594/

https://www.ncbi.nlm.nih.gov/pmc/articles/PMC5906664/

https://www.ncbi.nlm.nih.gov/pmc/articles/PMC6521100/

https://en.wikipedia.org/wiki/Lloviu\_virus

#### cDNA preparation

1 Mix the following components in an 0.2mL 8-strip tube;

Component Volume

50 μM random hexamers □1 μl

10 mM dNTPs mix (10 mM each) □1 μl

Template RNA □11 μl

Total □13 μl

Viral RNA input from a native sample should be between Ct 18-35. If Ct is between 12-15, then dilute the sample 100-fold in water, if between 15-18 then dilute 10-fold in water. This will reduce the likelihood of PCR-inhibition.

A mastermix should be made up in the **mastermix cabinet** and aliquoted into PCR strip tubes. Tubes should be wiped down when entering and leaving the mastermix cabinet.

- 2 Gently mix by pipetting and pulse spin the tube to collect liquid at the bottom of the tube.
- 3 Incubate the reaction as follows:

```
§ 65 °C for ⋄ 00:05:00 Place on ice for ⋄ 00:01:00
```

4 Add the following to the annealed template RNA:

Component	Volume
SSIV Buffer	<b>⊒4</b> μl
100mM DTT	<b>□1</b> μl
RNaseOUT RNase Inhibitor	<b>□1</b> μl
SSIV Reverse Transcriptase	: <b>□1</b> µl
Total	⊒20 µl

A mastermix should be made up in the **mastermix cabinet** and added to the denatured RNA in the **extraction** and sample addition cabinet. Tubes should be wiped down when entering and leaving the mastermix cabinet.

- 5 Gently mix by pipetting and pulse spin the tube to collect liquid at the bottom of the tube.
- 6 Incubate the reaction as follows:

Primer pool preparation

7

Three different primer set were designed for this protocol with the usage of <u>Primal Scheme</u>. These original sets were updated wit alternative primers based on the generated sequence data and empirical experiences.

1, LLOV\_400bp

This set generates 400 basepair long amplicons with  $\sim$ 75 basepair overlaps.

```
լլ LLOV_400bp.xlsx
```

2, LLOV\_500bp

This set generates 500 basepair long amplicons with  $\sim$ 50 basepair overlaps.

3, LLOV\_2000bp

This set generates 2000 basepair long amplicons with  $\sim$ 130 basepair overlaps. These primers were choosen from LLOV\_400bp set and reutilised here as a new .

```
\ \ \textbf{@ LLOV\_2000bp.xlsx}
```

If required resuspend lyophilised primers at a concentration of  $100\mu M$  each

8 Generate primer pool stocks by adding  $\Box$ 5 μI of each odd region primer to a  $\Box$ 1.5 mL Eppendorf labelled "Pool 1 (100μM)" and each even region primer to a  $\Box$ 1.5 mL Eppendorf labelled "Pool 2 (100μM)". These are your 100μM stocks of each primer pool.

Final volume of the 100µM stocks:

```
LLOV_400bp Pool 1: 405 µl (81 primer)
LLOV_400bp Pool 2: 410 µl (82 primer)

LLOV_500bp Pool 1: 290 µl (58 primer)
LLOV_500bp Pool 2: 260 µl (52 primer)

LLOV_2000bp Pool 1: 50 µl (10 primer)
LLOV_2000bp Pool 2: 50 µl (10 primer)
```

Primers should be diluted and pooled in the **mastermix cabinet** which should be cleaned with decontamination wipes and UV sterilised before and after use.

9 Dilute this primer pool 1:10 in molecular grade water, to generate  $10\mu M$  primer stocks. It is recommend that multiple aliquots of each primer pool are made to in case of degradation or contamination.

Primers need to be used at a final concentration of 0.015µM per primer.

#### Multiplex PCR

10 In the mastermix hood set up the multiplex PCR reactions as follows in 0.2mL 8-strip PCR tubes:

LLOV\_400bp

Component	Poo	l 1	Pool 2
5X Q5 Reaction Buffer	<b>⊒</b> 5 μl	<b>⊒</b> 5 μl	
10 mM dNTPs	<b>⊒</b> 0.5 µl	<b>□</b> 0.5 μl	
Q5 Hot Start DNA Polymerase	<b>⊒</b> 0.25 μl	<b>□</b> 0.25	μl
V3 Primer Pool 1 or 2 (10µM)	<b>⊒</b> 3.0 μl	<b>⊒3.0</b>	μl

Nuclease-free water **□**13.75 μl **□**13.75 μl Total **⊒22.5** µl **⊒22.5** µl LLOV\_500bp Pool 2 Component Pool 1 5X Q5 Reaction Buffer **□**5 μl **■**5 μl 10 mM dNTPs **□**0.5 μl **□**0.5 μl **□**0.25 μl Q5 Hot Start DNA Polymerase **□**0.25 μl V3 Primer Pool 1 or 2 (10µM) **⊒2.0** μl **⊒**2.0 µl Nuclease-free water **□**14.75 μl **□**14.75 μl Total **■22.5** µl **■22.5** µl LLOV\_2000bp Component Pool 1 Pool 2 5X O5 Reaction Buffer **□**5 μl **⊒**5 μl 10 mM dNTPs **□**0.5 μl **□**0.5 μl Q5 Hot Start DNA Polymerase **□**0.25 μl **□**0.25 µl V3 Primer Pool 1 or 2 (10µM) **□**2.0 μl **■2.0** µl Nuclease-free water **□**14.75 μl **□**14.75 μl Total **⊒22.5** μl **■22.5** µl

A PCR mastermix for each pool should be made up in the **mastermix cabinet** and aliquoted into PCR strip tubes. Tubes should be wiped down when entering and leaving the mastermix cabinet.

11 In the extraction and sample addition cabinet add 22.5 µl cDNA to each tube and mix well by pipetting.

The **extraction and sample addition cabinet** should should be cleaned with decontamination wipes and UV sterilised before and after use.

- 12 Pulse centrifuge the tubes to collect the contents at the bottom of the tube.
- 13 Set-up the following program on the thermal cycler:

Step	Temper	ature Time		Cycles
Heat Activation	§ 98 °C	<b>© 00:00:30</b>	1	
Denaturation	§ 98 °C	<b>© 00:00:15</b>	25-35	
Annealing	8 65 °C	<b>© 00:05:00</b>	25-35	

Cycle number should be 25 for Ct 18-21 up to a maximum of 35 cycles for Ct 35.

#### PCR clean-up

14 Label a 1.5 mL Eppendorf tube for each sample and assemble the following PCR dilution for each sample:

Component	Volume	
Pool 1 PCR reaction	<b>⊒</b> 2.5 μl	
Pool 2 PCR reaction	<b>⊒</b> 2.5 μl	
Nuclease-free water	<b>⊒</b> 45 μl	

The PCR post-clean up concentration is typically around [m]100 Mass Percent . This assumption means we can make a significant saving in terms of protocol time for only a slight loss in barcode representation. To get a better result you should use multiple primer sets (LLOV\_400bp, LLOV\_500bp, LLOV\_2000bp) with different barcodes. This can be useful in later bioinformatic analysis (i.e. read length filtering).


### Quantification and normalisation

15 Label another **1.5 mL** Eppendorf tube for each sample.

Input to the one-pot native barcoding reaction is 50ng per sample. Process at least 6 samples plus one negative control per library in order to have sufficient material to load on the sequencer at the end.

## Native barocoding

16 Barcode the amplicon pools using the one-pot native barcoding approach.

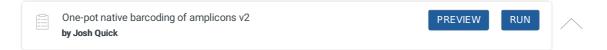

16.1 Set up the following reaction for each sample:

Component	Volume
PCR dilution from previous step	<b>⊒</b> 5 μl
Nuclease-free water	<b>⊒</b> 7.5 μl
Ultra II End Prep Reaction Buffer	<b>□</b> 1.75 μl
Ultra II End Prep Enzyme Mix	<b>□</b> 0.75 μl
Total	<b>⊒</b> 15 μl

16.2 Incubate at room temperature for **© 00:10:00** 

Incubate at 8 65 °C for © 00:10:00

Incubate on ice for < 00:01:00

16.3 In a new 1.5mL Eppendorf tube set up the following reaction:

Component	Volume
Previous reaction mixture	<b>□</b> 1.5 μl
Nuclease-free water	<b>⊒</b> 5.7 μl
NBXX barcode	<b>⊒</b> 2.5 μl
Ultra II Ligation Master Mix	<b>⊒10</b> μl
Ligation Enhancer	<b>□</b> 0.3 μl
Total	<b>⊒</b> 20 μl

Use one native barcode from the EXP-NBD104 (1-12) or EXP-NBD114 (13-24) per sample. Use from 6 to 24 barcodes in a library, any fewer and there will be insufficient total material to achieve good yields.

16.4 Incubate at room temperature for © 00:20:00

Incubate at § 65 °C for © 00:10:00

Incubate on ice for **© 00:01:00** 

The  $65^{\circ}$ C incubation is to inactivate the DNA ligase to prevent barcode cross-ligation when reactions are pooled in the next step.

- 16.5 In a new 1.5 ml Eppendorf tube pool all  $\square 20 \mu I$  one-pot barcoding reactions together.
- Add 0.4x volume of SPRI beads to the sample tube and mix gently by either flicking or pipetting. For example add 

  96 µl SPRI beads to 240 µl 12-plex pooled one-pot native barcoding reactions.


0.4x volume of SPRI will only bind 400 bp amplicons in the presence of ligation buffer as in a one-pot reaction, do not use 1x as this will result in excessive native barcode carryover.

- 16.7 Pulse centrifuge to collect all liquid at the bottom of the tube.
- 16.8 Incubate for © 00:05:00 at room temperature.

16.9	Place on magnetic rack and incubate for <b>© 00:02:00</b> or until the beads have pelleted and the supernatant is completely clear.
16.10	Carefully remove and discard the supernatant, being careful not to touch the bead pellet.
16.11	Add 700 μl SFB and resuspend beads completely by pipette mixing.
	SFB will remove excess adapter without damaging the adapter-protein complexes. Do not use 70% ethanol as in early clean-ups.
16.12	Pulse centrifuge to collect all liquid at the bottom of the tube.
16.13	Remove supernatant and discard.
16.14	Repeat steps 11-13 to perform a second SFB wash.
16.15	Pulse centrifuge and remove any residual SFB.
	You do not need to allow to air dry with SFB washes.
16.16	Add 200 μl of room-temperature 70 % volume ethanol to bathe the pellet.
16.17	Carefully remove and discard ethanol, being careful not to touch the bead pellet.
	Only perform 1x 70% ethanol wash
16.18	Pulse centrifuge to collect all liquid at the bottom of the tube and carefully remove as much residual ethanol as possible using a P10 pipette.
16.19	With the tube lid open incubate for 00:01:00 or until the pellet loses it's shine (if the pellet dries completely it will crack and become difficult to resuspend).

16.20 Resuspend pellet in 30 µl Elution Buffer (EB), mix gently by either flicking or pipetting and incubate for **© 00:02:00** . Place on magnet and transfer sample to a clean 1.5mL Eppendorf tube ensuring no beads are transferred into this 16.21 tube. 17 Quantify 1 µl of the barcoded amplicon pool using the Quantus Fluorometer using the ONE dsDNA assay. DNA quantification using the Quantus fluorometer **PREVIEW** RUN by Josh Quick Remove Lambda DNA 400 ng/µL standard from the freezer and leave on ice to thaw. Remove ONE dsDNA dye solution 17.1 from the fridge and allow to come to room temperature. 500rxn Promega Catalog #E4870 Set up two **0.5** mL tubes for the calibration and label them 'Blank' and 'Standard' 17.3 Add 200 µl ONE dsDNA Dye solution to each tube. 17.4 Mix the Lambda DNA standard 400 ng/µL standard by pipetting then add □1 µI to one of the standard tube. 17.5 Mix each sample vigorously by vortexing for  $\circlearrowleft 00:00:05$  and pulse centrifuge to collect the liquid. 17.6 Allow both tubes to incubate at room temperature for © 00:02:00 before proceeding. Selection 'Calibrate' then 'ONE DNA' then place the blank sample in the reader then select 'Read Blank'. Now place the 17.7 standard in the reader and select 'Read Std'. 17.8 Set up the required number of **DNA** samples to be quantified. Use only thin-wall, clear, 0.5mL PCR tubes such as Axygen #PCR-05-C

17.9	Label the tubes on the lids, avoid marking the sides of the tube as this could interfere with the sample reading.
17.10	Add <b>199 μl</b> ONE dsDNA dye solution to each tube.
17.11	Add 11 pl of each user sample to the appropriate tube.
	Use a P2 pipette for highest accuracy.
17.12	Mix each sample vigorously by vortexing for $© 00:00:05$ and pulse centrifuge to collect the liquid.
17.13	Allow all tubes to incubate at room temperature for $\textcircled{00:02:00}$ before proceeding.
17.14	On the Home screen of the Quantus Fluorometer, select `Protocol`, then select `ONE DNA` as the assay type.
	If you have already performed a calibration for the selected assay you can continue, there is no need to perform repeat calibrations when using ONE DNA pre diluted dye solution. If you want to use the previous calibration, skip to step 11. Otherwise, continue with step 9.
17.15	On the home screen navigate to 'Sample Volume' and set it to $\  \  \  \  \  \  \  \  \  \  \  \  \ $
17.16	Load the first sample into the reader and close the lid. The sample concentration is automatically read when you close the lid.
17.17	Repeat step 16 until all samples have been read.
17.18	The value displayed on the screen is the dsDNA concentration in $ng/\mu L$ , carefully record all results in a spreadsheet or laboratory notebook.
18	Set up the following AMII adapter ligation and clean-up with SFB.

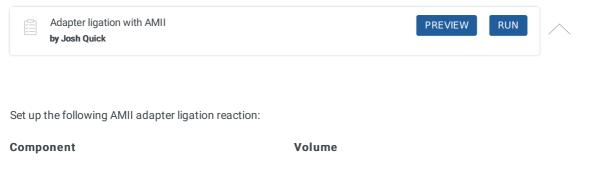

End-repaired amplicon pools

NEBNext Quick Ligation Reaction Buffer (5X)

10 µl

Adapter Mix (AMII)

Quick T4 DNA Ligase

Total

There will be some variation in clean-up efficiencies but expect to carry around 80% through a clean-up.

18.2 Incubate at room temperature for © 00:20:00

18.1

18.3 Add  $\Box$ 50  $\mu$ I (1:1) of SPRI beads to the sample tube and mix gently by either flicking or pipetting.

Vortex SPRI beads thoroughly before use to ensure they are well resuspended, the solution should be a homogenous brown colour.

- 18.4 Pulse centrifuge to collect all liquid at the bottom of the tube.
- 18.5 Incubate for © 00:05:00 at room temperature.
- Place on magnetic rack and incubate for © 00:02:00 or until the beads have pelleted and the supernatant is completely clear.
- 18.7 Carefully remove and discard the supernatant, being careful not to touch the bead pellet.
- 18.8 Add **⊒250 µI** SFB and resuspend beads completely by pipette mixing.

SFB will remove excess adapter without damaging the adapter-protein complexes. Do not use 70% ethanol as in early clean-ups. Pulse centrifuge to collect all liquid at the bottom of the tube. 18.9 18.10 Remove supernatant and discard. Repeat steps 14-16 to perform a second SFB wash. 18.11 Pulse centrifuge and remove any residual SFB. 18.12 You do not need to allow to air dry with SFB washes. 18.13 Add 15 µl EB and resuspend beads by pipette mixing. 18.14 Incubate at room temperature for  $\bigcirc$  **00:02:00**. 18.15 Place on magnetic rack. Transfer final library to a new 1.5mL Eppendorf tube. 18.16 19 Quantify 11 µl of the final library using the Quantus Fluorometer using the ONE dsDNA assay. DNA quantification using the Quantus fluorometer **PREVIEW** RUN by Josh Quick Final library can be now be stored in 10 mM Tris pH 8 at 4°C for up to a week if needed otherwise proceed directly to MinION sequencing.

19.1 Remove Lambda DNA 400 ng/µL standard from the freezer and leave on ice to thaw. Remove ONE dsDNA dye solution from the fridge and allow to come to room temperature. 500rxn Promega Catalog #E4870 19.2 Set up two **D.5 mL** tubes for the calibration and label them 'Blank' and 'Standard' 19.3 Add 200 µl ONE dsDNA Dye solution to each tube. 19.4 Mix the Lambda DNA standard 400 ng/µL standard by pipetting then add **□1 µI** to one of the standard tube. 19.5 Mix each sample vigorously by vortexing for © 00:00:05 and pulse centrifuge to collect the liquid. 19.6 Allow both tubes to incubate at room temperature for © 00:02:00 before proceeding. Selection 'Calibrate' then 'ONE DNA' then place the blank sample in the reader then select 'Read Blank'. Now place the 19.7 standard in the reader and select 'Read Std'. 19.8 Set up the required number of **DNA** samples to be quantified. Use only thin-wall, clear, 0.5mL PCR tubes such as Axygen #PCR-05-C Label the tubes on the lids, avoid marking the sides of the tube as this could interfere with the sample reading. 19.9 19.10 Add 199 µl ONE dsDNA dye solution to each tube. 19.11 Add 11 ul of each user sample to the appropriate tube. Use a P2 pipette for highest accuracy.

19.12	Mix each sample vigorously by vortexing for $© 00:00:05$ and pulse centrifuge to collect the liquid.
19.13	Allow all tubes to incubate at room temperature for © 00:02:00 before proceeding.
19.14	On the Home screen of the Quantus Fluorometer, select `Protocol`, then select `ONE DNA` as the assay type.
	If you have already performed a calibration for the selected assay you can continue, there is no need to perform repeat calibrations when using ONE DNA pre diluted dye solution. If you want to use the previous calibration, skip to step 11. Otherwise, continue with step 9.
19.15	On the home screen navigate to 'Sample Volume' and set it to $\  \  \  \  \  \  \  \  \  \  \  \  \ $
19.16	Load the first sample into the reader and close the lid. The sample concentration is automatically read when you close the lid.
19.17	Repeat step 16 until all samples have been read.
19.18	The value displayed on the screen is the dsDNA concentration in $ng/\mu L$ , carefully record all results in a spreadsheet or laboratory notebook.
MinION	sequencing
20	Prime the flowcell and load <b>20</b> ng sequencing library onto the flowcell.
	Priming and loading a MinION flowcell by Josh Quick RUN
	From experience we know 20 ng is optimum loading input for short amplicons.
20.1	Thaw the following reagents at room temperature before placing on ice:  Sequencing buffer (SQB) Loading beads (LB) Flush buffer (FLB) Flush tether (FLT)

- 20.2 Add 30 μl FLT to the FLB tube and mix well by vortexing.
- 20.3 If required place a new MinION flowcell onto the MinION by flipping open the lip and pushing one end of the flowcell under the clip and pushing down gently.
- 20.4 Rotate the inlet port cover clockwise by 90° so that the priming port is visible.
- Take a P1000 pipette and tip and set the volume to 300 μl . Place the tip in the inlet port and holding perpendicularly to the plane of the flowell remove any air from the inlet port by turning the volume dial anti-clockwise.

Be careful not to remove so much volume that air is introduced onto the rectangular array via the outlet.

- 20.6 Load **300 μl** of FLB (plus FLT) into the flow cell via the inlet port, dispense slowly and smoothly trying to avoid the introduction of any air bubbles.
- 20.7 Wait for **© 00:05:00**.
- 20.8 Gently lift the SpotON cover to open the SpotON port.
- 20.9 Load another 200 μl of FLB (plus FLT) into the flow cell via the inlet port, this will initiate a siphon at the SpotON port to allow you to load the library dilution.
- 20.10 In a new tube prepare the library dilution for sequencing:

Component	Volume
SQB	⊒37.5 μl
LB	<b>⊒</b> 25.5 μl
Final library	<b>□12 μl</b>
Total	<b>⊒</b> 75 μl

Mix LB immediately before use as they settle quickly.

Dilute library in EB if required.

Mix the prepared library gently by pipetting up and down just prior to loading. 20.11 20.12 Add the  $\boxed{\phantom{0}}$ 75  $\mu$ l library dilution to the flow cell via the SpotON sample port in a dropwise fashion. Ensure each drop siphons into the port before adding the next. Gently replace the SpotON sample port cover, making sure the bung enters the SpotON port, close the inlet port and 20.13 close the MinION lid. Start the sequencing run using MinKNOW. 21 Starting a MinION sequencing run using MinKNOW **PREVIEW** RUN by Josh Quick Our result with different primer sets: If required plug the MinION into the computer and wait for the MinION and flowcell to ben detected. 21.1 Choose flow cell 'FLO-MIN106' from the drop-down menu. 21.2 21.3 Then select the flowcell so a tick appears. Click the 'New Experiment' button in the bottom left of the screen. 21.4 21.5 On the New experiment popup screen, select the running parameters for your experiment from the individual tabs: **Experiment:** Name the run in the experiment field, leave the sample field blank. Kit: Selection: Select LSK109 as there is no option for native barcoding (NBD104). Run Options: Set the run length to 6 hours (you can stop the run once sufficient data has been collected as determined using RAMPART). Basecalling: Leave basecalling turned but select 'fast basecalling'.

**Output:** The number of files that MinKNOW will write to a single folder. By default this is set to 4000 but can be reduced to make RAMPART update more frequently.

Click 'Start run'.

21.6 Monitor the progress of the run using the MinKNOW interface.